



FILTER FOR MITSUBISHI ENERGY RECOVERY VENTILATOR LOSSNAY

Model:

PZ-250TRFA-E

Operating Instructions





For the user

The Filters are supplied for replacing with the air filters built in your Lossnay ventilator.

- For applicable models and quantities required, refer to the separate delivery specifications, products brochure, etc.
- Please read through these instructions in order to familiarize yourself with the proper and safe procedures for operating the Lossnay. After reading this manual, keep it in an easily accessible and safe place for future reference.


Safety precautions

The following symbols denote the danger and its degree that may result from incorrect use.

 WARNING	Denotes misuse that could cause serious injury or death.	 CAUTION	Denotes misuse that could cause injury or damage to properties.
 Prohibited	<ul style="list-style-type: none"> ● Always turn off the Lossnay ventilator before installing and maintaining the filter. Failure to heed this warning may result in electric shock or injury.	 Important	<ul style="list-style-type: none"> ● Wear gloves when installing and maintaining the filter. Otherwise, edges may cause injury.

Outline drawings

Unit: in (mm)

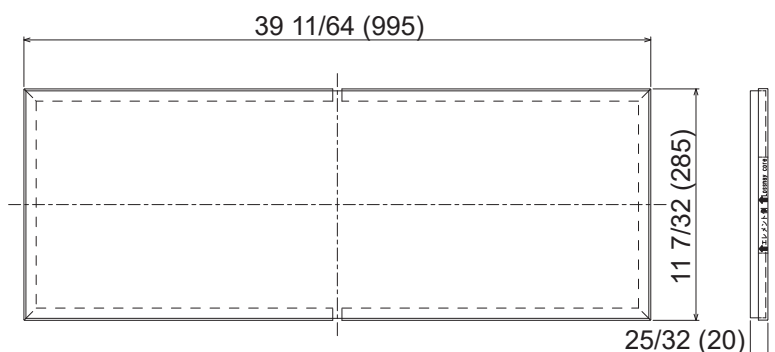

Applicable model

Model	Number of filters per set	Applicable Lossnay model
PZ-250TRFA-E	4	TLGHF0940RVXT02A
		TLGHF1200RVXT02A
		TLGHF1500RVXT02A
		LGH-F940RVXT2-E
		LGH-F1200RVXT2-E
		LGH-F1500RVXT2-E

* The filters are comprised of one set of the same filters as those built in the product.


Maintenance

Clean the air filters once a year in order to prevent a deterioration in the Lossnay functions.


(Frequency should be increased depending on the extent of dirt.)

1. Remove the filters


- (1) Remove the two black screws and open the maintenance cover.

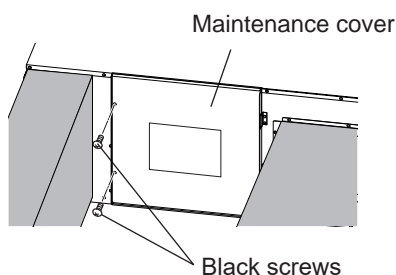

- (2) Remove the front filters from the main unit.

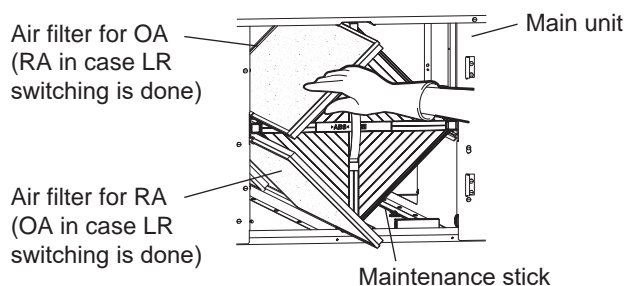

- (3) Remove the back filters from the main unit with the maintenance stick.

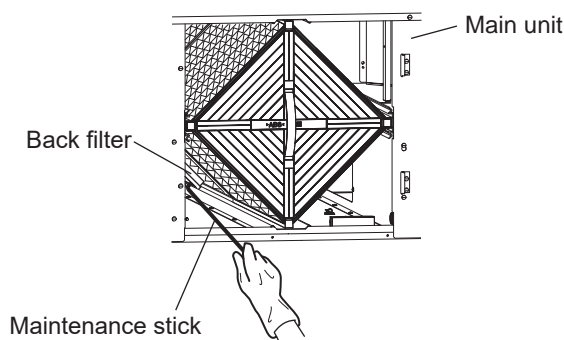


CAUTION

- The maintenance cover must be removed.

2. Cleaning filters

Use a vacuum cleaner to remove light dust. To remove stubborn dirt, wash in a mild solution of detergent and lukewarm water. (under 104 °F (40 °C))

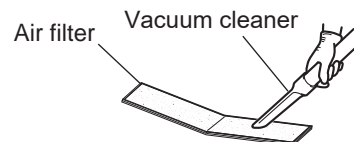

CAUTION

- Never wash the filters in very hot water and never wash them by rubbing them.
- Do not dry the filters by exposing them to a flame.


Assembly after maintenance

Bearing in mind the following points, assemble the parts following the sequence for their removal in reverse.

- Place the air filter as shown in the name plate on the maintenance cover.
- Filter have front and back side. Set the correct side of the filter according to the arrow on the filter frame.
- Be sure to put the maintenance stick as it was. Securely hold it by the clips.

Note

- If the maintenance sign is indicated on the remote controller, turn off the indication, after maintenance.

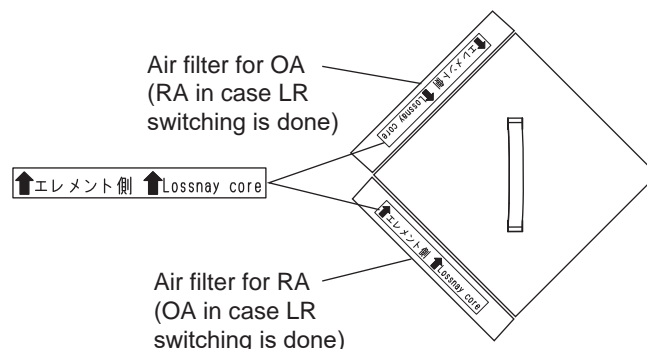

MITSUBISHI ELECTRIC CORPORATION

2-7-3 Marunouchi, Chiyoda-ku, Tokyo, 100-8310 Japan