

Air-Conditioners For Building Application

INDOOR UNIT

PCFY-P·NGMU-A

INSTALLATION MANUAL

For safe and correct use, please read this installation manual thoroughly before installing the air-conditioner unit.

Contents

1. Safety precautions	2	5. Drainage piping work	6
2. Installation location	3	6. Electrical work	7
3. Installing the indoor unit	3	7. Test run	9
4. Installing the refrigerant piping	5		

1. Safety precautions

- ▶ Before installing the unit, make sure you read all the “Safety precautions”.
- ▶ Please report to your supply authority or obtain their consent before connecting this equipment to the power supply system.

⚠ Warning:

Describes precautions that must be observed to prevent danger of injury or death to the user.

⚠ Caution:

Describes precautions that must be observed to prevent damage to the unit.

⚠ Warning:

- Ask a dealer or an authorized technician to install the unit.
- For installation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with refrigerant specified in the outdoor unit installation manual.
- The unit must be installed according to the instructions in order to minimize the risk of damage from earthquakes, typhoons, or strong winds. An incorrectly installed unit may fall down and cause damage or injuries.
- The unit must be securely installed on a structure that can sustain its weight.
- If the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. Should the refrigerant leak and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.

After installation work has been completed, explain the “Safety Precautions,” use, and maintenance of the unit to the customer according to the information in the Operation Manual and perform the test run to ensure normal operation. Both the Installation Manual and Operation Manual must be given to the user for keeping. These manuals must be passed on to subsequent users.

⚡ : Indicates a part which must be grounded.

⚠ Warning:

Carefully read the labels affixed to the main unit.

- Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.
- All electric work must be performed by a qualified technician according to local regulations and the instructions given in this manual.
- Use only specified cables for wiring.
- The terminal block cover panel of the unit must be firmly attached.
- Use only accessories authorized by Mitsubishi Electric and ask a dealer or an authorized technician to install them.
- The user should never attempt to repair the unit or transfer it to another location.
- After installation has been completed, check for refrigerant leaks. If refrigerant leaks into the room and comes into contact with the flame of a heater or portable cooking range, poisonous gases will be released.

1.1. Before installation (Environment)

⚠ Caution:

- Do not use the unit in an unusual environment. If the air conditioner is installed in areas exposed to steam, volatile oil (including machine oil), or sulfuric gas, areas exposed to high salt content such as the seaside, the performance can be significantly reduced and the internal parts can be damaged.
- Do not install the unit where combustible gases may leak, be produced, flow, or accumulate. If combustible gas accumulates around the unit, fire or explosion may result.
- Do not keep food, plants, caged pets, artwork, or precision instruments in the direct airflow of the indoor unit or too close to the unit, as these items can

- be damaged by temperature changes or dripping water.
- When the room humidity exceeds 80% or when the drainpipe is clogged, water may drip from the indoor unit. Do not install the indoor unit where such dripping can cause damage.
- When installing the unit in a hospital or communications office, be prepared for noise and electronic interference. Inverters, home appliances, high-frequency medical equipment, and radio communications equipment can cause the air conditioner to malfunction or breakdown. The air conditioner may also affect medical equipment, disturbing medical care, and communications equipment, harming the screen display quality.

1.2. Before installation or relocation

⚠ Caution:

- Be extremely careful when transporting the units. Two or more persons are needed to handle the unit, as it weighs 44 lbs. (20 kg) or more. Do not grasp the packaging bands. Wear protective gloves as you can injure your hands on the fins or other parts.
- Be sure to safely dispose of the packaging materials. Packaging materials, such as nails and other metal or wooden parts may cause stabs or other injuries.

- Thermal insulation of the refrigerant pipe is necessary to prevent condensation. If the refrigerant pipe is not properly insulated, condensation will be formed.
- Place thermal insulation on the pipes to prevent condensation. If the drainpipe is installed incorrectly, water leakage and damage to the ceiling, floor, furniture, or other possessions may result.
- Do not clean the air conditioner unit with water. Electric shock may result.
- Tighten all flare nuts to specification using a torque wrench. If tightened too much, the flare nut can break after an extended period.

1.3. Before electric work

⚠ Caution:

- Be sure to install circuit breakers. If not installed, electric shock may result.
- For the power lines, use standard cables of sufficient capacity. Otherwise, a short circuit, overheating, or fire may result.
- When installing the power lines, do not apply tension to the cables.

- Be sure to ground the unit. If the unit is not properly grounded, electric shock may result.
- Use circuit breakers (ground fault interrupter, isolating switch (+B fuse), and molded case circuit breaker) with the specified capacity. If the circuit breaker capacity is larger than the specified capacity, breakdown or fire may result.

1.4. Before starting the test run

⚠ Caution:

- Turn on the main power switch more than 12 hours before starting operation. Starting operation just after turning on the power switch can severely damage the internal parts.
- Before starting operation, check that all panels, guards and other protective parts are correctly installed. Rotating, hot, or high voltage parts can cause injuries.

- Do not operate the air conditioner without the air filter set in place. If the air filter is not installed, dust may accumulate and breakdown may result.
- Do not touch any switch with wet hands. Electric shock may result.
- Do not touch the refrigerant pipes with bare hands during operation.
- After stopping operation, be sure to wait at least five minutes before turning off the main power switch. Otherwise, water leakage or breakdown may result.

2. Installation location

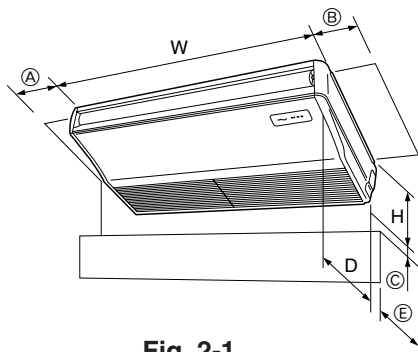


Fig. 2-1

3. Installing the indoor unit

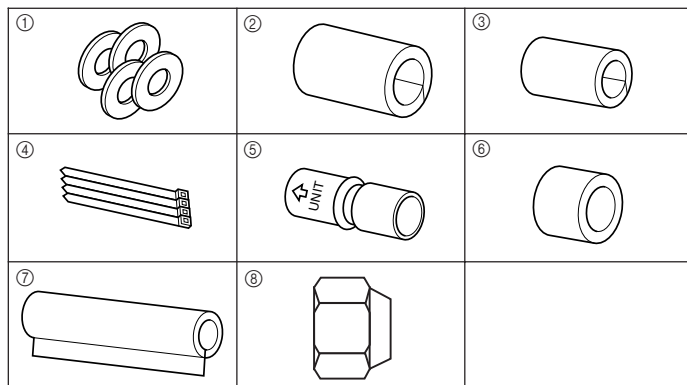


Fig. 3-1

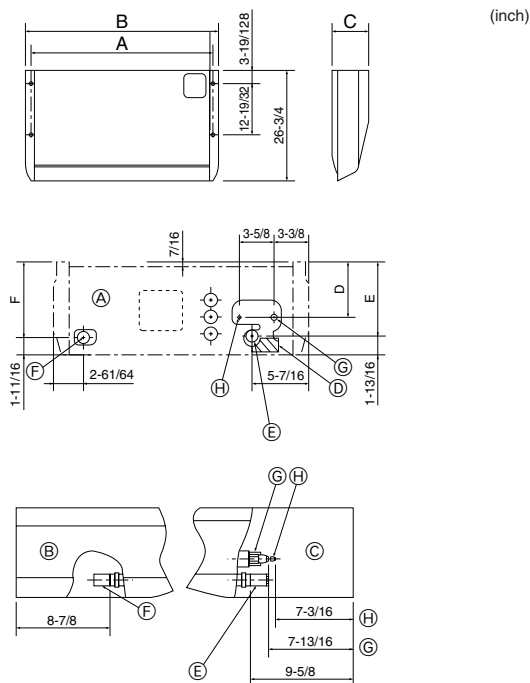


Fig. 3-2

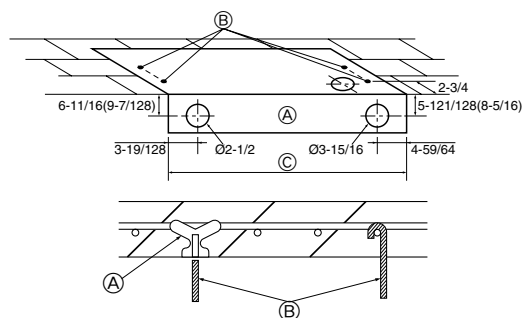


Fig. 3-3

2.1. Outline dimensions (Indoor unit) (Fig. 2-1)

Select a proper position allowing the following clearances for installation and maintenance.

Models	W	D	H	A	B	C	E
P15	39-5/8	26-7/32	8-9/32	Min.10-5/8	Min.11-13/16	Min.19-11/16	Max. 9-13/16
P24	51-9/16	26-7/32	8-9/32	Min.10-5/8	Min.11-13/16	Min.19-11/16	Max. 9-13/16
P30	51-9/16	26-7/32	10-5/8	Min.10-5/8	Min.11-13/16	Min.19-11/16	Max. 9-13/16
P36	63-3/4	26-7/32	10-5/8	Min.10-5/8	Min.11-13/16	Min.19-11/16	Max. 9-13/16

Warning:

Mount the indoor unit on a ceiling strong enough to withstand the weight of the unit.

2.2. Outline dimensions (Outdoor unit)

Refer to the outdoor unit installation manual.

3.1. Check the indoor unit accessories (Fig. 3-1)

The indoor unit should be supplied with the following accessories (contained in the inside of the intake grille).

	Accessory name	Q'ty
①	Washer	4 pcs
②	Pipe cover	1 pc Large size (For gas tubing)
③	Pipe cover	1 pc Small size (For liquid tubing)
④	Band	4 pcs
⑤	Joint socket	1 pc Marked with "UNIT"
⑥	Socket cover	1 pc
⑦	Drain tubing cover	1 pc
⑧	Flare nut P36	1 <3/4" (ø19.05)>

3.2. Preparation for installation (Fig. 3-2)

Must be installed at least 8 ft. (2.4 m) above floor or grade level.

3.2.1. Suspension bolt installing spacing

Models	A	B	C
P15	36-23/32	39-5/8	8-9/32
P24	48-13/16	51-9/16	8-9/32
P30	48-13/16	51-9/16	10-5/8
P36	60-29/32	63-3/4	10-5/8

3.2.2. Refrigerant and drain tubing location

Models	D	E	F
P15	5-5/32	6-7/8	7-1/16
P24	5-5/32	6-7/8	7-1/16
P30	7-9/16	9-9/32	7-2/32
P36	7-1/2	9-9/32	7-2/32

- ① Front side outlet
- ② Left side outlet
- ③ Right side outlet
- ④ Independent piece (Removable)
- ⑤ Right drain tubing
- ⑥ Left drain tubing
- ⑦ Gas tubing
- ⑧ Liquid tubing

3.2.3. Selection of suspension bolts and tubing positions (Fig. 3-3)

Using the pattern paper provided for installation, select proper positions for suspension bolts and tubing and prepare relative holes.


- ① Pattern paper
- ② Suspension bolt hole
- ③ Indoor unit width

Secure the suspension bolts or use angle stock braces or square timbers for bolt installation.

- ① Use inserts of 220-230 lbs. each.
- ② Use suspension bolts of W3/8 or M10 in size

3. Installing the indoor unit

■ PCFY-P15, P24NGMU-E

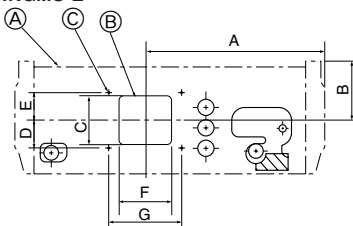

■ PCFY-P30, P36NGMU-E

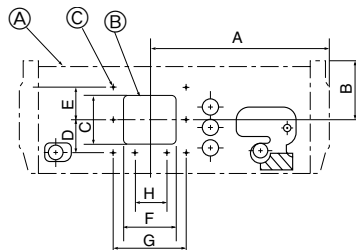


Fig. 3-4

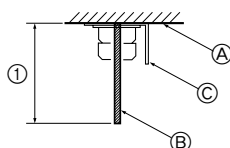


Fig. 3-5

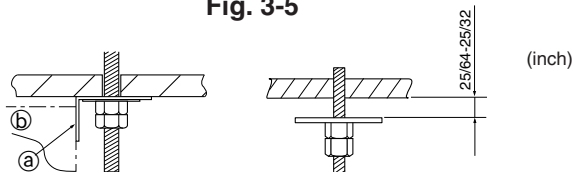


Fig. 3-6

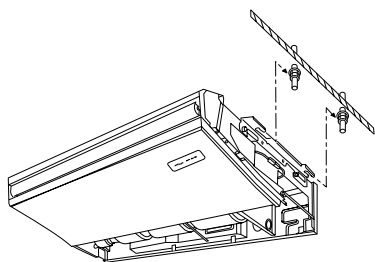


Fig. 3-7

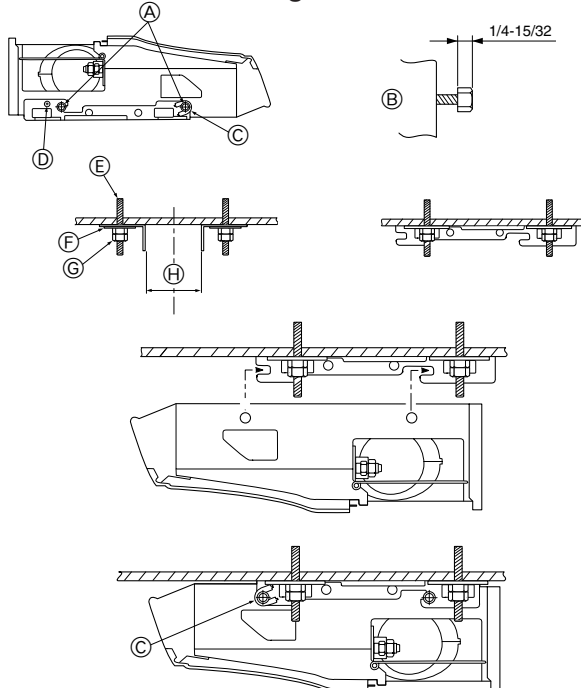


Fig. 3-8

3.2.4. Fresh air intake hole (Fig. 3-4)

At the time of installation, use the duct holes (knock out) located at the positions shown in following diagram, as and when required.

- Ⓐ Indoor unit
- Ⓑ Fresh air intake hole (knock out hole)
- Ⓒ 4- ϕ 1/8" (ϕ 2.8) burring hole (P15, P24)
- 8- ϕ 1/8" (ϕ 2.8) burring hole (P30, P36)

inch (mm)

Models	A	B	C	D	E	F	G	H
P15	12-23/32 (323.1)	3-3/16 (80.9)	2-7/16 (62)	1-25/32 (45)	1-21/32 (42)	1-3/4 (44.6)	2-29/32 (73.6)	—
P24	13-29/32 (353.6)	3-11/32 (84.7)	2-1/8 (54)	1-5/8 (41)	1-1/2 (38)	3-31/32 (100.5)	5-9/32 (134.5)	—
P30,P36	16-15/16 (430)	5-7/32 (132.3)	5-29/32 (150)	3-21/32 (93)	3-21/32 (93)	7-7/8 (200)	9-9/32 (236)	3-15/16 (100)

3.2.5. Indoor unit preparation (Fig. 3-5)

1. Install the suspending bolts. (Procure the W3/8 or M10 bolts locally.) Predetermine the length from the ceiling (①) within 100 mm.

- Ⓐ Ceiling surface
- Ⓑ Suspending bolt
- Ⓒ Suspending bracket

2. Remove the intake grille.

Slide the intake grille holding knobs (at two locations) backward to open the intake grille.

3. Remove the side panel.

Remove the side panel holding screws (one in each side, right and left) then slide the side panel forward for removal.

3.3. Installing the indoor unit

Use a proper suspending method depending on the presence or absence of ceiling materials as follows. (Fig. 3-6)

In the absence of ceiling materials

- Ⓐ Suspending bracket
- Ⓑ Unit

1) Directly suspending the unit (Fig. 3-7)

Installing procedures

1. Install the washer ① (supplied with the unit) and the nut (to be locally procured).
2. Set (hook) the unit through the suspending bolts.
3. Tighten the nuts.

Check the unit installing condition.

- Check that the unit is horizontal between the right and left sides.
- Check that the unit slopes continuously downward from the front to the rear.

When embedding pipes, into the wall

2) Installing the suspending bracket first onto the ceiling (Fig. 3-8)

Installing procedures

1. Remove the suspending brackets, U-shaped washers, and suspending bracket holding screws from the unit.
2. Adjust the suspending bracket holding bolts on the unit.
3. Attach the suspending brackets to the suspending bolts.
4. Set (hook) the unit to the suspending brackets.

* Be sure to install the U-shaped washers.

- Ⓐ Bolt
- Ⓑ Unit
- Ⓒ Washer
- Ⓓ Suspending bracket holding screw
- Ⓔ Bolt
- Ⓕ Washer ①
- Ⓖ Double nuts

(inch)

Ⓔ	P15	35-7/16 - 35-41/64
	P24, P30	47-1/2 - 47-23/32
	P36	59-39/54 - 59-13/16

4. Installing the refrigerant piping

4.1. Precautions

4.1.1. For devices that use R22 refrigerant

- Use the refrigeration oil applied to the flared sections.
- Use C1220 copper phosphorus, for copper and copper alloy seamless pipes, to connect the refrigerant pipes. Use refrigerant pipes with the thicknesses specified in the table to the below. Make sure the insides of the pipes are clean and do not contain any harmful contaminants such as sulfuric compounds, oxidants, debris, or dust.

4.1.2. For devices that use R410A refrigerant

- Use ester oil, ether oil, alkylbenzene oil (small amount) as the refrigeration oil applied to the flared sections.
- Use C1220 copper phosphorus, for copper and copper alloy seamless pipes, to connect the refrigerant pipes. Use refrigerant pipes with the thicknesses specified in the table to the below. Make sure the insides of the pipes are clean and do not contain any harmful contaminants such as sulfuric compounds, oxidants, debris, or dust.

⚠ Warning:

When installing or moving the air conditioner, use only the specified refrigerant (R410A) to charge the refrigerant lines. Do not mix it with any other refrigerant and do not allow air to remain in the lines. Air enclosed in the lines can cause pressure peaks resulting in a rupture and other hazards.

in. (mm)

	P15	P24, P30, P36
Liquid pipe	1/4" (ø6.35) thickness 1/32" (0.8)	3/8" (ø9.52) thickness 1/32" (0.8)
Gas pipe	1/2" (ø12.7) thickness 1/32" (0.8)	5/8" (ø15.88) thickness 3/64" (1.0)

- Do not use pipes thinner than those specified above.

4.2. Connecting pipes (Fig. 4-1)

- When commercially available copper pipes are used, wrap liquid and gas pipes with commercially available insulation materials (heat-resistant to 212 °F (100 °C) or more, thickness of 1/2 in. (12 mm) or more).
- The indoor parts of the drain pipe should be wrapped with polyethylene foam insulation materials (specific gravity of 0.03, thickness of 23/64 in. (9 mm) or more).
- Apply thin layer of refrigerant oil to pipe and joint seating surface before tightening flare nut.
- Use two wrenches to tighten piping connections.
- Use refrigerant piping insulation provided to insulate indoor unit connections. Insulate carefully.

Ⓑ Flare nut tightening torque

Copper pipe O.D. in. (mm)	Flare nut O.D. in. (mm)	Tightening torque ft.-lbs. (N·m)
1/4" (ø6.35)	43/64 (17)	10-13 (14 - 18)
1/4" (ø6.35)	7/8 (22)	25-30 (34 - 42)
3/8" (ø9.52)	7/8 (22)	25-30 (34 - 42)
1/2" (ø12.7)	1-3/64 (26)	35-44 (49 - 61)
1/2" (ø12.7)	1-9/64 (29)	49-59 (68 - 82)
5/8" (ø15.88)	1-9/64 (29)	49-59 (68 - 82)
5/8" (ø15.88)	1-27/64 (36)	72-87 (100 - 120)
3/4" (ø19.05)	1-27/64 (36)	72-87 (100 - 120)

Ⓒ Apply refrigerating machine oil over the entire flare seat surface.

Ⓓ Use correct flare nuts meeting the pipe size of the outdoor unit.

Available pipe size

in. (mm)

	P15	P24, P30	P36
Liquid side	1/4" (ø6.35) ○	—	—
	—	3/8" (ø9.52) ○	3/8" (ø9.52) ○
Gas side	1/2" (ø12.7) ○	—	—
	—	5/8" (ø15.88) ○	5/8" (ø15.88) ○
	—	—	3/4" (ø19.05)

○ : Factory flare nut attachment to the heat-exchanger.

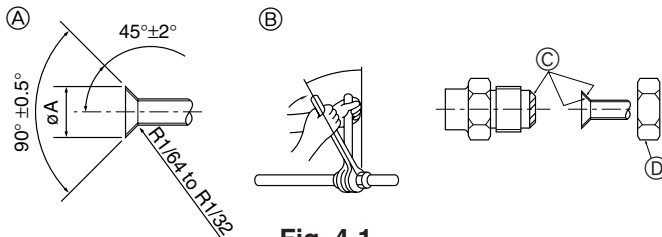


Fig. 4-1

Ⓐ Flare cutting dimensions in. (mm)

Copper pipe O.D.	Flare dimensions øA dimensions
1/4" (ø6.35)	11/32-23/64 (8.7 - 9.1)
3/8" (ø9.52)	1/2-33/64 (12.8 - 13.2)
1/2" (ø12.7)	41/64-21/32 (16.2 - 16.6)
5/8" (ø15.88)	49/64-25/32 (19.3 - 19.7)
3/4" (ø19.05)	15/16-61/64 (23.6 - 24.0)

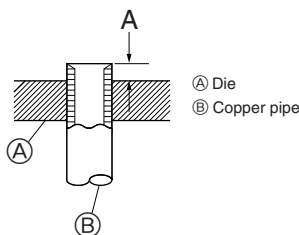


Fig. 4-2

in. (mm)

Copper pipe O.D.	A	
	Flare tool for R22	Flare tool for R410A
	Clutch type	
1/4" (ø6.35)	0-1/64 (0 - 0.5)	3/64-1/16 (1.0 - 1.5)
3/8" (ø9.52)	0-1/64 (0 - 0.5)	3/64-1/16 (1.0 - 1.5)
1/2" (ø12.7)	0-1/64 (0 - 0.5)	3/64-1/16 (1.0 - 1.5)
5/8" (ø15.88)	0-1/64 (0 - 0.5)	3/64-1/16 (1.0 - 1.5)
3/4" (ø19.05)	0-1/64 (0 - 0.5)	3/64-1/16 (1.0 - 1.5)

4. Installing the refrigerant piping

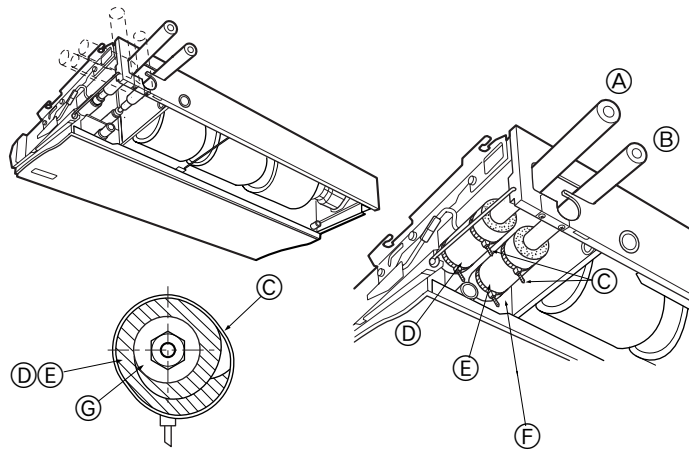


Fig. 4-3

4.3. Indoor unit (Fig. 4-3)

Installing procedures

1. Slide the supplied pipe cover ② over the gas tubing until it is pressed against the sheet metal inside the unit.
 2. Slide the provided pipe cover ③ over the liquid tubing until it is pressed against the sheet metal inside the unit.
 3. Tighten the pipe covers ② and ③ at the both ends 5/8 - 3/4 in. (15 - 20 mm) with the supplied bands ④.
- A Gas tubing
 B Liquid tubing
 C Band ④
 D Pipe cover ②
 E Pipe cover ③
 F Press the pipe cover against the sheet metal.
 G Refrigerant tubing heat insulating material

4.4. For twin/triple combination

Refer to the outdoor unit installation manual.

5. Drainage piping work

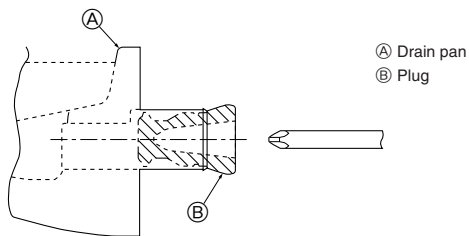


Fig. 5-1

5.1. Preparation for left side tubing installation (Fig. 5-1)

- For left side tubing, be sure to insert the rubber plug into the right drain port.
- Install the drain tubing as it slopes continuously downward.
- After completion of work, check that correct drain is available from the outflow port of the drain tubing.

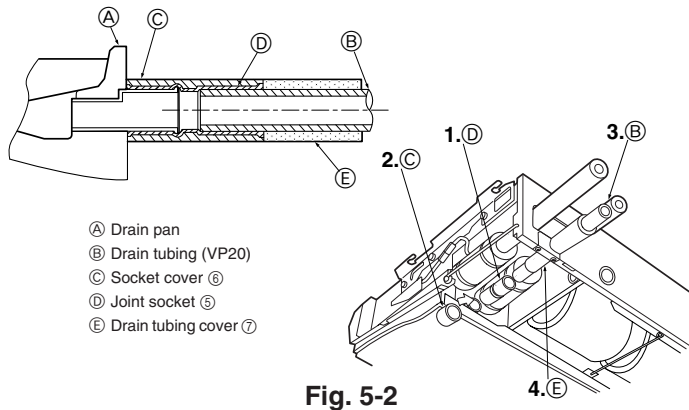


Fig. 5-2

Installing procedures (Fig. 5-2)

1. Attach the joint socket ⑤ supplied with the unit to the drain port on the unit with a vinyl chloride adhesive.
2. Fasten the socket cover ⑥ supplied with the unit to the joint socket ⑤.
3. Attach the field drain tubing (VP20/O.D. ø26 PVC TUBE) to the joint socket ⑤ with a vinyl chloride adhesive.
4. Wrap the drain tubing cover ⑦ supplied with the unit. (Seam taping)

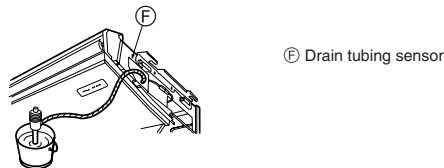


Fig. 5-3

5. Check for correct drainage. (Fig. 5-3)

- * Fill the drain pan with water of about 1 L from the tubing sensor access port.
- * After checking for correct drainage, replace the tubing sensor access port cover.

6. Electrical work

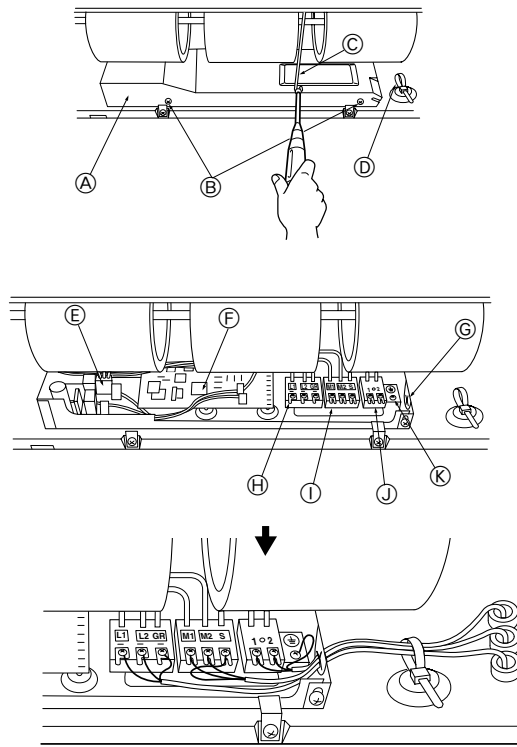


Fig. 6-1

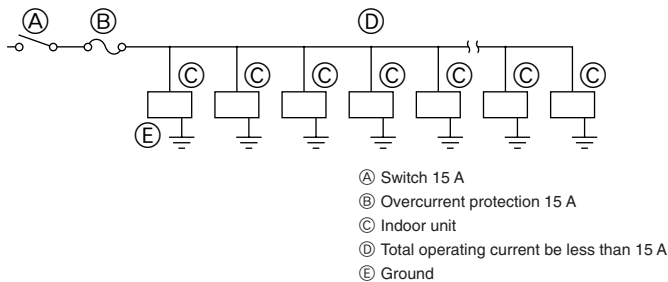


Fig. 6-2

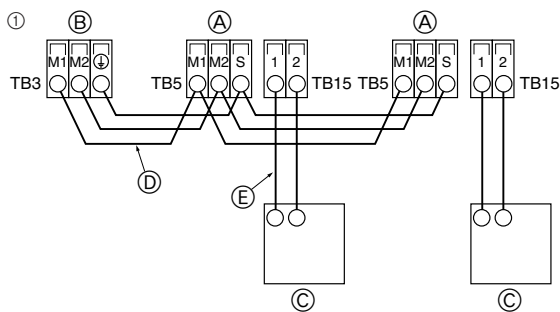


Fig. 6-3

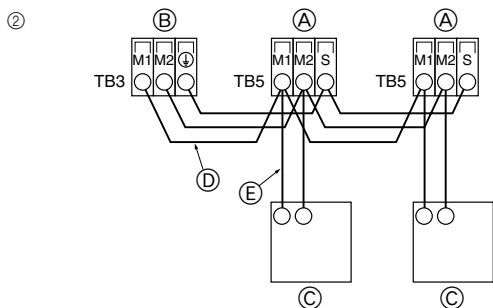


Fig. 6-4

6.1. Electric wiring (Fig. 6-1)

Wiring procedures

1. Remove the (two) tapping screws then remove the electric part cover.
 2. Connect the electric wires securely to the corresponding terminals.
 3. Replace the removed parts.
 4. Tie the electric wires with the local wiring clamp located in the right side of the junction box.
- A Cover
 B Set screws
 C Beam
 D Wiring clamp
 E Power supply board
 F Control board
 G Wire service entrance
 H Terminal block for power supply
 I Terminal block for transmission cable
 J Terminal block for remote controller
 K Grounding cable connector

6.2. Power supply wiring (Fig. 6-2)

Power cable size (diameter) : more than 1.6 mm (AWG14)

Ground cable size (diameter) : 1.6 mm (AWG14)

* Use copper supply wires.

* Use the electric wires over the rating voltage 300 V.

[Selecting non-fuse breaker (NF) or earth leakage breaker (NV)]

To select NF or NV instead of a combination of Class B fuse with switch, use the following:

- In the case of Class B fuse rated 15 A or 20 A,
NF model name (MITSUBISHI): NF30-CS (15 A) (20 A)
NV model name (MITSUBISHI): NV30-CA (15 A) (20 A)

Use an earth leakage breaker with a sensitivity of less than 30 mA 0.1 sec.

⚠ Caution:

Do not use anything other than the correct capacity breaker and fuse. Using fuse, wire or copper wire with too large capacity may cause a risk of malfunction or fire.

6.3. Connecting remote controller, indoor and outdoor transmission cables

- Connect indoor unit TB5 and outdoor unit TB3. (Non-polarized 2-wire)
 The "S" on indoor unit TB5 is a shielding wire connection. For specifications about the connecting cables, refer to the outdoor unit installation manual.
- Install a remote controller following the manual supplied with the remote controller.
- Connect the remote controller's transmission cable within 33 ft (10 m) using a 0.75 mm² (AWG18) core cable. If the distance is more than 33 ft (10 m), use a 1.25 mm² junction cable.

① MA Remote controller (Fig. 6-3)

- Connect the "1" and "2" on indoor unit TB15 to a MA remote controller. (Non-polarized 2-wire)
- DC 9 to 13 V between 1 and 2 (MA remote controller)

② M-NET Remote controller (Fig. 6-4)

- Connect the "M1" and "M2" on indoor unit TB5 to a M-NET remote controller. (Non-polarized 2-wire)
- DC 24 to 30 V between M1 and M2 (M-NET remote controller)

- A Terminal block for indoor transmission cable
 B Terminal block for outdoor transmission cable
 C Remote controller
 D Transmission cables
 E Remote control cables

6. Electrical work

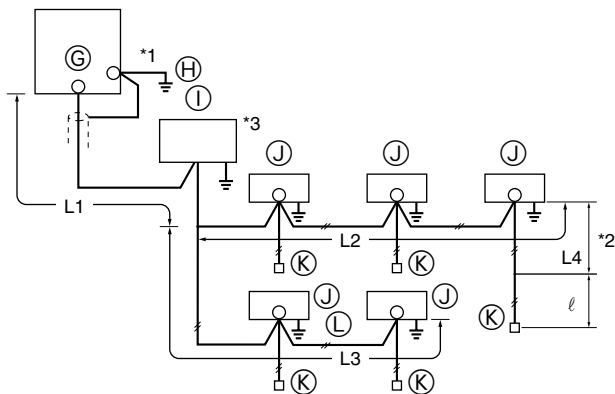


Fig. 6-5

Constraints on transmission cable

Longest wiring length ($L_1+L_2+L_4$ or L_1+L_3 or $L_2+L_3+L_4$): less than 656 ft (200 m)
Length between indoor unit and remote controller (ℓ): within 33 ft (10 m)

- Ⓒ Outdoor unit
- Ⓓ Earth
- Ⓔ BC controller
- Ⓙ Indoor unit
- Ⓚ M-NET Remote controller
- Ⓛ Non-polarized 2-wire

Note:

- *1 Put the transmission cable earth via the outdoor unit's earth terminal (Ⓒ) to the ground.
- *2 If the remote controller cable exceeds 33 ft (10 m), use a 1.25 mm² (AWG16) diameter cable over the exceeded portion, and add that exceeded portion to within 656 ft (200 m).
- *3 The BC controller is required only for simultaneous cooling and heating series R2.

Types of control cables (Fig. 6-5)

1. Wiring transmission cables: Shielding wire CVVS or CPEVS
 - Cable diameter: More than 1.25 mm² (AWG16)

2. M-NET Remote control cables

Kind of remote control cable	2-core cable (unshielded)
Cable diameter	More than 0.5 (AWG20) to 0.75 mm ² (AWG18)
Remarks	When 10 m is exceeded, use cable with the same specifications as transmission line wiring (shielding portion is more than 1.25 mm ² (AWG16))

3. MA Remote control cables

Kind of remote control cable	2-core cable (unshielded)
Cable diameter	0.3 mm ² (AWG22) to 1.25 mm ² (AWG16)

Address board

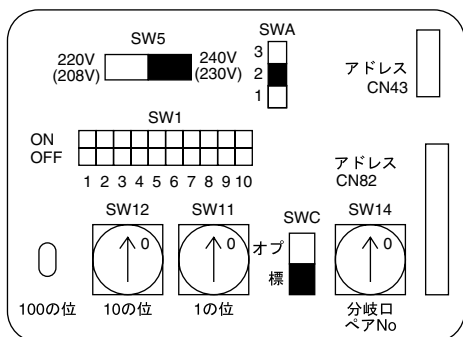


Fig. 6-6

6.4. Setting addresses (Fig. 6-6)

(Be sure to operate with the main power turned OFF.)

- There are two types of rotary switch setting available: setting addresses 1 to 9 and over 10, and setting branch numbers.
 - ① How to set addresses
Example: If Address is "3", remain SW12 (for over 10) at "0", and match SW11 (for 1 to 9) with "3".
 - ② How to set branch numbers (Series R2 only)
Match the indoor unit's refrigerant pipe with the x-C controller's end connection number. Remain SW14 other than R2 at "0".
- The rotary switches are all set to "0" when shipped from the factory. These switches can be used to set unit addresses and branch numbers at will.
- The determination of indoor unit addresses varies with the system at site. Set them referring to technical data.

Note:

Please set the switch SW5 according to the power supply voltage.

- Set SW5 to 230 V side when the power supply is 230 volts.
- When the power supply is 208 volts, set SW5 to 208 V side.

6.5. Switch setting for different ceiling heights

With this unit, the air flow rate and fan speed can be adjusted by setting the SWA (slide switch). Select a suitable setting from the table below according to the installation location.

* Make sure the SWA switch is set, otherwise problems such as no wind blowing will occur.

Ceiling Height	11.5 ft. (3.5 m)	9.2 ft. (2.8 m)	7.5 ft. (2.3 m)
SWA	3 (high ceiling)	2 (standard)	1 (low ceiling)

SWA: Factory setting: 2 (Standard)

6.6. Sensing room temperature with the built-in sensor in a remote controller

If you want to sense room temperature with the built-in sensor in a remote controller, set SW1-1 on the control board to "ON". The setting of SW1-7 and SW1-8 as necessary also makes it possible to adjust the air flow at a time when the heating thermometer is OFF.

6. Electrical work

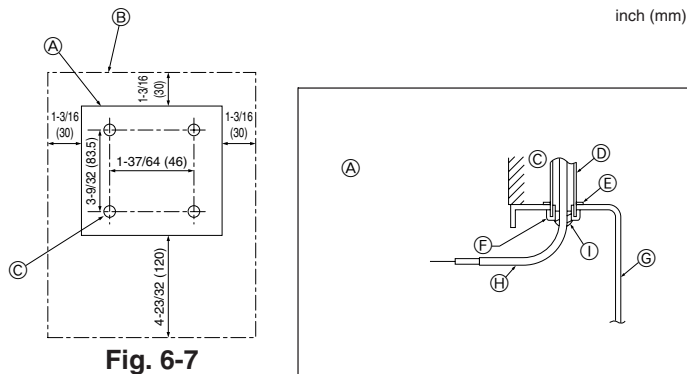


Fig. 6-7

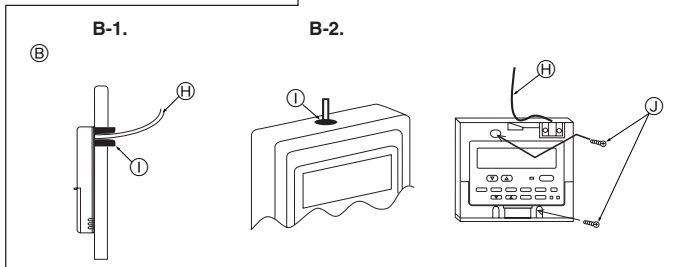


Fig. 6-8

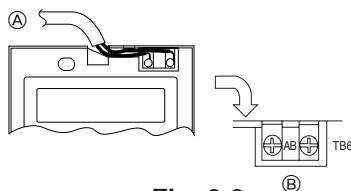


Fig. 6-9

6.7. Remote controller

1) Installing procedures

(1) Select an installing position for the remote controller. (Fig. 6-7)

The temperature sensors are located on both remote controller and indoor unit.

► Procure the following parts locally:

Two piece switch box

Thin copper conduit tube

Lock nuts and bushings

A Remote controller profile

B Required clearances surrounding the remote controller

C Installation pitch

(2) Seal the service entrance for the remote controller cord with putty to prevent possible invasion of dew drops, water, cockroaches or worms. (Fig. 6-8)

A For installation in the switch box:

B For direct installation on the wall select one of the following:

- Prepare a hole through the wall to pass the remote controller cord (in order to run the remote controller cord from the back), then seal the hole with putty.

- Run the remote controller cord through the cut-out upper case, then seal the cut-out notch with putty similarly as above.

B-1. To lead the remote controller cord from the back of the controller:

B-2. To run the remote controller cord through the upper portion:

(3) For direct installation on the wall

C Wall

D Conduit

E Lock nut

F Bushing

G Switch box

H Remote controller cord

I Seal with putty

J Wood screw

2) Connecting procedures (Fig. 6-9)

① Connect the remote controller cord to the terminal block.

A To TB5 on the indoor unit

B TB6 (No polarity)

3) Temperature display setting

The initial temperature display setting is °C. Please change the setting to °F. Refer to "Function selection of remote controller (Section 8)" in the operation manual for the indoor unit.

4) Two remote controllers setting

If two remote controllers are connected, set one to "Main" and the other to "Sub". For setting procedures, refer to "Function selection of remote controller" in the operation manual for the indoor unit.

7. Test run

7.1. Before test run

► After completing installation and the wiring and piping of the indoor and outdoor units, check for refrigerant leakage, looseness in the power supply or control wiring, wrong polarity, and no disconnection of one phase in the supply.

► Use a 500-volt megohmmeter to check that the resistance between the power supply terminals and ground is at least 1.0 MΩ.

► Do not carry out this test on the control wiring (low voltage circuit) terminals.

⚠ Warning:

Do not use the air conditioner if the insulation resistance is less than 1.0 MΩ.
Insulation resistance

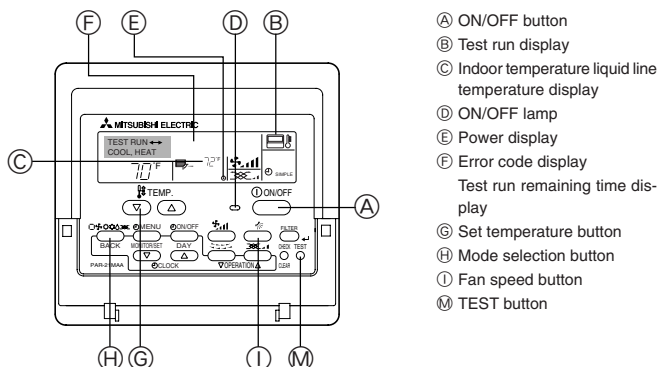


Fig. 7-1

7.2. Test run (Fig. 7-1)

The following 3 methods are available.

① Turn on the power at least 12 hours before the test run.

② Press the [TEST] button twice. ➡ "TEST RUN" liquid crystal display

③ Press the [Mode selection] button. ➡ Make sure that wind is blown out.

④ Press the [Mode selection] button and switch to the cooling (or heating) mode.

➡ Make sure that cold (or warm) wind is blown out.

⑤ Press the [Fan speed] button. ➡ Make sure that the wind speed is switched.

⑥ Check operation of the outdoor unit fan.

⑦ Release test run by pressing the [ON/OFF] button. ➡ Stop

⑧ Register a telephone number.

The telephone number of the repair shop, sales office, etc., to contact if an error occurs can be registered in the remote controller. The telephone number will be displayed when an error occurs. For registration procedures, refer to the operation manual for the indoor unit.

Note:

- If an error code is displayed on the remote controller or if the air conditioner does not operate properly, refer to the outdoor unit installation manual or other technical materials.

- The OFF timer is set for the test run to automatically stop after 2 hours.

- During the test run, the time remaining is shown in the time display.

- During the test run, the temperature of the indoor unit refrigerant pipes is shown in the room temperature display of the remote controller.

- When the VANE or LOUVER button is pressed, the message "NOT AVAILABLE" may appear on the remote controller display depending on the indoor unit model, but this is not a malfunction.

This product is designed and intended for use in the residential,
commercial and light-industrial environment.

Please be sure to put the contact address/telephone number on
this manual before handing it to the customer.