

How to Use / How to Install

Package air-conditioner Optional parts Installation Manual for Windscreen

Always observe for safety

- Carefully read this section 「Always observe for safety」, and securely install the optional parts.
- Be sure to observe the cautions described here: They include critical contents for safety.
- The following indications show the classifications for danger, and possible consequences following incorrect handling.

⚠ WARNING	Incorrect handling could lead to death or serious injury.
⚠ CAUTION	Incorrect handling could lead to injury or damage to house and household articles.

- After installation, perform a test run and make sure that there is no abnormality, and ask your customer to keep this installation sheet with the instruction manual at all times. Also ask the customer to transfer these manuals to a new user if the user changes.

⚠ WARNING

Ask the dealer or specialist for installation.

- If installed incorrectly by user, water leak, electric shock, fire, etc. could result.

Carefully install the panel according to this installation sheet.

- Incorrect installation could cause water leak, electric shock, fire, etc.

Before performing installation (moving) and electrical work

⚠ CAUTION

Do not place polyethylene bags in reach of young children.

- Putting them over the head will block breathing passages, which could result in suffocation.

If electrical work is necessary, use only specified electric wires adapted with current capacity.

- Use of unsuitable wire could cause electric leak, overheating or fire.

Securely apply heat-insulation to refrigerant pipe so that no condensation occurs.

- If heat-insulation is inadequate, condensation could occur on the surface of pipes and dewdrops could accumulate on ceiling, floor or important goods.

Securely perform drain piping work according to the installation manual so that no condensation occurs.

- If piping work is incorrect, water leak may occur and ceiling, furniture, etc may get wet.

This Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as in a typhoon, wind blowing through tall buildings, etc., directly strike the air outlet.





In addition, installation of this product is necessary when cooling operation is to be performed in outside-air temperature of -5°C or lower (down to -10°C).

Pay attention to the following points when installing this product:

- 1) To eliminate the effects of external wind, be sure to install this unit with back surface facing wall side.
- 2) Do not install this unit in orientation or site where wind directly blows at the back of the unit.
- 3) Installing of this product will reduce the capacity of the unit (approx. 2 or 3%) and increase the noise of outdoor unit (approx. 1 or 2dB).
- 4) Do not use this product where there is any obstacle at either side or above the outdoor unit (discharged air will be blocked).

1 Checking parts

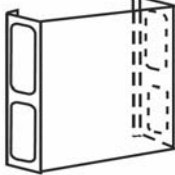
Make sure that all the following parts, in addition to this manual, are in this box:

1 Windscreen	1 Side Plate	1 Wind blocker	6 Mounting Screws
① 	② 	③ 	④ 

PE-RE-12-18



Installation Sheet for Models PUY-A12NHA, PUY/Z-A18NHA

Installation Procedure

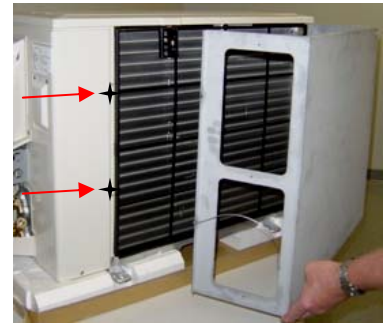

1. Insert right side lip of windscreen between right side of black plastic grill and edge of cabinet.

2. Rotate the windscreen clockwise and secure with two existing screws.

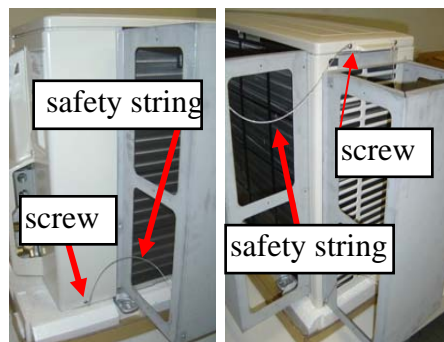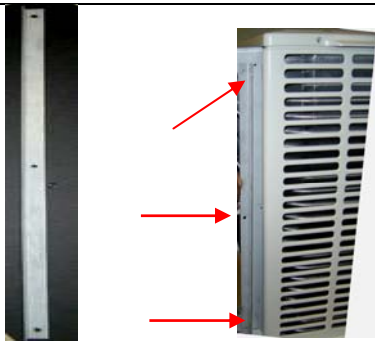

3. Attach side plate to the right side of windscreen and secure with three screws provided.

4. Secure lower safety string to lower left side of cabinet with existing cabinet screw. Secure upper safety string to top panel with existing cabinet screw.

5. If required secure side blocker(s) to the side of windscreen where there is direct exposure to wind. Use pre-drilled holes and screws provided.

Note: Wind blockers are used to prevent direct wind exposure to the heat exchanger
Windscreens are needed for operation where the ambient temperatures fall below -5°C.