




Photo

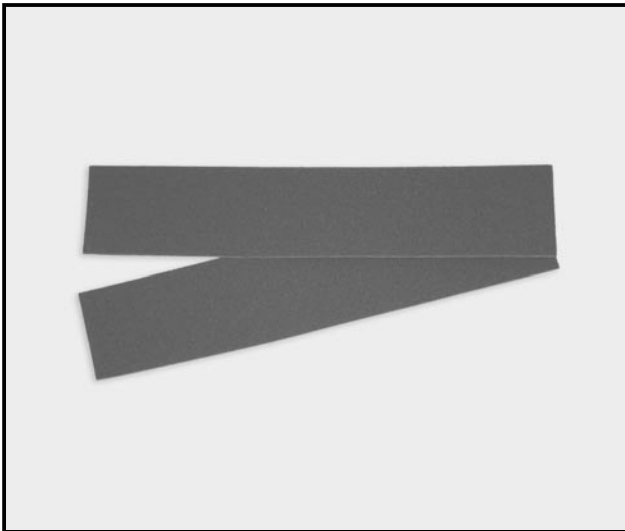

Descriptions

Part for blocking the blowout hole of a cassette-type indoor unit.

Applicable Models

■ PLA-A-- AA



Specifications



Air outlet pattern	Number of shutter plates	
	4 directions → 3 directions	1
4 directions → 2 directions	2	

(Change to 1 direction is not possible.)
 Note 1: Selecting "2 directions" requires cleaning of the filter approximately once.
 (Filter clogging may cause cooling/heating performance to drop.)
 Note 2: Selecting "3 directions" or "2 directions" may increase operating sound.
 Note 3: "2 directions" should not be selected when operating in high-temperature/high-humidity environment.
 (Dew formation or dewdrop may result.)

Material	Foamed polyethylene + Foamed urethane
Color	Black
Installation method	Glued to the air outlet of the indoor unit.

Outline and Dimensions

Unit : mm

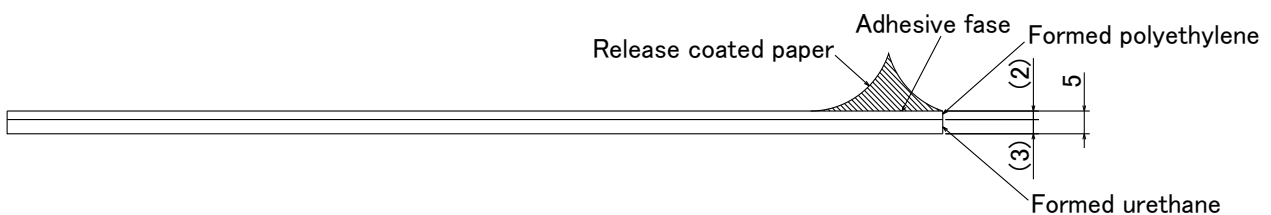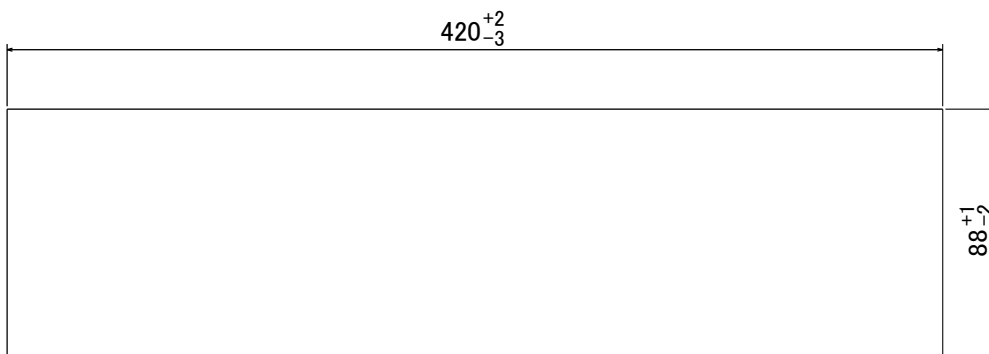

How to Use / How to Install

Optional Parts Installation Manual of AIR OUTLET SHUTTER PLATE(Q'TY:2) PAC-SG06SP-E

Air-outlet shutter plate Installation Manual

1. Locate the Shutter Plate installation position

- This is a part which is used to convert the number of air-outlet from "4 ways" to "3 ways" or "2 ways". (Convert to "1 way" is not available.)
- Select the outlet direction and the outlet to be closed (Indoor unit).
 - ※ When the number of outlet is selected to "2 ways", be sure to explain to the customer that the filter should be cleaned once a month. (Otherwise the filter will be clogged, and the performance of the cooling and heating can be lower.)
 - ※ When the number of outlet is selected to "3 ways" or "2 ways", the operation noise can be lower.
 - ※ Never to select "2 ways" in the environment of high temperature and high humidity. (It can cause dew.)

2. Installation of shutter plate (fig.1)

- Install the shutter plate to the indoor unit so that it can fit the air-outlet concave portion.
 - ※ Install one piece of shutter plate per one air-outlet.
 - ※ The installation should be done before the grille is installed.
 - ※ The shutter plate must be installed not to cause wrinkle or gap. (It can cause dew drops.)

3. Function selection

- When the number of air-outlet is changed, it is necessary you to make function selection. For the selection method, refer to the manual for installation of the indoor unit.

4. Setting of the auto vane (fig.2)

- It is possible to fix the auto vane of the grille to the totally closed portion, which is applied to the air-outlet installed on the shutter plate. In accordance with the request from customers, make setting after the installation manual of the grille. Once the auto vane is fixed, the operation of a remote control and all of automatic control will not be available. Also, the LCD of the remote control will not work.


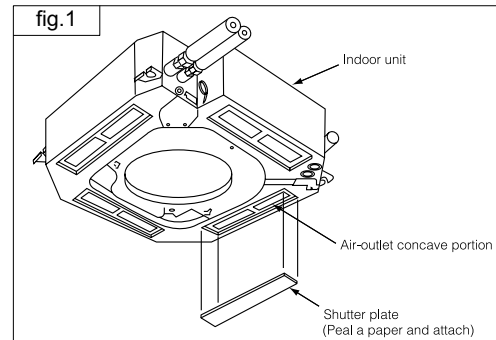


fig.2

 
- 1) Shut the main power (circuit breaker) off.





Warning Shut the main power off.

- The fan of the unit will run, which can cause accident or electric shock.

- 2) Disconnect a connector of the vane motor of the grille which is applied the air-outlet installed on the shutter plate. (Disconnect the connector to arrow direction with keep depressing the lock release button as shown below.) Insulate the connector which was disconnected with an electric tape.

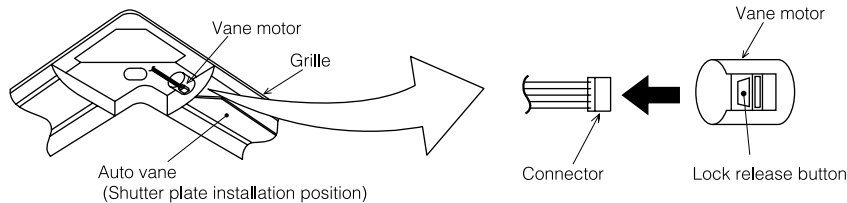

 - 3) Move the auto vane of the air-outlet which is equipped with the shutter plate slowly by manual and bring it to totally closed position.

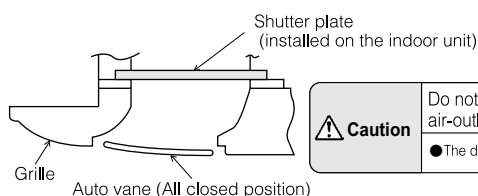

Caution Do not totally close the vertical air flow control vane of the air-outlet which is not equipped with the shutter plate.

- The dew or dew drop can be caused, and the unit cannot work correctly.