


HAND DRYER

PARTS CATALOG

MODELS

JT-SB116JH2-S-NA

JT-SB116JH2-W-NA

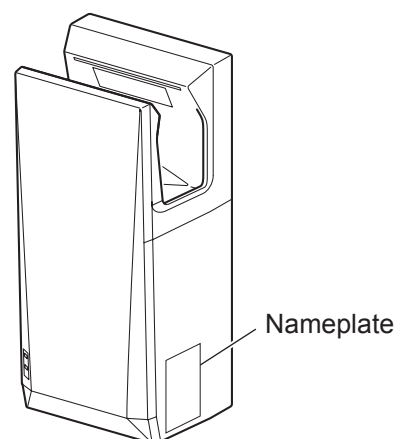

Warning:

Repair work must be performed by the manufacturer, its service agent or a similarly qualified person in order to avoid hazards.

Contents

Parts catalog 3-19

 JT-SB116JH2-S-NA4-11

 JT-SB116JH2-W-NA..... 12-19

HANDBOOK (U219H)

Parts catalog

Please note the following when using the parts catalog.


1. When ordering parts, the part number, part name, and the number of parts are required.
2. It may take time for you to receive the parts. Make an inquiry about a rush order.
3. Specifications may be subject to change without notice.
4. Parts marked with  and  are critical for safety.
5. To maintain safety and performance, use the parts specified in the parts catalog.
6. When replacing the parts to which the nameplate is attached, remove the nameplate and attach it to the new parts.

Description of screw abbreviations



Abbreviation	Description
PC screw	Cross recess flat head machine screw
PRC screw	Cross recess oval head machine screw
PP screw	Cross recess pan head machine screw
SW · PP screw	Cross recess pan head screw with spring washer
PPT screw	Cross recess tapping screw
PCT screw	Cross recess flat head tapping screw
PTT screw	Cross recess truss head tapping screw
PT screw	Cross recess truss head machine screw
SET screw	Slotted head stop screw
SQ · SET screw	Square head stop screw
P · SET screw	Pan head stop screw
PMT screw	Primer truss head screw
HS · SET screw	Hexagon head stop screw
P · R · W screw	Cross recess round wood screw
P · C · W screw	Cross recess flat head wood screw
P · R · C · W screw	Cross recess round and flat wood screw
R · W screw	Slotted round wood screw
PW · PP screw	Cross recess pan head screw with small washer
SW-PW · PP screw	Cross recess pan head machine screw with spring washer and flat washer

Body parts

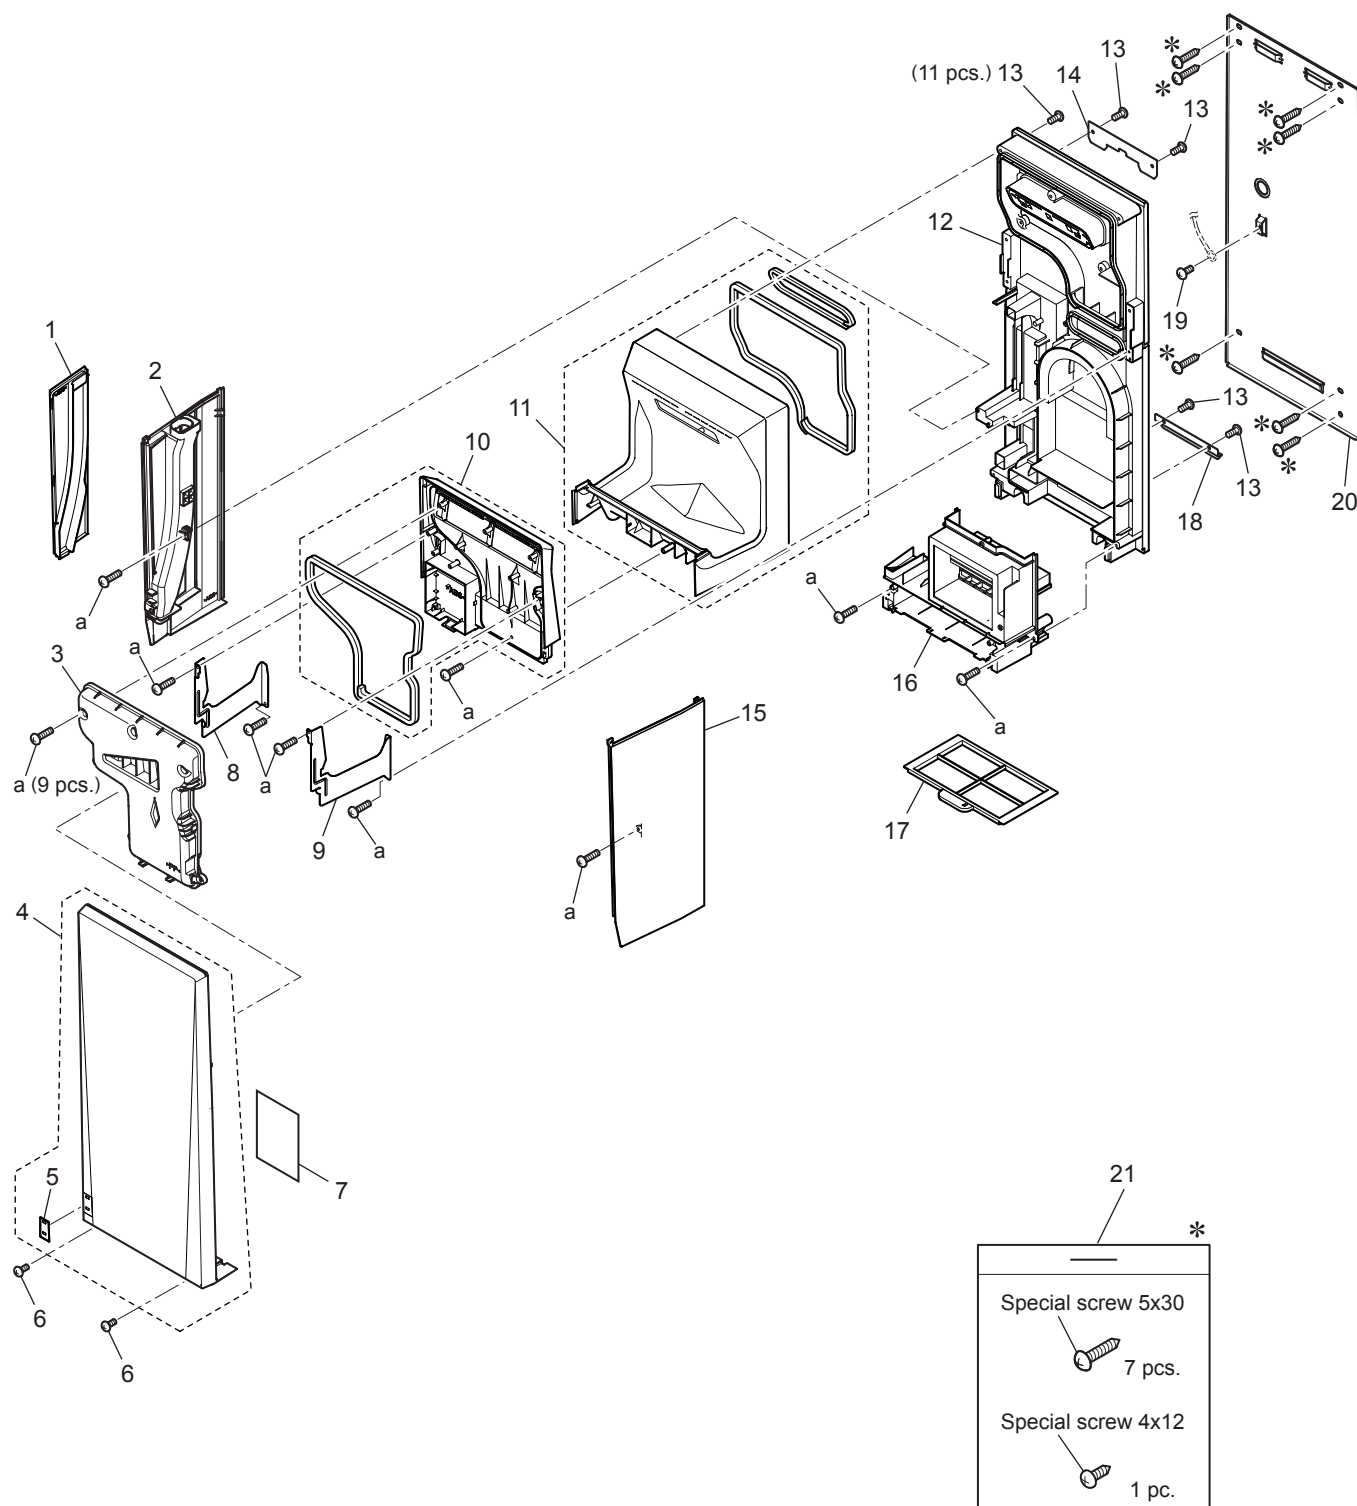

<Standard screws>

Symbol	Screw name
a	PTT screw 4x16


* shows accessory parts.

Body parts

JT-SB116JH2-S-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Side cover	W45 604 842	1		
2	Side panel L	W45 604 847	1		
3	Exhaust duct	W45 604 807	1		
4	Front panel	W45 604 819	1		
5	Indicator plate	W45 604 857	1		
6	Special screw 4x16	W00 000 103	2		
7	Wiring diagram	W45 604 360	1		
8	Panel holder L	W45 604 825	1		
9	Panel holder R	W45 604 826	1		
10	Panel (front)	W45 604 806	1		With packing
11	Panel (back)	W45 604 810	1		
12	Base	W45 604 814	1		
13	Special screw 4x16	W00 000 090	17		
14	Hook (upper)	W45 604 834	1		
15	Side panel R	W45 604 844	1		
16	Cover	W45 604 813	1		
17	Filter	W45 604 851	1	⚠	
18	Hook (lower)	W45 604 824	1		
19	PT screw 4x8 BS	W00 000 011	4		
20	Back plate	W45 604 831	1		
21	Screws in bag	W45 604 050	1		

Circuit board parts

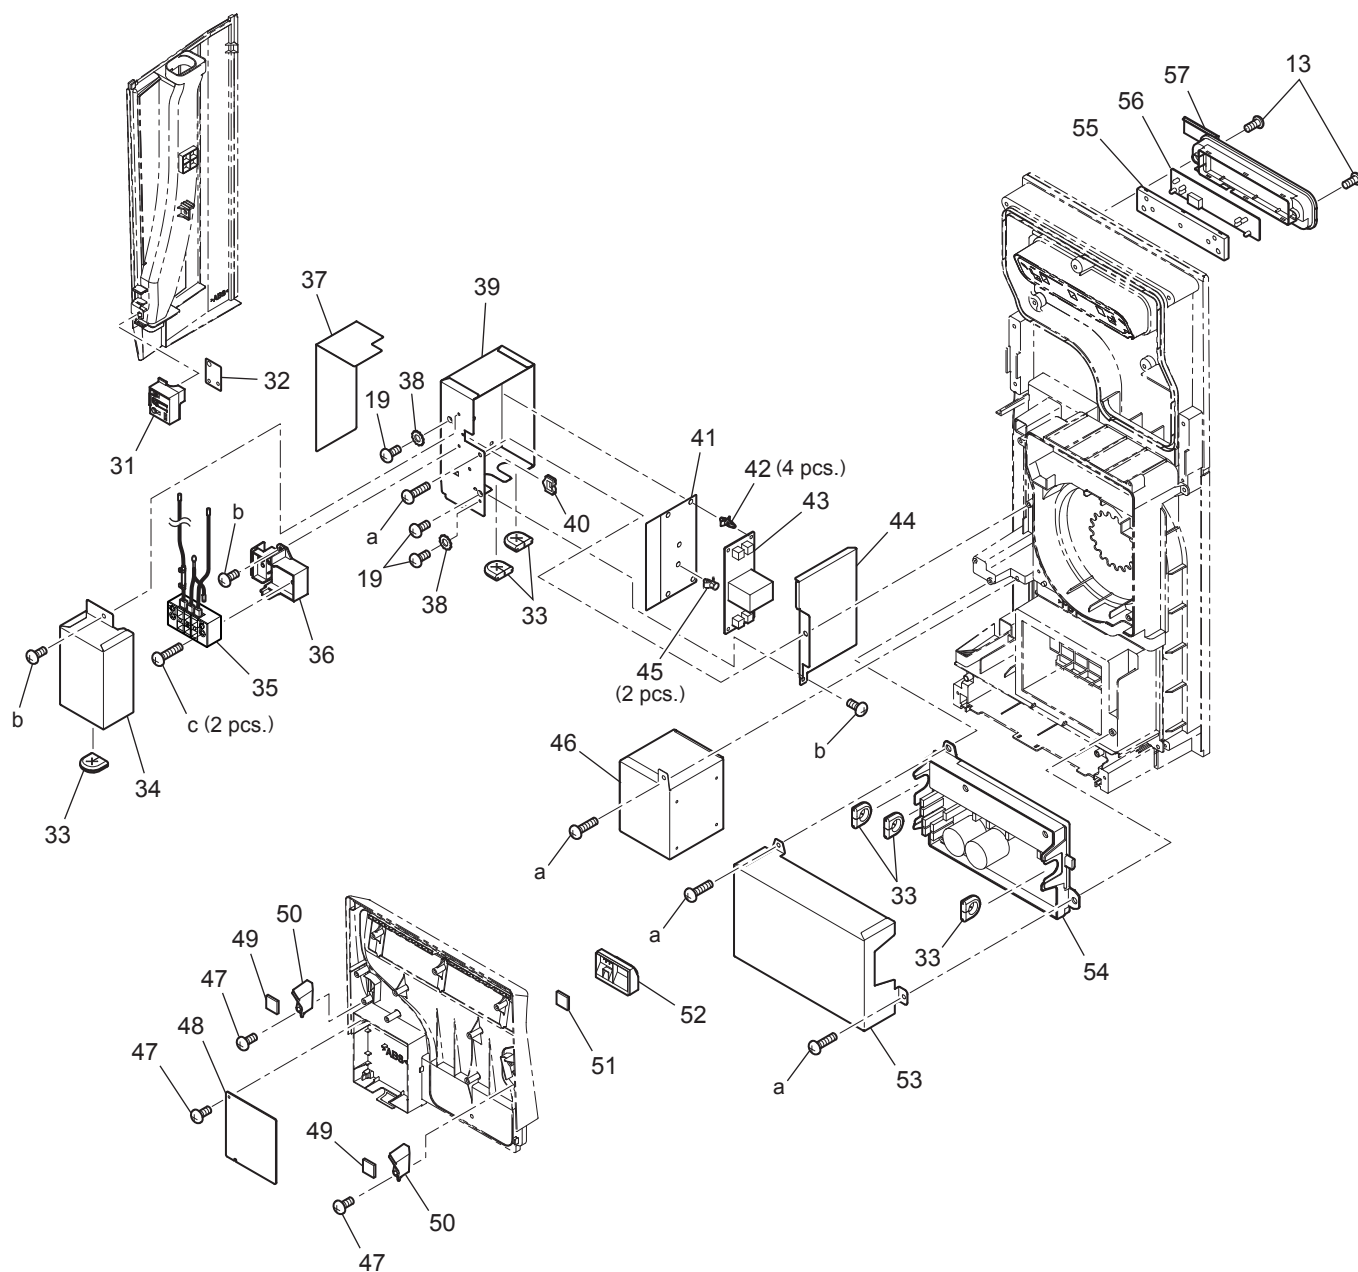

<Standard screws>


Symbol	Screw name
a	PTT screw 4x16
b	PTT screw 4x6
c	PPT screw 4x20

Circuit board parts

JT-SB116JH2-S-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	LED holder	W45 604 850	1		
32	Circuit board	W45 604 183	1	⚠	Display
33	Cord bush	W00 000 225	6		
34	TB cover	W45 604 827	1		
35	Terminal block	W45 604 223	1	⚠	3P ・ With the thermal fuse
36	TB holder	W45 603 806	1		
37	Insulator sheet	W45 604 854	1	⚠	
38	Lock washer (4)	W00 000 082	2		
39	TB fix plate	W45 604 832	1		
40	Cord bush	W00 000 273	1		
41	Insulator sheet	W45 604 853	1	⚠	
42	Spacer	W45 604 096	4		LCBS-3-19
43	Circuit board	W45 604 171	1	⚠	Filter
44	PCB cover	W45 604 833	1		
45	Support piece	W45 604 095	2		
46	Reactor assembly	W45 604 803	1	⚠	
47	Special screw 4x12	W00 000 088	3		
48	Circuit board	W45 604 178	1	⚠	Control
49	Circuit board	W45 604 181	2	⚠	Sensor
50	Fix piece	W45 604 838	2		
51	Circuit board	W45 604 182	1	⚠	Sensor
52	Sensor holder	W45 604 839	1		
53	PCB cover	W45 604 829	1		
54	Circuit board	W45 604 172	1	⚠	Power
55	Fix plate	W45 604 840	1		
56	Circuit board	W45 604 180	1	⚠	Light receiving
57	Maintenance cover	W45 604 837	1		

Blower parts

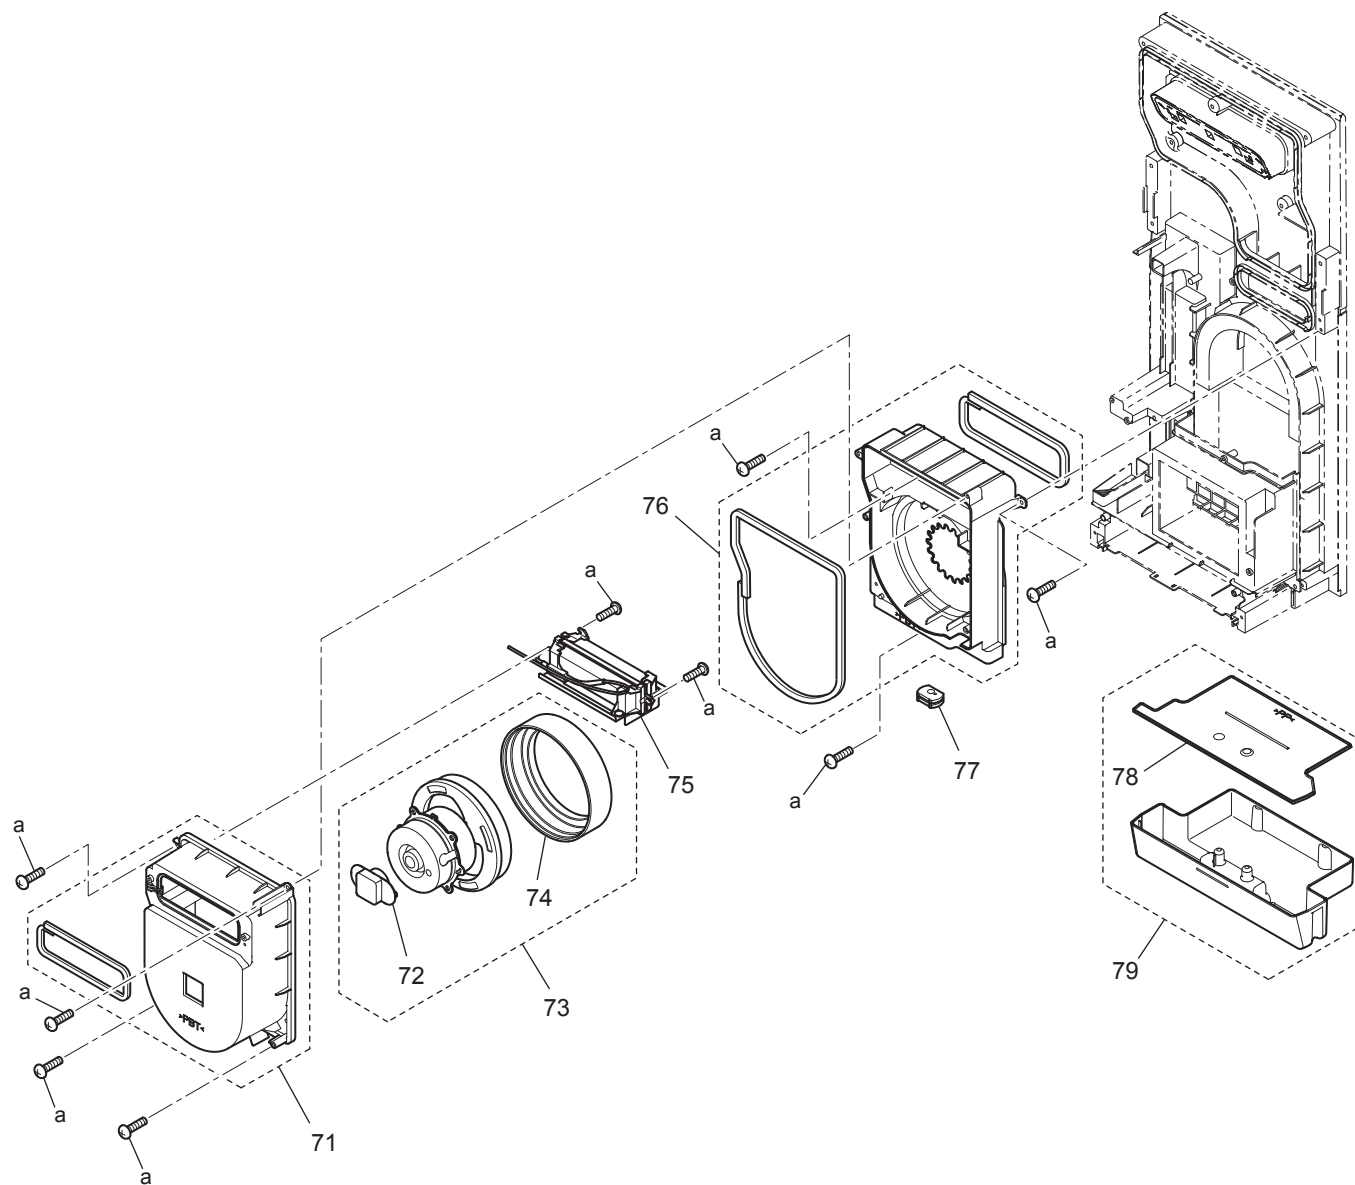

<Standard screws>


Symbol	Screw name
a	PTT screw 4x16

Blower parts

JT-SB116JH2-S-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Blower cover	W45 604 802	1		With packing
72	Blower stopper	W45 604 232	1		
73	Blower assembly	W45 604 401	1	⚠	
74	Floating rubber	W45 604 233	1		
75	Heater (PTC)	W45 604 800	1	⚠	With the fuse
76	Blower case	W45 604 845	1		With packing
77	Cord bush	W45 604 230	1		
78	Cover	W45 604 849	1		
79	Tank assembly	W45 604 823	1		

Wiring parts

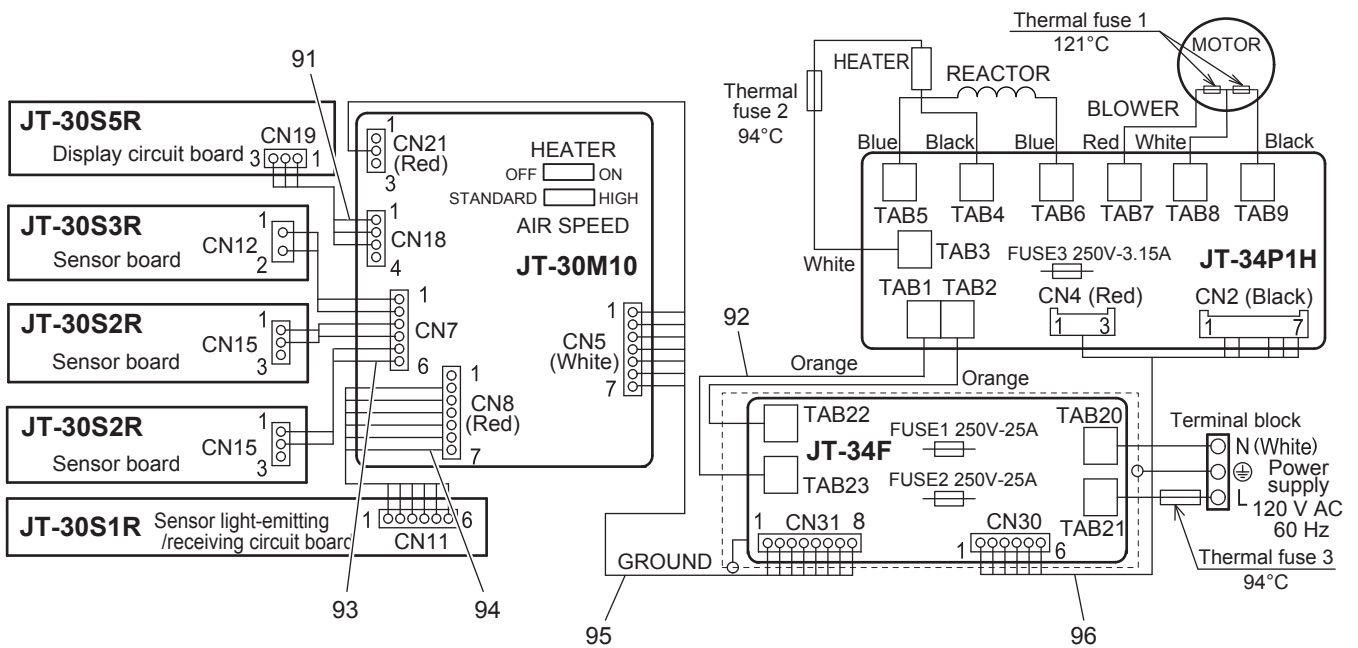


Wiring parts

JT-SB116JH2-S-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
91	Lead wire	W45 604 219	1	△	CN18-CN19
92	Lead wire	W45 604 224	1	△	TAB1・2-TAB22・23
93	Lead wire	W45 604 220	1	△	CN7-CN12・CN15
94	Lead wire	W45 604 221	1	△	CN8-CN11
95	Lead wire	W45 604 226	1	△	CN31-CN5・CN21
96	Lead wire	W45 604 225	1	△	CN30-CN2・CN4

Body parts

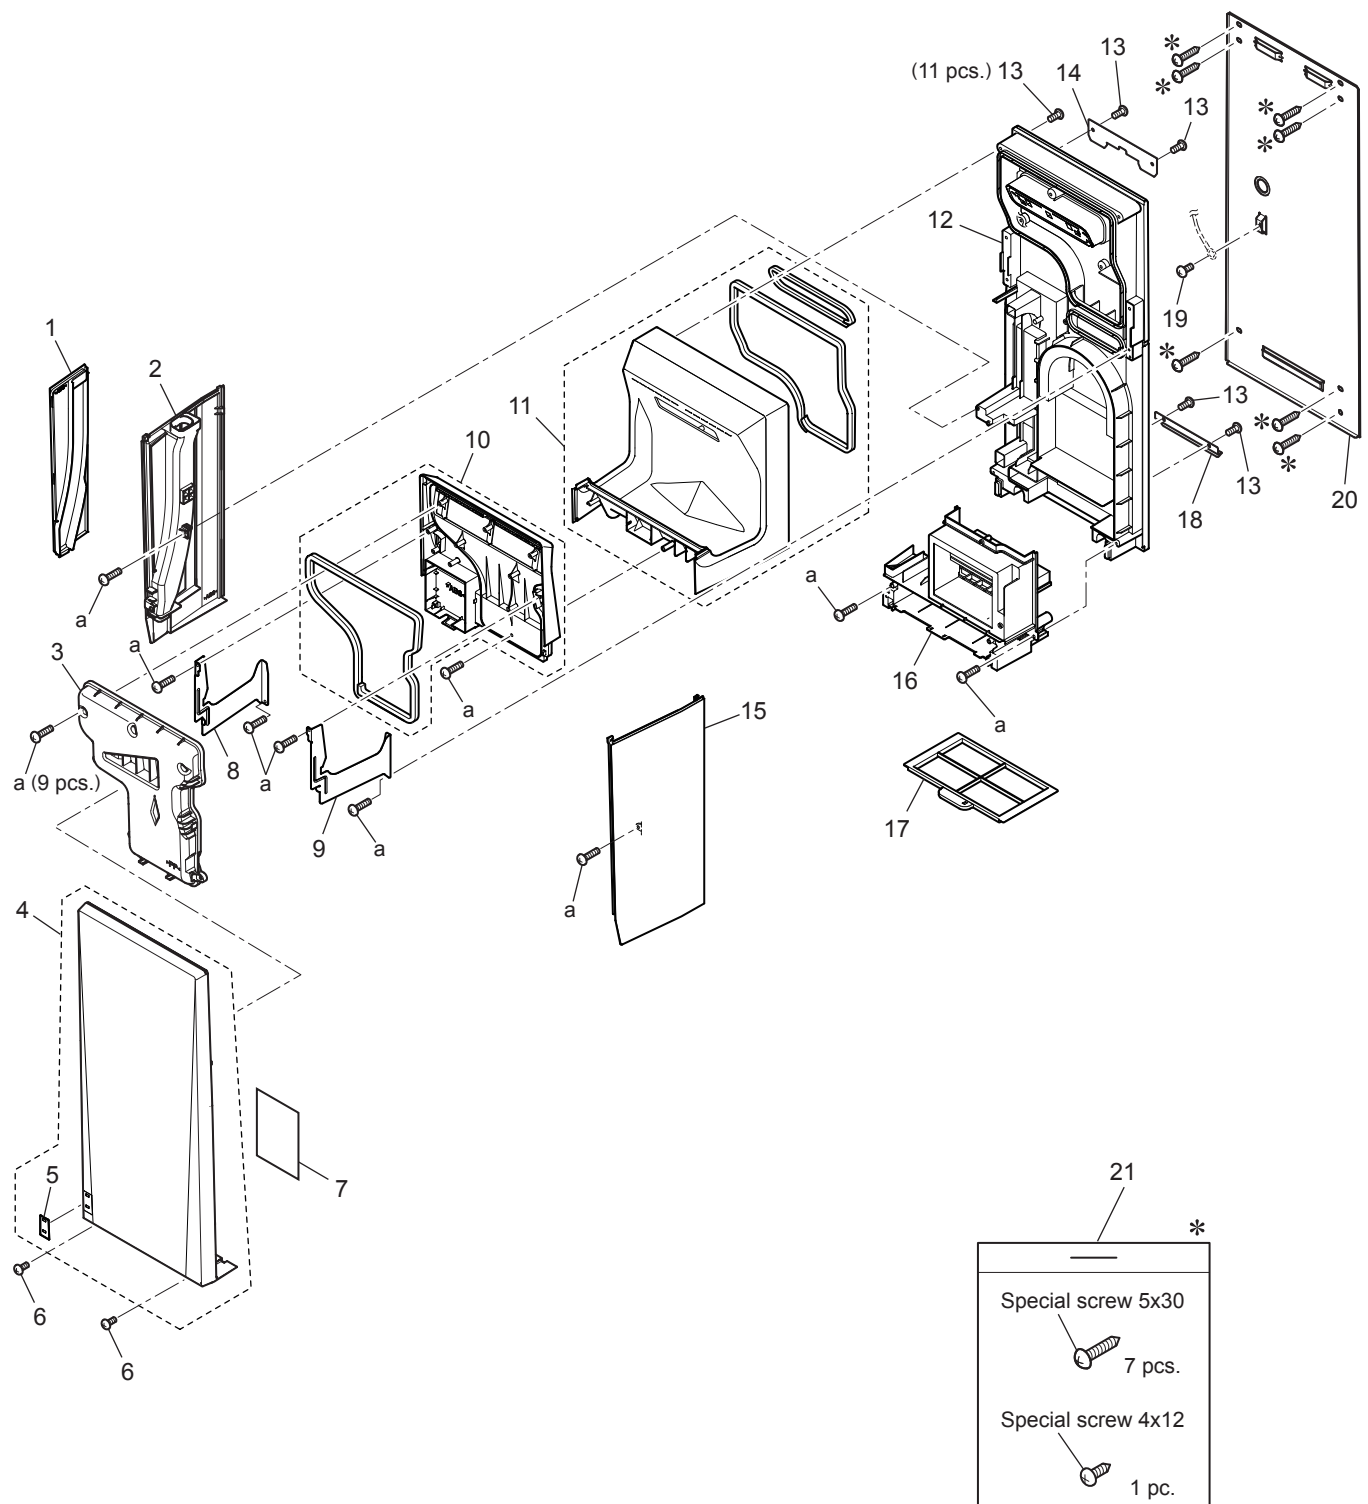

<Standard screws>

Symbol	Screw name
a	PTT screw 4x16


* shows accessory parts.

Body parts

JT-SB116JH2-W-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Side cover	W45 604 841	1		
2	Side panel L	W45 604 846	1		
3	Exhaust duct	W45 604 807	1		
4	Front panel	W45 604 817	1		
5	Indicator plate	W45 604 855	1		
6	Special screw 4x16	W00 000 103	2		
7	Wiring diagram	W45 604 360	1		
8	Panel holder L	W45 604 825	1		
9	Panel holder R	W45 604 826	1		
10	Panel (front)	W45 604 805	1		With packing
11	Panel (back)	W45 604 811	1		
12	Base	W45 604 814	1		
13	Special screw 4x16	W00 000 090	17		
14	Hook (upper)	W45 604 834	1		
15	Side panel R	W45 604 843	1		
16	Cover	W45 604 813	1		
17	Filter	W45 604 851	1		
18	Hook (lower)	W45 604 824	1		
19	PT screw 4x8 BS	W00 000 011	4		
20	Back plate	W45 604 831	1		
21	Screws in bag	W45 604 050	1		

Circuit board parts

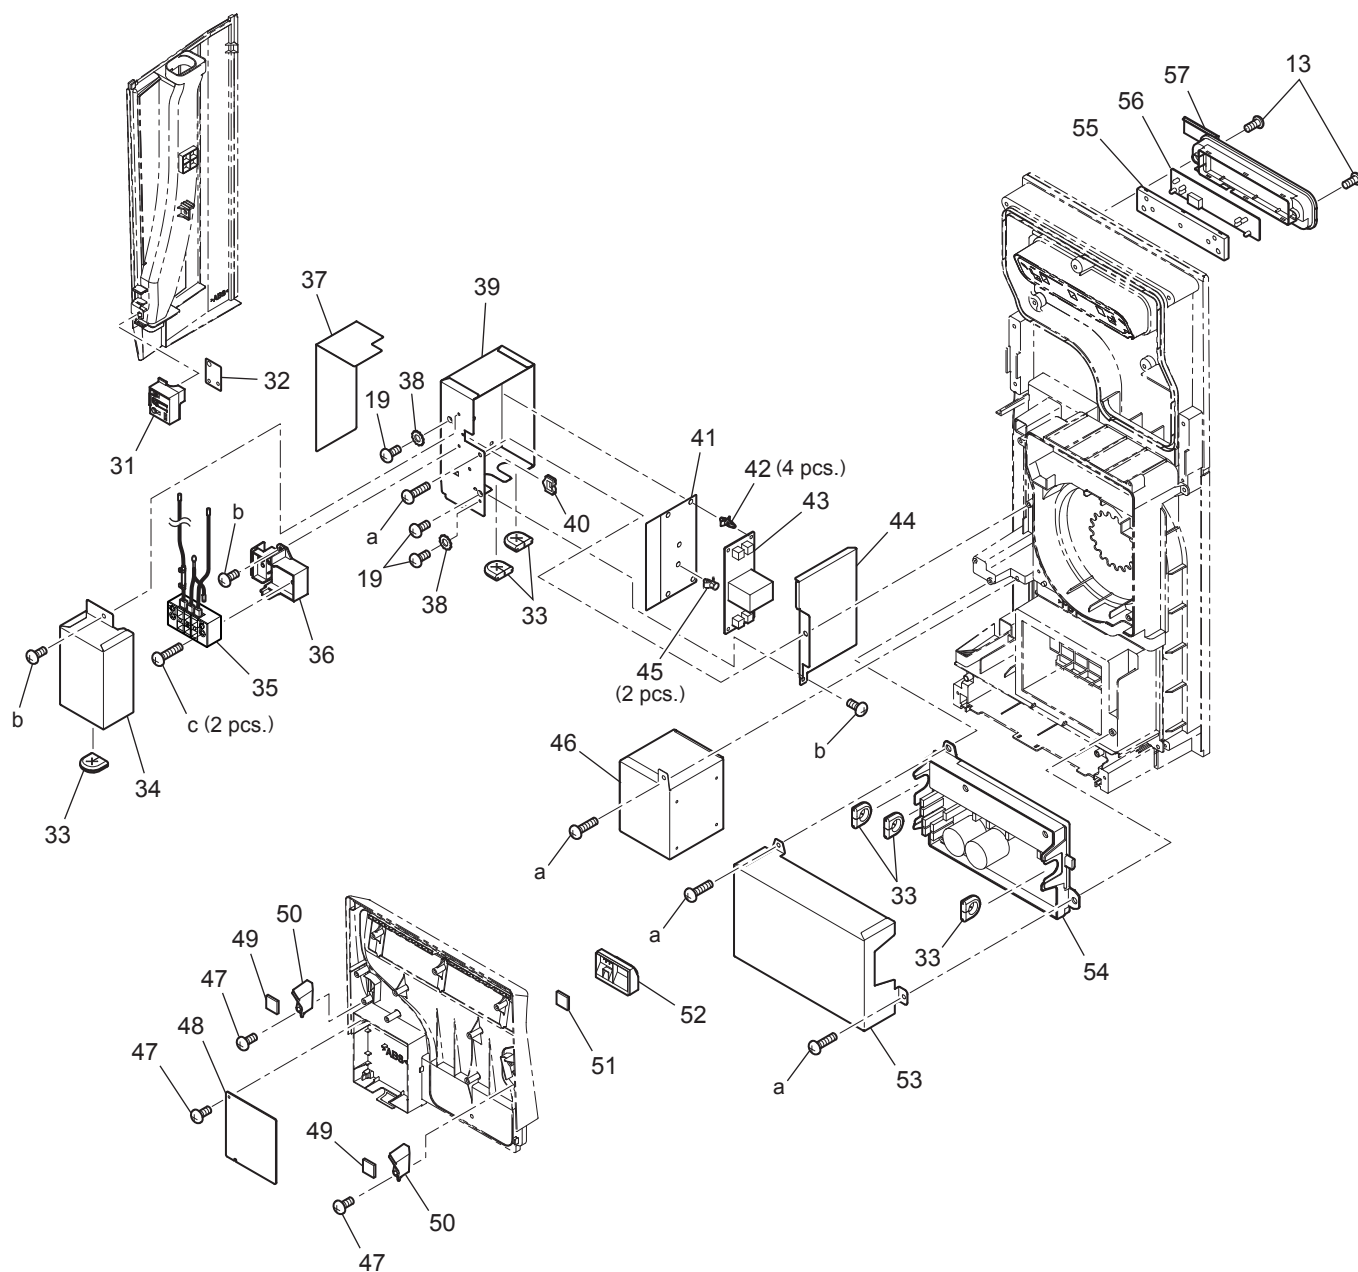

<Standard screws>


Symbol	Screw name
a	PTT screw 4x16
b	PTT screw 4x6
c	PPT screw 4x20

Circuit board parts

JT-SB116JH2-W-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	LED holder	W45 604 850	1		
32	Circuit board	W45 604 183	1	⚠	Display
33	Cord bush	W00 000 225	6		
34	TB cover	W45 604 827	1		
35	Terminal block	W45 604 223	1	⚠	3P ・ With the thermal fuse
36	TB holder	W45 603 806	1		
37	Insulator sheet	W45 604 854	1	⚠	
38	Lock washer (4)	W00 000 082	2		
39	TB fix plate	W45 604 832	1		
40	Cord bush	W00 000 273	1		
41	Insulator sheet	W45 604 853	1	⚠	
42	Spacer	W45 604 096	4		LCBS-3-19
43	Circuit board	W45 604 171	1	⚠	Filter
44	PCB cover	W45 604 833	1		
45	Support piece	W45 604 095	2		
46	Reactor assembly	W45 604 803	1	⚠	
47	Special screw 4x12	W00 000 088	3		
48	Circuit board	W45 604 179	1	⚠	Control
49	Circuit board	W45 604 181	2	⚠	Sensor
50	Fix piece	W45 604 838	2		
51	Circuit board	W45 604 182	1	⚠	Sensor
52	Sensor holder	W45 604 839	1		
53	PCB cover	W45 604 829	1		
54	Circuit board	W45 604 172	1	⚠	Power
55	Fix plate	W45 604 840	1		
56	Circuit board	W45 604 180	1	⚠	Light receiving
57	Maintenance cover	W45 604 837	1		

Blower parts

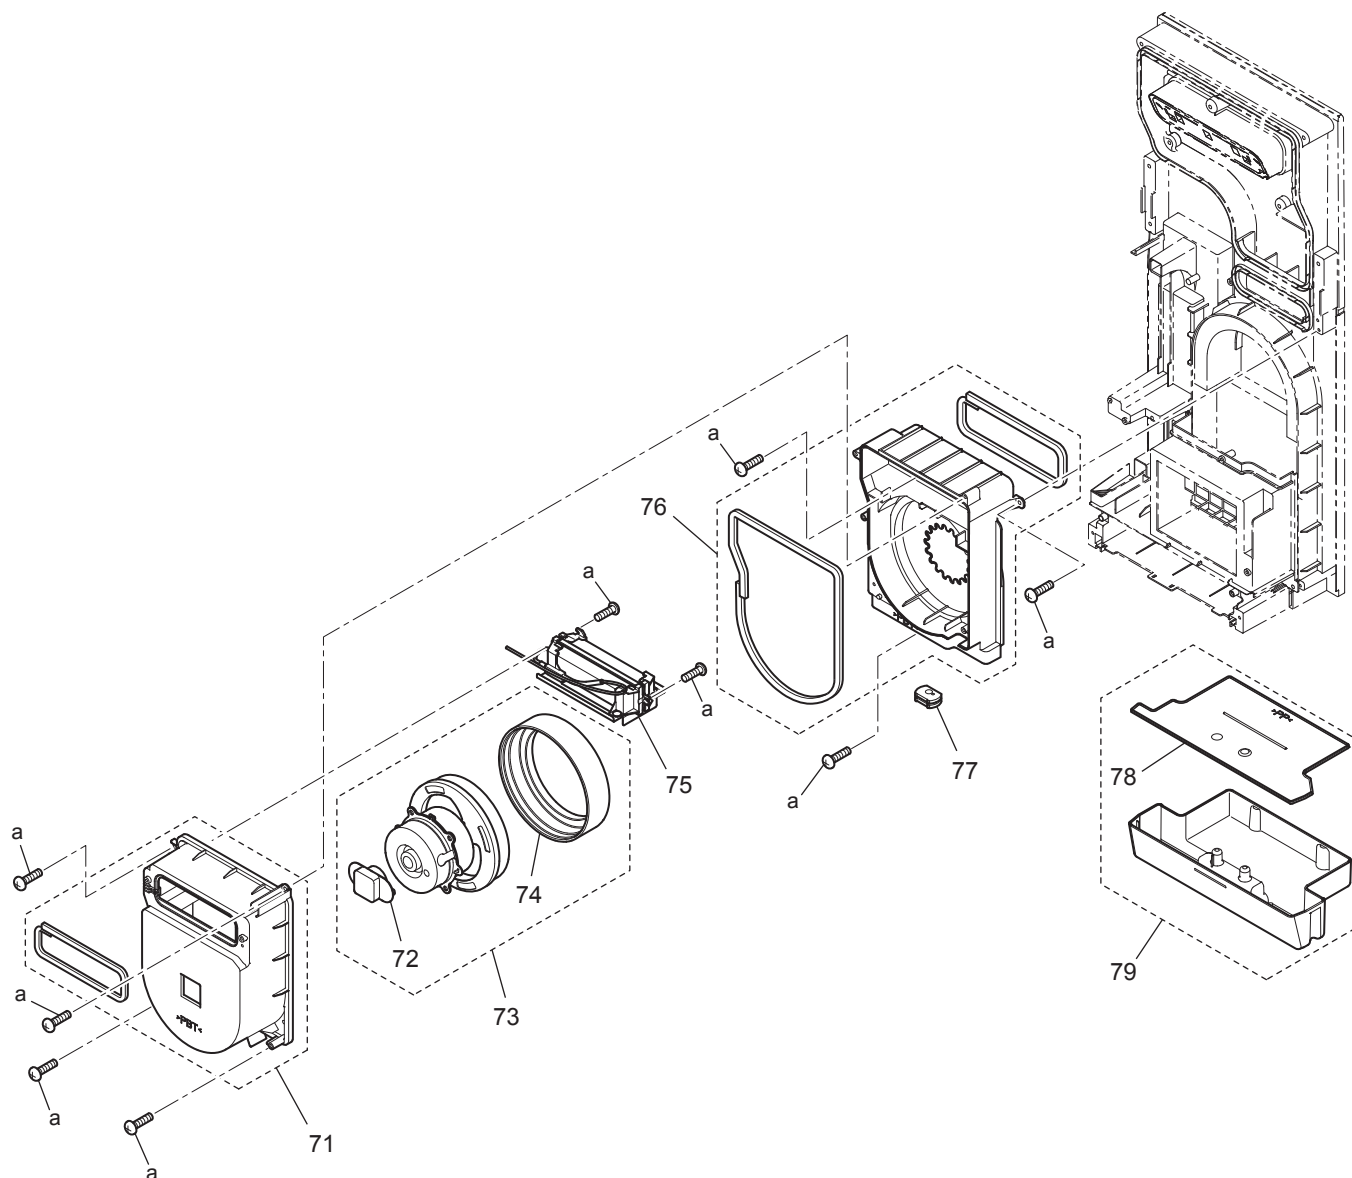

<Standard screws>


Symbol	Screw name
a	PTT screw 4x16

Blower parts

JT-SB116JH2-W-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Blower cover	W45 604 802	1		With packing
72	Blower stopper	W45 604 232	1		
73	Blower assembly	W45 604 401	1	⚠	
74	Floating rubber	W45 604 233	1		
75	Heater (PTC)	W45 604 800	1	⚠	With the fuse
76	Blower case	W45 604 845	1		With packing
77	Cord bush	W45 604 230	1		
78	Cover	W45 604 849	1		
79	Tank assembly	W45 604 822	1		

Wiring parts

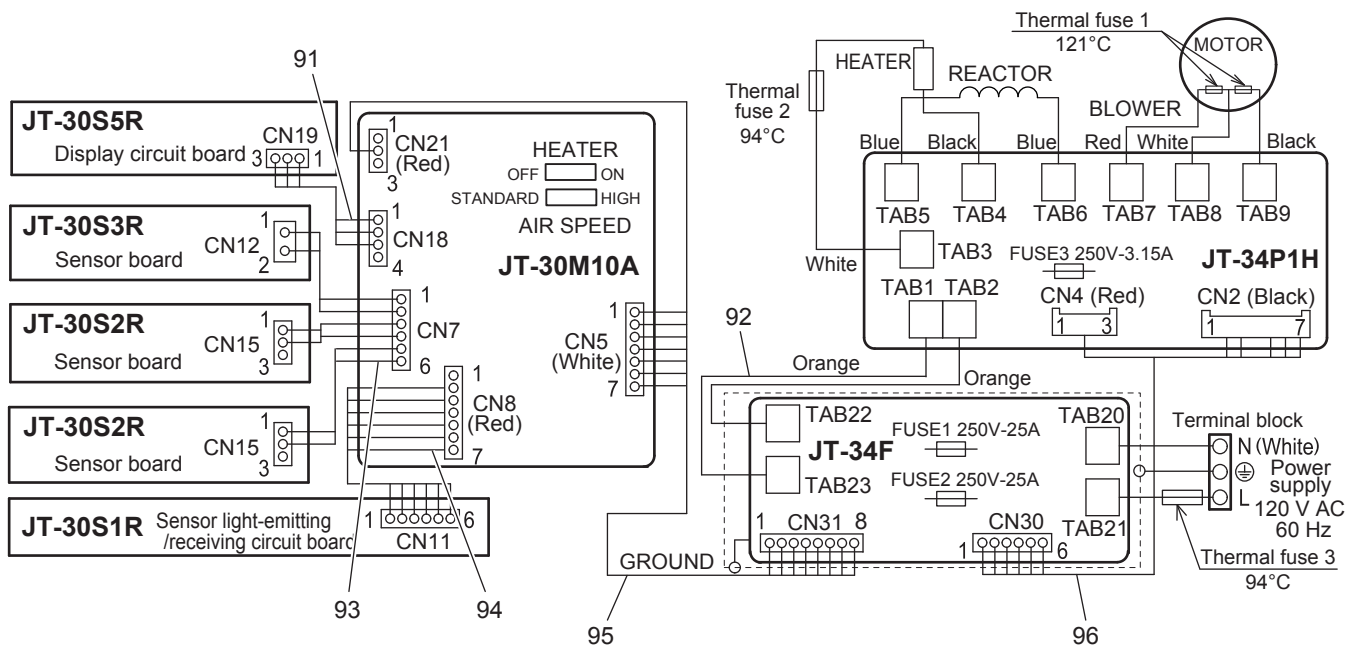

Wiring parts

JT-SB116JH2-W-NA

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
91	Lead wire	W45 604 219	1	△	CN18-CN19
92	Lead wire	W45 604 224	1	△	TAB1・2-TAB22・23
93	Lead wire	W45 604 220	1	△	CN7-CN12・CN15
94	Lead wire	W45 604 221	1	△	CN8-CN11
95	Lead wire	W45 604 226	1	△	CN31-CN5・CN21
96	Lead wire	W45 604 225	1	△	CN30-CN2・CN4