

LOSSNAY


PARTS CATALOG

MODELS


LGH-F300RX5-E1

LGH-F470RX5-E1

LGH-F600RX5-E1

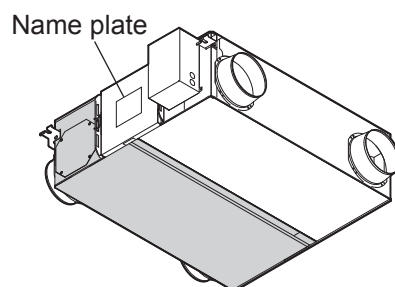

LGH-F1200RX5-E1

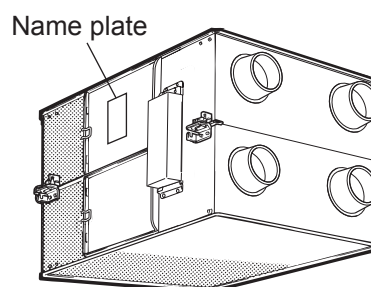

Warning:

Repair work must be performed by the manufacturer, its service agent or a similarly qualified person in order to avoid hazards.

Contents

Parts catalog 3-35

 LGH-F300RX5-E14-11

 LGH-F470RX5-E1 12-19

 LGH-F600RX5-E1 20-27

 LGH-F1200RX5-E1 28-35

HANDBOOK (U194H)

Parts catalog

Please note the following when using the parts catalog.



1. When ordering parts, the part number, part name, and the number of parts are required.
2. It may take time for you to receive the parts. Make an inquiry about a rush order.
3. Specifications may be subject to change without notice.
4. Parts marked with ⚠ and  are critical for safety.
5. To maintain safety and performance, use the parts specified in the parts catalog.
6. When replacing the parts to which the nameplate is attached, remove the nameplate and attach it to the new parts.

Description of screw abbreviations



Abbreviation	Description
PC screw	Cross recess flat head machine screw
PRC screw	Cross recess oval head machine screw
PP screw	Cross recess pan head machine screw
SW · PP screw	Cross recess pan head screw with spring washer
PPT screw	Cross recess tapping screw
PCT screw	Cross recess flat head tapping screw
PTT screw	Cross recess truss head tapping screw
PT screw	Cross recess truss head machine screw
SET screw	Slotted head stop screw
SQ · SET screw	Square head stop screw
P · SET screw	Pan head stop screw
PMT screw	Primer truss head screw
HS · SET screw	Hexagon head stop screw
P · R · W screw	Cross recess round wood screw
P · C · W screw	Cross recess flat head wood screw
P · R · C · W screw	Cross recess round and flat wood screw
R · W screw	Slotted round wood screw
PW · PP screw	Cross recess pan head screw with small washer
SW-PW · PP screw	Cross recess pan head machine screw with spring washer and flat washer

Structural parts

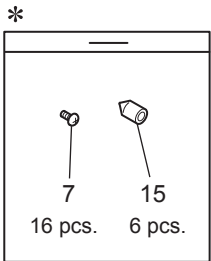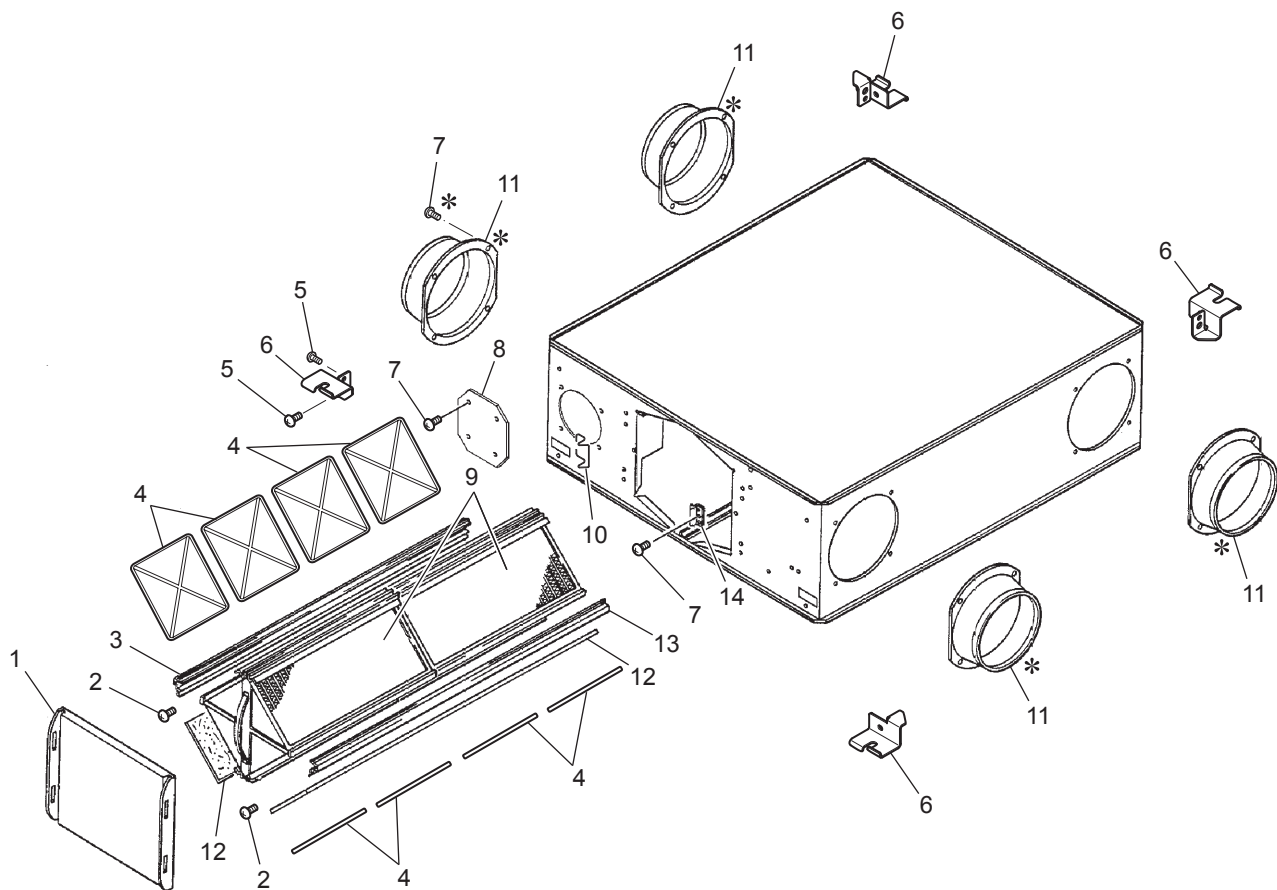


* shows accessory parts.

Structural parts

LGH-F300RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 004 488	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 004 713	1		
4	Filter stopper	W50 016 710	8		
5	PT screw 6x12	W00 000 060	8		
6	Hanger set	W50 004 384	4		
7	PTT screw 4x8	W00 000 009	29		
8	Cover	W50 003 707	2		
9	Lossnay core	W50 004 719	2	⚠	With the filter stoppers
10	Hinge	W50 004 344	1		
11	Flange	W50 004 609	4		
12	Filter	W50 004 723	4	⚠	
13	Core guide R	W50 003 392	1		
14	Fix piece	W50 004 722	1		
15	Screw cap	W50 004 313	6		

Fan parts

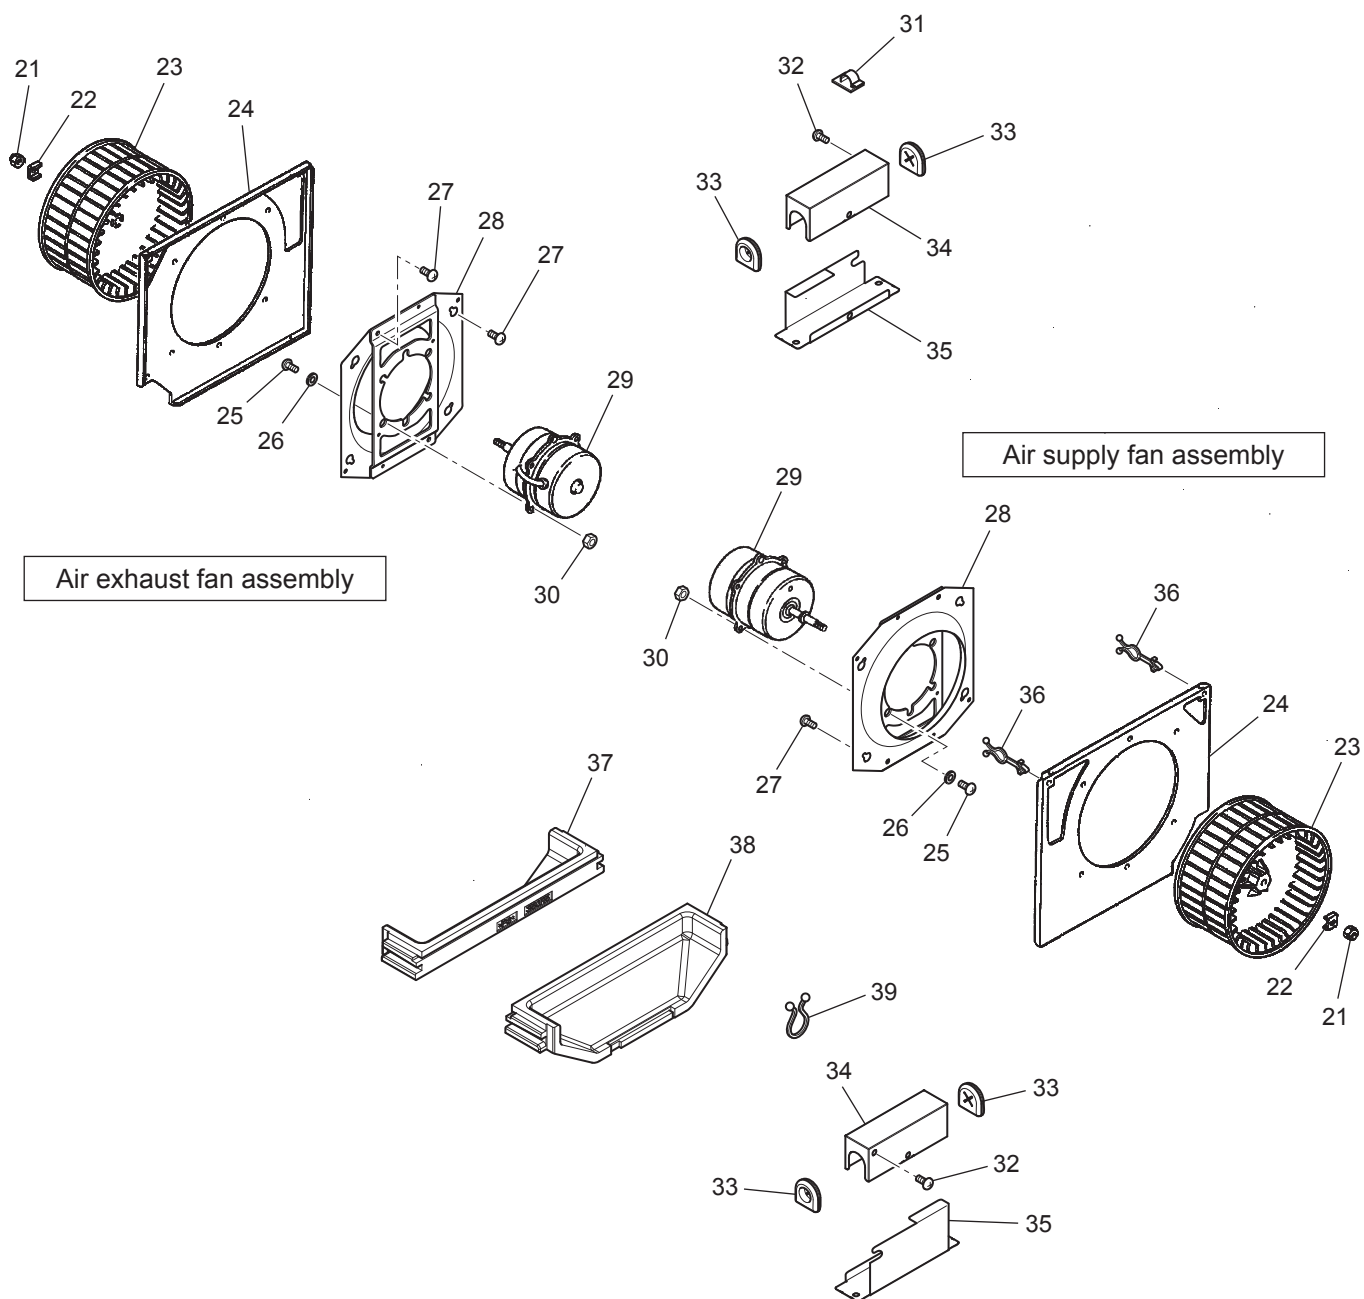


Fan parts

LGH-F300RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Special nut (M8)	W00 000 121	2		Left-handed
22	Tab washer	W00 000 134	2		
23	Centrifugal fan	W50 003 480	2	⚠	Dia. 220mm
24	Fan base	W50 003 713	2		
25	PT screw 5x20	W00 000 058	8		
26	Special washer	W00 000 157	8		
27	PTT screw 5x10	W00 000 044	8		
28	Motor fix plate	W50 003 733	2		
29	Motor	W50 004 455	2	⚠	
30	Nut (M5)	W00 000 106	8		
31	Cord clip	W00 000 263	2		
32	PTT screw 4x6	W00 000 035	14		
33	Cord bush	W00 000 225	4		
34	Connector cover	W50 004 726	2		
35	Connector plate	W50 004 727	2		
36	Cord clasper	W00 000 287	2		
37	Separator	W50 004 486	1		
38	Separator	W50 003 487	1		
39	Cord band	W00 000 281	1		Black

Control parts


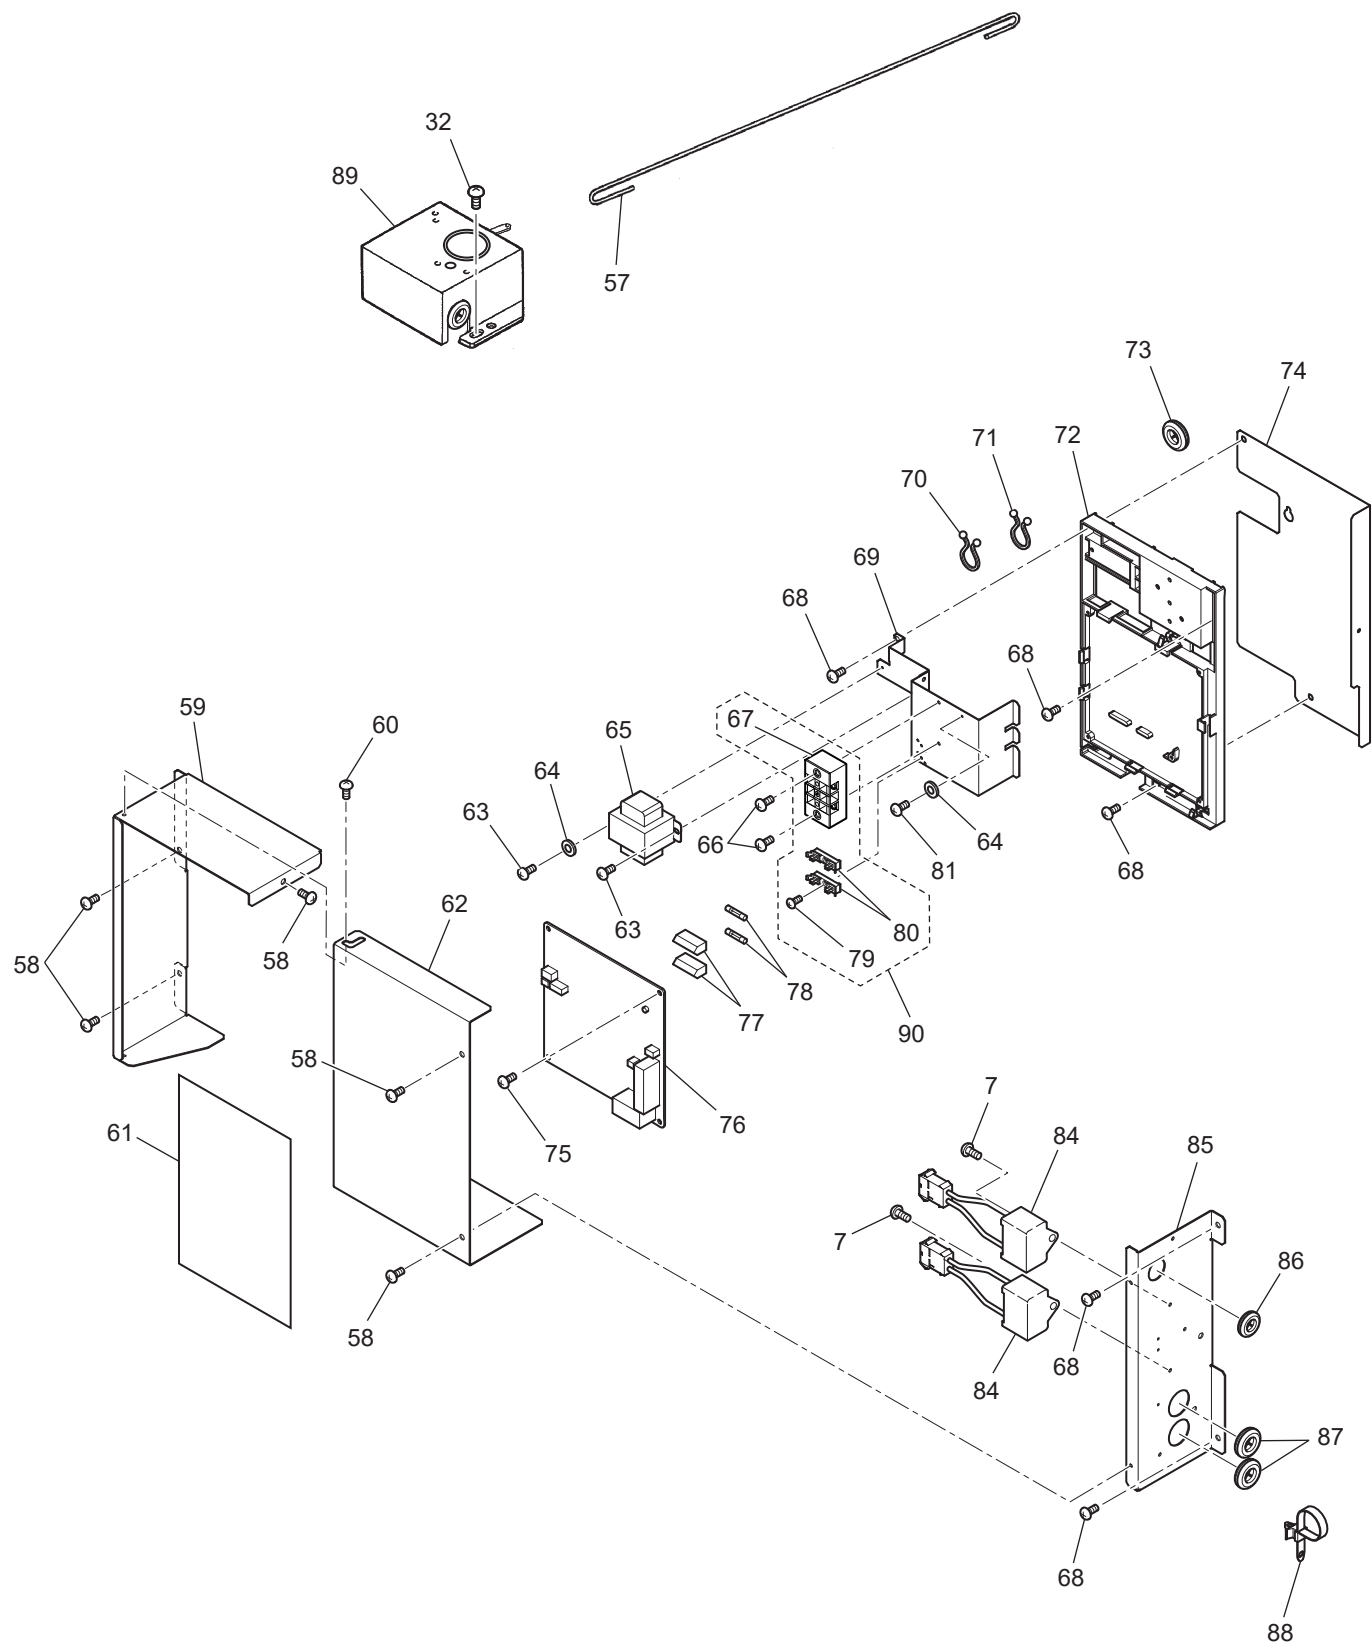


Control parts

LGH-F300RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
57	Rod	W50 004 156	1		
58	PT screw 4x8	W00 000 050	6		
59	Side plate	W50 004 707	1		
60	Special screw 4x3.5	W00 000 097	2		
61	Wiring diagram	W50 004 358	1		
62	Control cover	W50 004 705	1		
63	PP screw 4x8	W00 000 004	2		
64	Lock washer (4)	W00 000 082	2		
65	Transformer	W50 004 217	1	⚠	AC230V・With the lead
66	PPT screw 4x12	W00 000 032	2		
67	Terminal block	W50 004 236	1	⚠	ML-20-A37-3P
68	PTT screw 4x10	W00 000 037	7		
69	TB fix plate	W50 003 710	1		
70	Cord band	W00 000 231	2		White
71	Cord band	W00 000 280	1		White
72	PCB fix plate	W50 003 706	1		
73	Cord bush	W00 000 277	1		
74	Control base	W50 004 708	1		
75	PPT screw 3x8	W00 000 012	1		
76	Circuit board	W50 004 171	1	⚠	
77	Fuse cover	W50 004 280	2		
78	Fuse	W50 004 281	2	⚠	6.3A・AC250V
79	PPT screw 3x10	W00 000 027	2		
80	Fuse holder	W50 004 282	2		
81	PT screw 4x8 BS	W00 000 011	1		
84	Capacitor	W50 004 288	2	⚠	4.5μF・440VAC
85	Side plate	W50 004 706	1		
86	Cord bush	W00 000 270	1		
87	Bush	W00 000 289	2		
88	Cord band	W00 000 258	1		
89	GM assembly	W50 003 263	1	⚠	AC220・240V
90	Terminal block assy	W50 030 215	1	⚠	

Wiring parts

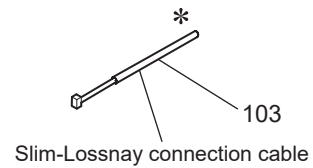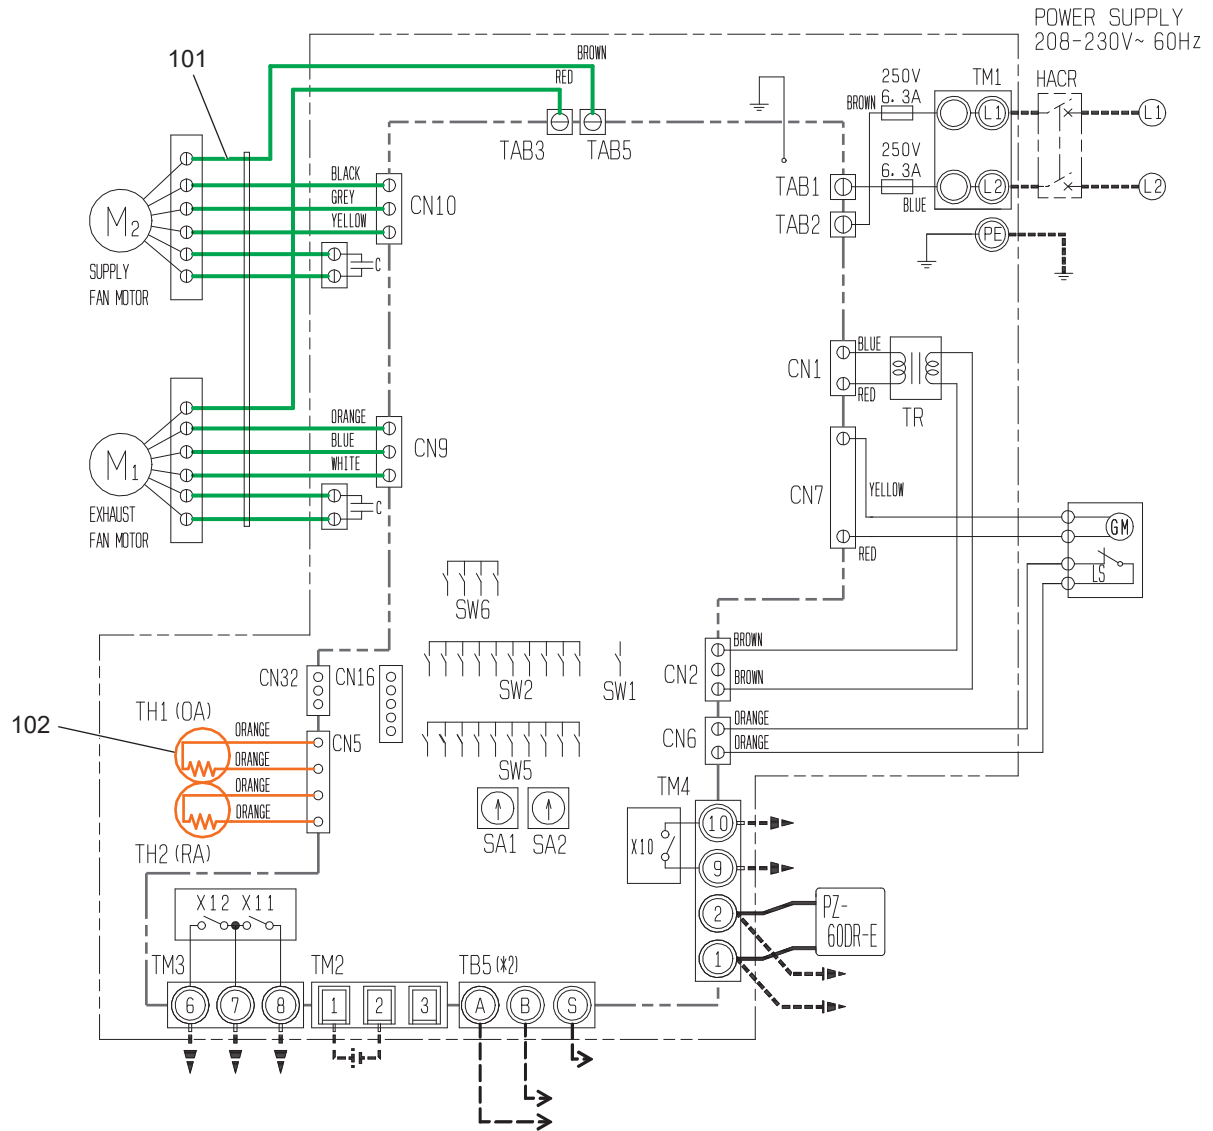



* shows accessory parts.

Wiring parts

LGH-F300RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
101	Lead wire	W50 016 213	1	⚠	Motor, Capacitor
102	Thermistor	W50 003 168	1	⚠	
103	Lead wire	W50 004 231	1	⚠	100mm

Structural parts

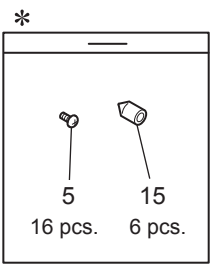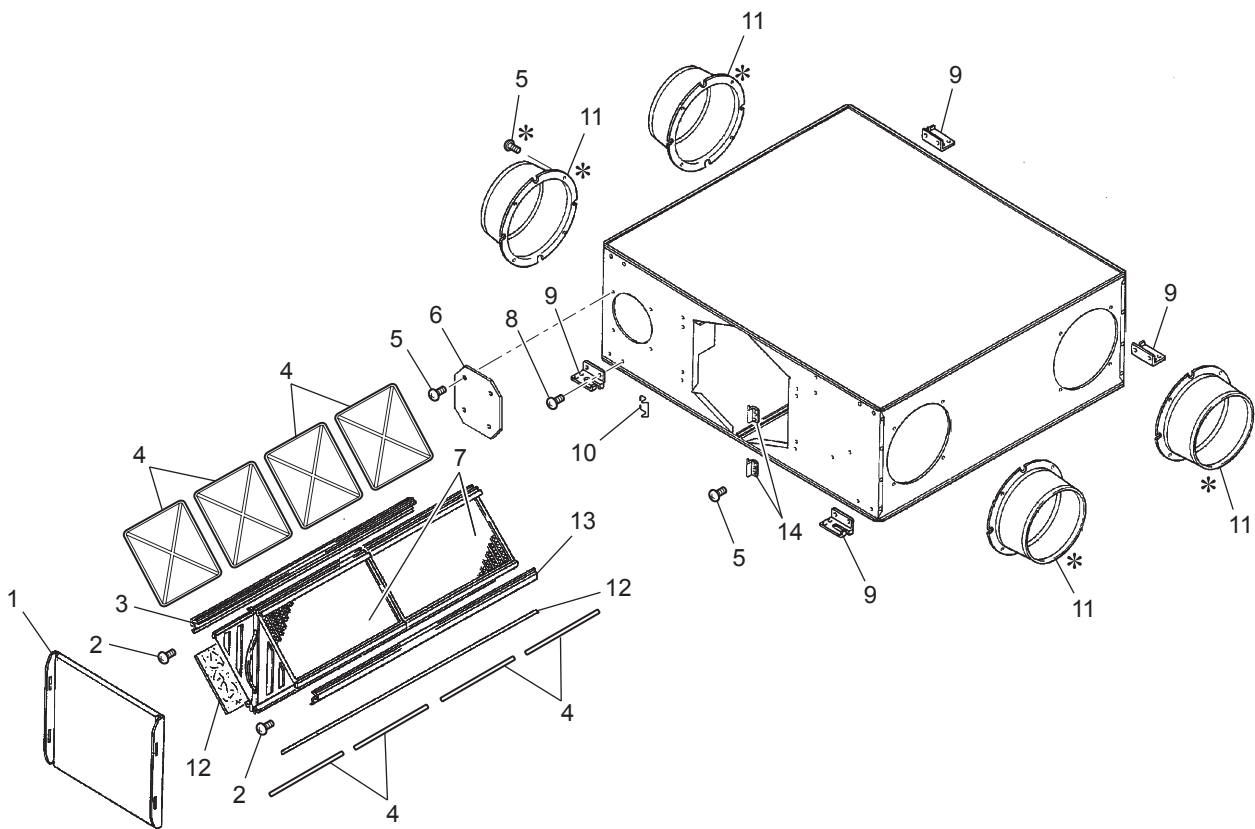


* shows accessory parts.

Structural parts

LGH-F470RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 004 489	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 004 714	1		
4	Filter stopper	W50 016 711	8		
5	PTT screw 4x8	W00 000 009	44		
6	Cover	W50 003 708	2		
7	Lossnay core	W50 004 720	2	⚠	With the filter stoppers
8	PT screw 6x12	W00 000 060	16		
9	Hanger	W50 001 380	4		
10	Hinge	W50 004 344	1		
11	Flange	W50 003 610	4		
12	Filter	W50 003 738	4	⚠	
13	Core guide R	W50 003 388	1		
14	Fix piece	W50 004 722	2		
15	Screw cap	W50 004 313	6		

Fan parts

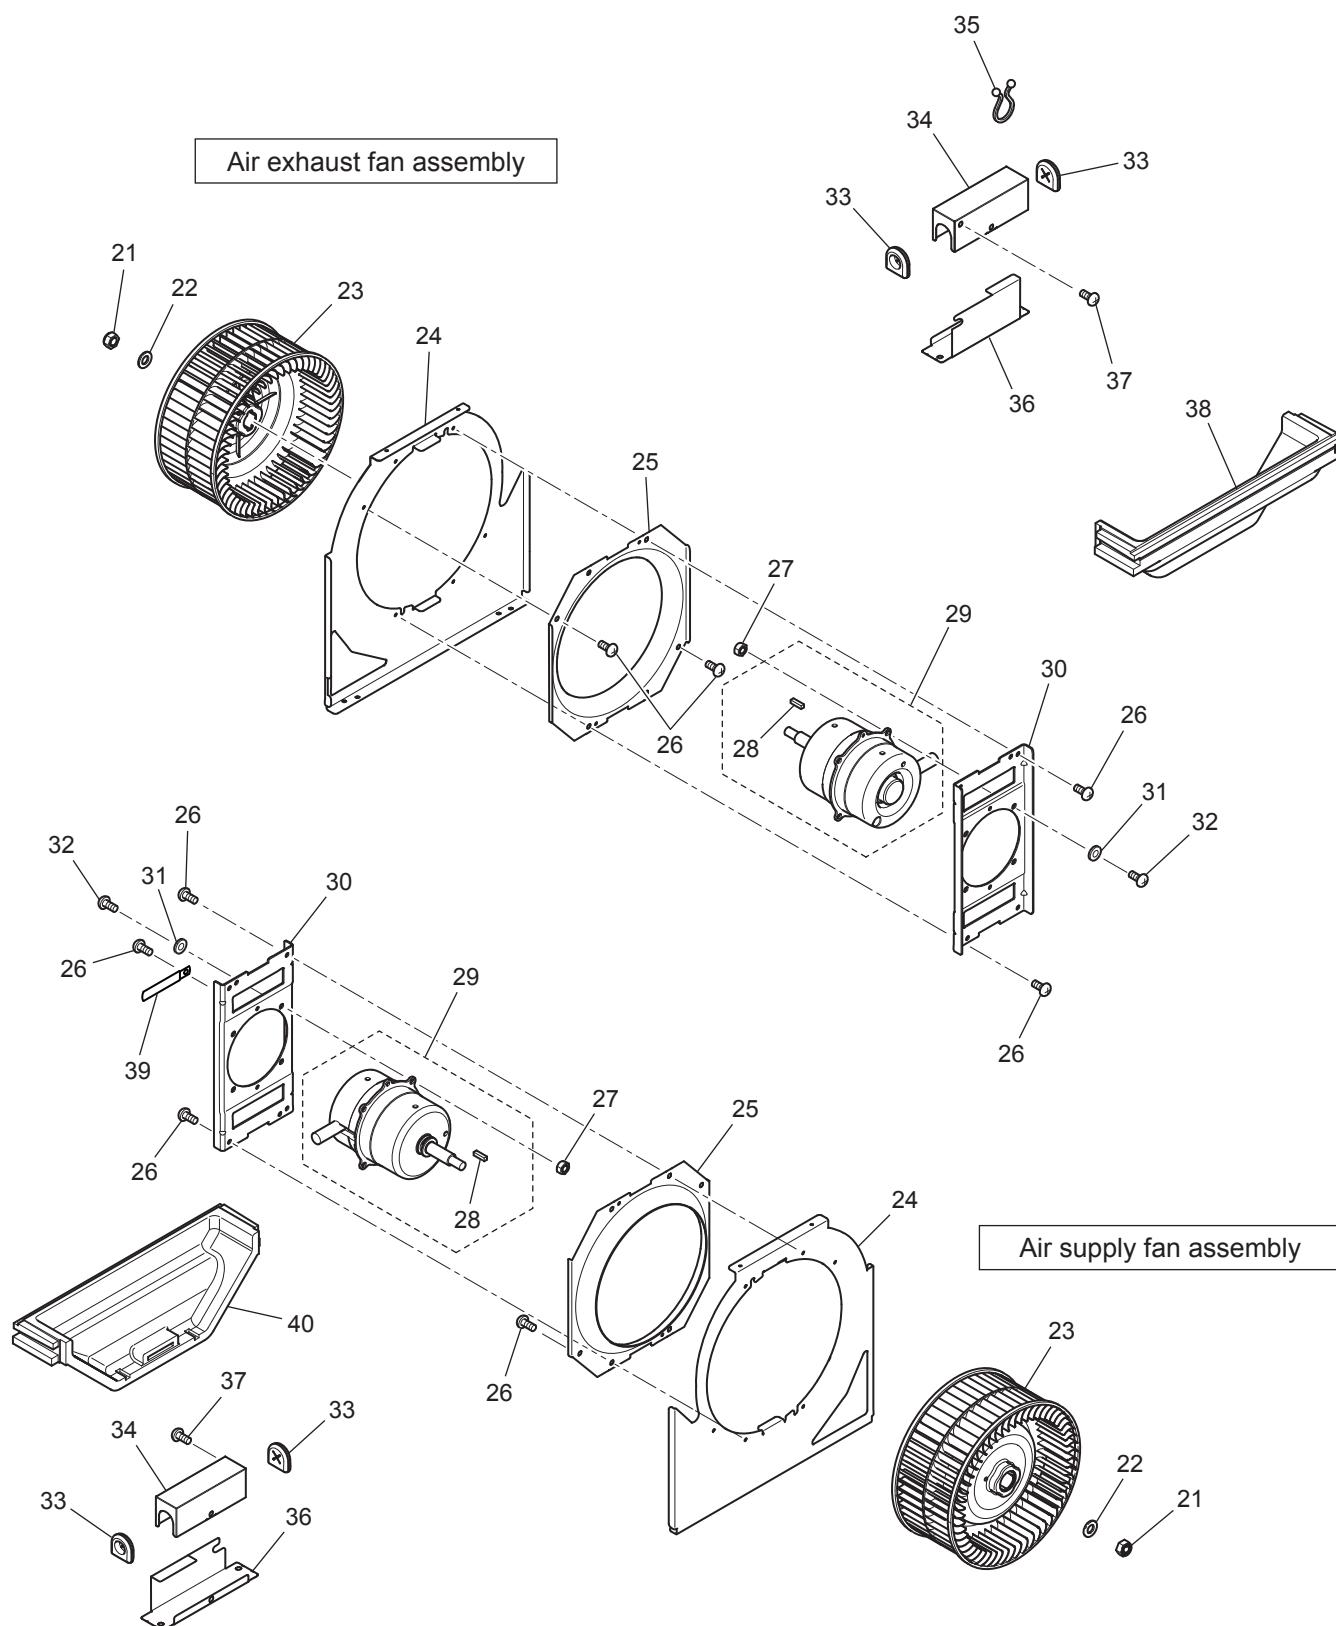


Fan parts

LGH-F470RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Special nut (M12)	W00 000 117	2		Left-handed
22	Washer (12)	W00 000 123	2		Outer dia. 24mm
23	Centrifugal fan	W50 004 480	2	⚠	Dia. 245mm
24	Fan base	W50 003 715	2		
25	Inlet ring	W50 004 725	2		
26	PTT screw 5x10	W00 000 044	16		
27	Nut (M6)	W00 000 107	8		
28	Key	W50 001 104	2		5x5x11.5
29	Motor	W50 004 453	2	⚠	
30	Motor fix plate	W50 003 734	2		
31	Special washer (6)	W00 000 162	8		
32	PT screw 6x20	W00 000 063	8		
33	Cord bush	W00 000 225	4		
34	Connector cover	W50 004 726	2		
35	Cord band	W00 000 281	2		Black
36	Connector plate	W50 004 727	2		
37	PTT screw 4x6	W00 000 035	2		
38	Separator	W50 004 487	1		
39	Lead wire clip	W81 002 223	1		
40	Separator	W50 003 489	1		

Control parts


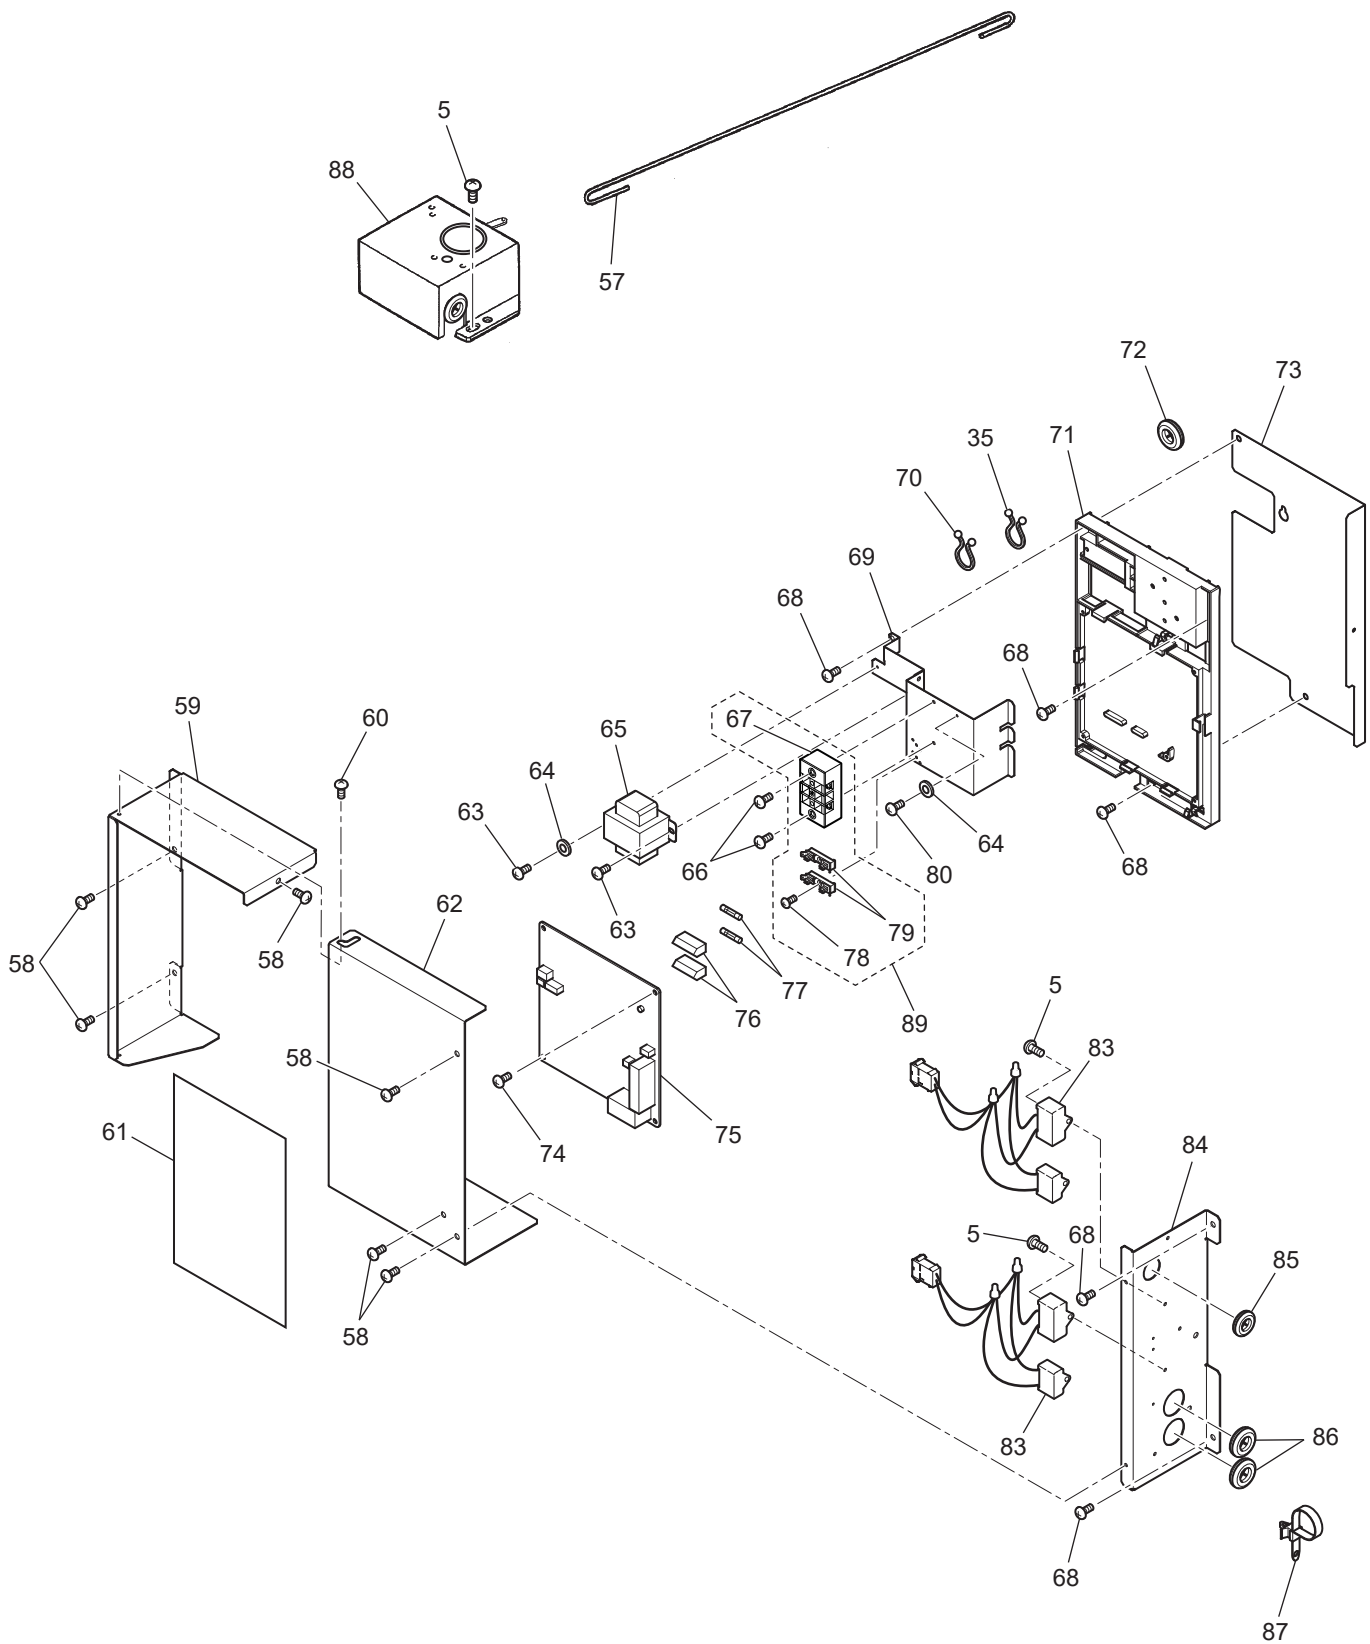


Control parts

LGH-F470RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
57	Rod	W50 004 152	1		
58	PT screw 4x8	W00 000 050	6		
59	Side plate	W50 004 707	1		
60	Special screw 4x3.5	W00 000 097	2		
61	Wiring diagram	W50 004 358	1		
62	Control cover	W50 004 705	1		
63	PP screw 4x8	W00 000 004	2		
64	Lock washer (4)	W00 000 082	2		
65	Transformer	W50 004 217	1	⚠	AC230V・With the lead
66	PPT screw 4x12	W00 000 032	2		
67	Terminal block	W50 004 236	1	⚠	ML-20-A37-3P
68	PTT screw 4x10	W00 000 037	7		
69	TB fix plate	W50 003 710	1		
70	Cord band	W00 000 231	2		White
71	PCB fix plate	W50 003 706	1		
72	Cord bush	W00 000 277	1		
73	Control base	W50 004 708	1		
74	PPT screw 3x8	W00 000 012	1		
75	Circuit board	W50 004 171	1	⚠	
76	Fuse cover	W50 004 280	2		
77	Fuse	W50 004 281	2	⚠	6.3A・AC250V
78	PPT screw 3x10	W00 000 027	2		
79	Fuse holder	W50 004 282	2		
80	PT screw 4x8 BS	W00 000 011	1		
83	Capacitor	W50 004 287	2	⚠	9.5μF・440VAC
84	Side plate	W50 004 706	1		
85	Cord bush	W00 000 270	1		
86	Bush	W00 000 289	2		
87	Cord band	W00 000 258	1		
88	GM assembly	W50 003 264	1	⚠	AC220・240V
89	Terminal block assy	W50 030 215	1	⚠	

Wiring parts

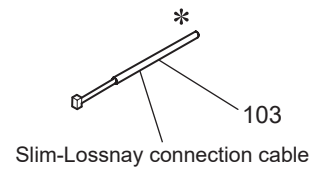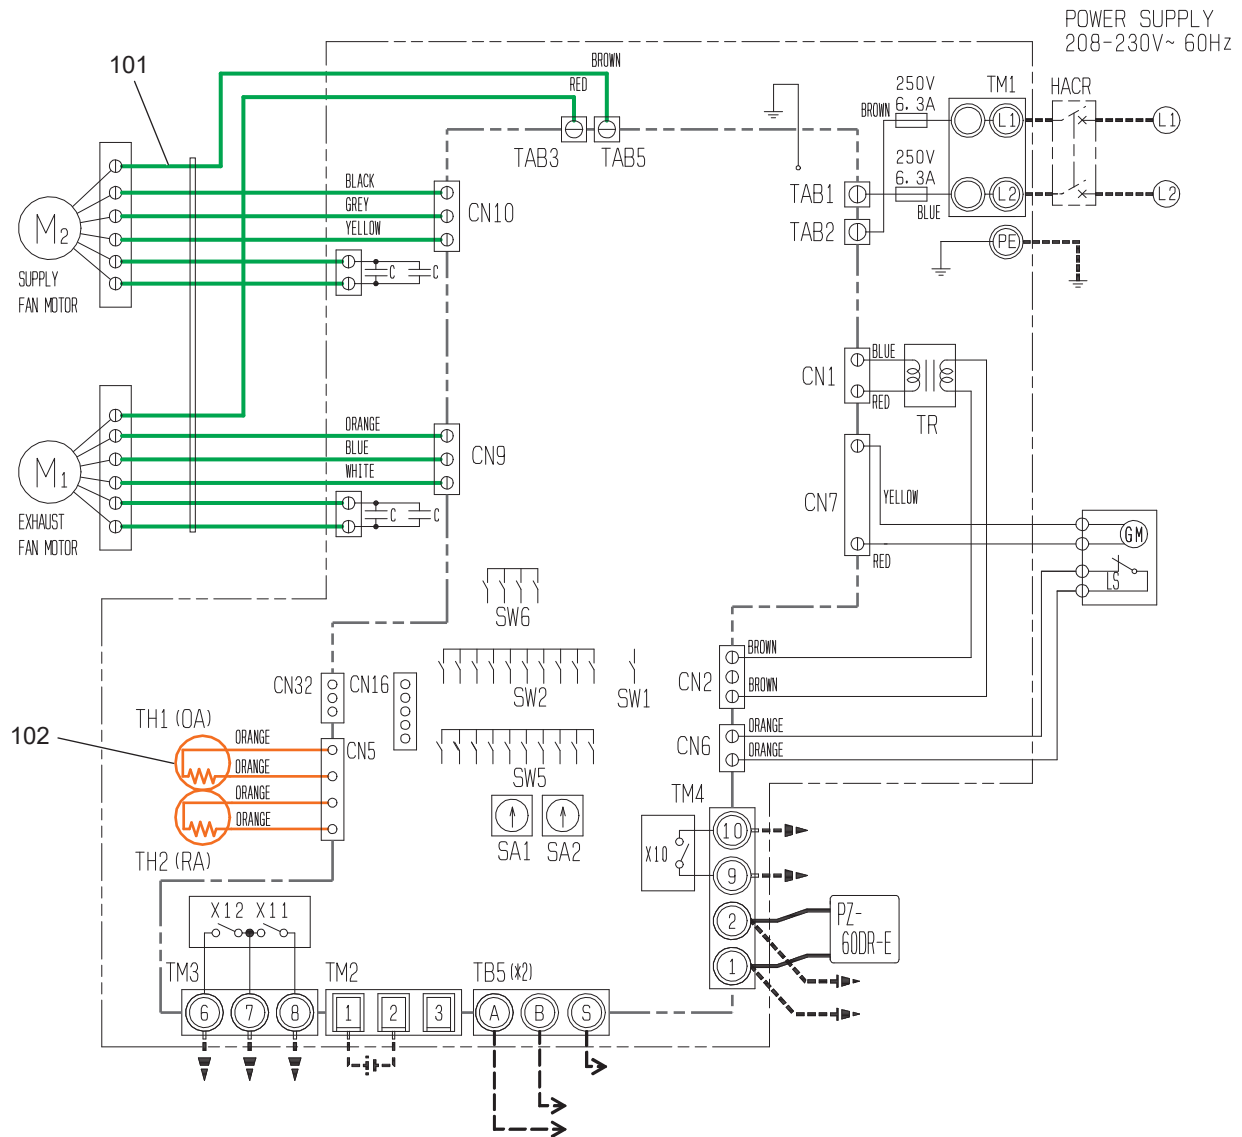



* shows accessory parts.

Wiring parts

LGH-F470RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
101	Lead wire	W50 016 213	1	⚠	Motor, Capacitor
102	Thermistor	W50 016 167	1	⚠	
103	Lead wire	W50 004 231	1	⚠	100mm

Structural parts

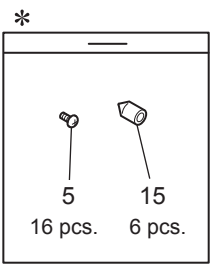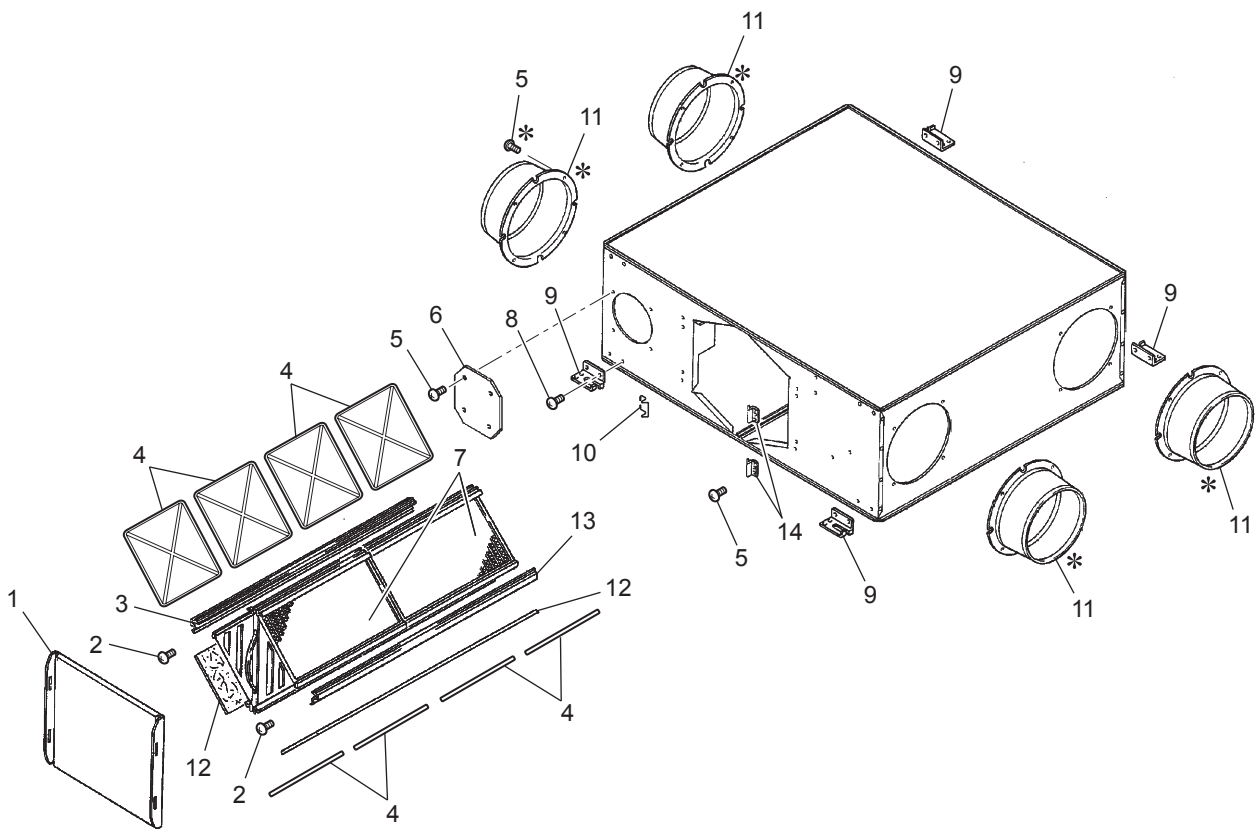


* shows accessory parts.

Structural parts

LGH-F600RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 004 489	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 004 715	1		
4	Filter stopper	W50 016 711	8		
5	PTT screw 4x8	W00 000 009	44		
6	Cover	W50 003 708	2		
7	Lossnay core	W50 004 721	2	⚠	With the filter stoppers
8	PT screw 6x12	W00 000 060	16		
9	Hanger	W50 001 380	4		
10	Hinge	W50 004 344	1		
11	Flange	W50 003 610	4		
12	Filter	W50 004 724	4	⚠	
13	Core guide R	W50 003 389	1		
14	Fix piece	W50 004 722	2		
15	Screw cap	W50 004 313	6		

Fan parts

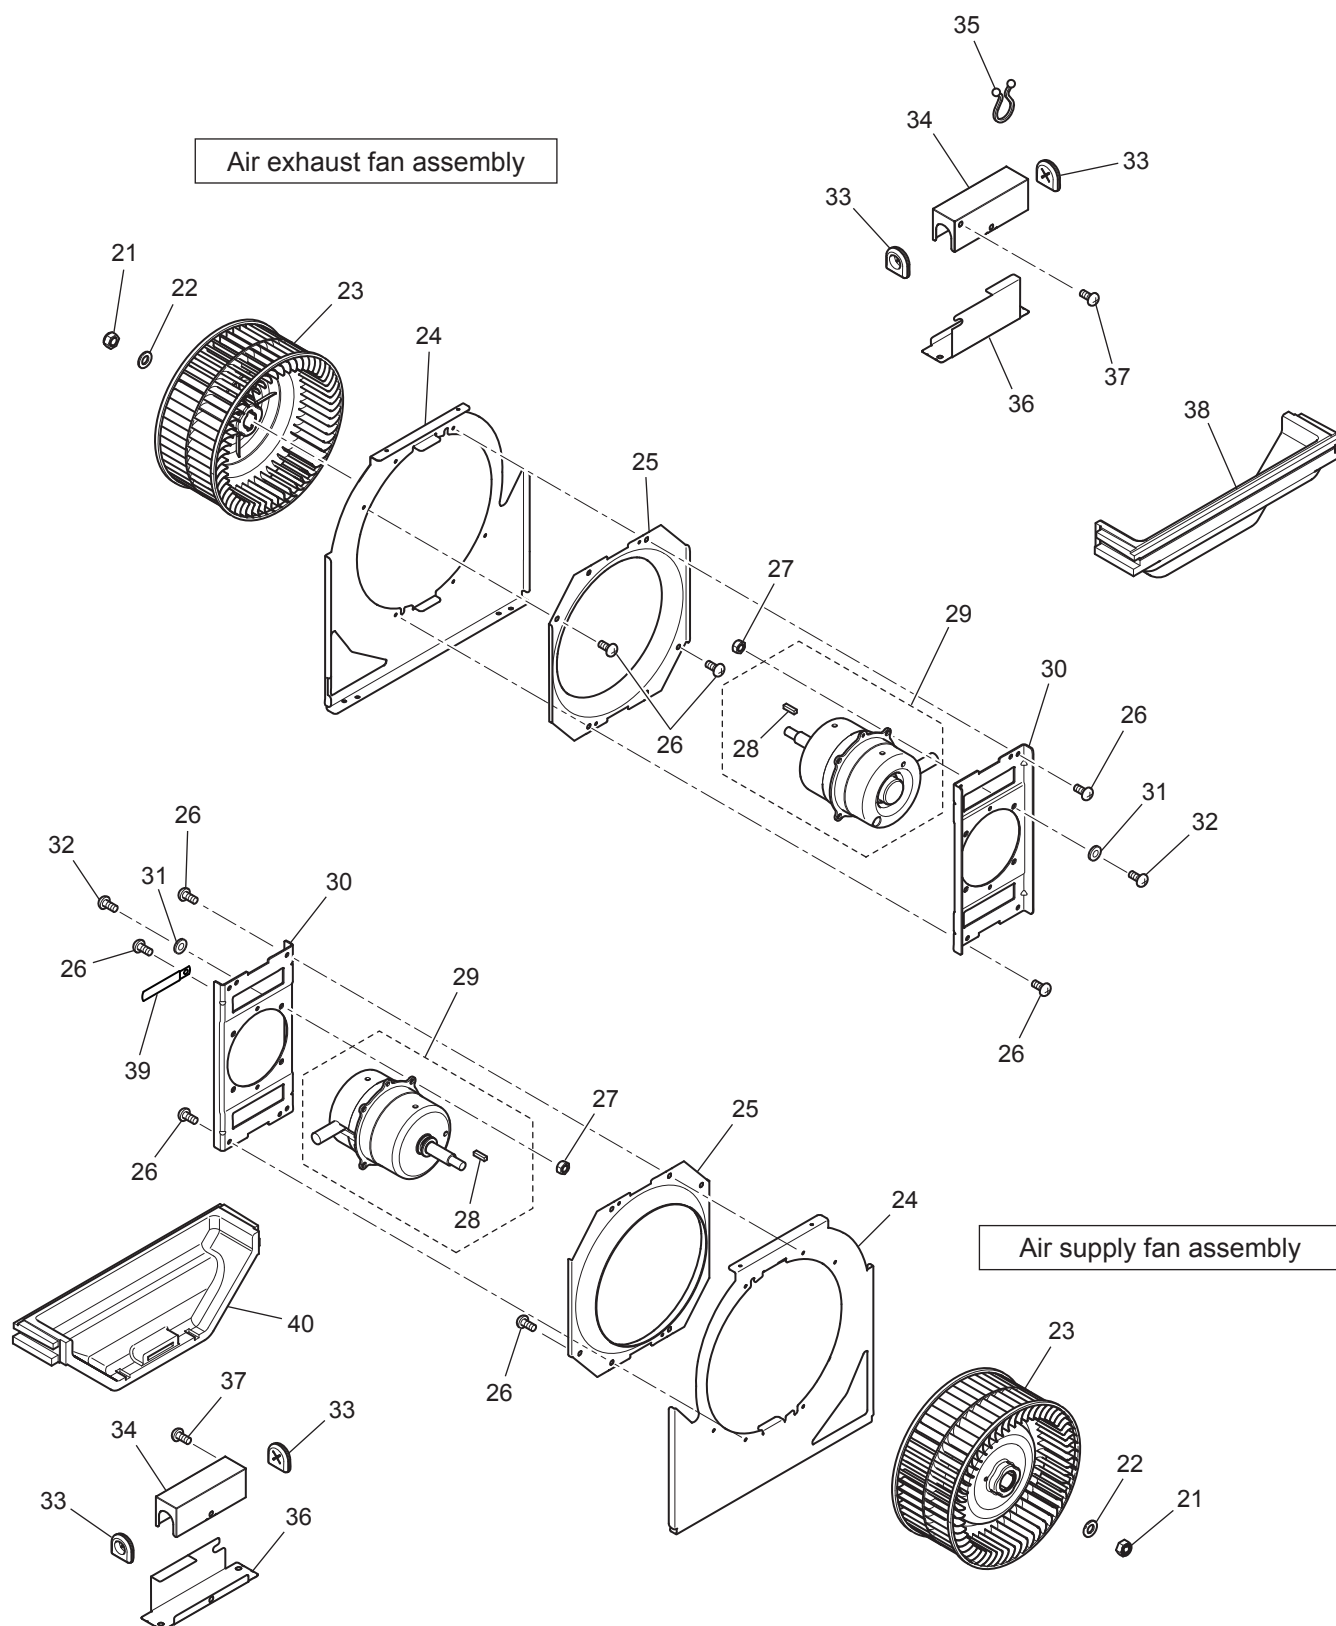


Fan parts

LGH-F600RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Special nut (M12)	W00 000 117	2		Left-handed
22	Washer (12)	W00 000 123	2		Outer dia. 24mm
23	Centrifugal fan	W50 004 480	2	⚠	Dia. 245mm
24	Fan base	W50 003 715	2		
25	Inlet ring	W50 004 725	2		
26	PTT screw 5x10	W00 000 044	16		
27	Nut (M6)	W00 000 107	8		
28	Key	W50 001 104	2		5x5x11.5
29	Motor	W50 004 454	2	⚠	
30	Motor fix plate	W50 003 734	2		
31	Special washer (6)	W00 000 162	8		
32	PT screw 6x20	W00 000 063	8		
33	Cord bush	W00 000 225	4		
34	Connector cover	W50 004 726	2		
35	Cord band	W00 000 281	2		Black
36	Connector plate	W50 004 727	2		
37	PTT screw 4x6	W00 000 035	2		
38	Separator	W50 004 487	1		
39	Lead wire clip	W81 002 223	1		
40	Separator	W50 003 489	1		

Control parts


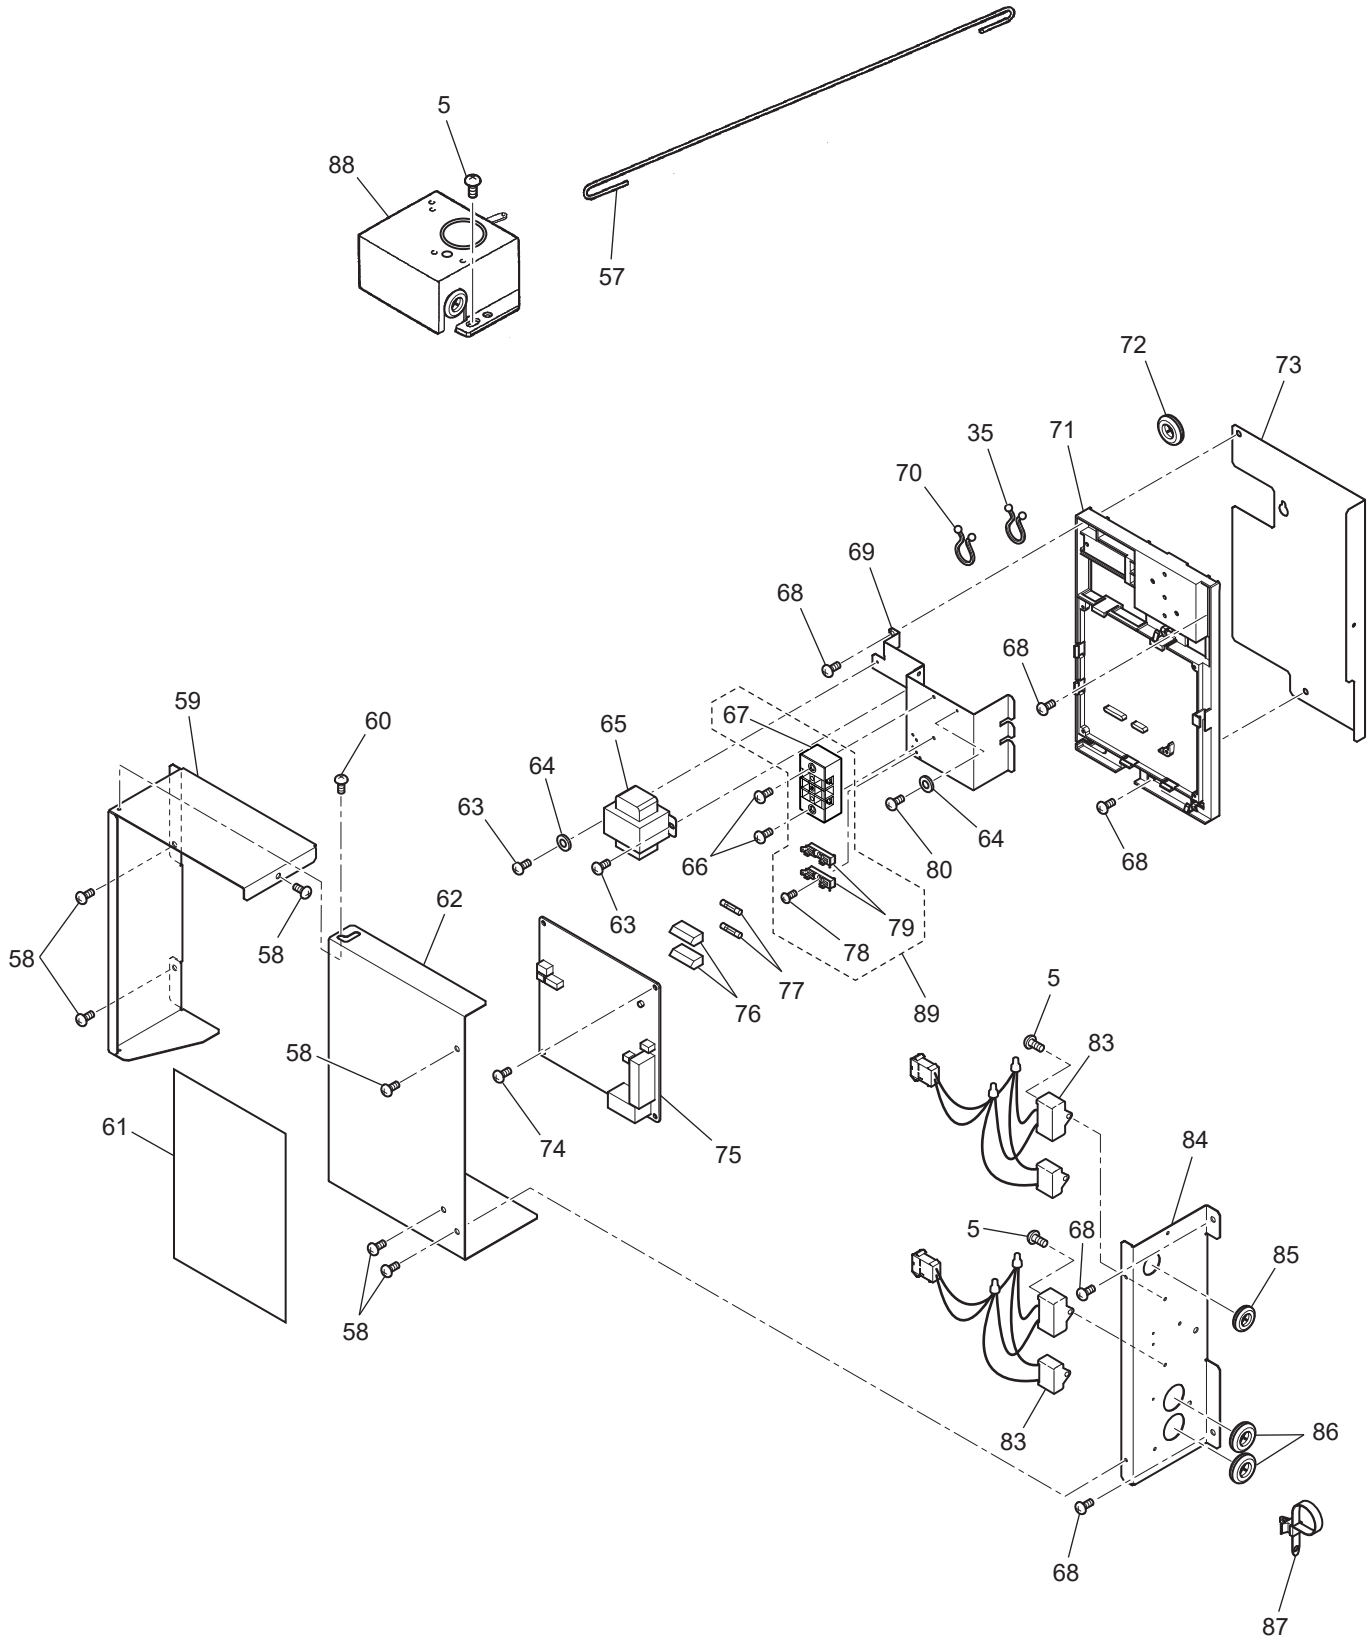


Control parts

LGH-F600RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
57	Rod	W50 004 152	1		
58	PT screw 4x8	W00 000 050	6		
59	Side plate	W50 004 707	1		
60	Special screw 4x3.5	W00 000 097	2		
61	Wiring diagram	W50 004 358	1		
62	Control cover	W50 004 705	1		
63	PP screw 4x8	W00 000 004	2		
64	Lock washer (4)	W00 000 082	2		
65	Transformer	W50 004 217	1	⚠	AC230V・With the lead
66	PPT screw 4x12	W00 000 032	2		
67	Terminal block	W50 004 236	1	⚠	ML-20-A37-3P
68	PTT screw 4x10	W00 000 037	7		
69	TB fix plate	W50 003 710	1		
70	Cord band	W00 000 231	2		White
71	PCB fix plate	W50 003 706	1		
72	Cord bush	W00 000 277	1		
73	Control base	W50 004 708	1		
74	PPT screw 3x8	W00 000 012	1		
75	Circuit board	W50 004 171	1	⚠	
76	Fuse cover	W50 004 280	2		
77	Fuse	W50 004 281	2	⚠	6.3A・AC250V
78	PPT screw 3x10	W00 000 027	2		
79	Fuse holder	W50 004 282	2		
80	PT screw 4x8 BS	W00 000 011	1		
83	Capacitor	W50 004 287	2	⚠	9.5μF・440VAC
84	Side plate	W50 004 706	1		
85	Cord bush	W00 000 270	1		
86	Bush	W00 000 289	2		
87	Cord band	W00 000 258	1		
88	GM assembly	W50 003 262	1	⚠	AC220・240V
89	Terminal block assy	W50 030 215	1	⚠	

Wiring parts

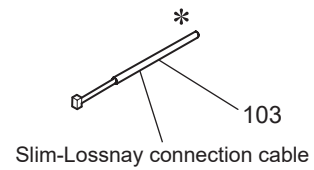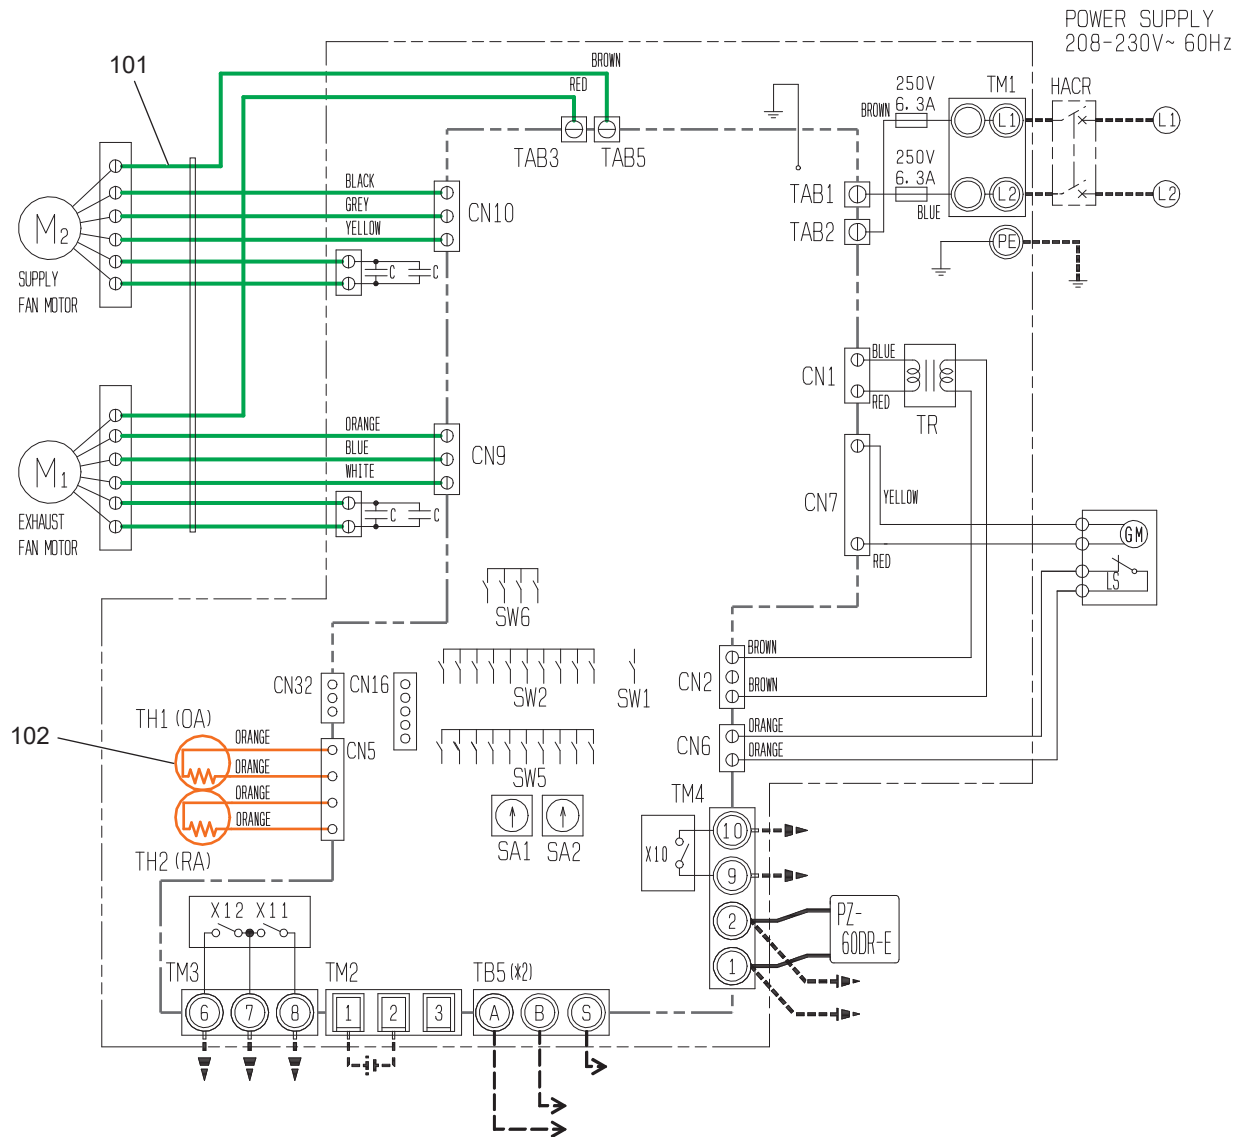


* shows accessory parts.

Wiring parts

LGH-F600RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
101	Lead wire	W50 016 214	1	⚠	Motor, Capacitor
102	Thermistor	W50 016 167	1	⚠	
103	Lead wire	W50 004 231	1	⚠	100mm

Structural parts

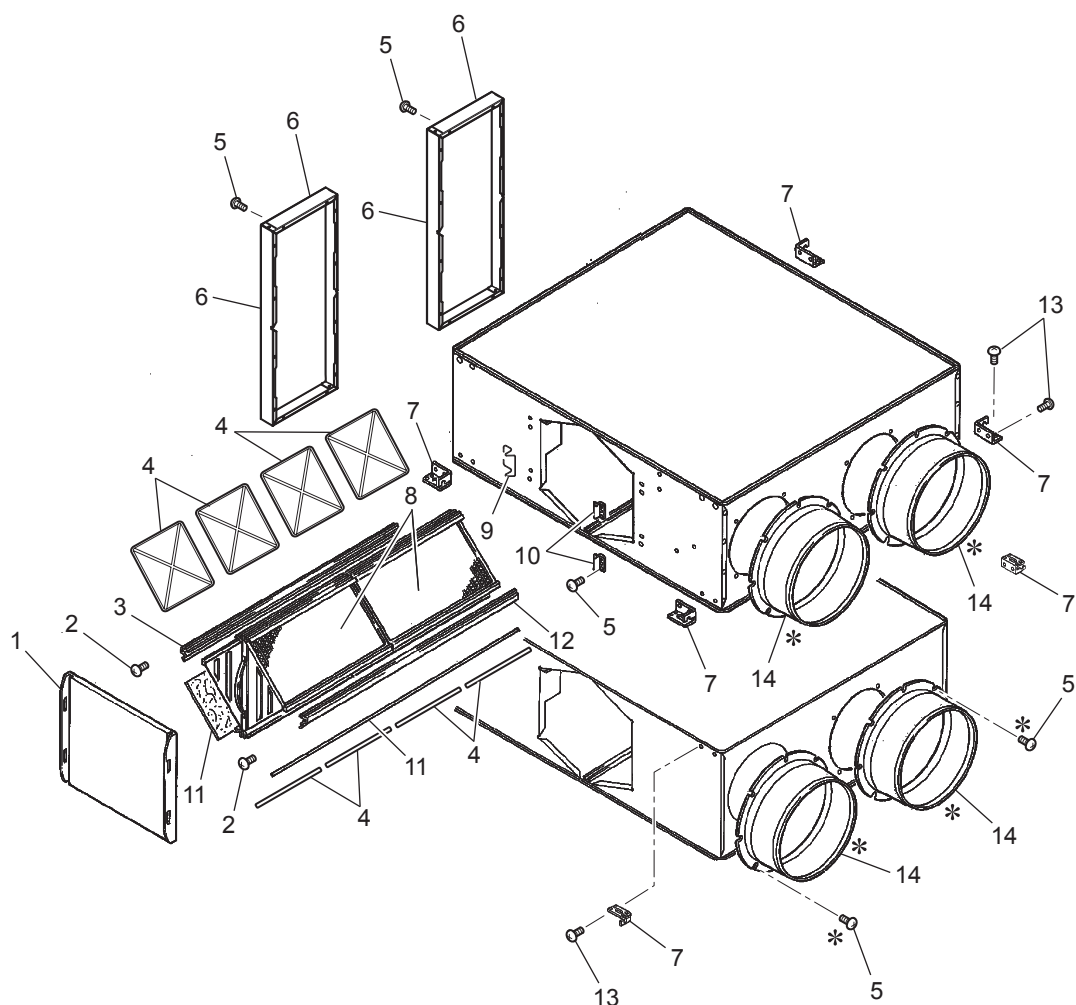

	
5	15
16 pcs.	6 pcs.


* shows accessory parts.

Structural parts

LGH-F1200RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 004 489	2		
2	Special screw M4	W00 000 101	4		
3	Core guide L	W50 004 715	2		
4	Filter stopper	W50 016 711	16		
5	PTT screw 4x8	W00 000 009	99		
6	Flange	W50 004 704	4		
7	Hanger	W50 001 382	8		
8	Lossnay core	W50 004 721	4	⚠	With the filter stoppers
9	Hinge	W50 004 344	2		
10	Fix piece	W50 004 722	4		
11	Filter	W50 004 724	8	⚠	
12	Core guide R	W50 003 389	2		
13	PT screw 6x12	W00 000 060	24		
14	Flange	W50 003 610	4		
15	Screw cap	W50 004 313	6		

Fan parts

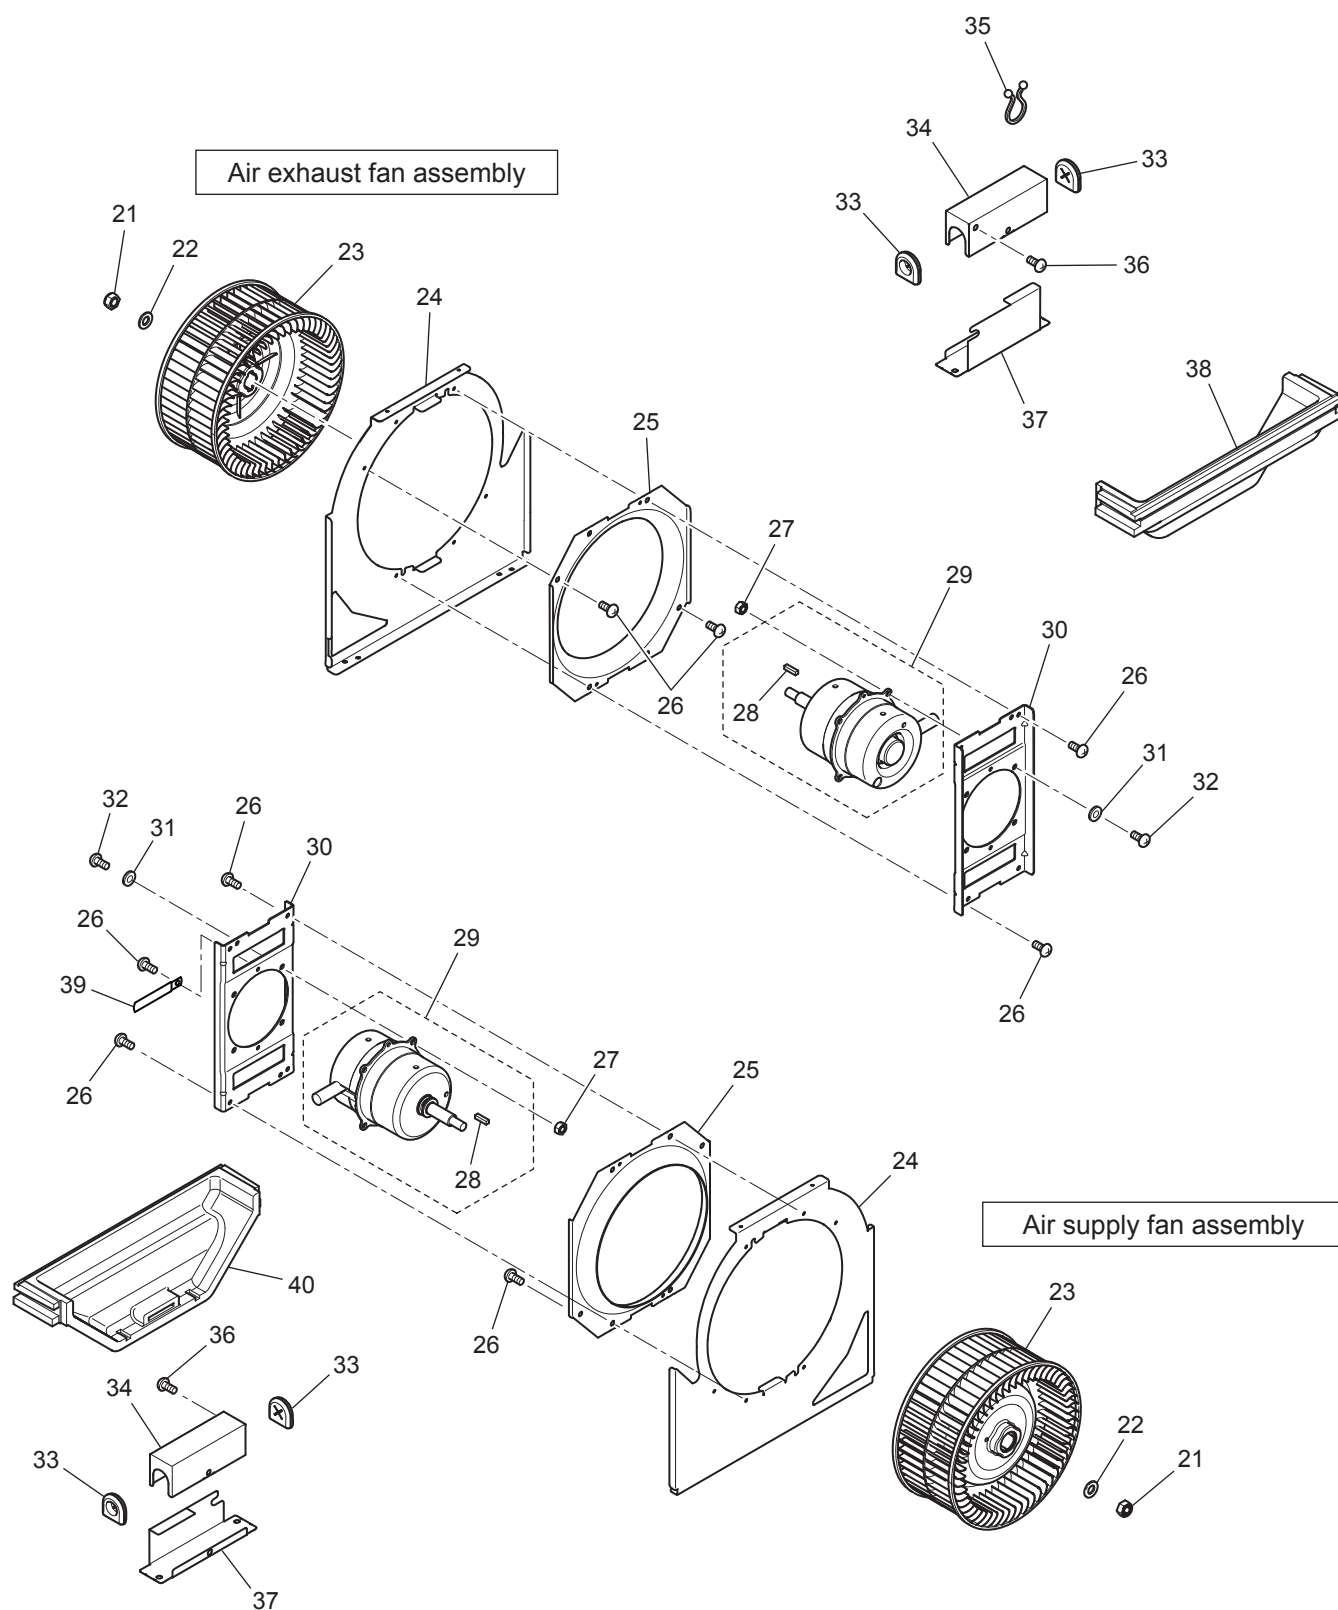


Fan parts

LGH-F1200RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Special nut (M12)	W00 000 117	4		Left-handed
22	Washer (12)	W00 000 123	4		Outer dia. 24mm
23	Centrifugal fan	W50 004 480	4	⚠	Dia. 245mm
24	Fan base	W50 003 715	4		
25	Inlet ring	W50 004 725	4		
26	PTT screw 5x10	W00 000 044	32		
27	Nut (M6)	W00 000 107	16		
28	Key	W50 001 104	4		5x5x11.5
29	Motor	W50 004 454	4	⚠	
30	Motor fix plate	W50 003 734	4		
31	Special washer (6)	W00 000 162	16		
32	PT screw 6x20	W00 000 063	16		
33	Cord bush	W00 000 225	8		
34	Connector cover	W50 004 726	4		
35	Cord band	W00 000 281	4		Black
36	PTT screw 4x6	W00 000 035	4		
37	Connector plate	W50 004 727	4		
38	Separator	W50 004 487	2		
39	Lead wire clip	W81 002 223	2		
40	Separator	W50 003 489	2		

Control parts


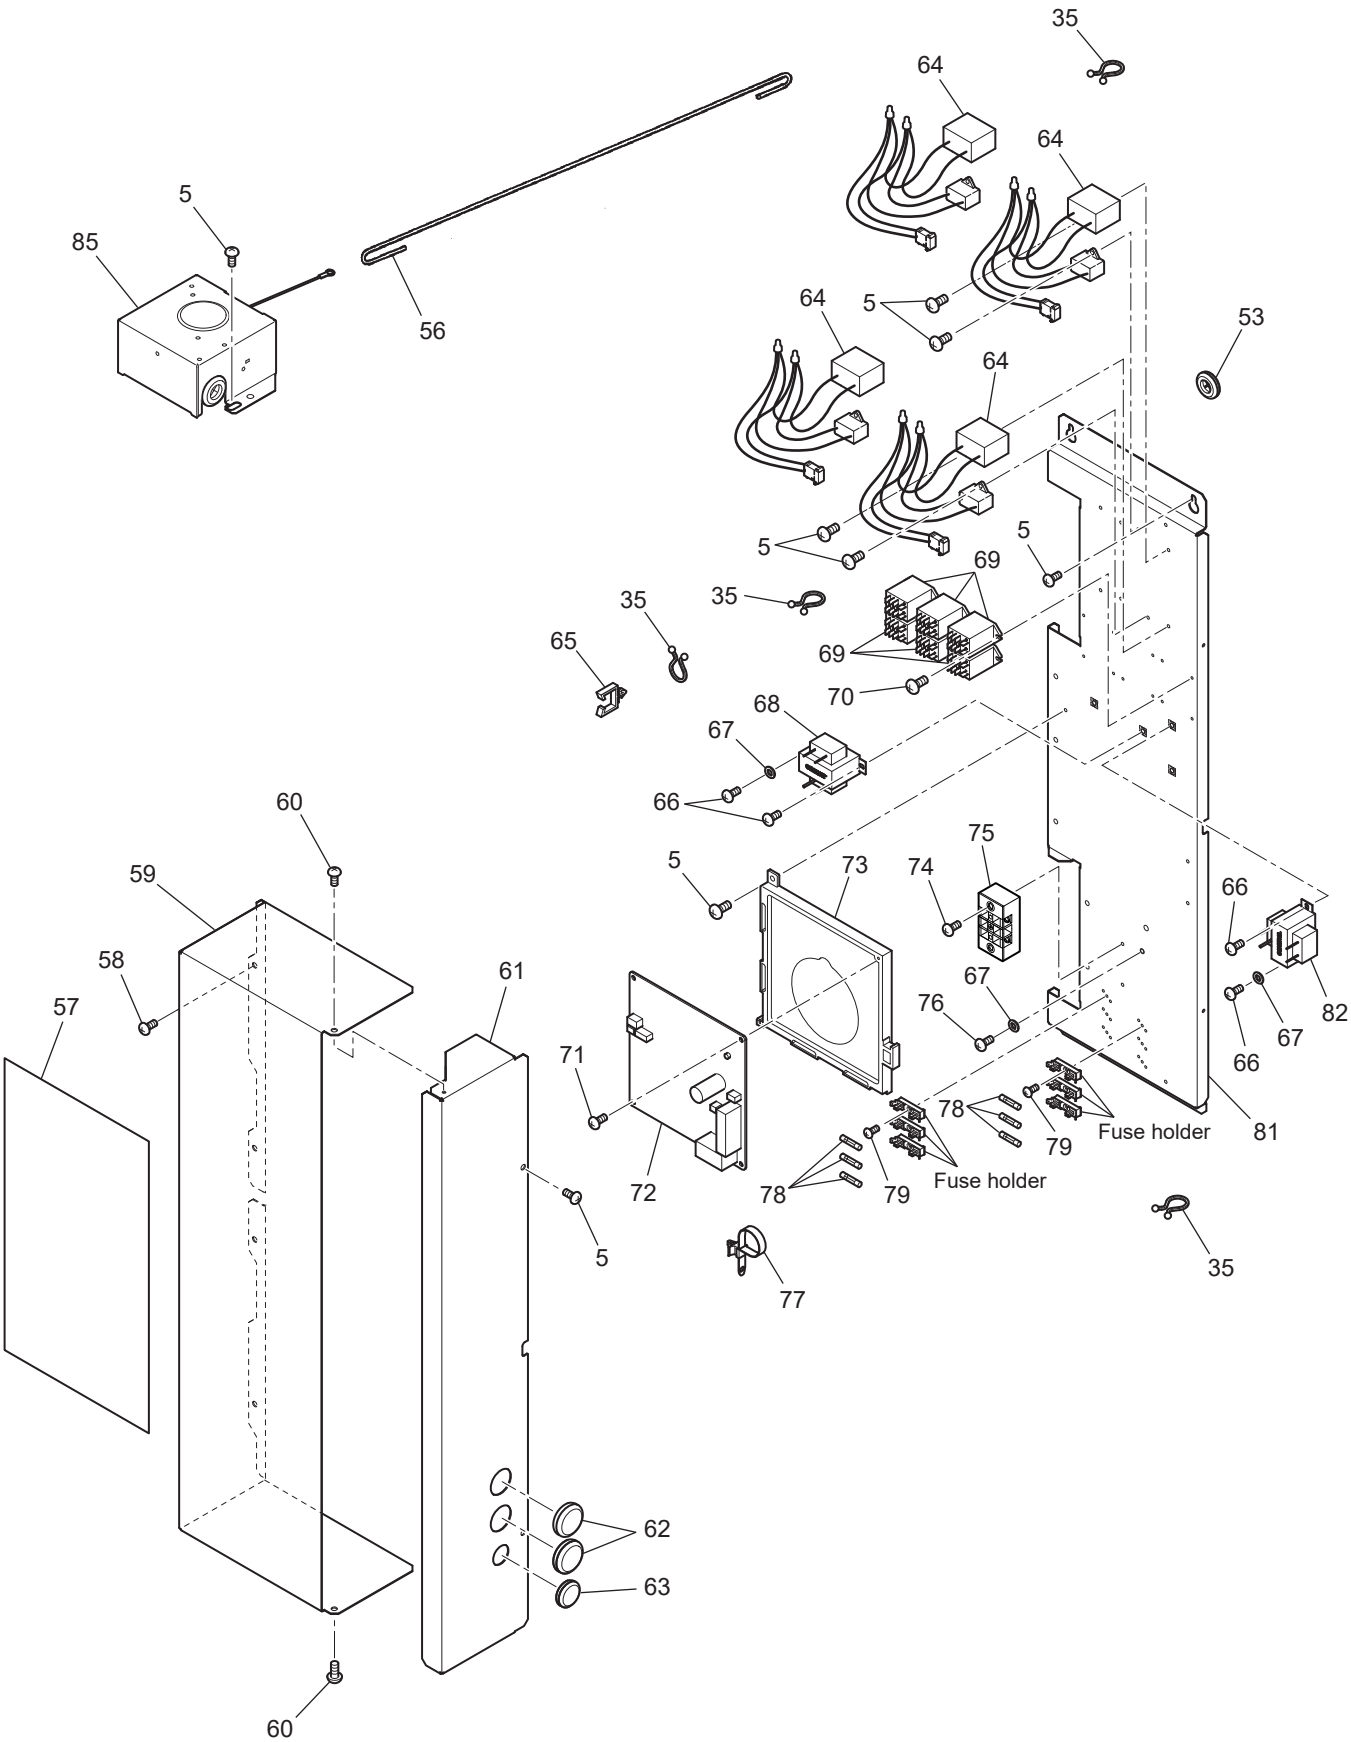


Control parts

LGH-F1200RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
53	Cord bush	W00 000 277	4		
56	Rod	W50 004 150	2		
57	Wiring diagram	W50 004 359	1		
58	PT screw 4x8	W00 000 050	8		
59	Control cover	W50 004 712	1		
60	Special screw 4x10	W00 000 096	2		
61	Side plate R	W50 004 710	1		
62	Bush	W00 000 289	2		
63	Cord bush	W00 000 270	1		
64	Capacitor	W50 004 287	4	⚠	9.5μF・440VAC
65	Cord clamber	W00 000 253	5		
66	PP screw 4x8	W00 000 004	4		
67	Lock washer (4)	W00 000 082	3		
68	Transformer	W50 004 216	1	⚠	
69	Relay	W82 002 268	6	⚠	LY-2F
70	PPT screw 3x6	W00 000 026	12		
71	PPT screw 3x8	W00 000 012	1		
72	Circuit board	W50 004 171	1	⚠	
73	PCB case	W50 004 383	1		
74	PPT screw 4x12	W00 000 032	2		
75	Terminal block	W50 004 236	1	⚠	ML-20-A37-3P
76	PT screw 4x8 BS	W00 000 011	1		
77	Cord band	W00 000 258	1		
78	Fuse	W50 004 281	6	⚠	6.3A・AC250V
79	PPT screw 3x10	W00 000 027	6		
81	Control base	W50 004 711	1		
82	Transformer	W50 016 216	1	⚠	AC230V・With the lead
85	GM assembly	W50 003 261	2	⚠	AC100V

Wiring parts

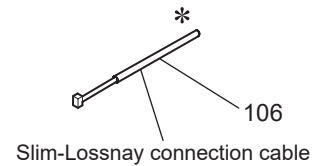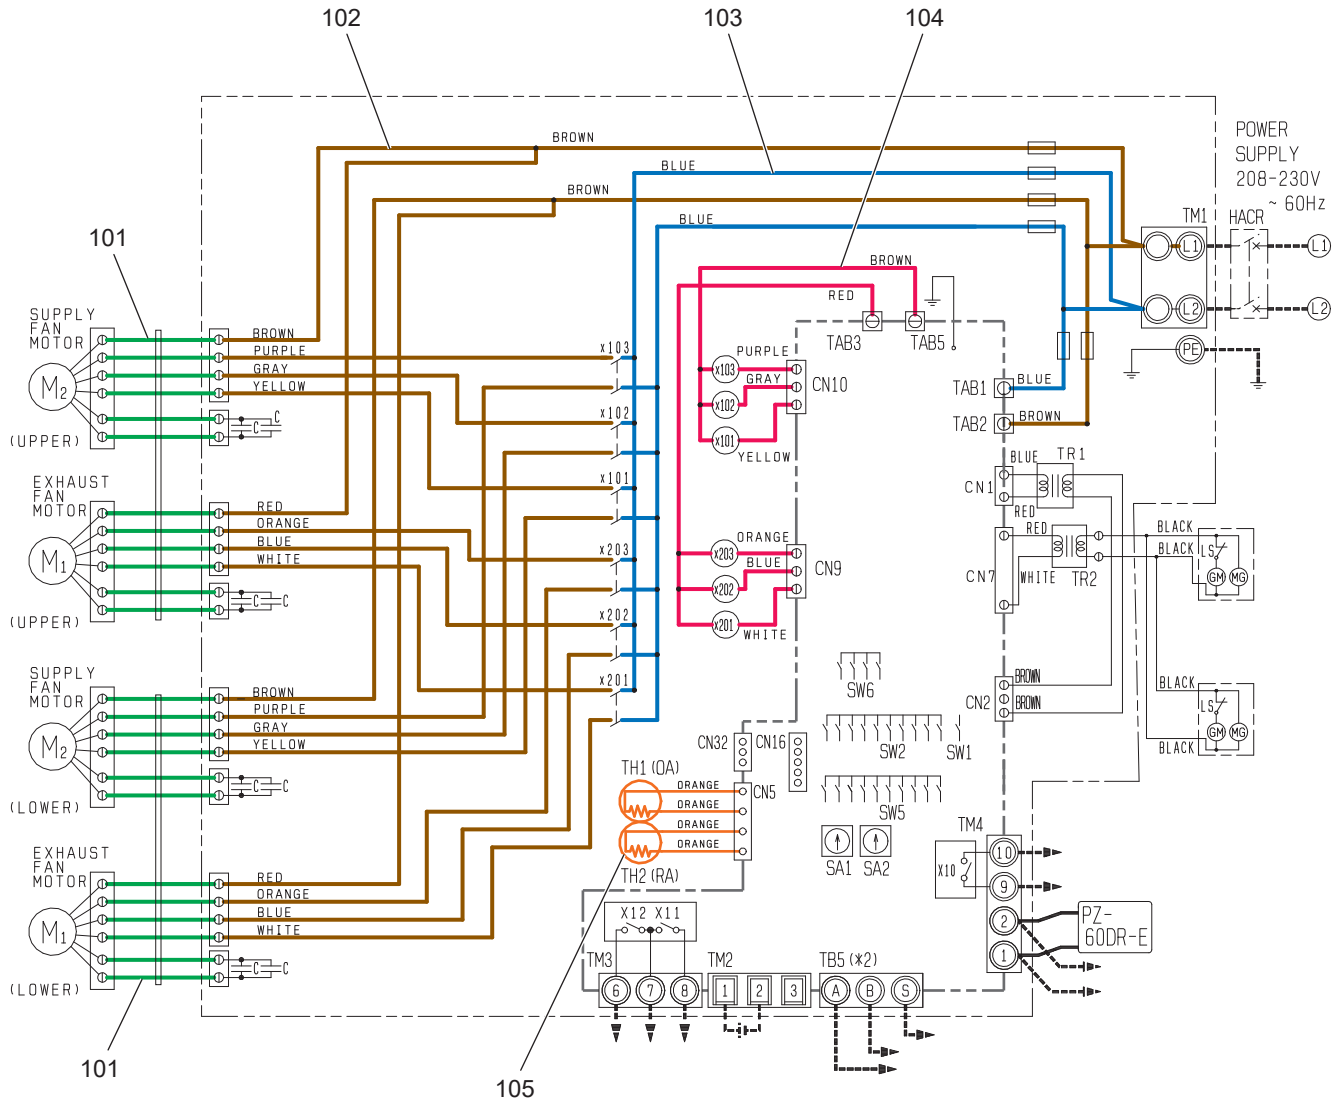

* shows accessory parts.

Wiring parts

LGH-F1200RX5-E1

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
101	Lead wire	W50 016 215	2	⚠	Motor, Capacitor
102	Lead wire	W50 030 218	1	⚠	Motor, L1, TAB2
103	Lead wire	W50 030 216	1	⚠	TAB1, L2, Relay
104	Lead wire	W50 030 217	1	⚠	Relay, PCB
105	Thermistor	W50 003 169	1	⚠	
106	Lead wire	W50 004 231	1	⚠	100mm