# 2-1. MA remote controller [PAR-31MAA]



.

## Functions

1. Operation/Display C		):Each gro	up X:No	t available
Item	Description		Setting	Display
ON/OFF	Switches between ON and OFF.		0	0
Operation mode switching	Switches among Cool/Dry/Fan/Auto/Heat.		0	0
Room temp. setting *3	$ \begin{array}{l} \label{eq:constraint} The temperature can be set within the following ran \\ Cool/Dry: 19°C - 30°C (14°C - 30°C) (67°F - 87°F (57° \\ Heat : 17°C - 28°C) (7°C - 28°C) (63°F - 83°F (63° \\ Auto : 19°C - 28°C (17°C - 28°C) (67°F - 83°F (63° \\ () For PEFY/PFFY by setting DipSW 7-1 to ON and limits to NI6H fa \\ \end{array} $	ge. F - 87°F) F - 83°F) F - 83°F) n speed only.	0	0
Fan speed setting	Changes fan speed. * Available fan speeds vary depending on the mode	I.	0	0
Air flow direction setting	Changes airflow direction. * Available airflow directions vary depending on the	model.	0	0
Louver setting	Switches between louver ON/OFF.		0	0
Ventilation equipment control	Interlocked setting and interlocked operation setting City Multi LOSSNAY units can be made. The Stop/Low/High settings of the ventilation equip be controlled.	with the ment can	0	0
Auto descending panel *1	Raises and lowers the automatic elevating panel.		0	0
backlight	Pressing any button turns the backlight on and it wi for a certain period of time depending on the screer	ll stay lit ı.	×	0
Main display mode setting	The Main display can be displayed in two different r "Full" and "Basic."	nodes:	0	0
Clock *2	Date (year/month/day) and time (hour/minute) can the set time as well as the day of the week will be on the Main display. It is also possible to set not to display the time on the Main time on the Main the month of the month o	be set. displayed ain display.	0	0
Clock display	The clock can be displayed in 12-hour format (AM/F or after the time) and 24-hour format.	PM before	0	0
Room temp. display *3	Displays the room temperature on the Main display "Full" mode during operation.	in the	_	0
Error information	When an error occurs, an error code and the unit at appear. Air conditioning unit model, serial number, and cont number can be set to appear when an error occurs. information above needs to be entered in advance. * An error code may not appear depending on the e	ddress act (The ) rror.	_	0
Filter information	A filter sign will appear when it is time to clean the fi	ilter.	_	0
Dual Set Point *1	Two preset temperatures (one each for cooling and heatir can be set in the Auto mode.	ig operation)	0	0

### Backlit LCD

Can be set and shown by 0.5°C degree.

### External dimension



O:Each group X:Not available

#### 2. Schedule and timer setting

	<u> </u>	-p /////	
Item	Description	Setting	Display
Timer	ON/OFF timer Turns ON and OFF daily at a set time. • Time can be set in 5-minute increments. • It is also possible to set the ON time only or the OFF time only. Auto-OFF timer Turns off the unit after a certain period of operation. • Operation time can be set to a value from 30 to 240 minutes in 10-minute increments.	0	0
Weekly timer	Weekly ON/OFF times and set temperatures can be set. • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week. * Not valid when the ON/OFF timer is set.	0	0
Night setback	The temperature range and the start/stop times can be set.	0	0

#### 3. Restriction settings ○:Each group X:Not available

<u> </u>				
Item	Description	Setting	Display	
Allows/disallows local operation	The following operation can be prohibited by making certain settings on the centralized controller: ON/OFF, operation mode setting, temperature setting, and filter sign reset. * While an operation is prohibited, the operation icon lights up (only on the Main display in the "Full" mode).		0	
Operation lock	The following operation can be prohibited respectively: ON/OFF, operation mode setting, temperature setting, and airflow direction setting.	0	0	
Temperature range restriction	The room temperature range for each operation mode can be restricted.	0	0	
Auto return	The units operate at the preset temperature after a designated period. (Time can be set to a value from 30 to 120 in 10-minute increments.) * Not valid when the temperature setting range is restricted.	0	×	
password	d Administrator password (required for schedule setting etc.) and Maintenance password (required for test run and function setting etc.) can be set.		×	

### 4 Miscellaneous items

4. Miscellaneous items O:Each gro		up X:Not available		
Item	Description		Setting	Display
Language Selection	Select the display language from the following 8 language English, French, German, Spanish, Italian,Portuguese, S and Russian	jes. Swedish,	0	0
Contrast	Adjusts LCD contrast.		0	0
Manual vane Angle <sup>*1</sup>	Fixes the vane position for each air outlet.		0	х
Service *1	Contains Test run, Function setting, Refrigerant volume or Refrigerant leak check, Smooth maintenance, Request or Error history.	check, code, and	0	0

\*1 This function is active only for the units that support the function. \*2 The clock is accurate within 50 seconds per month (at the temperature of 25°C [77°F]). The clock is 2 The clock is accurate within 50 seconds per month (at the temperature of 25 C (7 F j). The clock is backed up for 7 days.
\*3 Temperature will be displayed either in Centigrade in 0.5- or 1-degree increments, or in Fahrenheit, depending on the indoor unit model and the display mode setting on the remote controller.

### System example



\*When a PAR-31MAA is connected to a group, no other MA remote controllers can be connected to the same group.