


FLOOR CHANGE OPERATION METHOD OF TG-2000A (INTEGRATED CENTRALIZED CONTROL SOFTWARE)

Let us move to the [System set screen].



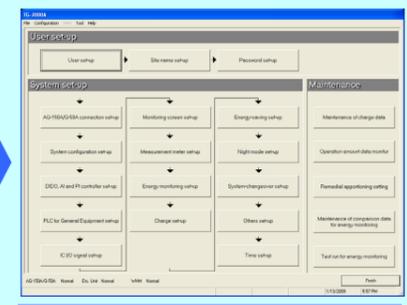


Select the [Configuration] from the [Menu bar] of each screen, and click the [System set].

Enter "SYSTEM"(initial value) on the password input screen, and click [OK].

The system set screen is displayed.

Select the [Monitoring screen set-up].

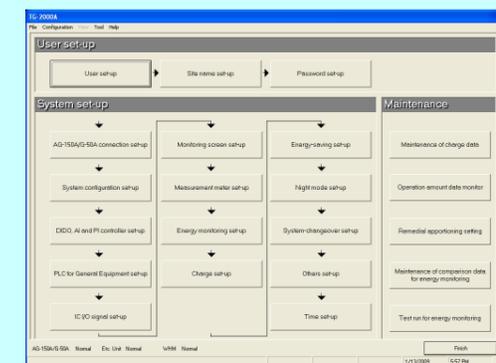

Select the [Monitoring screen set-up] in the system set column to display the [Monitoring screen set-up wizard].

For the change of a floor, the following steps are required to observe.

- Step 2 : Set-up of the number of floors, and floor names
- Step 3 : Creation of a plane view
- Step 5 : Set-up of icon arrange and name
- Step 6 : Set-up of block

Advance by clicking the [OK] button until obtaining the Step screen you desire to change.

Notice

The following Steps will appear when "Sub screen function" is set to "Active."


- Step1: set-up of model name
- Step2: Set-up of the number of floors, and floor names
- Step3: Creation of sub screen plane view
- Step4: Set-up of the number of floors, and floor name
- Step5: Creation of a plane view
- Step6: Set-up relating a sub screen plane view and a plane view
- Step7: Set-up of floor name and AG-150A/G-50A
- Step8: Set-up of icon arrange and name
- Step9: Set-up of block

Caution and notice

- The password can be changed. In the case when your password has been changed, the above may differ.
- When the password has not been changed, enter in capital letters. The key operation with Shift + Caps Lock key creates capital letters (with the Caps Lock lamp being lighted).
- At the modification of plans, do not change the drawing area size of the Paint Brush.
- RE: Name of each group
 - LCD name : The group name shown on the liquid crystal of G-50A unit (10 characters maximum)
 - Short name : The name shown on the group icon of the floor screen (8 characters maximum)
 - Full name : The name appears when the cursor is applied to the group icon of the floor screen (20 characters maximum)
- For other names
 - Floor name : 16 characters maximum
 - Block name : 20 characters maximum
- For block
 - General equipment that is used with the PAC-YG21CDA cannot be included in a block.
- If any group icon is deleted in "Step5: Set-up of icon arrange and name," be sure to check all the settings in this step and in all subsequent steps and on all settings screens, and change the settings as necessary.

To change the floor name


Go to the [Step 2 : Set-up of the number of floors, and floor names].

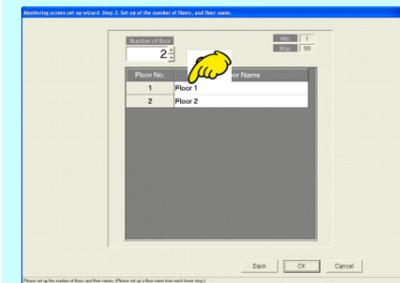

Select the floor name when the floor No. you desire to change for changing.

To change the plan

Go to the [Step 3 : Creation of a plane view].

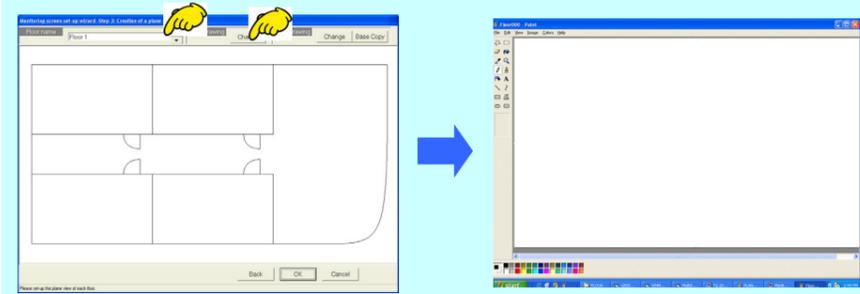


Selecting the floor name you desire to change, and pressing the [Change] button starts the Paint automatically.

After modification, select the [File] – [Exit] from the menu bar, and select [YES] on the confirming screen of storing.

By using the applicable operation of the Paint, the floor plan is modified.

To change the configuration and name of icon

Go to the [Step 5 : Set-up of icon arrange and name].

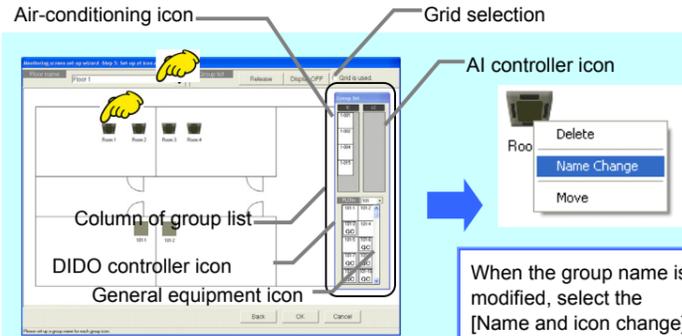

Air-conditioning icon, Grid selection, AI controller icon, Column of group list, DIDO controller icon, General equipment icon.

Select the floor name, and click the group icon you desire to change.

When the group name is modified, select the [Name and icon change], and to move the configuration, select the [Move].

To change the icon
Click the [Delete].

To change the configuration
Click the [Name and icon change].

To change the configuration
Click the [Move].

Returns to the group list deleted from the floor.


Group name setting
Group name setting [I-015]
LCD name: [Room 4]
Short name: Room 4
Full name: Room air-con 4

Modify each name.

Move to the destination changed, and move the icon by tapping.

To change the block

Go to the [Step 6 : Set-up of block].

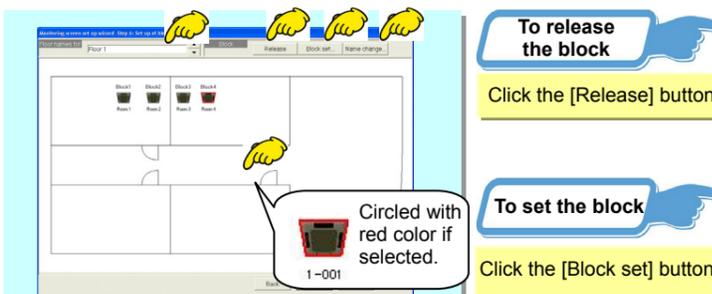

Select the floor name, and select the group icon of which block registration is desired to change.

To release the block
Click the [Release] button.

To set the block
Click the [Block set] button.

To set the block name
Click the [Block name change] button.

The block will be released.

Select either new or existing to change the block.

Block setting
Block: Block5
Name: ok5
Block set: ok5
New: Block5
Exist: Block1 Room 1, Block2 Room 2, Block3 Room 3, Block4 Room 4

Change block name
Block: Block4
Name: Room 4
Block Information:
Block1 Room 1, Block2 Room 2, Block3 Room 3, Block4 Room 4

Select the existing block of which name is desired to change, and enter a new name.