

SCHEDULE OPERATION METHOD OF TG-2000A (INTEGRATED CENTRALIZED CONTROL SOFTWARE)


Outline of TG-2000A Schedule Function

- With the schedule setting function, the starting/stopping, operation mode, temperature, prohibition/permit of remote controller operation at a specified time can be set.
- The types of the schedule include today's schedule, weekly schedule and annual schedule. A schedule for each day can be set in the weekly schedule, and a schedule for up to 50 days (during 24 months) can be set in the annual schedule. The setting priority is today's, annual and weekly in order.
- The minimum unit that can be set is a group. (Controllable objects : group, whole floor, operation block, whole building)




Display of icon with schedule setting

Switching method of [Summer Master] and [Winter Master]

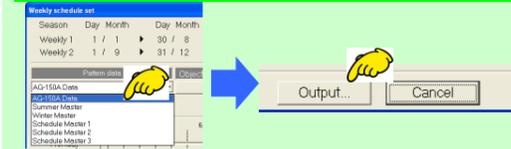


The weekly schedule is available in five applications, for summer use, winter use, etc. For switching, monitor the weekly schedule in a unit of switching (with the procedure for the [Schedule detail check], select the [Summer Master], [Winter Master] or [Schedule Master 1-3] from the [Pattern data] selection box, and click the [Send] button.

How to move to schedule relating screens

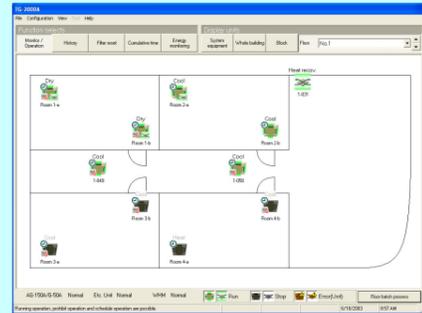


Press the [Monitor/operation] of the function selection buttons to display the monitor/operation screen.

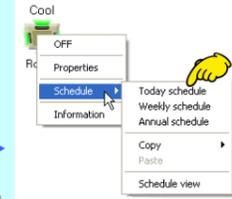


Click the target icon or the [Floor batch].

Select the [Schedule] and select the item you desire to execute.

To check the details of the schedule

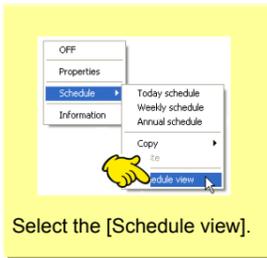

Select the [Schedule view].

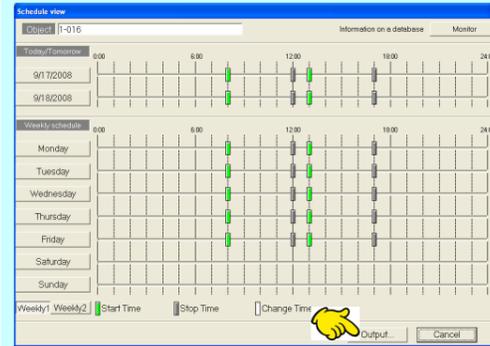


The details of the weekly, today's and next day's schedule are displayed. To output the schedule details, press the [Output] button and enter the file name. Then the output can be get as a CSV file.

Notice


- To see the details being executed by AG-150A/G-50A, click the [Update] button.
- The schedule can not be changed on this screen.
- When applying batch schedule monitor to two or more groups, the setting field is highlighted in light blue color if there are different settings.
- The output style is only CSV type format. Printer output is not available.

To change/set the annual schedule

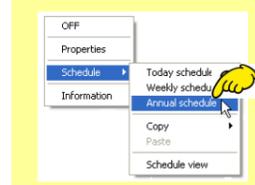

Click the [Annual schedule].

To change/set the today's and weekly schedule

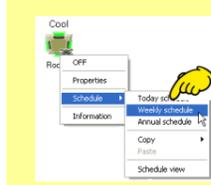

Select the schedule you desire to change/set from the [Today's schedule] or [Weekly schedule].

Pattern setting/changing



Annual schedule screen


The [Annual schedule set screen] displays the days from the current month up to 24 months, where the schedule starting from the next day can be set or changed.

[Meaning of color for calendar date frame]
Blue : Schedule set for target pattern
Dark gray : Schedule set for non-target pattern
Light gray : No schedule set
Light blue : Different schedule set for multiple groups

To set/change the pattern

Click the [Pattern setup] button.


Setting method

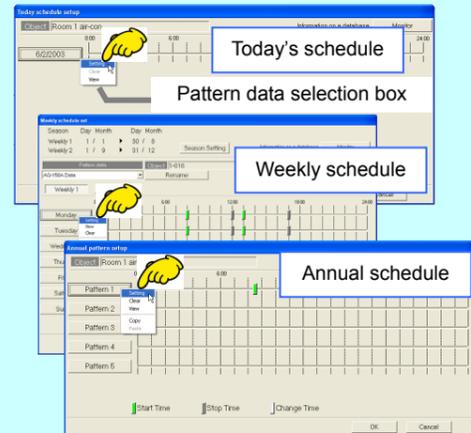

- Today's schedule**
Click the [Set] from the [Date buttons].
- Weekly schedule**
Two seasonal settings are available for the Weekly schedule setting on the AG-150A (Not available on the G-50A)
From the [Pattern data] selection box, select the [AG-150A Data]/[G-50A Data] (or [General Equipment]), [Summer Master], [Winter Master] or [Schedule Master 1-3]. Then click the button of the [Pattern] you desire to set, and select the [Set] from the menu.

- Annual schedule**
Select the button of the [Pattern] you desire to set, and select the [Set] from the menu.

Click the [Set] button.

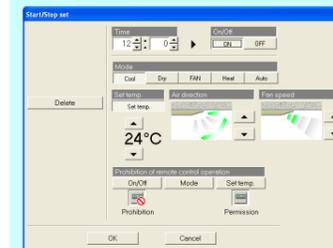

Details set screen


Select the operation time and operation details (on/off, operation mode, set temperature, operation prohibition). Clicking the [OK] button after setting moves to the setting screen of each schedule.

Notice

- Setting can be made without selecting the items (to maintain the current conditions) other than the operation time.
- The operation setting can be set for 24 times maximum in AG-150A. (12 times maximum in G-50A)
- Air direction/Fan speed settings can be made on the AG-150A. (This function is not available on the G-50A.)

Click the [OK] button.

Changing method

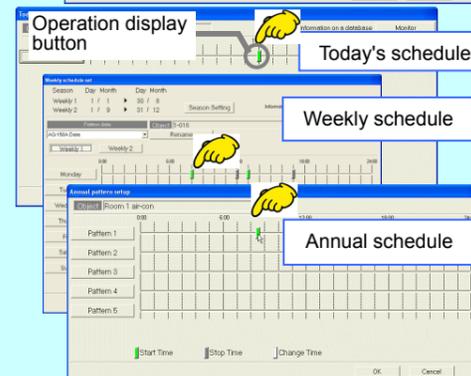

Click the [Operation display] button to display the "Details set screen".

Click the [Operation display] button.

How to delete



- Today's schedule**
Click the [Clear] from the [Date] button.
- Weekly schedule**
Click the [Day] button and select the [Clear] from the menu.
- Annual schedule**
Select the [Clear] from the [Pattern] button. Or select the [Delete] on the [Details set screen] and click [OK].

Notice

- Before conducting the schedule setting/changing, display the schedule being set to AG-150A/G-50A on the monitor screen by using the [Monitor].
- When applying schedule monitoring to two groups or more in a batch, the set field will be displayed in blue color if different setting is existing.
- Weekly schedule master name can be changed. (AG-150A Data and G-50A Data excluded)

To clear the schedule set


Click the date set with schedule.



Selecting the [Schedule reset] from the menu clears the annual schedule set to the day. Pressing the [All Delete] button clears all annual schedules.

Copying function

The details set for schedule can be copied in a unit of group. The copy target can be selected from the today's schedule, weekly schedule, annual schedule or weekly & annual schedule.

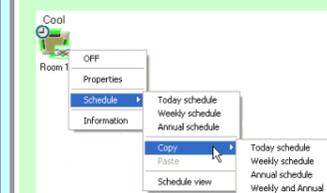

- Select the [Monitor/operation] function.
- Select the original data of the schedule to be copied.
- Select the [Schedule] - [Copy] - [Schedule desired to be copied].
- Select the object on which the schedule is to be copied.
- Select the [Schedule] - [Paste] from the menu. The schedule will be pasted fully.

Notice

- The [Summer Master], [Winter Master] and [Schedule Master 1-3] are not included in the object of the schedule copy.