## **CITY MULTI**

## Model: PAC-YU25HT - External Heater Adaptor



Job Name:

Schedule Referenece: Date:

## **Optional Part:**

PAM-4 Relay

## EXTERNAL HEATER ADAPTOR (PAC-YU25HT\*1) SPECIFICATIONS

• Coil Voltage: 12 Vdc

Power Consumption: 0.9 W or lessMaximum Distance: 32 feet (10 meters)

• Wire Size: 16 to 22 AWG


- The external header adaptor (PAC-YU25HT) connects to CN24 on the indoor unit for control of external heat by the

CITY MULTI Controls Network

PAC-YU25HT\*1 = For models PKFY-P06\_08NBMU-E you require external output cable PAC-\$E88HA-E (PAR-725AD), cable connects into Indoor board CN52 while Brown and Red wires are used in place of wiring shown below. (Same control operation apply see PKFY\_\$H for full details)

- For full control sequence specifications as well field DIP switch setting reference IM\_PAC-YU25HT\_WT05383X04
- PAC-YU25HT adapter only enables/disables a 12vdc interlock relay for a third party auxiliary heater control circuit. Third party control circuit must be capable to operate via an on/off dry contact only
- Operational, high limit and all other safety controls should be integral to the third party auxiliary heater

Locally Procured Wiring
(1) Basic wiring

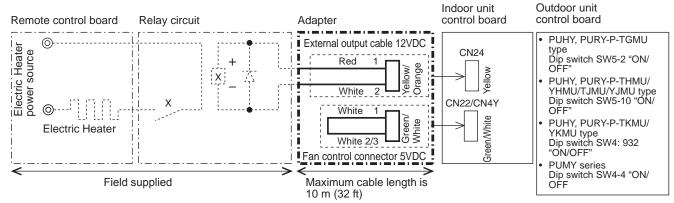

Use X relay having the following specifications

Rated voltage: 12VDC

Power consumption: 0.9W or less


\* Always insert a diode on both ends the relay coil.

The length of the electrical wiring for the PAC-YU25HT is 2 meters (6-1/2 ft).

For longer lengths, up to no more than 10 m (32ft), use sheathed 2-core cable.

Control cable type: CVV, CVS, CPEV or equivalent. Cable size: 0.5 mm<sup>2</sup> ~ 1.25 mm<sup>2</sup> (16 to 22 AWG)

(2) Recommended circuit

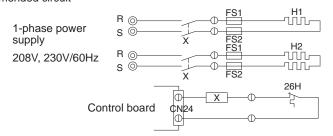

FS1, 2 -----Thermal fuse

H1, H2-----Electric heater

26H-----Overheat protection thermostat

X -----Relay (Electromagnetic contactor)

Notes:

