MITSUBISHI ELECTRIC PUHY/PURY-TNU (CM-EXL-EXT-1) Series
Snow Guard Extension Installation Instructions

Always observe for safety and securely install the optional parts

SNOWGUARD EXTENSION (CM-EXL-EXT-1) INSTALLATION PROCEDURE FOR SIDE (CM-SD-SG) AND REAR (CM-FRE-SG-1) SNOW GUARD ASSEMBLY :
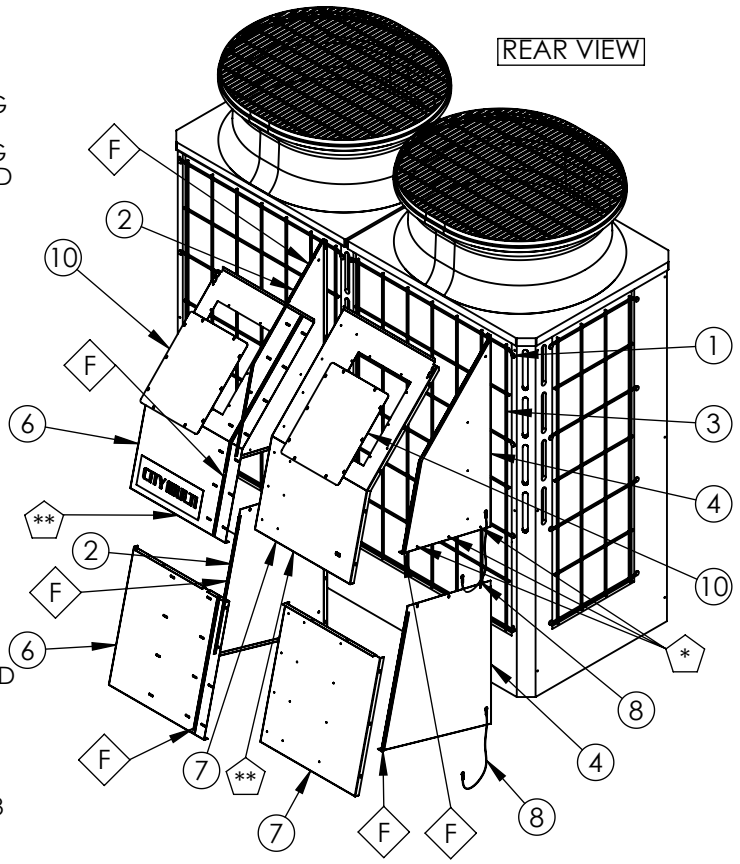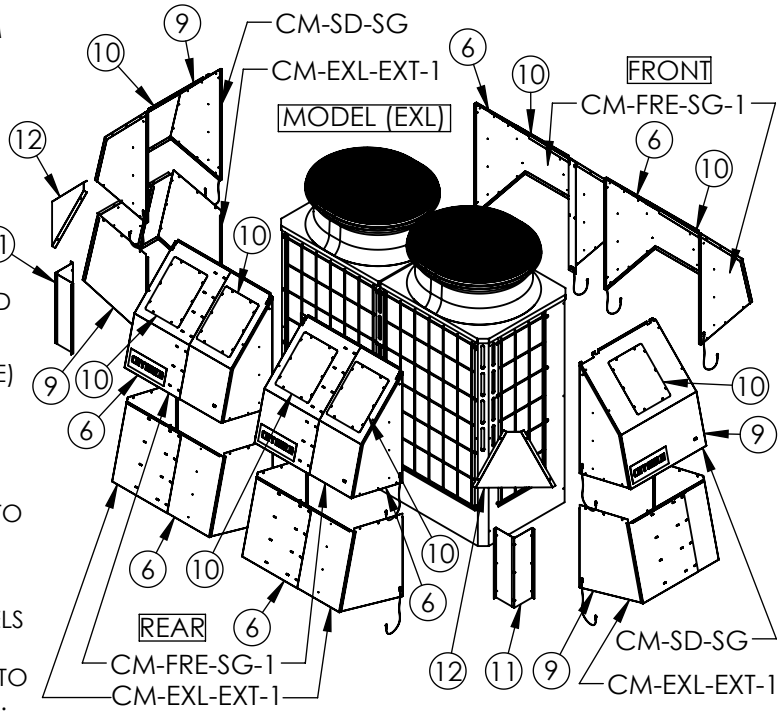
1. WHEN INSTALLING THE REAR ASSEMBLY (CM-FRE-SG-1), REMOVE THE REAR WIRE GRILL ① SCREWS ON THE LEFT SIDE OF THE UNIT FIRST, IF APPLICABLE.
2. WITHOUT REMOVING THE GRILL, INSTALL ② LEFT HAND SIDE GABLE, CENTRE COVER AND LEFT HAND SIDE EXTENSION GABLE **UNDER** THE GRILL USING THE EXISTING SCREWS THAT WERE REMOVED IN STEP 1. OTHERWISE, INSTALL LEFT HAND SIDE GABLE USING #10 SELF TAPPING SCREWS PROVIDED. SECURE LEFT HAND SIDE GABLE AND EXTENSION GABLE TOGETHER WITH #8 SCREW PROVIDED. ⟨*⟩ THESE HOLES MAY NEED TO BE FIELD DRILLED WITH 1/8" DRILL ON THE SIDE GABLES.
3. REMOVE THE WIRE GRILL ③ SCREWS ON THE RIGHT SIDE OF THE UNIT, IF APPLICABLE.
4. WITHOUT REMOVING THE GRILL, INSTALL ④ RIGHT HAND SIDE GABLE AND EXTENSION GABLE **UNDER** THE GRILL USING THE EXISTING SCREWS THAT WERE REMOVED IN STEP 3. OTHERWISE, INSTALL RIGHT HAND SIDE GABLE AND EXTENSION GABLE USING #10 SELF TAPPING SCREWS PROVIDED. SECURE RIGHT HAND SIDE GABLE AND EXTENSION GABLE TOGETHER WITH #8 SCREW PROVIDED. ⟨*⟩ THESE HOLES MAY NEED TO BE FIELD DRILLED WITH 1/8" DRILL ON THE SIDE GABLES.
5. ADD 1/2" WIDE ANTI-VIBRATION FOAM TO EXTERIOR EDGE OF GABLES AND EXTENSION GABLES AND ONTO THE INTERIOR EDGE OF LEFT HAND REAR COVER AND EXTENSION COVER AS PER ⟨F⟩. ALIGN SLOTS OF RIGHT HAND REAR COVER WITH THE HOLES OF THE RIGHT HAND SIDE GABLE. INSTALL USING #8 SCREWS PROVIDED. REPEAT FOR RIGHT HAND EXTENSION COVER AND GABLE.
6. ALIGN SLOTS OF LEFT HAND REAR COVER WITH THE HOLES OF THE LEFT HAND SIDE GABLE. INSTALL USING #8 SCREWS PROVIDED. REPEAT FOR LEFT HAND REAR EXTENSION COVER AND GABLE.
7. ALIGN THE LEFT HAND REAR COVER SLOTS WITH THE RIGHT HAND REAR COVER HOLES AND INSTALL USING THE #8 SCREWS PROVIDED. INSTALL THE SCREWS FROM THE TOP DOWN TO ENSURE BEST ALIGNMENT. REPEAT FOR LEFT AND RIGHT EXTENSION COVER. SECURE REAR ASSEMBLY TO EXTENSION ASSEMBLY USING #8 SCREWS PROVIDED AT THE BOTTOM OF LEFT AND RIGHT HAND REAR COVER. ⟨**⟩ THESE HOLES MAY NEED TO BE FIELD DRILLED WITH 1/8" DRILL ON AT THE BOTTOM OF LEFT AND RIGHT HAND REAR COVER.
8. ATTACH THE SAFETY CABLES TO THE UNIT (ALREADY ATTACHED TO GABLES).
9. CONTINUE THE ABOVE SEQUENCE FOR THE SIDE GUARD ASSEMBLIES (CM-SD-SG) AND EXTENSION ASSEMBLIES (CM-EXL-EXT-1). INSTALL BY REMOVING AND REINSTALLING WIRE GRILL SCREWS (WHERE APPLICABLE) OR INSTALL (6) #10 SELF TAPPING SCREWS PROVIDED PER ASSEMBLY (WHERE APPLICABLE).
10. INSTALL ALL ACCESS COVER PLATES WITH #8 SCREWS PROVIDED.
11. ASSEMBLE TWO PIECE CORNER GUARDS TOGETHER INTO "L" SHAPE. LOCATE CORNER VENTS AND INSTALL TO FRONT/REAR AND SIDE GABLE WITH #8 SCREWS. CORNER VENT LOCATION VARIES FOR EACH MODEL.
12. INSTALL CORNER CAP TO FRONT/REAR AND SIDE PANELS WITH #8 SCREWS. (ABOVE CORNER GUARD)
13. ONCE ALL SNOWGUARDS ARE INSTALLED, MAKE SURE TO INSPECT AND CHECK FOR ANY LOOSE CONNECTIONS.