


PARTS CATALOG R32

[Model Name]

WUZ-SA24NMZ
WUZ-SA36NMZ
WUZ-SA48NMZ

[Service Ref.]

WUZ-SA24NMZ-U1
WUZ-SA36NMZ-U1
WUZ-SA48NMZ-U1

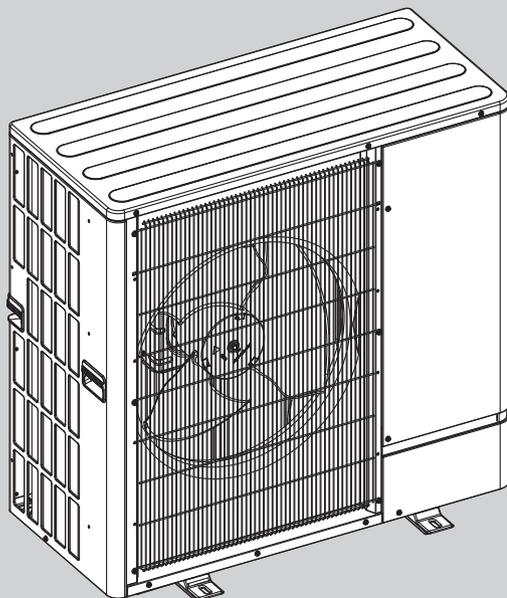

OUTDOOR UNIT

CONTENTS

1. SERVICE PARTS LIST.....2
2. OPTIONAL PARTS.....8


SERVICE MANUAL (OCH889)

STRUCTURAL PARTS

WUZ-SA24NMZ-U1

WUZ-SA36NMZ-U1


WUZ-SA48NMZ-U1

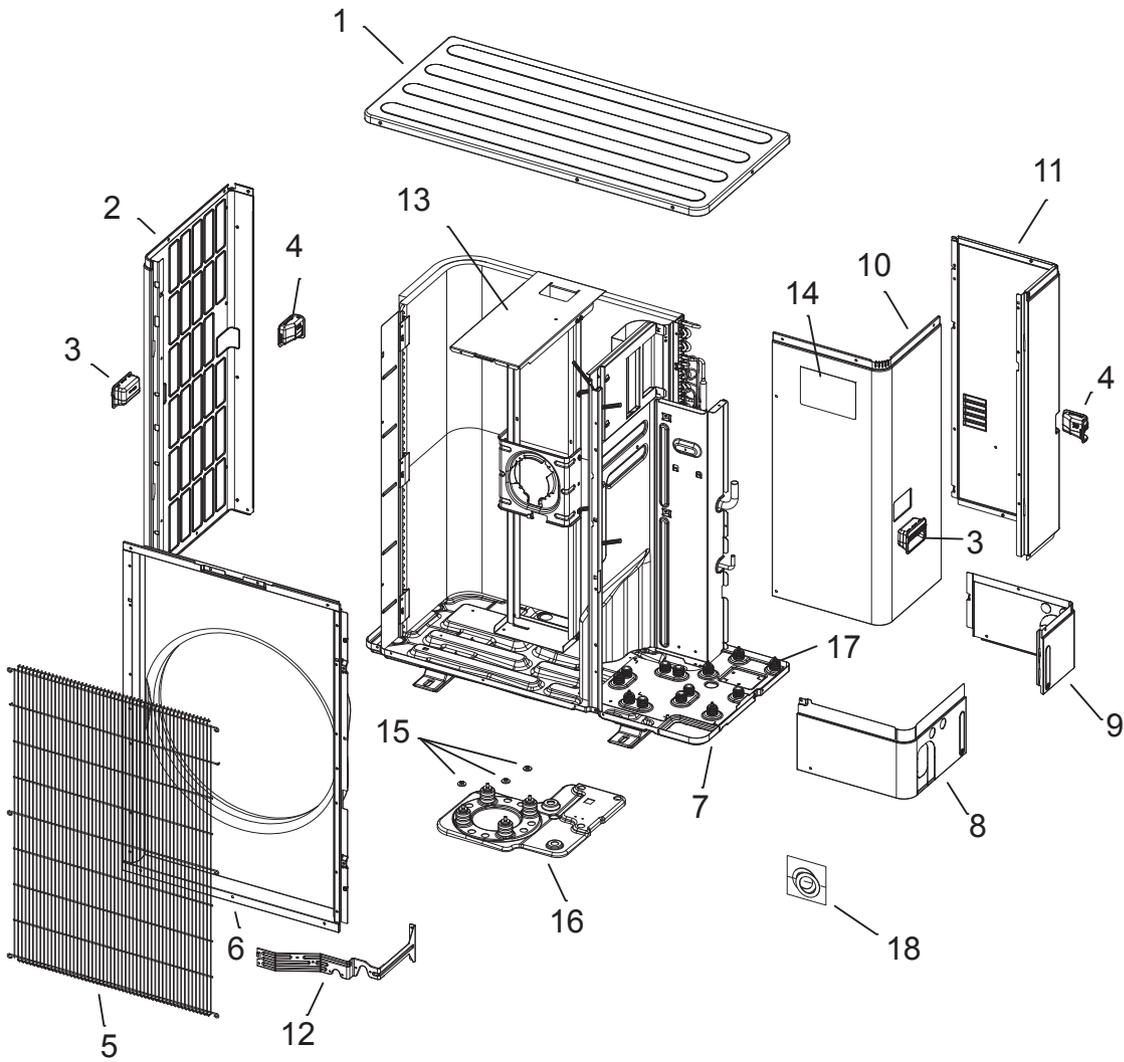

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name				Wiring Diagram Symbol	Remarks [Drawing No.]
			WUZ-SA24NMZ-U1	WUZ-SA36NMZ-U1	WUZ-SA48NMZ-U1		
1	G4W W01 065	TOP PANEL	1	1	1		
2	G4W W01 063	SIDE PANEL-L	1	1	1		
3	G4W W01 204	HANDLE/FRONT	2	2	2		
4	G4W W02 204	HANDLE/REAR	2	2	2		
5	G4W W01 031	WIRE GRILLE	1	1	1		
6	G4W W01 064	FRONT PANEL	1	1	1		
7	G4W W01 237	BASE ASSY	1	1	1		
8	G4W W01 206	COVER PANEL/FRONT	1	1	1		
9	G4W W02 206	COVER PANEL/REAR	1	1	1		
10	G4W W01 058	SERVICE PANEL	1	1	1		
11	G4W W02 063	SIDE PANEL-R	1	1	1		
12	G4W W02 228	STOP VALVE BED	1	1	1		
13	G4W W03 130	MOTOR SUPPORT	1	1			
13	G4W W04 130	MOTOR SUPPORT			1		
14	G4W W05 005	BRAND LABEL	1	1	1		
15	G4W W03 097	NUT SPECIAL	3	3	3		
16	G4W W01 083	COMP BASE ASSY	1	1	1		
17	G4W W02 004	RUBBER MOUNT	13	13	13		
18	G4W W01 247	CONDUIT RING ASSY	1	1	1		

FUNCTIONAL AND ELECTRICAL PARTS
WUZ-SA24NMZ-U1 WUZ-SA36NMZ-U1 WUZ-SA48NMZ-U1

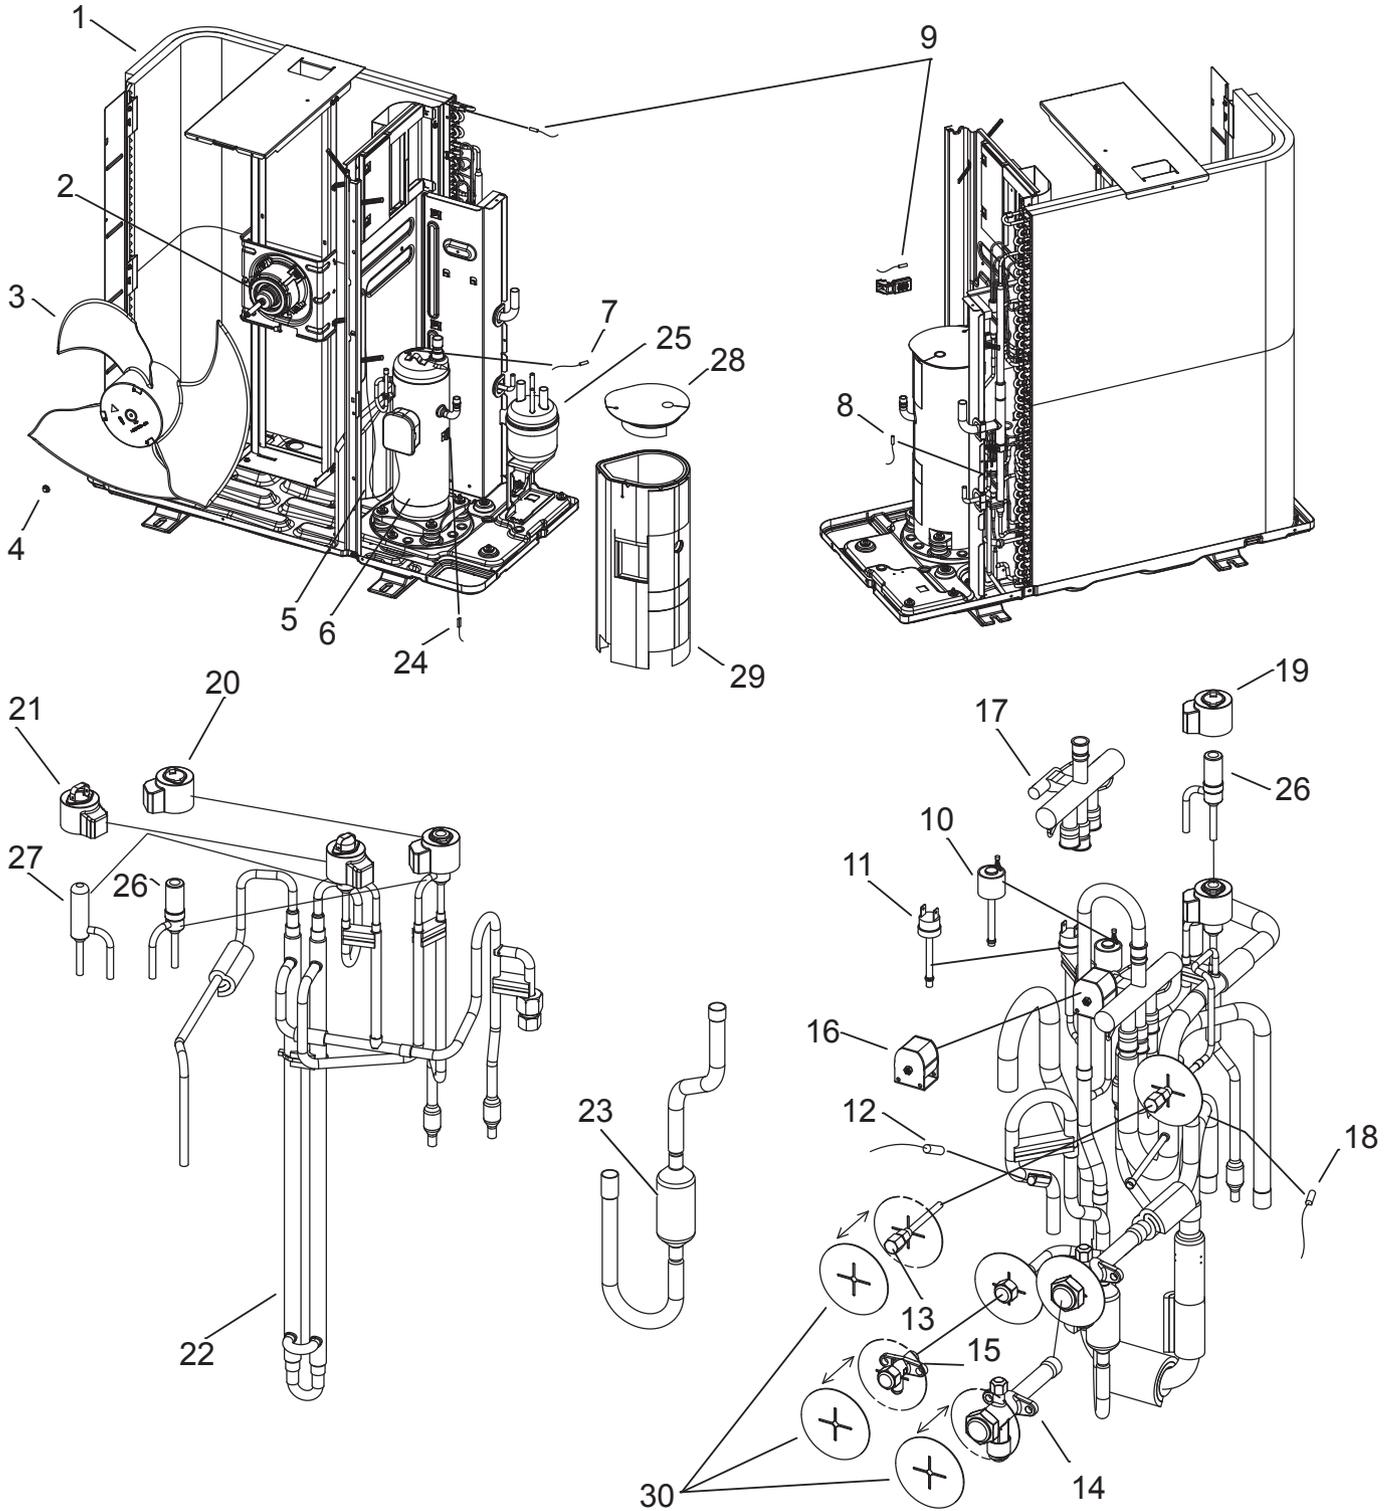


1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	WUZ-SA24NMZ-U1	WUZ-SA36NMZ-U1	WUZ-SA48NMZ-U1	Wiring Diagram Symbol	Remarks [Drawing No.]
1	G4W W05 408	HEAT EXCHANGER	1	1			
1	G4W W06 408	HEAT EXCHANGER	1	1			
1	G4W W07 408	HEAT EXCHANGER			1		
1	G4W W08 408	HEAT EXCHANGER			1		
2	G4W W02 221	FAN MOTOR	1	1	1	MF1	
3	G4W W01 115	PROPELLER FAN	1	1	1		
4	G4W W02 097	NUT	1	1	1		
5	G4W W01 175	LEAD ASSY COMP	1	1			
5	G4W W03 175	LEAD ASSY COMP			1		
6	G4W W09 400	COMPRESSOR (+ RUBBER MOUNT)	1	1		MC	DVK28FEJMT
6	G4W W10 400	COMPRESSOR (+ RUBBER MOUNT)			1	MC	DVK36FEGMT
7	G4W W01 202	THERMISTOR (COMP.SURFACE)	1	1	1	TH33	
8	G4W W04 202	THERMISTOR-H (LIQUID)	1	1	1	TH3	
9	G4W W05 202	THERMISTOR-W (AMBIENT 2-PHASE PIPE)	1	1	1	TH6/TH7	950/1150
10	G4W W01 266	HIGH PRESSURE SENSOR	1	1	1	63HS	
11	G4W W02 208	HIGH PRESSURE SWITCH	1	1	1	63H	OFF 4.88MPA
12	G4W W02 202	THERMISTOR (DISCHARGE)	1	1	1	TH4	D8
13	G4W W02 413	CHARGE PLUG	1	1	1		
14	G4W W03 418	STOP VALVE (GAS)	1	1	1		5/8"F
15	G4W W04 418	STOP VALVE (LIQUID)	1	1	1		1/4"F
16	G4W W02 242	SOLENOID COIL (4 WAY COIL) (+ SCREW)	1	1	1		
17	G4W W01 403	REVERSING VALVE (4 WAY VALVE)	1	1	1	21S4	
18	G4W W03 202	THERMISTOR (SUCTION)	1	1	1	TH32	
19	G4W W03 402	LINEAR EXPANSION VALVE COIL	1	1	1	LEV-B	KVC-1A019
20	G4W W01 402	LINEAR EXPANSION VALVE COIL	1	1	1	LEV-A	KVC-1A020
21	G4W W02 402	LINEAR EXPANSION VALVE COIL	1	1	1	LEV-C	UKV-A269
22	G4W W02 344	HIC_ASSY	1	1	1		
23	G4W W01 467	MUFFLER (PIPE C-M ASSY) (+ BAND)	1	1	1		
24	G4W W01 171	THERMAL PROTECTOR	1	1	1	TRS	
25	G4W W01 089	POWER_REC	1	1	1		
26	G4W W01 401	EXPANSION VALVE	2	2	2		UKV-SE26D015
27	G4W W02 401	EXPANSION VALVE	1	1	1		UKV-18D124
28	G4W W04 075	TOP FELT	1	1	1		
29	G4W W03 075	COMP FELT	1	1	1		
30	G4W W01 455	REF. MARKER (SNAP)	3	3	3		

ELECTRICAL PARTS


WUZ-SA24NMZ-U1 WUZ-SA36NMZ-U1

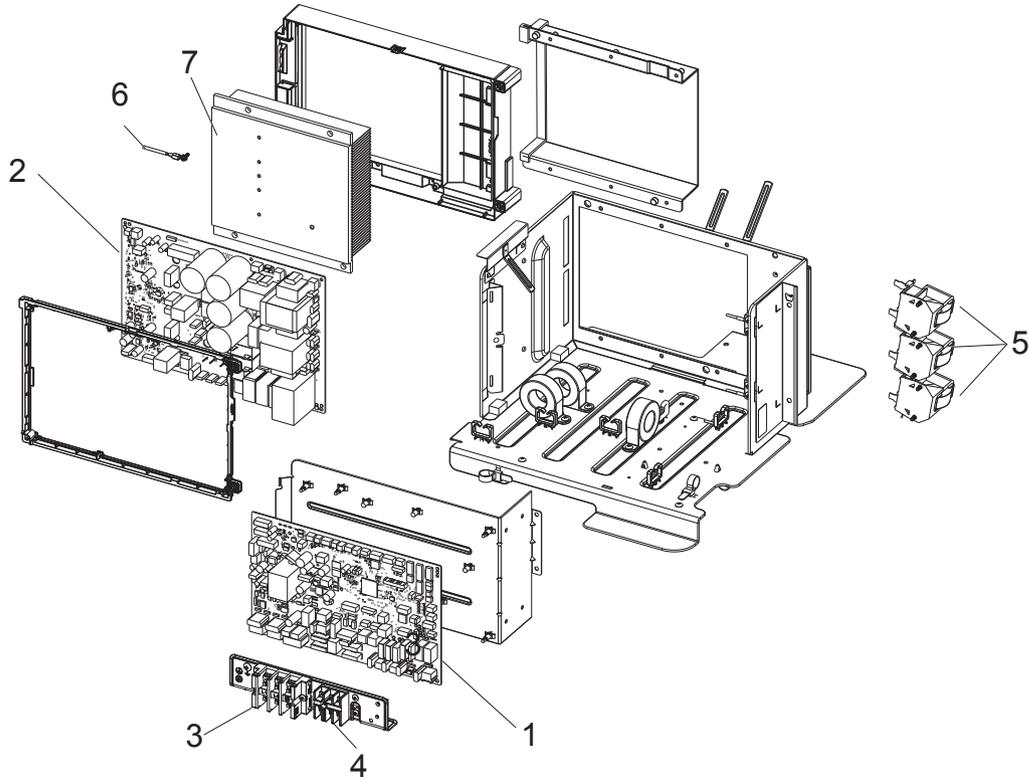

1. The part quantity below indicates the required number of pieces per unit.
 2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name			Wiring Diagram Symbol	Remarks [Drawing No.]
			WUZ-SA24NMZ-U1	WUZ-SA36NMZ-U1		
1	G4W W05 411	CONTROLLER BOARD	1	1	C.B.	
2	G4W W06 423	POWER BOARD	1	1	P.B.	
3	G4W W05 246	TERMINAL BLOCK	1	1	TB1	3P (L1, L2, E)
4	G4W W06 246	TERMINAL BLOCK	1	1	TB2	3P (S1, S2, S3)
5	G4W W11 259	REACTOR	3	3	DCL1,2,3	
6	G4W W06 202	THERMISTOR (HEAT SINK)	1	1	TH8	
7	G4W W05 371	HEAT SINK (+ SCREW)	1	1		

ELECTRICAL PARTS WUZ-SA48NMZ-U1

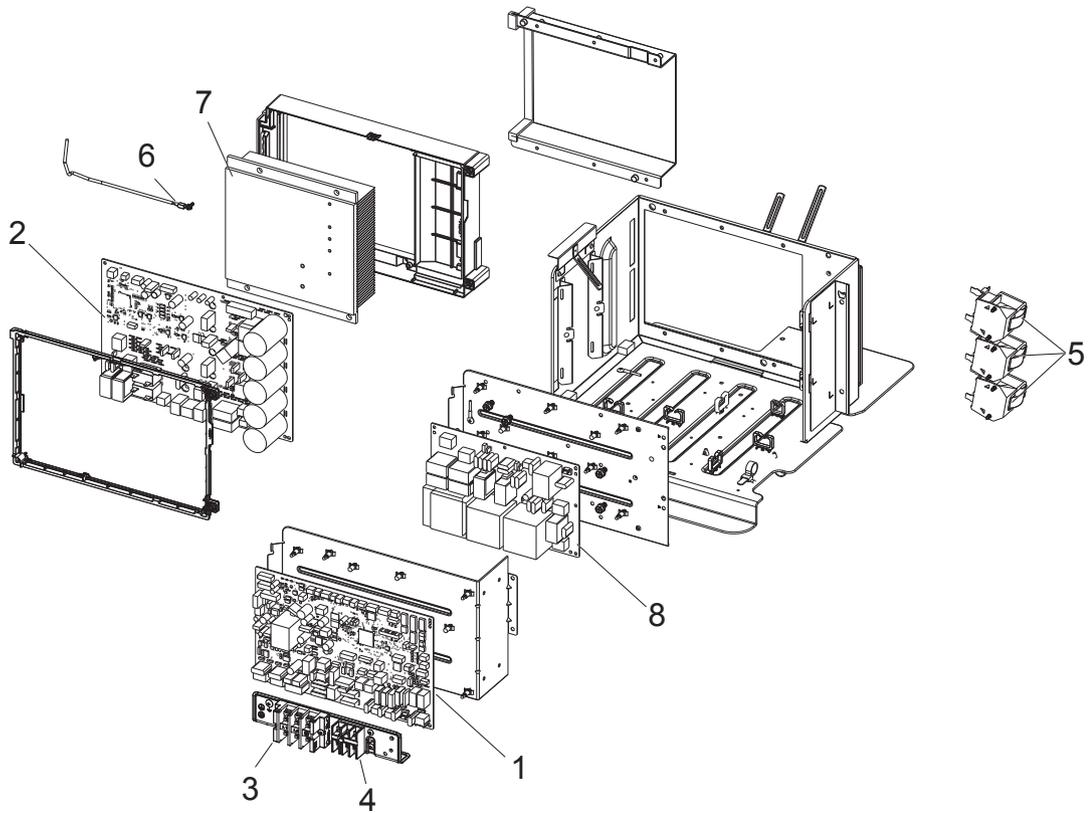

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	WUZ-SA48NMZ-U1	Wiring Diagram Symbol	Remarks [Drawing No.]
1	G4W W05 411	CONTROLLER BOARD	1	C.B.	
2	G4W W07 423	POWER BOARD	1	P.B.	
3	G4W W05 246	TERMINAL BLOCK	1	TB1	3P (L1, L2, E)
4	G4W W06 246	TERMINAL BLOCK	1	TB2	3P (S1, S2, S3)
5	G4W W11 259	REACTOR	3	DCL1,2,3	
6	G4W W08 202	THERMISTOR (HEAT SINK)	1	TH8	
7	G4W W06 371	HEAT SINK (+ SCREW)	1		
8	G4W W03 424	NOISE FILTER BOARD	1	N.F.	

2**OPTIONAL PARTS**

Parts name	Parts No.
AIR PROTECTION GUIDE	PAC-SH95AG-E
AIR DISCHARGE GUIDE	PAC-SH96SG-E
ATTACHMENT (AIR DISCHARGE GUIDE/AIR PROTECTION GUIDE)	PAC-SJ82AT-E
CONTROL/SERVICE TOOL	PAC-SK52ST

mitsubishi electric corporation

HEAD OFFICE : TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN