# **CITY MULTI**

## Model: PAR-31MAA



Job Name:

Location:

Date:

Drawing Reference:

Schedule No.

System No.:

MITSUBISHI ELECTRIC 14:30 Fri ° . Room 28℃ 🔳 ∭.at Cool Set temp. Auto **₽ 28**°c 50 \$‡ Mode -Temp. + Fan (1) 3 V

### Functions 1. Operation/Display

◯:Each group X:Not available

Item	Description	Setting	Display
ON/OFF	Switches between ON and OFF.	0	0
Operation mode switching	Switches among Cool/Dry/Fan/Auto/Heat.	0	0
Room temp. setting *3	The temperature can be set within the following range. Cool/Dry: $19^{\circ}C - 30^{\circ}C (14^{\circ}C - 30^{\circ}C) / 67^{\circ}F - 87^{\circ}F (57^{\circ}F - 87^{\circ}F)$ Heat : $17^{\circ}C - 28^{\circ}C (17^{\circ}C - 28^{\circ}C) / 63^{\circ}F - 83^{\circ}F (63^{\circ}F - 83^{\circ}F)$ Auto : $19^{\circ}C - 28^{\circ}C (17^{\circ}C - 28^{\circ}C) / 67^{\circ}F - 83^{\circ}F (63^{\circ}F - 83^{\circ}F)$ () For PEFY/PFFY by setting DipSW 1-7 to ON and limits to HIGH fan speed only.	0	0
Fan speed setting	Changes fan speed. * Available fan speeds vary depending on the model.	0	0
Air flow direction setting	Changes airflow direction. * Available airflow directions vary depending on the model.	0	0
Louver setting	Switches between louver ON/OFF.	0	0
Ventilation equipment control	Interlocked setting and interlocked operation setting with the City Multi LOSSNAY units can be made. The Stop/Low/High settings of the ventilation equipment can be controlled.	0	0
Auto descending panel *1	Raises and lowers the automatic elevating panel.	0	0
backlight	Pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen.	×	0
Main display mode setting	The Main display can be displayed in two different modes: "Full" and "Basic."	0	0
Clock *2	Date (year/month/day) and time (hour/minute) can be set. The set time as well as the day of the week will be displayed on the Main display. It is also possible to set not to display the time on the Main display.	0	0
Clock display	The clock can be displayed in 12-hour format (AM/PM before or after the time) and 24-hour format.	0	0
Room temp. display <sup>*3</sup>	Displays the room temperature on the Main display in the "Full" mode during operation.	_	0
Error information	When an error occurs, an error code and the unit address appear. Air conditioning unit model, serial number, and contact number can be set to appear when an error occurs. (The information above needs to be entered in advance.) * An error code may not appear depending on the error.	_	0
Filter information	A filter sign will appear when it is time to clean the filter.		0
Dual Set Point *1	Two preset temperatures (one each for cooling and heating operation) can be set in the Auto mode.	0	0

\*1 This function is active only for the units that support the function. \*2 The clock is accurate within 50 seconds per month (at the temperature of 25°C [77°F]). The clock is

\*3 Temperature will be displayed either in Centigrade in 0.5- or 1-degree increments, or in Fahrenheit, depending on the indoor unit model and the display mode setting on the remote controller.

Notes:



Specifications are subject to change without notice. © 2014 Mitsubishi Electric Sales Canada Inc.

Form # SB\_PAR-31MAA\_201405

# Model: PAR-31MAA

O:Each group X:Not available

#### 2. Schedule and timer setting

<u> </u>				
Item	Description	Setting	Display	
Timer	ON/OFF timer Turns ON and OFF daily at a set time. • Time can be set in 5-minute increments. • It is also possible to set the ON time only or the OFF time only. Auto-OFF timer Turns off the unit after a certain period of operation. • Operation time can be set to a value from 30 to 240 minutes in 10-minute increments.	0	0	
Weekly timer	Weekly ON/OFF times and set temperatures can be set. • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week. • Not valid when the ON/OFF timer is set.	0	0	
Night setback	The temperature range and the start/stop times can be set.	0	0	

#### 3 Restriction settings

3. Restriction settings		O:Each grou	ıp X∶No	X:Not available	
Item	Description	:	Setting	Display	
Allows/disallows local operation	The following operation can be prohibited by making settings on the centralized controller. ON/OFF, opera setting, temperature setting, and filter sign reset. * While an operation is prohibited, the operation icon (only on the Main display in the "Full" mode).	tion mode	×	0	
Operation lock	The following operation can be prohibited respectivel operation mode setting, temperature setting, and airfl setting.		0	0	
Temperature range restriction	The room temperature range for each operation mod restricted.	e can be	0	0	
Auto return	The units operate at the preset temperature after a di period. (Time can be set to a value from 30 to 120 in 10-minu increments.) * Not valid when the temperature setting range is res	ute	0	×	
password	Administrator password (required for schedule setting Maintenance password (required for test run and fun- etc.) can be set.		0	×	


#### 4. Miscellaneous items

O:Each group X:Not available Item Description Setting Display Language Selection Select the display language from the following 8 languages. English, French, German, Spanish, Italian,Portuguese, Swedish, 0 0 and Russian Ο Contrast Adjusts LCD contrast. Ο Manual Fixes the vane position for each air outlet. Ο Х vane Angle \*1 Contains Test run, Function setting, Refrigerant volume check, Refrigerant leak check, Smooth maintenance, Request code, and Service  $\cap$ Ο Error history.

\*1 This function is active only for the units that support the function.
\*2 The clock is accurate within 50 seconds per month (at the temperature of 25°C [77°F]). The clock is backed up for 7 days.
\*3 Temperature will be displayed either in Centigrade in 0.5- or 1-degree increments, or in Fahrenheit,


depending on the indoor unit model and the display mode setting on the remote controller.

### System example

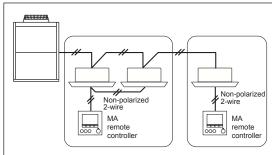

#### \*When a PAR-31MAA is connected to a group, no other MA remote controllers can be connected to the same group.

### External dimension

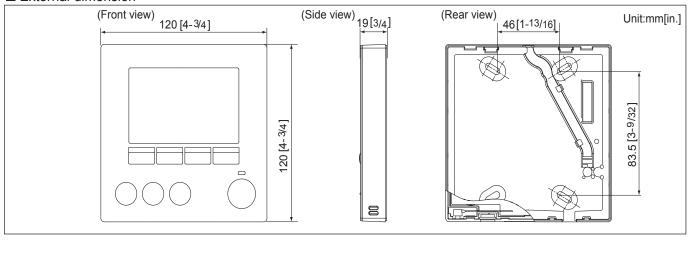



Mitsubishi Electric Air Conditioning & Refrigeration Systems Works acquired ISO 9001 certification under Series 9000 of the International Standard Organization (ISO) based on a review of quality warranties for the production of refrigeration and air conditioning equipment.

ISO Authorization System The ISO 9000 series is a plant authorization system relating to quality warranties as stipulated by the ISO. ISO 9001 certifies quality warranties based on the 'design, development, production, installation and auxiliary services' for products built at an authorized plant.



Mitsubishi Electric Air Conditioning & Refrigeration Systems Works acquired environmental management system standard ISO 14001 certification.

The ISO 14000 series is a set of standards applying to environmental protection set by the International Standard Organization (ISO).



for a greener tomorrow



Certificate Number EC97J1227

Form # SB PAR-31MAA 201405 Specifications are subject to change without notice. www.MitsubishiElectric.ca © 2014 Mitsubishi Electric Sales Canada Inc.