

SERVICE PARTS LIST FOR MITSUBISHI ELECTRIC PACKAGED AIR-CONDITIONERS


Series : PQHY-P•TLMU-A2
PQHY-P•YLMU-A2

Mar. 2024
BWE023470


INDEX
PQHY-P72TLMU-A2
PQHY-P96TLMU-A2
PQHY-P120TLMU-A2
PQHY-P144TLMU-A2
PQHY-P168TLMU-A2
PQHY-P192TLMU-A2
PQHY-P216TLMU-A2
PQHY-P240TLMU-A2
PQHY-P72YLMU-A2
PQHY-P96YLMU-A2
PQHY-P120YLMU-A2
PQHY-P144YLMU-A2
PQHY-P168YLMU-A2
PQHY-P192YLMU-A2
PQHY-P216YLMU-A2
PQHY-P240YLMU-A2

The Package name list

- PQHY-P144TSLMU-A2 [PQHY-P72TLMU-A2+PQHY-P72TLMU-A2]
- PQHY-P168TSLMU-A2 [PQHY-P72TLMU-A2+PQHY-P96TLMU-A2]
- PQHY-P192TSLMU-A2 [PQHY-P96TLMU-A2+PQHY-P96TLMU-A2]
- PQHY-P216TSLMU-A2 [PQHY-P96TLMU-A2+PQHY-P120TLMU-A2]
- PQHY-P240TSLMU-A2 [PQHY-P120TLMU-A2+PQHY-P120TLMU-A2]
- PQHY-P288TSLMU-A2 [PQHY-P144TLMU-A2+PQHY-P144TLMU-A2]
- PQHY-P312TSLMU-A2 [PQHY-P144TLMU-A2+PQHY-P168TLMU-A2]
- PQHY-P336TSLMU-A2 [PQHY-P168TLMU-A2+PQHY-P168TLMU-A2]
- PQHY-P360TSLMU-A2 [PQHY-P168TLMU-A2+PQHY-P192TLMU-A2]
- PQHY-P144YSLMU-A2 [PQHY-P72YLMU-A2+PQHY-P72YLMU-A2]
- PQHY-P168YSLMU-A2 [PQHY-P72YLMU-A2+PQHY-P96YLMU-A2]
- PQHY-P192YSLMU-A2 [PQHY-P96YLMU-A2+PQHY-P96YLMU-A2]
- PQHY-P216YSLMU-A2 [PQHY-P96YLMU-A2+PQHY-P120YLMU-A2]
- PQHY-P240YSLMU-A2 [PQHY-P120YLMU-A2+PQHY-P120YLMU-A2]
- PQHY-P288YSLMU-A2 [PQHY-P144YLMU-A2+PQHY-P144YLMU-A2]
- PQHY-P312YSLMU-A2 [PQHY-P144YLMU-A2+PQHY-P168YLMU-A2]
- PQHY-P336YSLMU-A2 [PQHY-P168YLMU-A2+PQHY-P168YLMU-A2]
- PQHY-P360YSLMU-A2 [PQHY-P168YLMU-A2+PQHY-P192YLMU-A2]

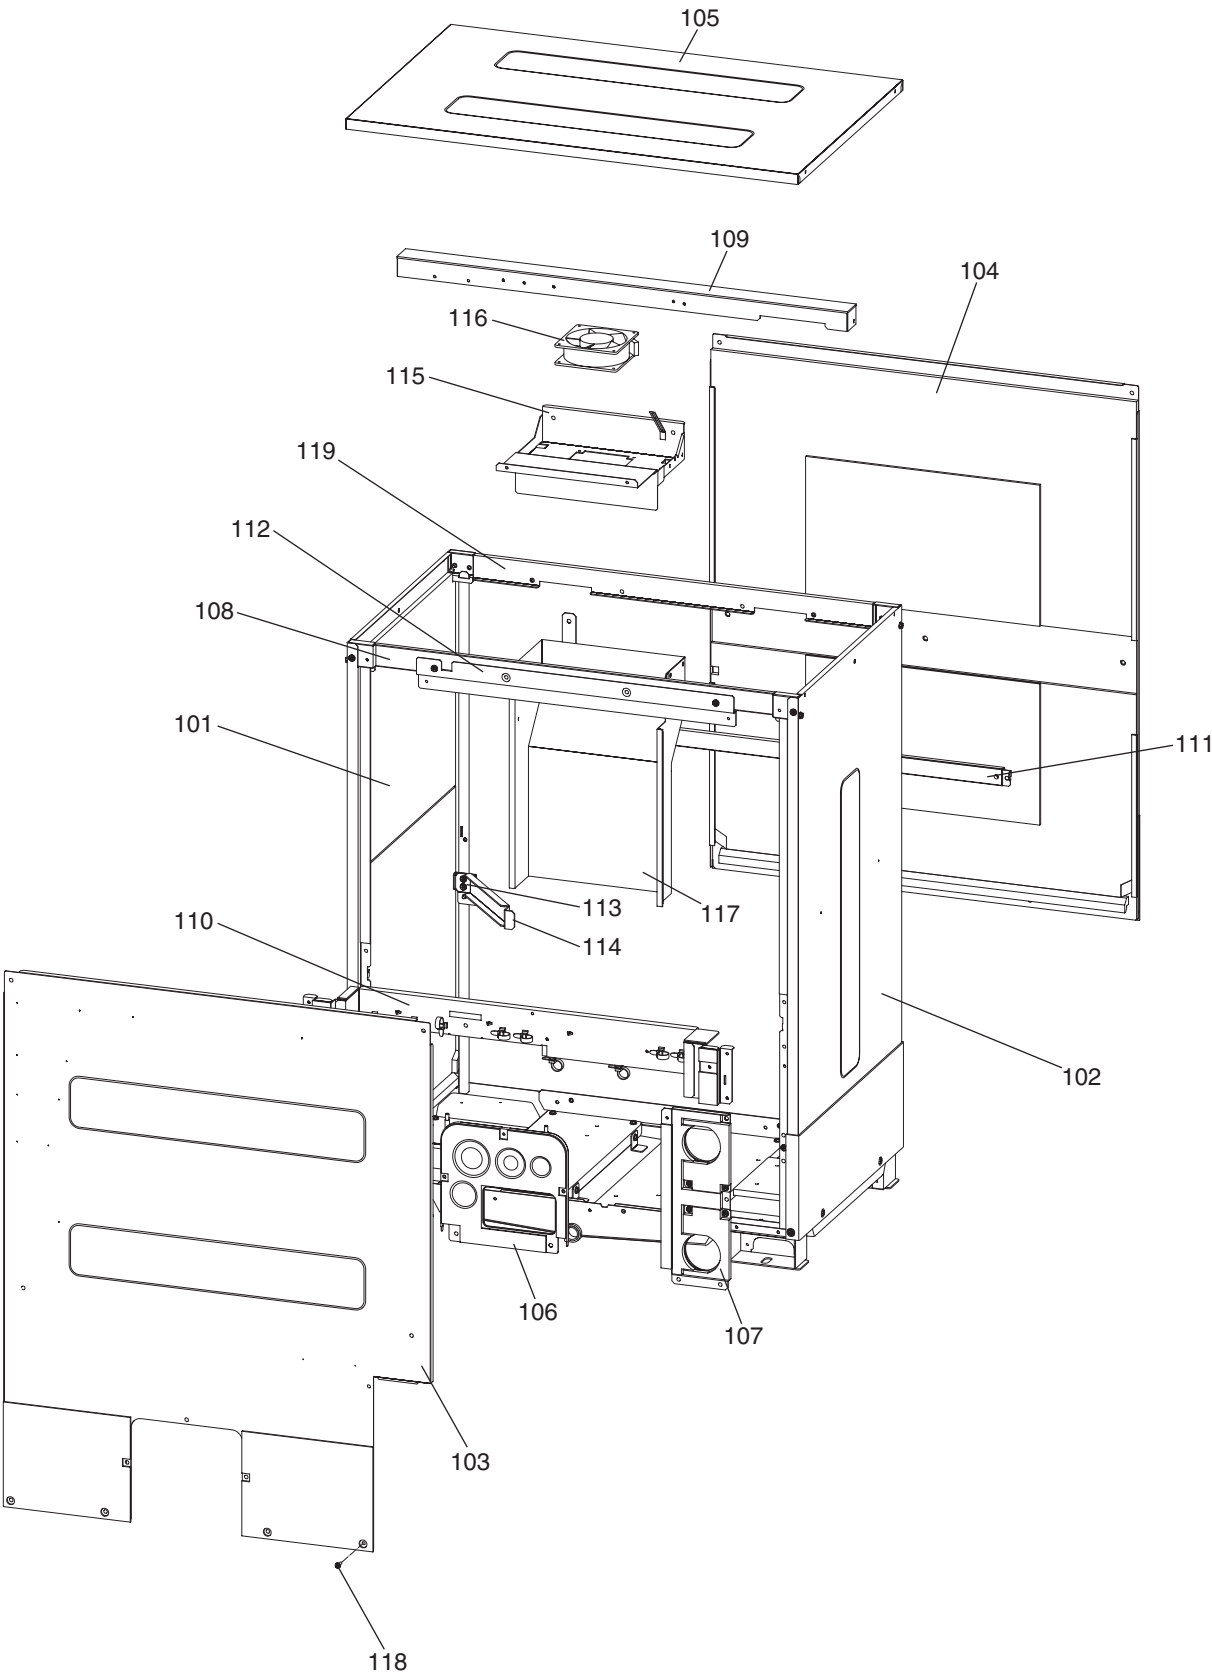

2

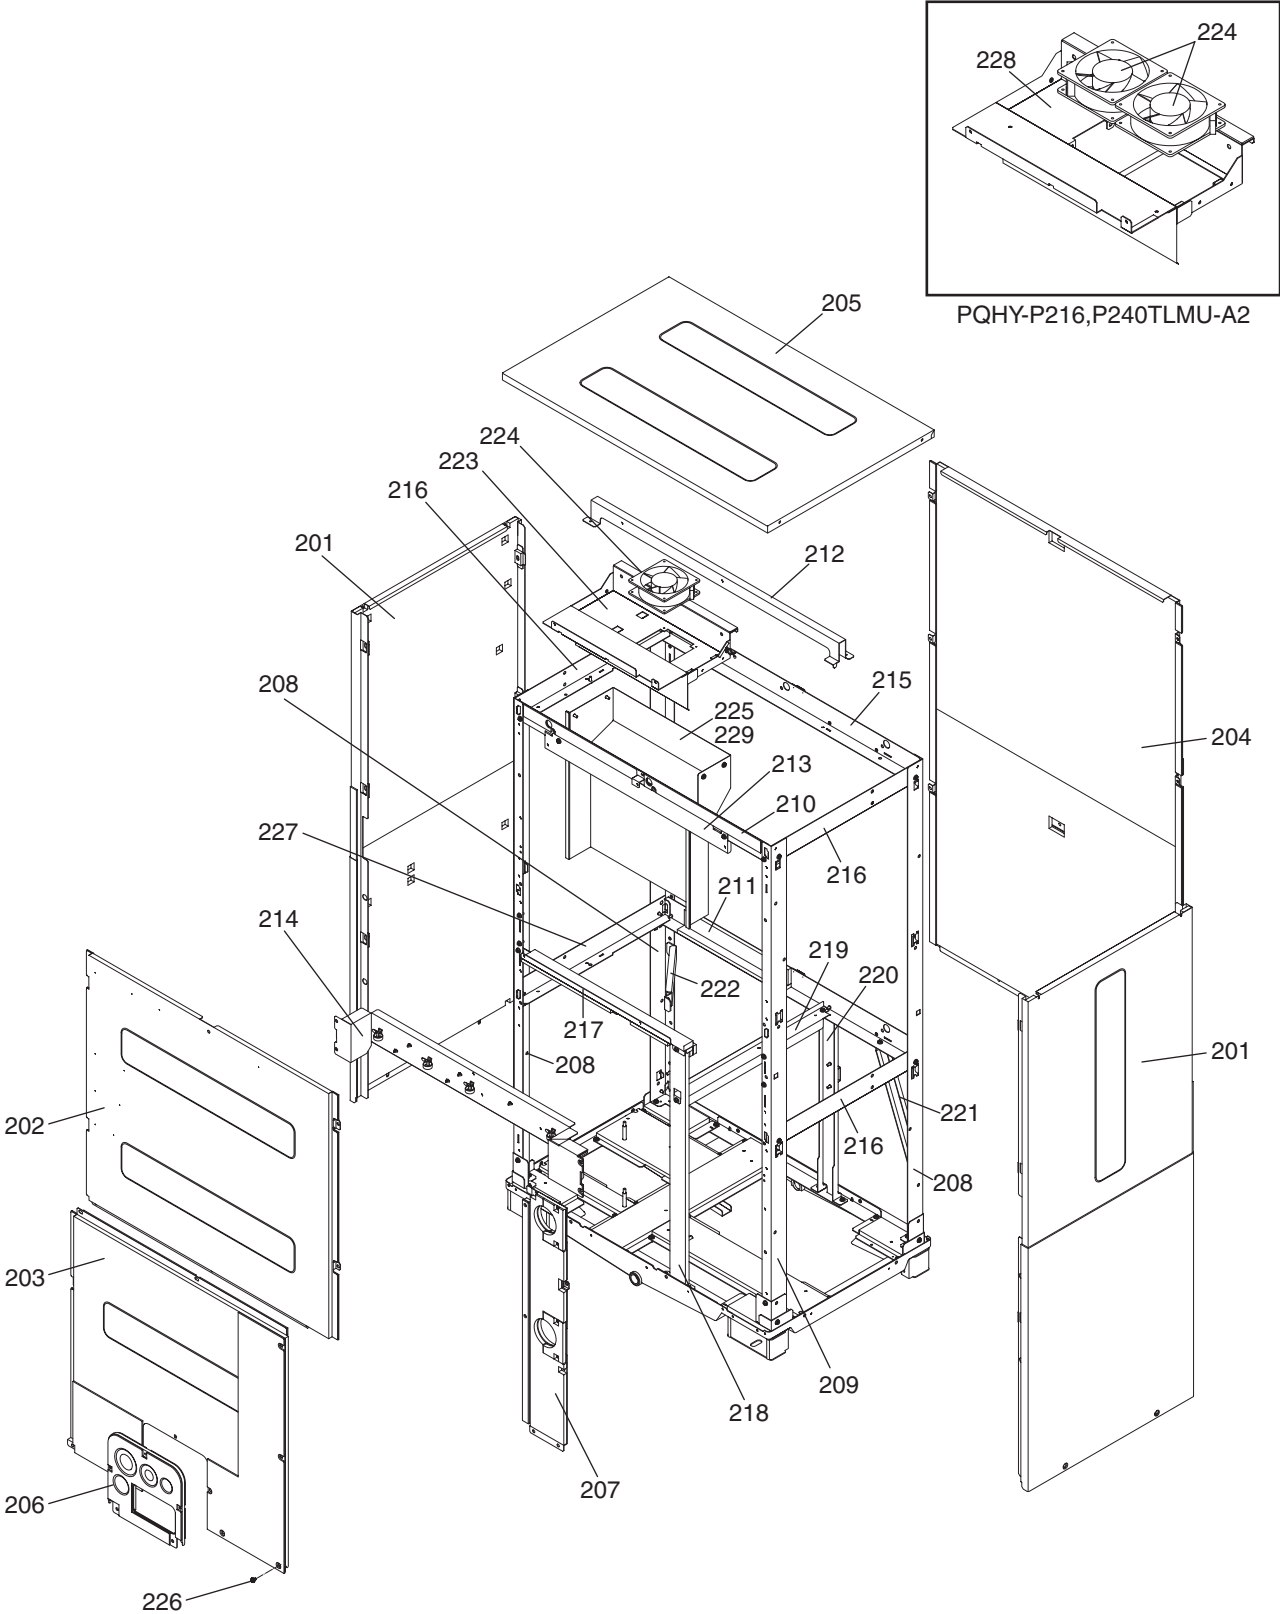


PQHY-P144,P168,P192,P216,P240TLMU-A2
PQHY-P144,P168,P192,P216,P240YLMU-A2

EXTERNAL PARTS (2)


[illegible]

EXTERNAL PARTS (2)

5

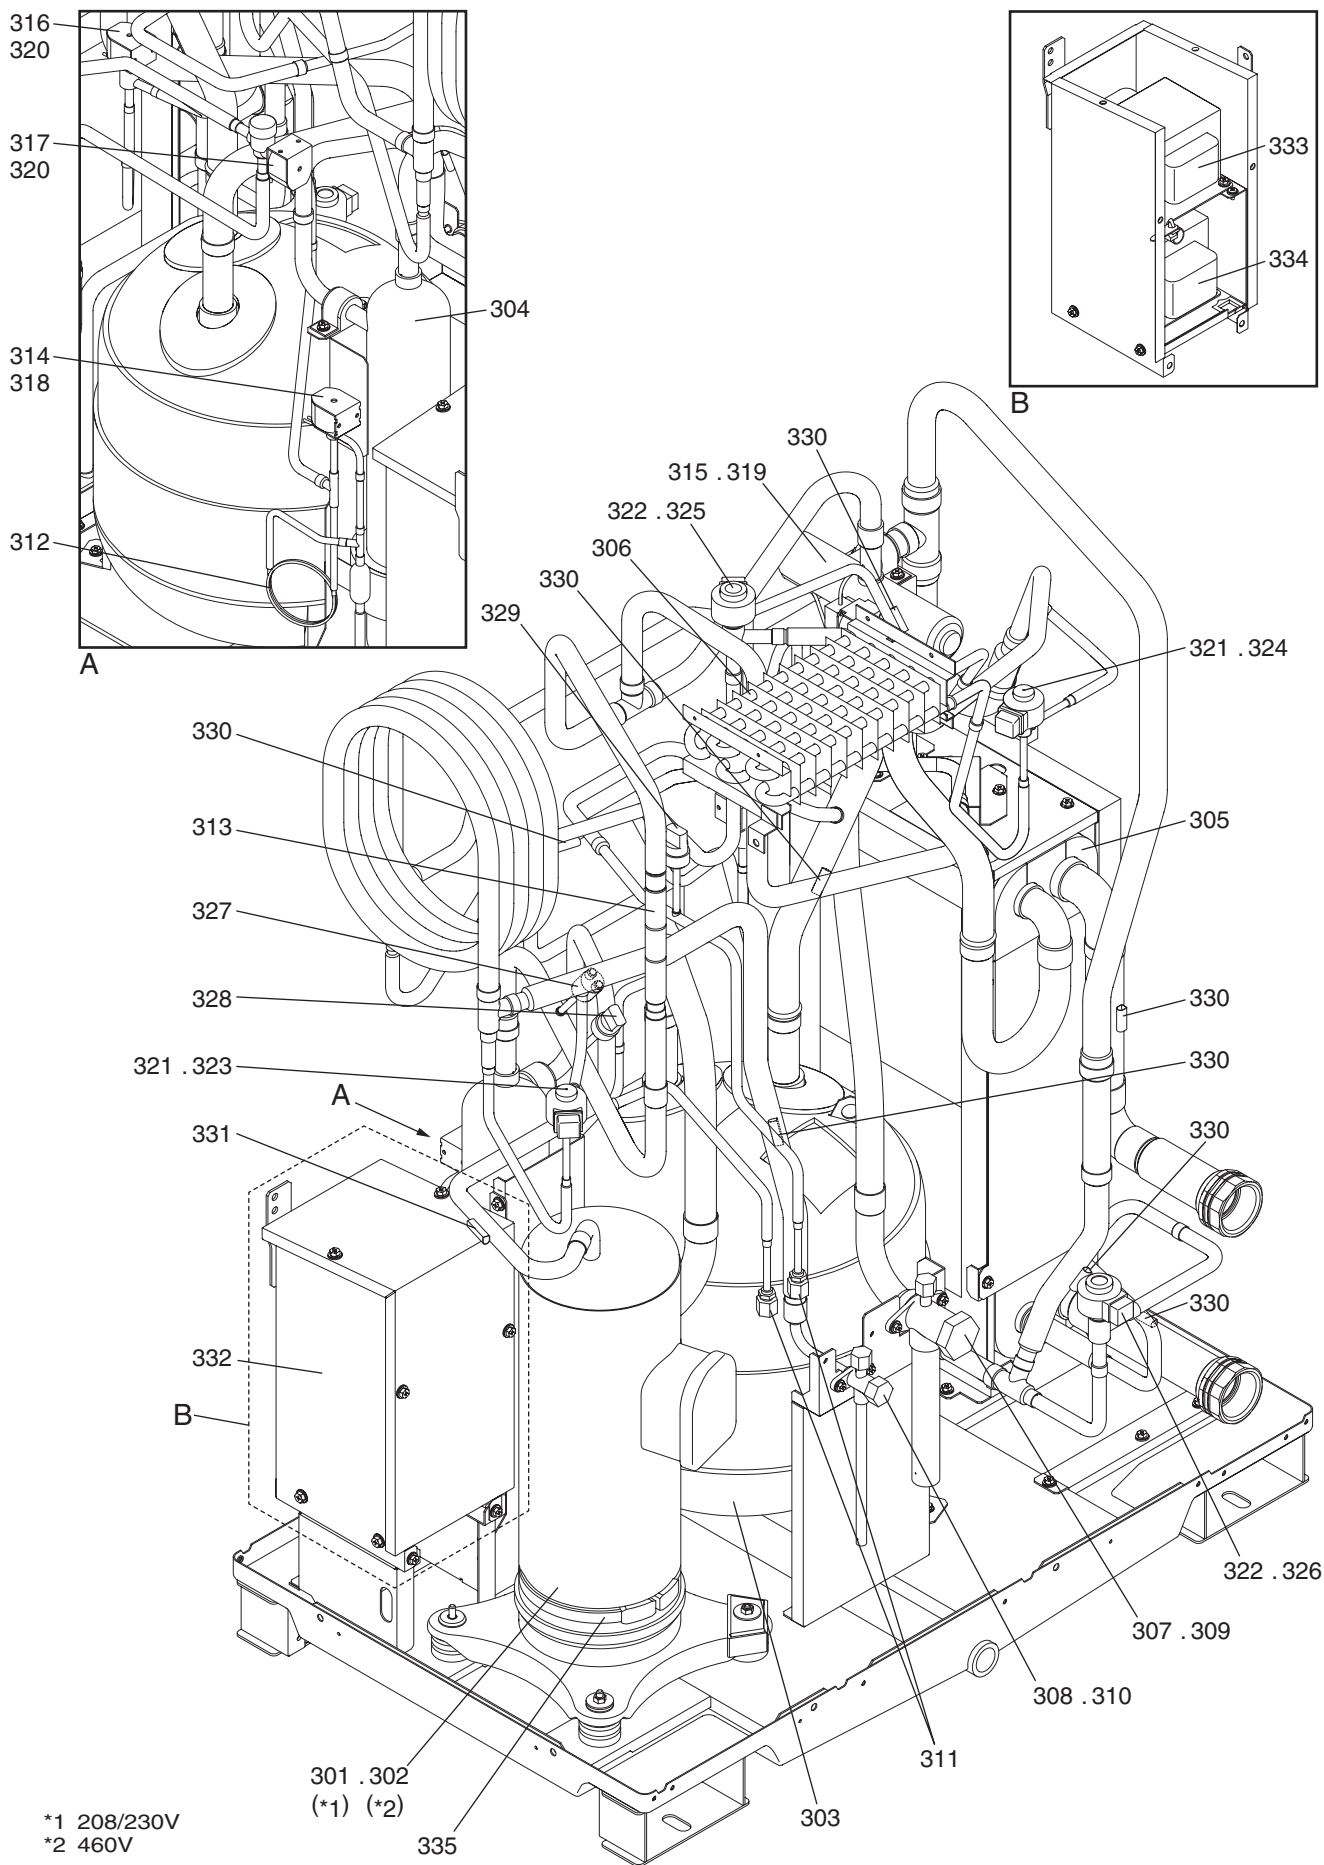

No.	Part No.	Part Name	Spec.	PQHY-P7Z7LMU-A2	PQHY-P86TLMU-A2	PQHY-P120TLMU-A2	PQHY-P72VLMU-A2	PQHY-P86VLMU-A2	PQHY-P120VLMU-A2	Dwg. No.	Notes for the models	Revision info.
301	R69 211 478	Scroll compressor	ENB62FB-U	1	1	1				EP10132B06	*1 208/230V	
302	R69 179 478	Scroll compressor	ENB62FB-YE				1	1	1	EP10132B04	*2 460V	
303	R63 127 484	Accumulator assy		1	1	1	1	1	1	KB00M867G24		
304	R61 069 487	Oil separator assy		1	1	1	1	1	1	KB00C6VZG01		
305	R61 M33 480	Heat exchanger assy	Water-side	1	1	1	1	1	1	KB00M867G40		
306	R61 K80 480	INV heat exchanger assy		1	1	1	1	1	1	KJ00T636G01		
307	R61 025 538	Valve	VSAMH8SSCM-LA1	1	1	1	1	1	1	P636353X01	<BV1>	
308	R61 026 538	Valve	VSAMH3SSCM-A1	1	1	1	1	1	1	P636357X01	<BV2>	
309	R61 022 454	Strainer	25.4D	1	1	1	1	1	1	KJ00P967G01	<ST1>	
310	R63 Y03 454	Strainer	17.6D	1	1	1	1	1	1	W893281G01	<ST2>	
311	R63 S84 413	Check joint		2	2	2	2	2	2	P666002X01	<CJ1,2>	
312	R63 002 425	Capillary tube assy		1	1	1	1	1	1	KB49F229G01	<CP1>	
313	R63 R43 418	Check valve	BCV-1005DYQ82	1	1	1	1	1	1	P639165X01	<CV1>	
314	R63 046 232	Solenoid valve	FDF2A77	1	1	1	1	1	1	P631312X01	<SV1a>	
315	R61 013 403	Four way valve	STF-H0731	1	1	1	1	1	1	P633130X01	<21S4a>	
316	R63 001 921	Solenoid valve	VPV-603DQ3	1	1	1	1	1	1	P631295X01	<SV7a>	
317	R61 040 232	Solenoid valve	VPV-803DQ50	1	1	1	1	1	1	P631300X01	<SV7b>	
318	R61 029 243	Solenoid valve coil	FQ-D808	1	1	1	1	1	1	P472086X01	<SV1a>	
319	R61 040 243	Solenoid valve coil	STF-H01AQ1969UA1	1	1	1	1	1	1	P472095X01	<21S4a>	
320	R61 011 243	Solenoid valve coil	VPV-MOAQ540UA1	2	2	2	2	2	2	P472047X01	<SV7a,7b>	
321	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	2	2	2	2	2	2	P632416X01	<LEV1,INV>	
322	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	2	2	2	2	2	2	KR50C486H01	<LEV6,7>	
323	R63 011 401	Linear expansion valve coil	CAM-MD12MD-123	1	1	1	1	1	1	P472059X02	<LEV1>	
324	R61 024 401	Linear expansion valve coil	CAM-MD12MD-116	1	1	1	1	1	1	P472054X02	<LEVINV>	
325	R61 092 243	Linear expansion valve coil	PAM-MD12MD-3	1	1	1	1	1	1	P472061X02	<LEV6>	
326	R61 140 401	Linear expansion valve coil	PAM-MD12MD-9	1	1	1	1	1	1	P472091X01	<LEV7>	
327	R61 056 208	Pressure switch	ACB-1UB28W	1	1	1	1	1	1	P426320X02	<63H1>	
328	R61 141 288	Pressure sensor	HP D173	1	1	1	1	1	1	KB00M867G10	<63HS1>	
329	R61 142 288	Pressure sensor	LP D173	1	1	1	1	1	1	KB00M867G11	<63LS>	
330	R61 060 200	Thermistor	150-522-96001	7	7	7	7	7	7	P418065X01	<TH2,3,5,6,7,8,INV>	
331	R63 911 202	Thermistor	158-204-97484	1	1	1	1	1	1	P425416X02	<TH4>	
332	R61 069 260	Transformer assy					1	1	1	KB00M867G15		
333	R61 012 260	Transformer	T460/230V 0.8AL				1	1	1	P715467X01	<T02>	
334	R61 013 260	Transformer	T460/230V 0.8AS				1	1	1	P715468X01	<T03>	
335	R61 026 237	Belt heater	SP4680N-02V	1	1	1	1	1	1	P497290X01	<CH11>	

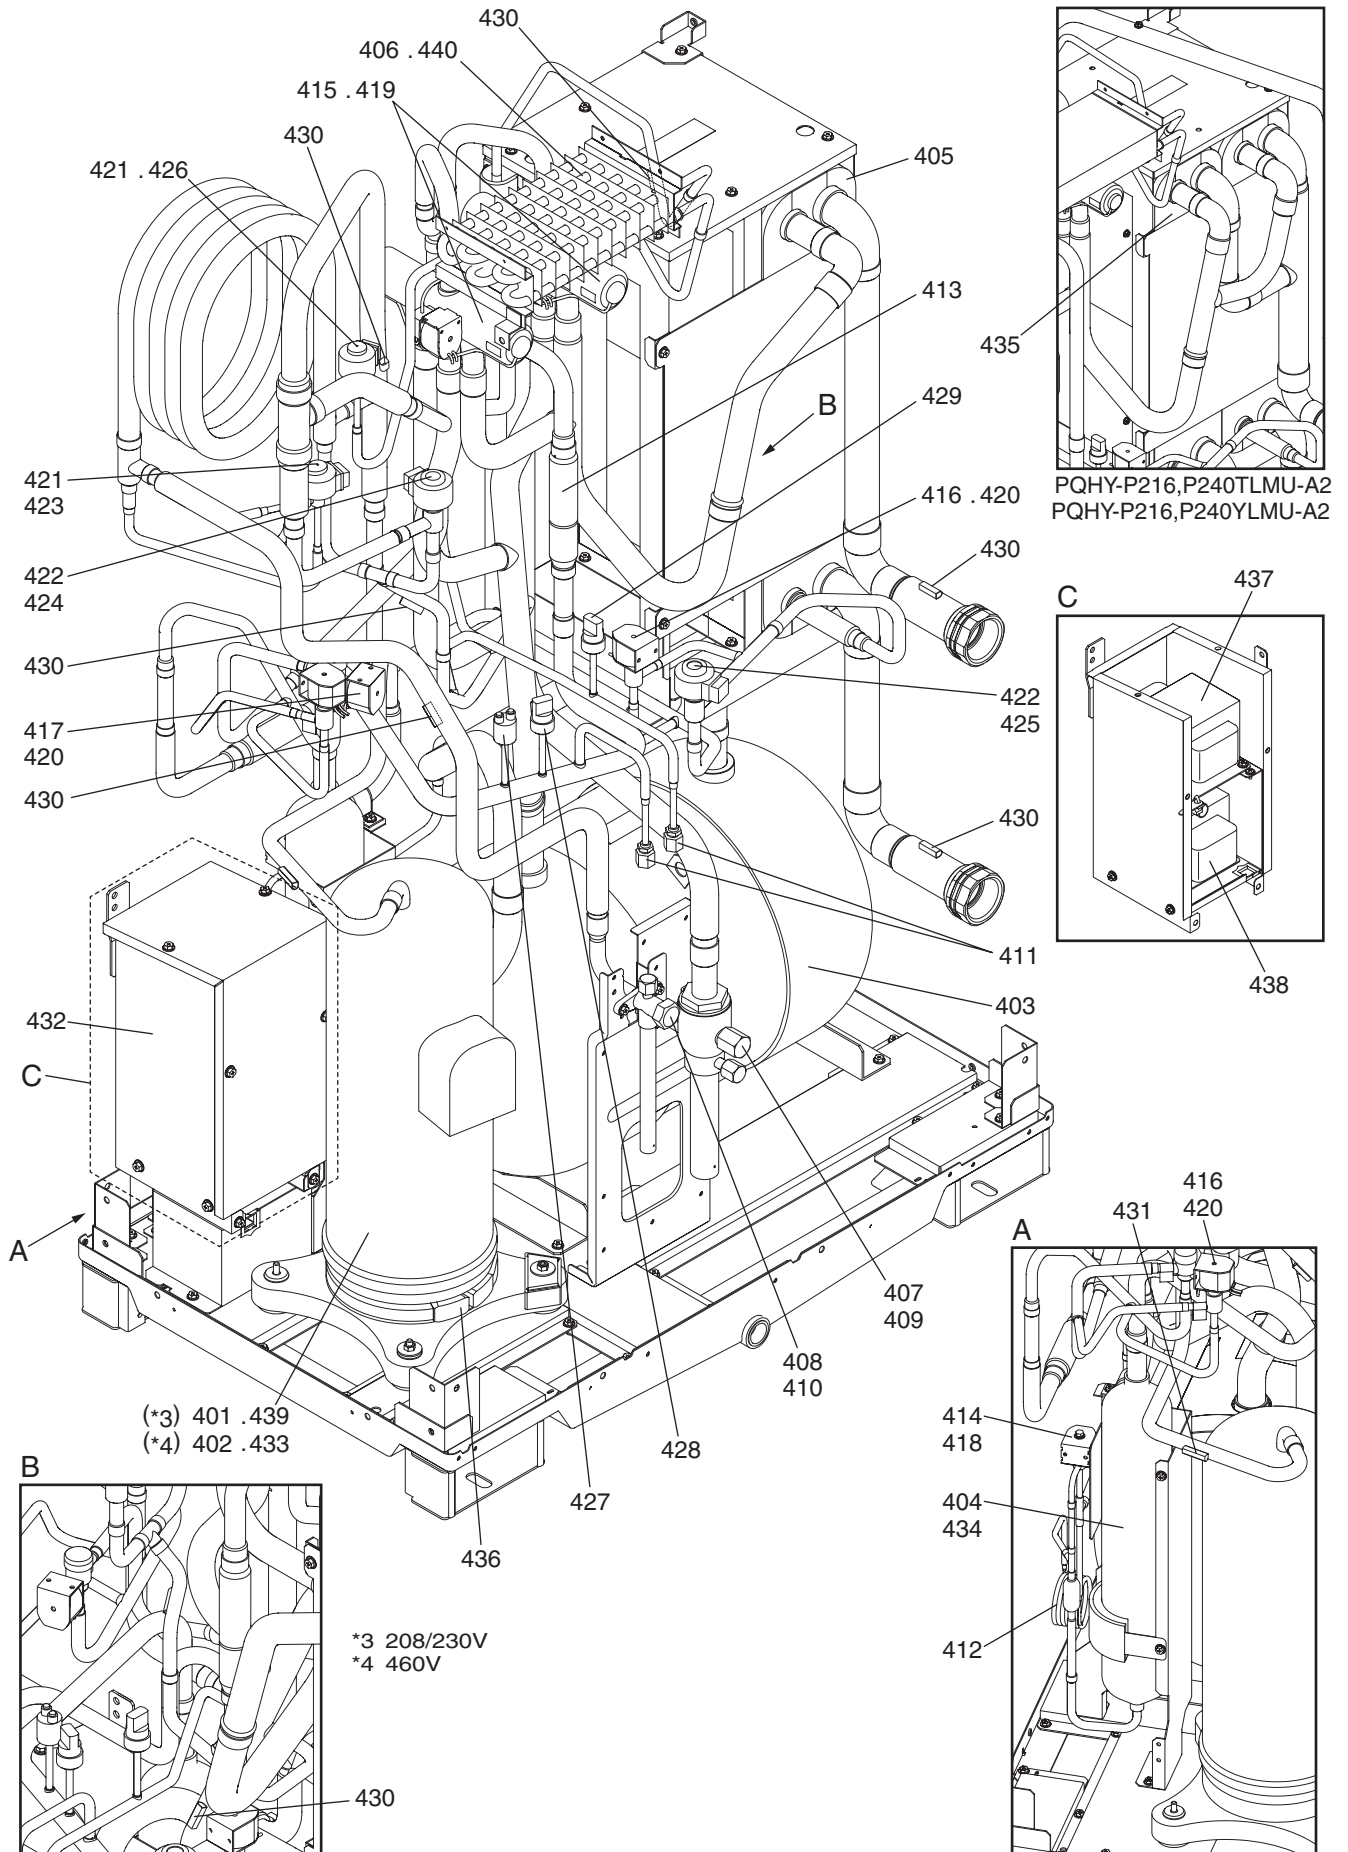


No.	Part No.	Part Name	Spec.	PQHY-P144TLMU-A2	PQHY-P168TLMU-A2	PQHY-P192TLMU-A2	PQHY-P216TLMU-A2	PQHY-P240TLMU-A2	PQHY-P144YLMU-A2	Dwg. No.	Notes for the models	Revision info.
401	R69 125 478	Scroll compressor	HNB84FC-U	1	1	1				EP10126B06	*3 208/230V	
402	R69 177 478	Scroll compressor	HNB84FC-YE						1	EP10126B04	*4 460V	
403	R61 198 484	Accumulator assy		1	1	1	1	1	1	KB00M867G34		
404	R61 070 487	Oil separator assy		1	1	1			1	KB00C6UHG01		
405	R61 M37 480	Heat exchanger assy	Water-side	1	1	1			1	KB00M867G44		
406	R61 K80 480	INV heat exchanger assy		1	1	1			1	KJ00T636G01		
407	R61 032 410	Ball valve	SBV10-002	1	1	1	1	1	1	KJ00S007G01	<BV1>	
408	R63 014 538	Valve	FSV-JA5GME-19	1	1	1	1	1	1	P636362X02	<BV2>	
409	R61 022 454	Strainer	25.4D	1	1	1	1	1	1	KJ00P967G01	<ST1>	
410	R63 Y03 454	Strainer	17.6D	1	1	1	1	1	1	W893281G01	<ST2>	
411	R63 S84 413	Check joint		2	2	2	2	2	2	P666002X01	<CJ1,2>	
412	R61 027 425	Capillary tube assy		1	1	1	1	1	1	KD49U675G01	<CP1>	
413	R61 072 418	Check valve	BCV-1807DYQ2	1	1	1	1	1	1	P639218X02	<CV1>	
414	R63 046 232	Solenoid valve	FDF2A77	1	1	1	1	1	1	P631312X01	<SV1a>	
415	R61 013 403	Four way valve	STF-H0731	2	2	2	2	2	2	P633130X01	<21S4a,b>	
416	R63 001 921	Solenoid valve	VPV-603DQ3	2	2	2	2	2	2	P631295X01	<SV7a,7c>	
417	R61 040 232	Solenoid valve	VPV-803DQ50	1	1	1	1	1	1	P631300X01	<SV7b>	
418	R61 029 243	Solenoid valve coil	FQ-D808	1	1	1	1	1	1	P472086X01	<SV1a>	
419	R61 040 243	Solenoid valve coil	STF-H01AQ1969UA1	2	2	2	2	2	2	P472095X01	<21S4a,b>	
420	R61 011 243	Solenoid valve coil	VPV-MOAQ540UA1	3	3	3	3	3	3	P472047X01	<SV7a,7b,7c>	
421	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	2	2	2	2	2	2	P632416X01	<LEV1,INV>	
422	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	2	2	2	2	2	2	KR50C486H01	<LEV6,7>	
423	R63 011 401	Linear expansion valve coil	CAM-MD12MD-123	1	1	1	1	1	1	P472059X02	<LEV1>	
424	R61 092 243	Linear expansion valve coil	PAM-MD12MD-3	1	1	1	1	1	1	P472061X02	<LEV6>	
425	R61 140 401	Linear expansion valve coil	PAM-MD12MD-9	1	1	1	1	1	1	P472091X01	<LEV7>	
426	R61 094 401	Linear expansion valve coil	CAM-MD12MD-124	1	1	1	1	1	1	P472097X01	<LEVINV>	
427	R61 056 208	Pressure switch	ACB-1UB28W	1	1	1	1	1	1	P426320X02	<63H1>	
428	R61 143 288	Pressure sensor	HP D173	1	1	1	1	1	1	KB00M867G13	<63HS1>	
429	R61 144 288	Pressure sensor	LP D173	1	1	1	1	1	1	KB00M867G14	<63LS>	
430	R61 060 200	Thermistor	150-522-96001	7	7	7	7	7	7	P418065X01	<TH2,3,5,6,7,8,INV>	
431	R63 911 202	Thermistor	158-204-97484	1	1	1	1	1	1	P425416X02	<TH4>	
432	R61 069 260	Transformer assy							1	KB00M867G15		
433	R69 204 478	Scroll compressor	HNB97FA-YE							EP10148B01	*4 460V	
434	R61 071 487	Oil separator assy					1	1		KB00C6UHG02		
435	R61 M39 480	Heat exchanger assy	Water-side				1	1		KB00M867G46		
436	R63 Y07 237	Belt heater	SP4689F-04V	1	1	1	1	1	1	P493781X02	<CH11>	
437	R61 012 260	Transformer	T460/230V 0.8AL						1	P715467X01	<T02>	
438	R61 013 260	Transformer	T460/230V 0.8AS						1	P715468X01	<T03>	
439	R69 217 478	Scroll compressor	HNB97FA-U				1	1		EP10148B02	*3 208/230V	
440	R61 L45 480	INV heat exchanger assy					1	1		KS00C309G01		

No.	Part No.	Part Name	Spec.	PQHY-P168YLMU-A2	PQHY-P192YLMU-A2	PQHY-P216YLMU-A2	PQHY-P240YLMU-A2		Dwg. No.	Notes for the models	Revision info.
401	R69 125 478	Scroll compressor	HNB84FC-U						EP10126B06	*3 208/230V	
402	R69 177 478	Scroll compressor	HNB84FC-YE	1	1				EP10126B04	*4 460V	
403	R61 198 484	Accumulator assy		1	1	1	1		KB00M867G34		
404	R61 070 487	Oil separator assy		1	1				KB00C6UHG01		
405	R61 M37 480	Heat exchanger assy	Water-side	1	1				KB00M867G44		
406	R61 K80 480	INV heat exchanger assy		1	1	1	1		KJ00T636G01		
407	R61 032 410	Ball valve	SBV10-002	1	1	1	1		KJ00S007G01	<BV1>	
408	R63 014 538	Valve	FSV-JA5GME-19	1	1	1	1		P636362X02	<BV2>	
409	R61 022 454	Strainer	25.4D	1	1	1	1		KJ00P967G01	<ST1>	
410	R63 Y03 454	Strainer	17.6D	1	1	1	1		W893281G01	<ST2>	
411	R63 S84 413	Check joint		2	2	2	2		P666002X01	<CJ1,2>	
412	R61 027 425	Capillary tube assy		1	1	1	1		KD49U675G01	<CP1>	
413	R61 072 418	Check valve	BCV-1807DYQ2	1	1	1	1		P639218X02	<CV1>	
414	R63 046 232	Solenoid valve	FDF2A77	1	1	1	1		P631312X01	<SV1a>	
415	R61 013 403	Four way valve	STF-H0731	2	2	2	2		P633130X01	<21S4a,b>	
416	R63 001 921	Solenoid valve	VPV-603DQ3	2	2	2	2		P631295X01	<SV7a,7c>	
417	R61 040 232	Solenoid valve	VPV-803DQ50	1	1	1	1		P631300X01	<SV7b>	
418	R61 029 243	Solenoid valve coil	FQ-D808	1	1	1	1		P472086X01	<SV1a>	
419	R61 040 243	Solenoid valve coil	STF-H01AQ1969UA1	2	2	2	2		P472095X01	<21S4a,b>	
420	R61 011 243	Solenoid valve coil	VPV-MOAQ540UA1	3	3	3	3		P472047X01	<SV7a,7b,7c>	
421	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	2	2	2	2		P632416X01	<LEV1,INV>	
422	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	2	2	2	2		KR50C486H01	<LEV6,7>	
423	R63 011 401	Linear expansion valve coil	CAM-MD12MD-123	1	1	1	1		P472059X02	<LEV1>	
424	R61 092 243	Linear expansion valve coil	PAM-MD12MD-3	1	1	1	1		P472061X02	<LEV6>	
425	R61 140 401	Linear expansion valve coil	PAM-MD12MD-9	1	1	1	1		P472091X01	<LEV7>	
426	R61 094 401	Linear expansion valve coil	CAM-MD12MD-124	1	1	1	1		P472097X01	<LEVINV>	
427	R61 056 208	Pressure switch	ACB-1UB28W	1	1	1	1		P426320X02	<63H1>	
428	R61 143 288	Pressure sensor	HP D173	1	1	1	1		KB00M867G13	<63HS1>	
429	R61 144 288	Pressure sensor	LP D173	1	1	1	1		KB00M867G14	<63LS>	
430	R61 060 200	Thermistor	150-522-96001	7	7	7	7		P418065X01	<TH2,3,5,6,7,8,INV>	
431	R63 911 202	Thermistor	158-204-97484	1	1	1	1		P425416X02	<TH4>	
432	R61 069 260	Transformer assy		1	1	1	1		KB00M867G15		
433	R69 204 478	Scroll compressor	HNB97FA-YE			1	1		EP10148B01	*4 460V	
434	R61 071 487	Oil separator assy				1	1		KB00C6UHG02		
435	R61 M39 480	Heat exchanger assy	Water-side			1	1		KB00M867G46		
436	R63 Y07 237	Belt heater	SP4689F-04V	1	1	1	1		P493781X02	<CH11>	
437	R61 012 260	Transformer	T460/230V 0.8AL	1	1	1	1		P715467X01	<T02>	
438	R61 013 260	Transformer	T460/230V 0.8AS	1	1	1	1		P715468X01	<T03>	
439	R69 217 478	Scroll compressor	HNB97FA-U						EP10148B02	*3 208/230V	
440	R61 L45 480	INV heat exchanger assy							KS00C309G01		

PQHY-P72TLMU-A2
PQHY-P96TLMU-A2
PQHY-P120TLMU-A2

CONTROL BOX PARTS (1)

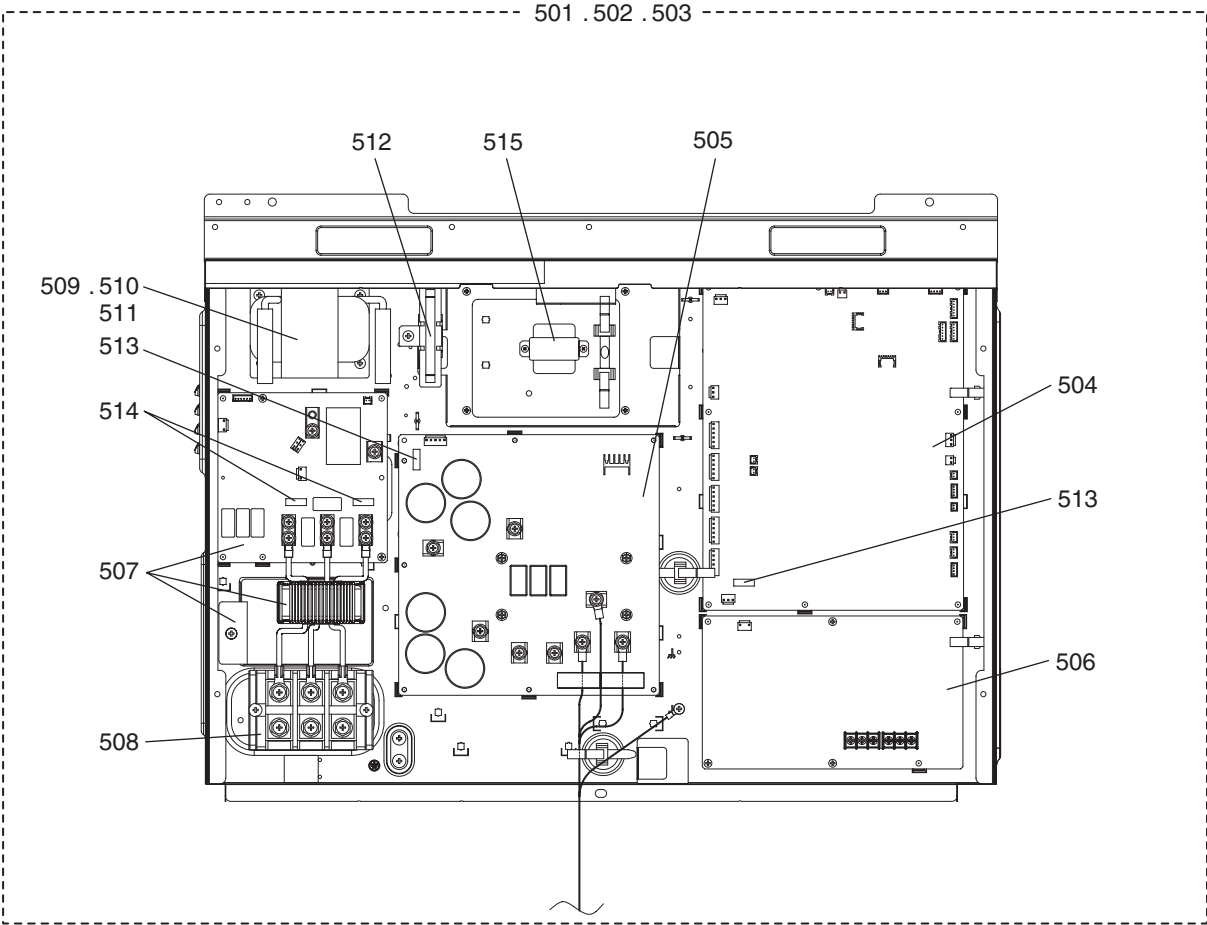


PQHY-P72TLMU-A2
PQHY-P96TLMU-A2
PQHY-P120TLMU-A2

CONTROL BOX PARTS (1)

[illegible]


PQHY-P144TLMU-A2
PQHY-P168TLMU-A2
PQHY-P192TLMU-A2

CONTROL BOX PARTS (2)

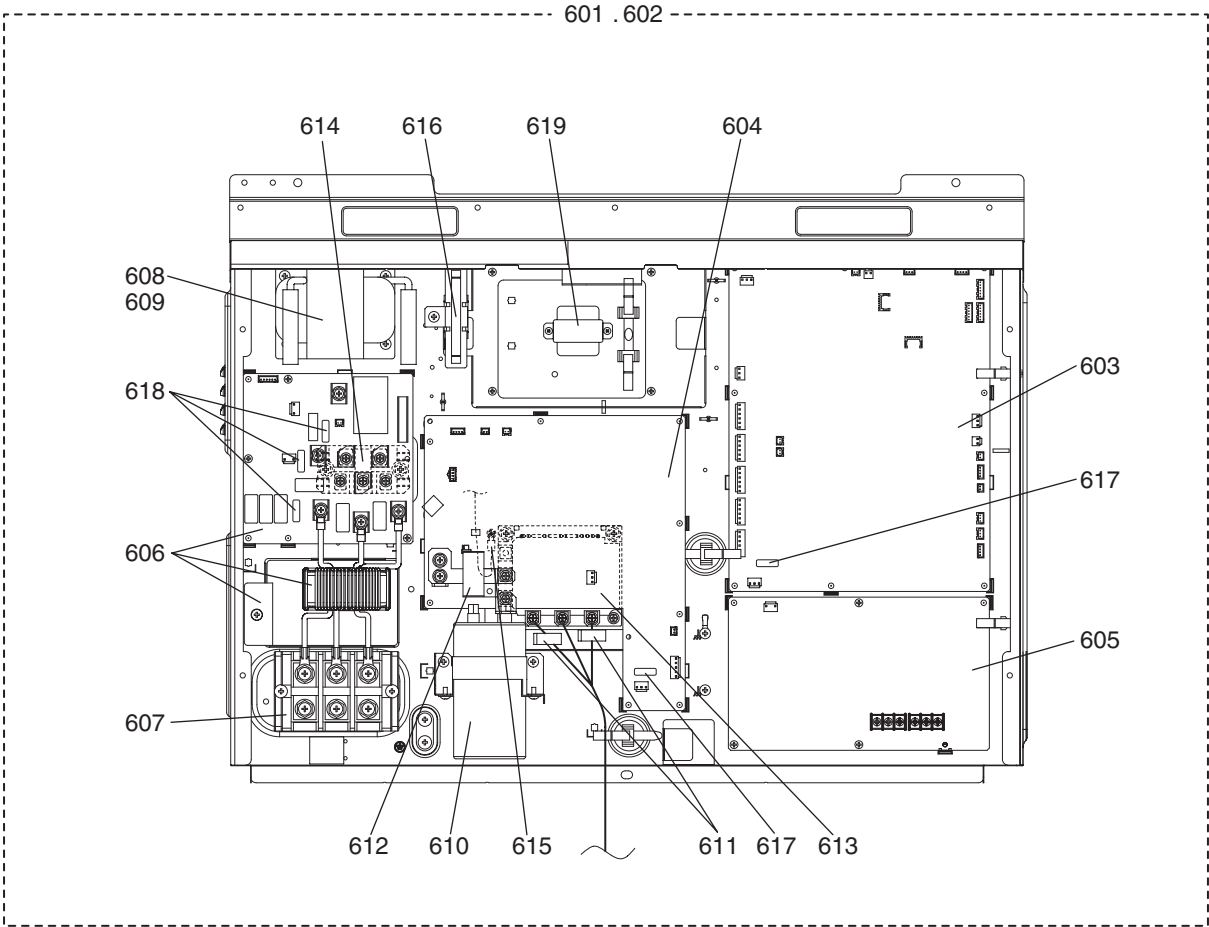


CONTROL BOX PARTS (2)

[illegible]

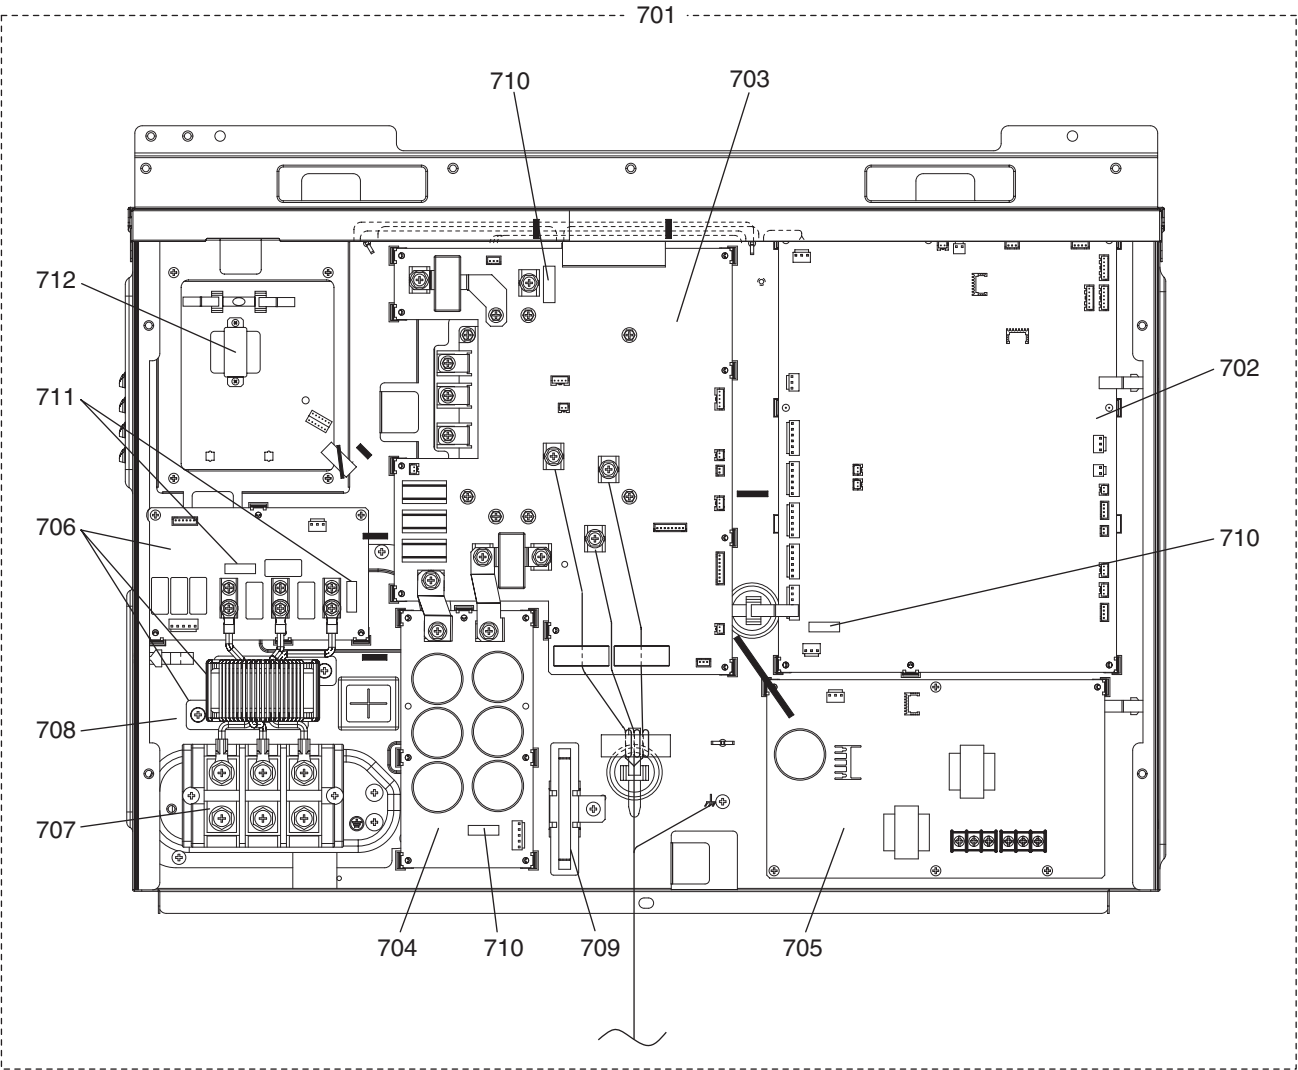

[illegible]

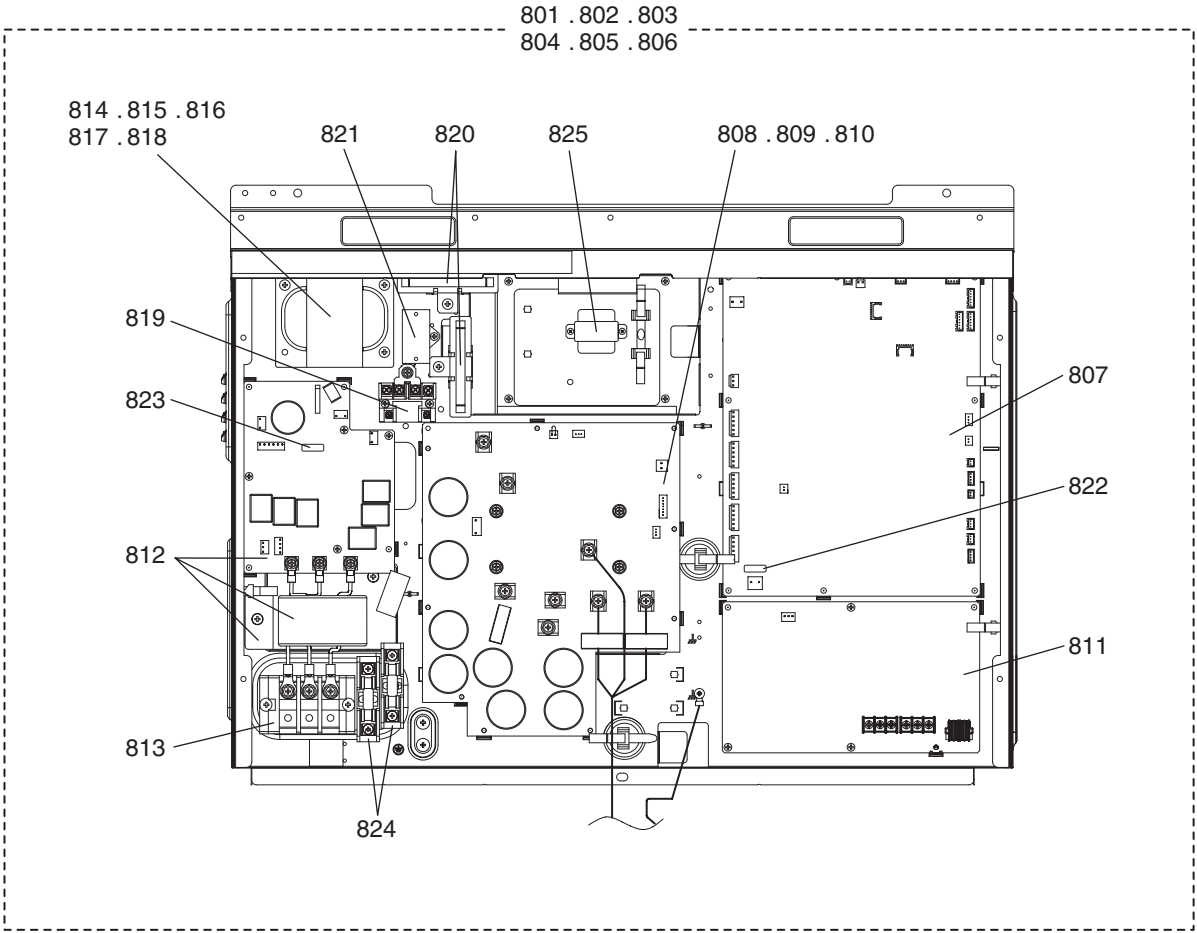

CONTROL BOX PARTS (4)


18

CONTROL BOX PARTS (4)

19

PQHY-P72,P96,P120,P144,P168,P192,P216,P240TLMU-A2
PQHY-P72,P96,P120,P144,P168,P192,P216,P240YLMU-A2

I/O BOX PARTS

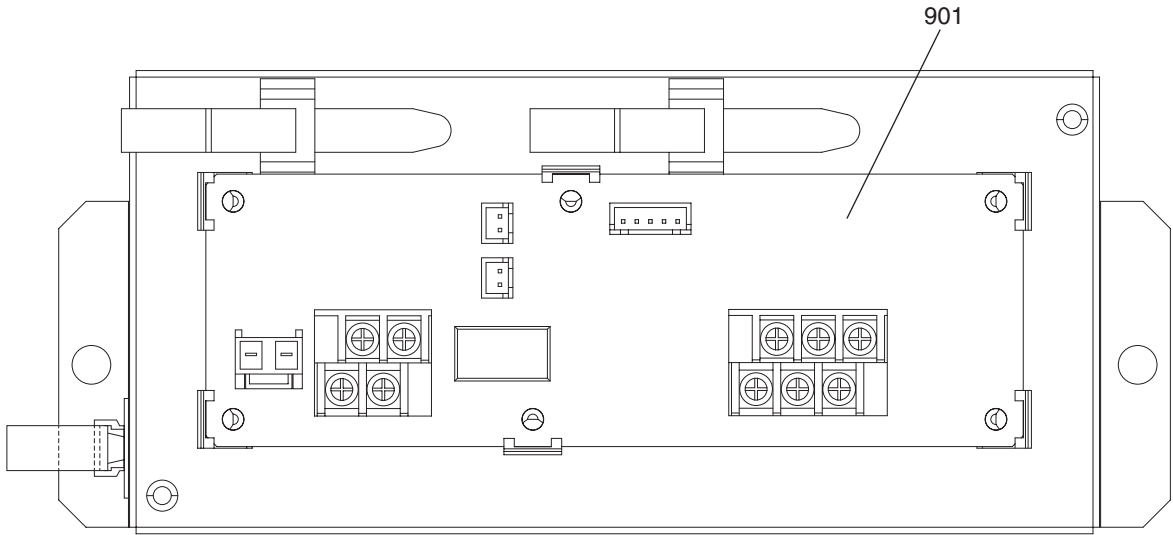

PQHY-P72,P96,P120,P144,P168,P192,P216,P240TLMU-A2
PQHY-P72,P96,P120,P144,P168,P192,P216,P240YLMU-A2

I/O BOX PARTS

[illegible]

PQHY-P72,P96,P120,P144,P168,P192,P216,P240TLMU-A2
PQHY-P72,P96,P120,P144,P168,P192,P216,P240YLMU-A2

I/O BOX PARTS

[illegible]

PQHY-P72,P96,P120,P144,P168,P192,P216,P240TLMU-A2
PQHY-P72,P96,P120,P144,P168,P192,P216,P240YLMU-A2

I/O BOX PARTS

[illegible]

mitsubishi **ELECTRIC CORPORATION**

BWE023470 (20240331)