

SERVICE PARTS LIST FOR MITSUBISHI ELECTRIC PACKAGED AIR-CONDITIONERS

Series : PUHY-EM·T(S)XU-A
PUHY-EM·Y(S)XU-A
PUHY-HM·T(S)XU-A
PUHY-HM·Y(S)XU-A

REVISED

May 2026

BWE02535A

For use with the R32

INDEX

PUHY-EM72TXU-A
PUHY-EM96TXU-A
PUHY-EM120TXU-A
PUHY-EM144TXU-A
PUHY-EM168TXU-A
PUHY-EM192TXU-A
PUHY-EM72YXU-A
PUHY-EM96YXU-A
PUHY-EM120YXU-A
PUHY-EM144YXU-A
PUHY-EM168YXU-A
PUHY-EM192YXU-A
PUHY-HM72TXU-A
PUHY-HM96TXU-A
PUHY-HM120TXU-A
PUHY-HM72YXU-A
PUHY-HM96YXU-A
PUHY-HM120YXU-A


Part information update day : **2026-04-27**

Please change the old catalog (issued Oct. 2025, No.BWE025350) to this new catalog.
Content of revision : Some of parts are changed.



The Package name list

- PUHY-EM264TSXU-A** [PUHY-EM120TXU-A+PUHY-EM144TXU-A]
- PUHY-EM288TSXU-A** [PUHY-EM144TXU-A+PUHY-EM144TXU-A]
- PUHY-EM312TSXU-A** [PUHY-EM144TXU-A+PUHY-EM168TXU-A]
- PUHY-EM336TSXU-A** [PUHY-EM168TXU-A+PUHY-EM168TXU-A]
- PUHY-EM360TSXU-A** [PUHY-EM168TXU-A+PUHY-EM192TXU-A]
- PUHY-EM384TSXU-A** [PUHY-EM192TXU-A+PUHY-EM192TXU-A]
- PUHY-EM264YSXU-A** [PUHY-EM120YXU-A+PUHY-EM144YXU-A]
- PUHY-EM288YSXU-A** [PUHY-EM144YXU-A+PUHY-EM144YXU-A]
- PUHY-EM312YSXU-A** [PUHY-EM144YXU-A+PUHY-EM168YXU-A]
- PUHY-EM336YSXU-A** [PUHY-EM168YXU-A+PUHY-EM168YXU-A]
- PUHY-EM360YSXU-A** [PUHY-EM168YXU-A+PUHY-EM192YXU-A]
- PUHY-EM384YSXU-A** [PUHY-EM192YXU-A+PUHY-EM192YXU-A]
- PUHY-HM144TSXU-A** [PUHY-HM72TXU-A+PUHY-HM72TXU-A]
- PUHY-HM192TSXU-A** [PUHY-HM96TXU-A+PUHY-HM96TXU-A]
- PUHY-HM240TSXU-A** [PUHY-HM120TXU-A+PUHY-HM120TXU-A]
- PUHY-HM144YSXU-A** [PUHY-HM72YXU-A+PUHY-HM72YXU-A]
- PUHY-HM192YSXU-A** [PUHY-HM96YXU-A+PUHY-HM96YXU-A]
- PUHY-HM240YSXU-A** [PUHY-HM120YXU-A+PUHY-HM120YXU-A]

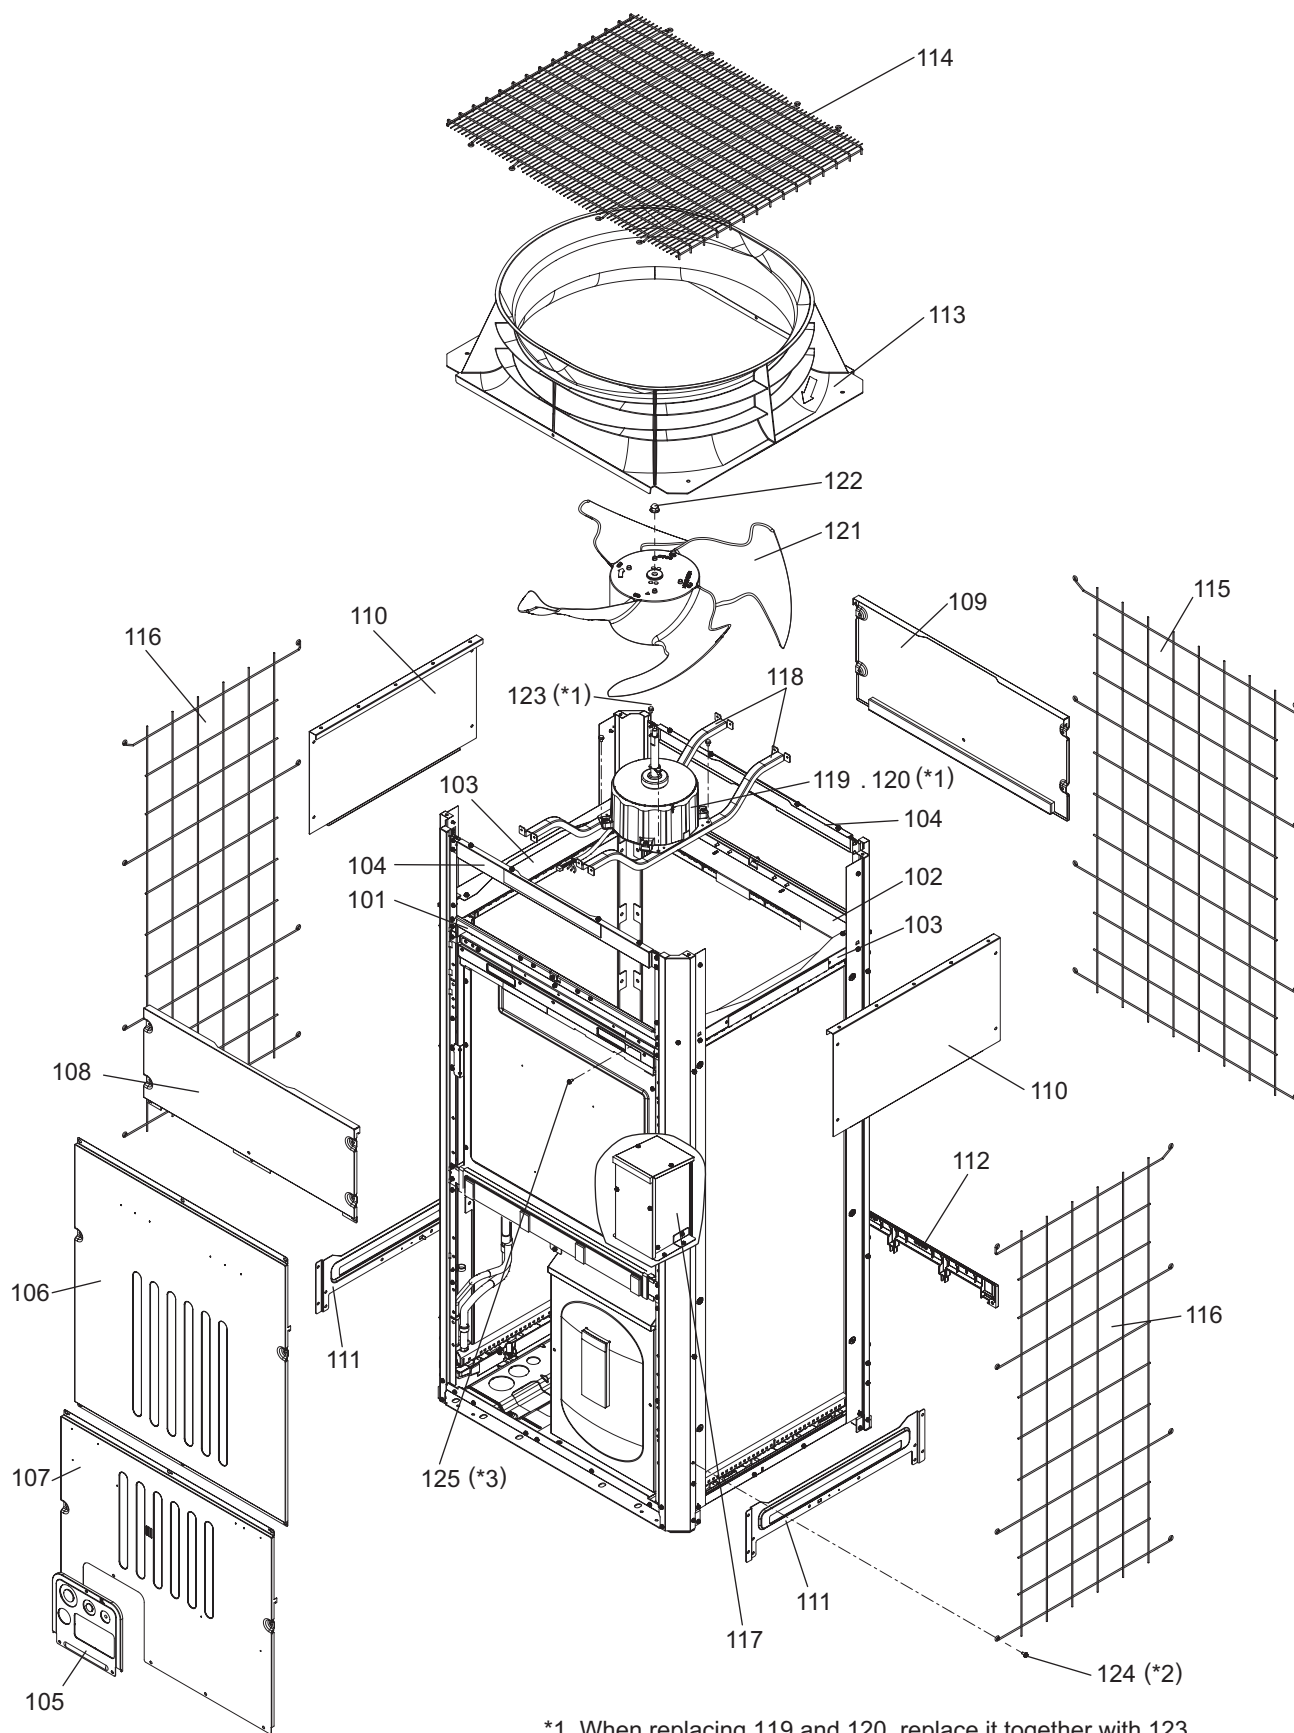

*1 When replacing 119 and 120, replace it together with 123.

*2 PUHY-EM72,EM96,EM120TXU-A...60 WFT Screws (part No.124)

PUHY-EM72,EM96,EM120YXU-A...60 WFT Screws (part No.124)

PUHY-HM72TXU-A,HM72YXU-A...36 WFT Screws (part No.124)

*3 PUHY-EM72,EM96,EM120,HM72TXU-A...136 H Screws (part No.125)


PUHY-EM72,EM96,EM120,HM72YXU-A...140 H Screws (part No.125)

EXTERNAL PARTS & BLOWER PARTS (1-1)

2

EXTERNAL PARTS & BLOWER PARTS (1-1)

3

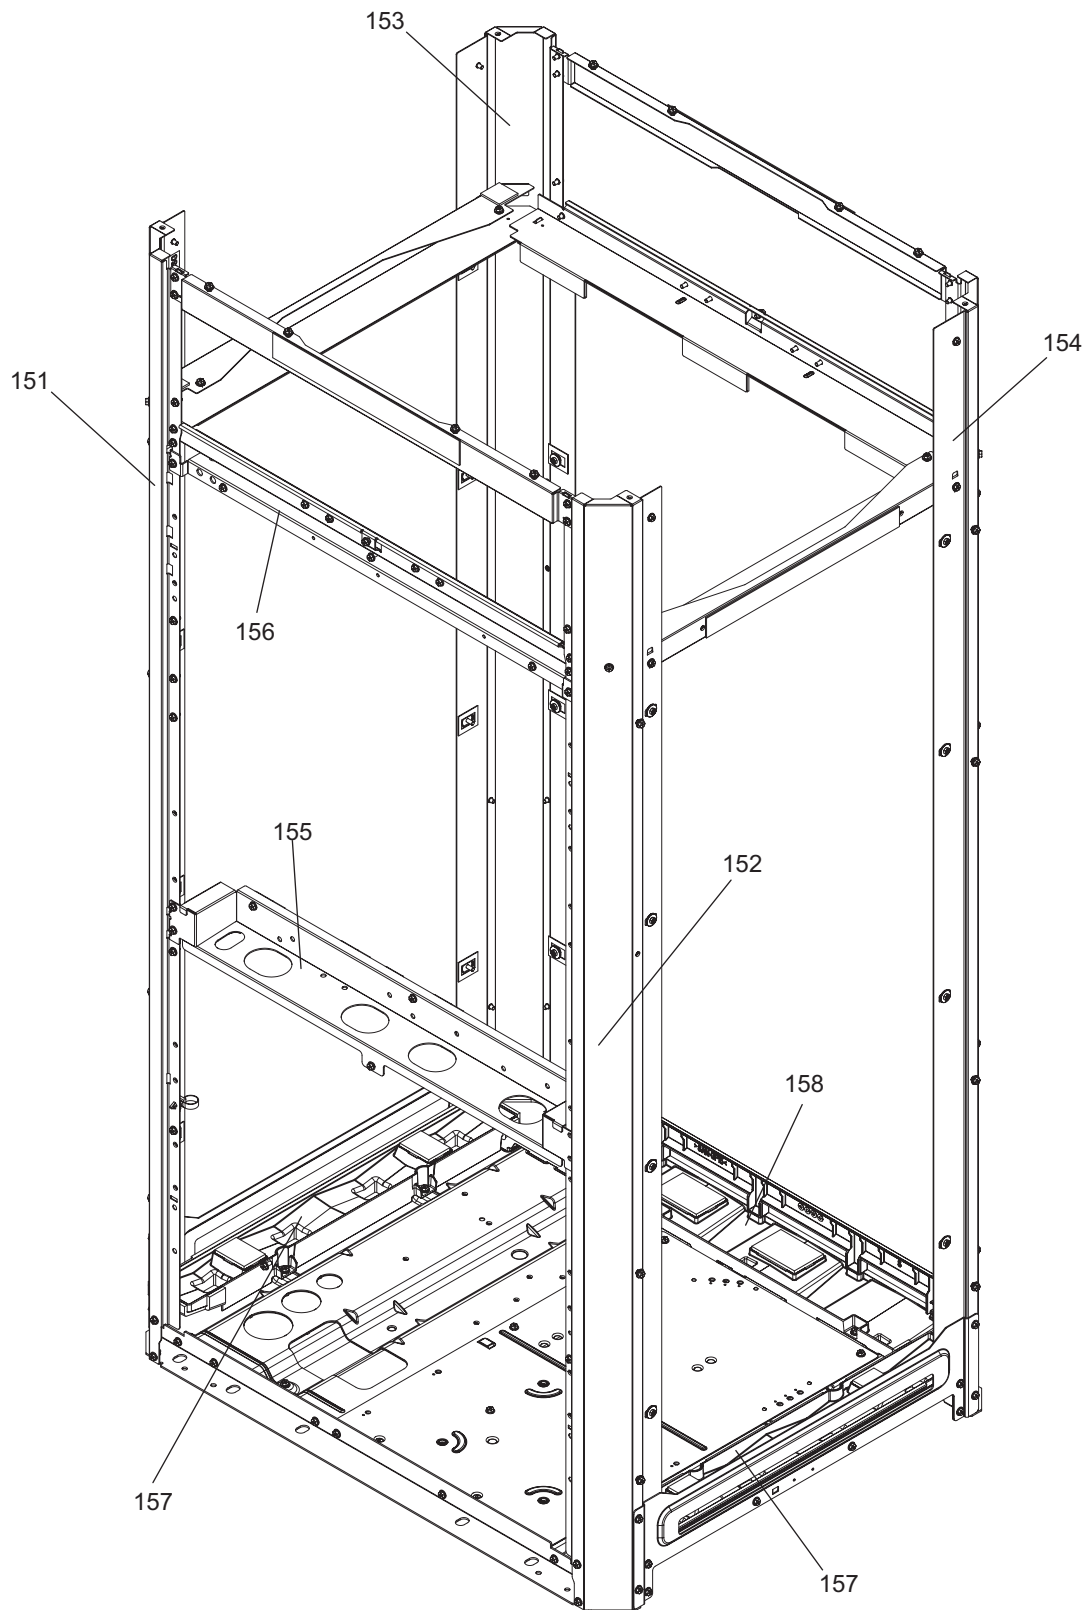


EXTERNAL PARTS & BLOWER PARTS (1-2)

5

EXTERNAL PARTS & BLOWER PARTS (1-2)

6

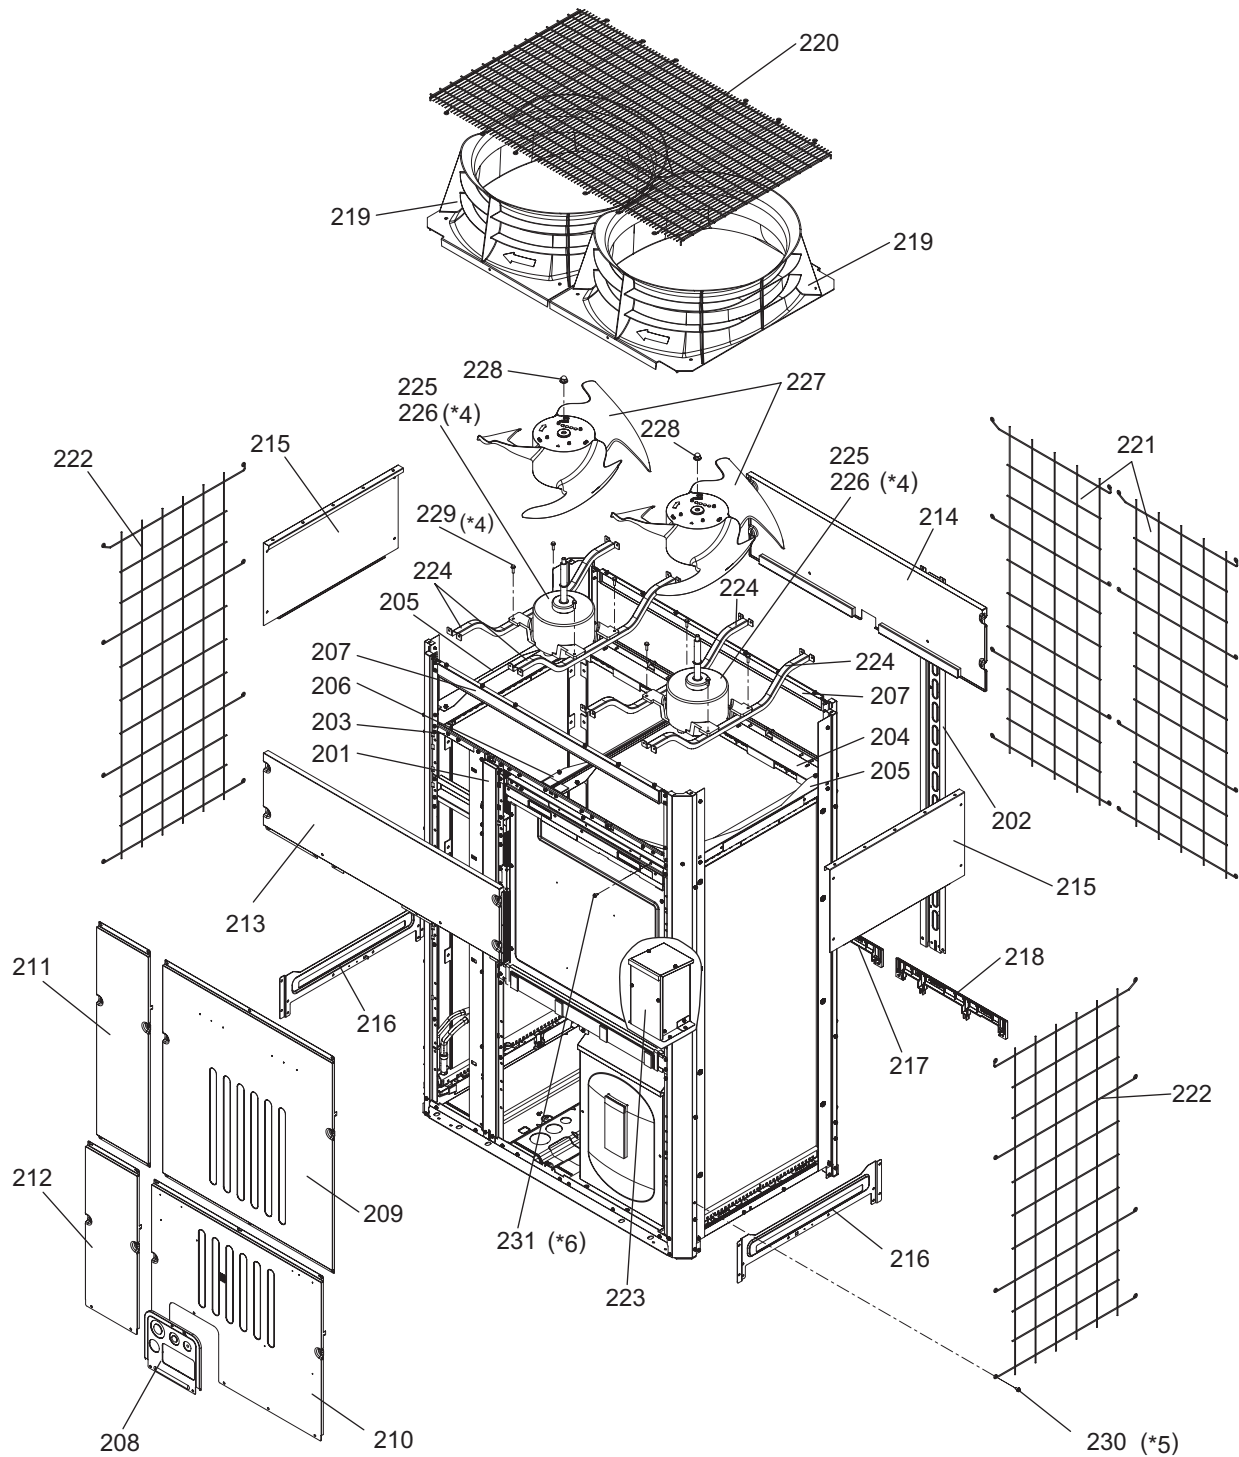

*4 When replacing 225 and 226, replace it together with 229

*5 PUHY-EM144,EM168,EM192TXU-A...81 WFT Screws (part No.230)

PUHY-EM144,EM168,EM192YXU-A...81 WFT Screws (part No.230)

PUHY-HM96,HM120TXU-A...49 WFT Screws (part No.230)

PUHY-HM96,HM120YXU-A...49 WFT Screws (part No.230)

*6 PUHY-EM144,EM168,EM192TXU-A...174 H Screws (part No.231)

PUHY-EM144,EM168,EM192YXU-A...178 H Screws (part No.231)


PUHY-HM96,HM120TXU-A...174 H Screws (part No.231)

PUHY-HM96,HM120YXU-A...178 H Screws (part No.231)

EXTERNAL PARTS & BLOWER PARTS (2-1)

8

EXTERNAL PARTS & BLOWER PARTS (2-1)

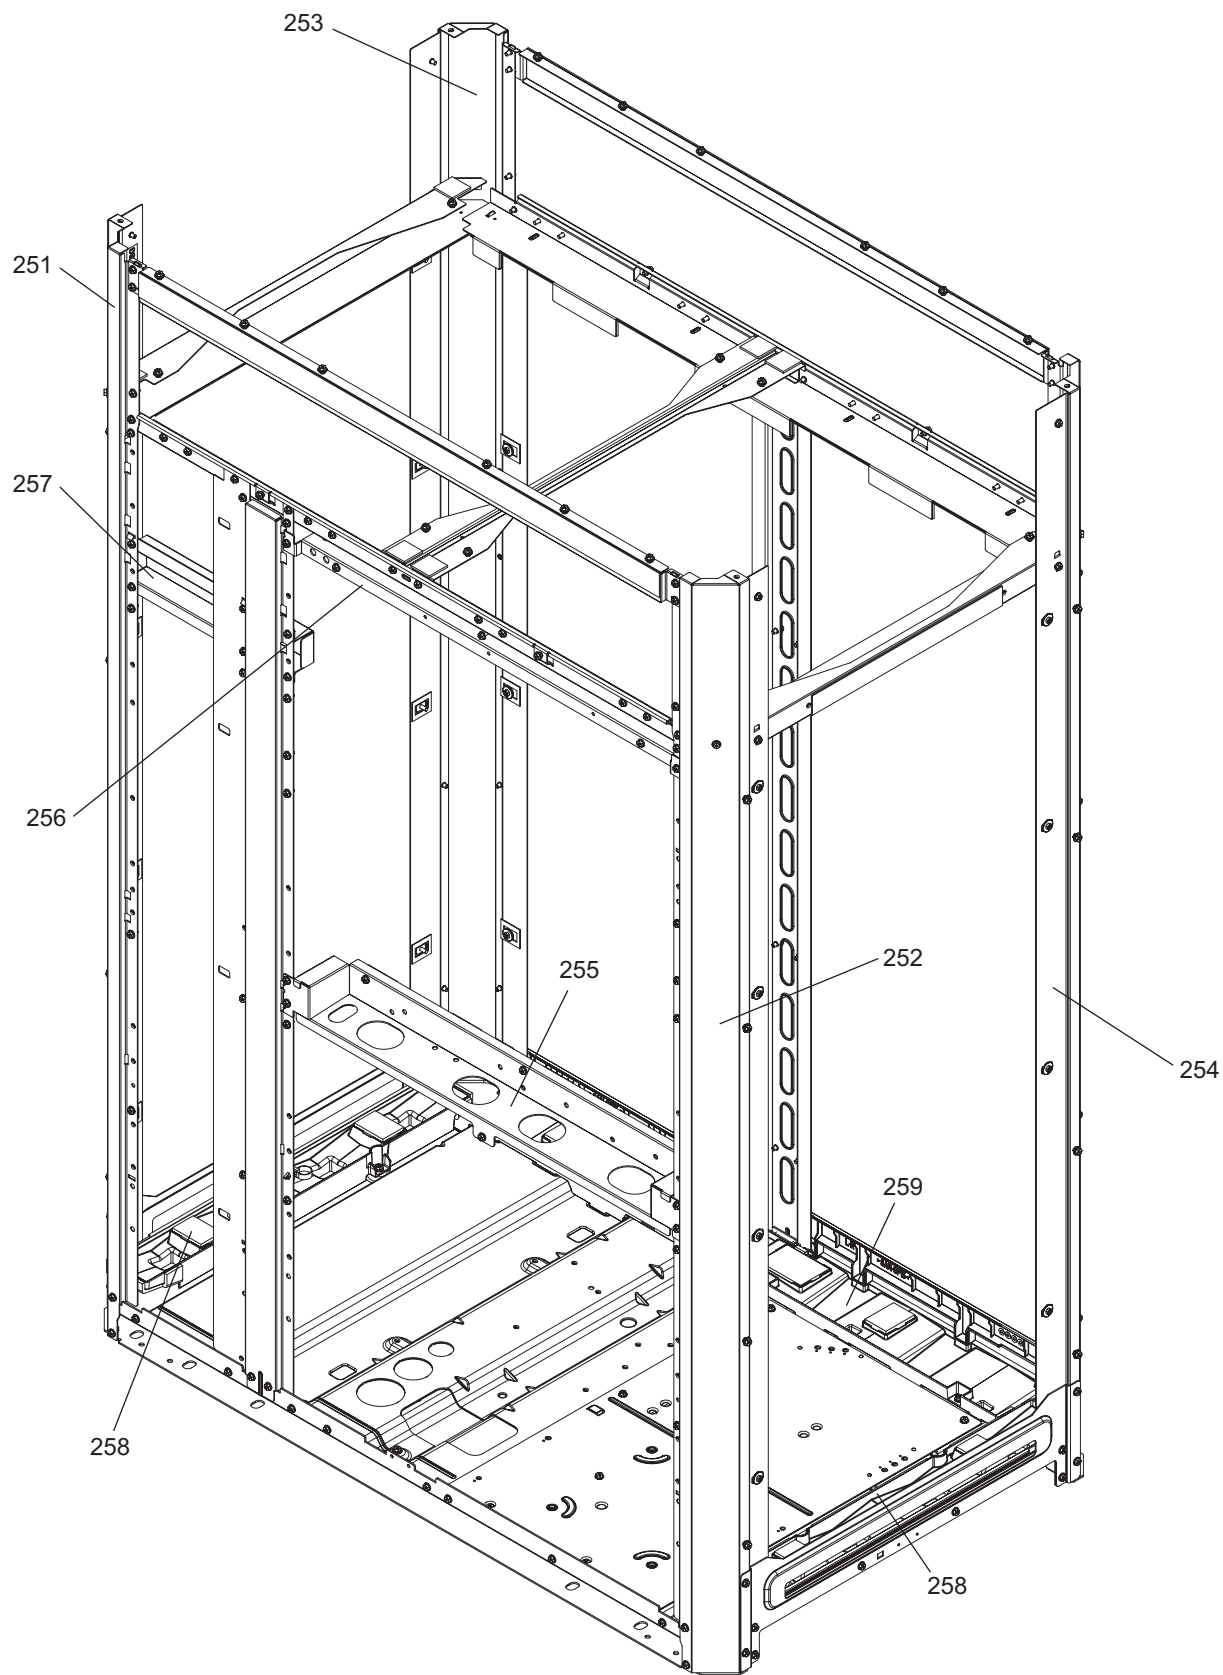


EXTERNAL PARTS & BLOWER PARTS (2-2)

11

EXTERNAL PARTS & BLOWER PARTS (2-2)

12

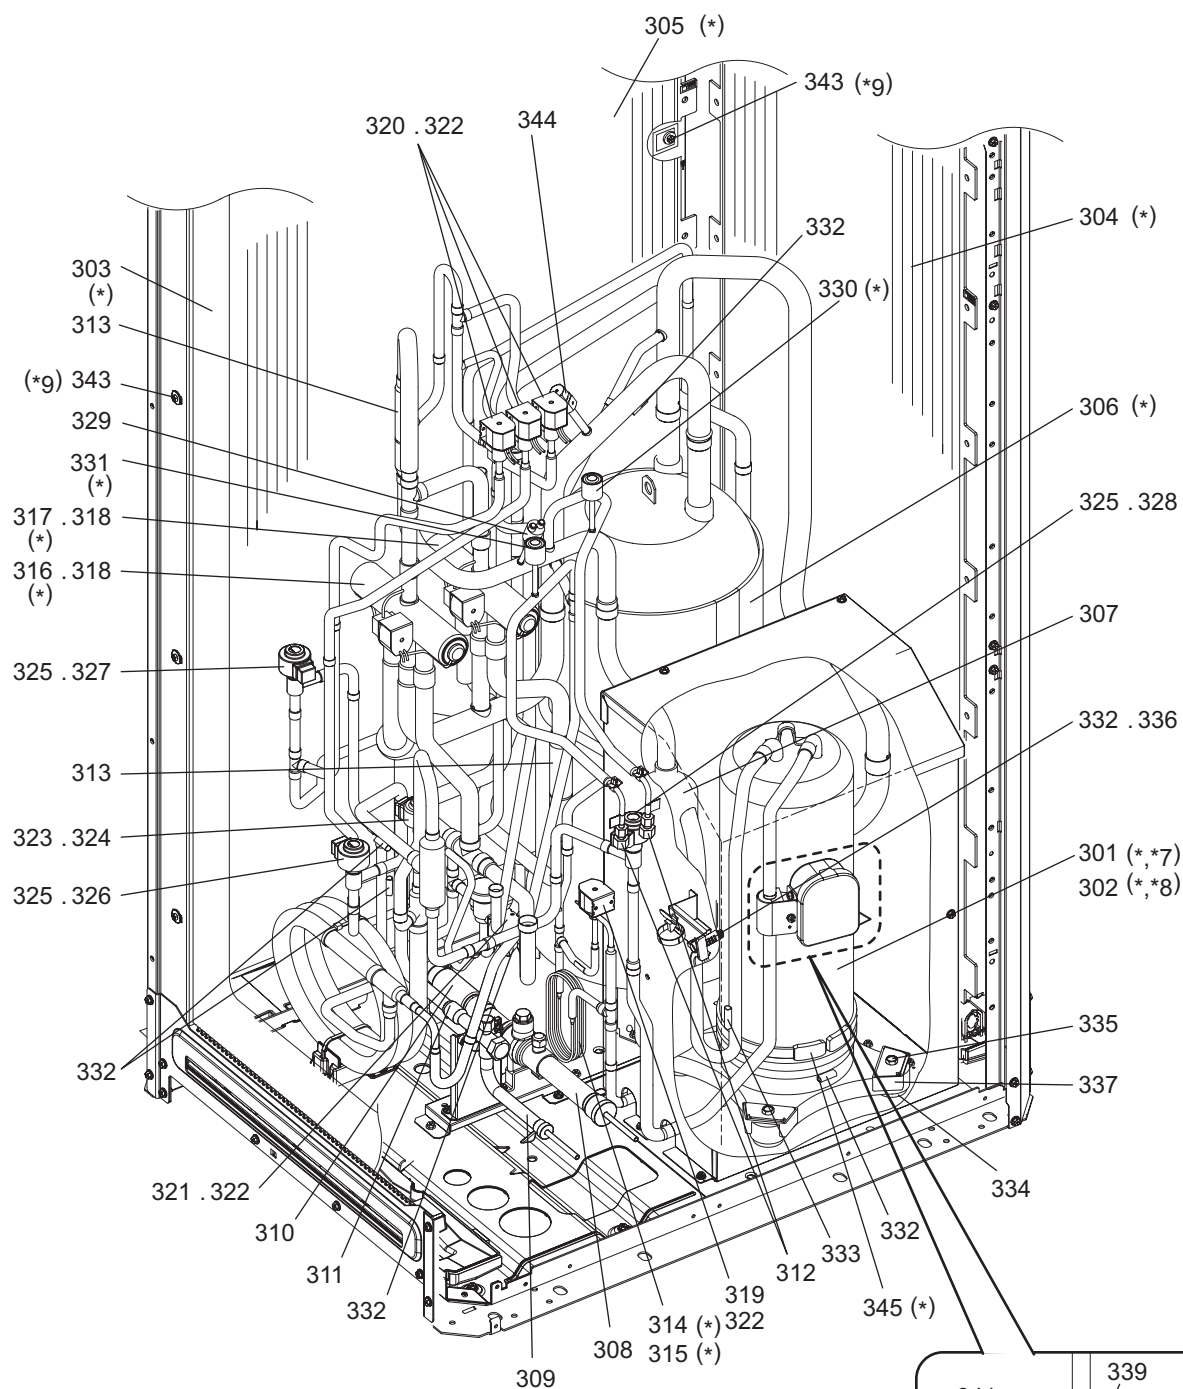


* with instructions

*7 208/230V

*8 460V

*9 24 Bolt(part No.343)

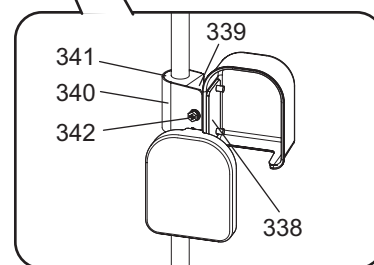

PUHY-EM72,EM96,EM120,HM72TXU-A
PUHY-EM72,EM96,EM120,HM72YXU-A


FUNCTIONAL PARTS (1)

No.	Part No.	Part Name	Spec.	PUHY-EM72TXU-A	PUHY-EM96TXU-A	PUHY-EM120TXU-A	PUHY-EM72YXU-A	PUHY-EM96YXU-A	PUHY-EM120YXU-A	Dwg. No.	Notes for the models	Revision info.
301	R69 249 478	Scroll compressor	HVK85FB-U	1	1	1				EP10235B02	*,*7 208/230V	
302	R69 250 478	Scroll compressor	HVK85FB-YE				1	1	1	EP10235B03	*,*8 460V	
303	R61 N82 480	Heat exchanger SP kit	L	1	1	1	1	1	1	KJ00S493G04	*	Chg.
304	R61 N83 480	Heat exchanger SP kit	R	1	1	1	1	1	1	KJ00S494G04	*	Chg.
305	R61 N84 480	Heat exchanger SP kit	B	1	1	1	1	1	1	KJ00S491G04	*	Chg.
306	R61 225 484	Accumulator assy SP kit		1	1	1	1	1	1	KJ00S504G02	*	
307	R61 074 487	Oil separator assy		1	1	1	1	1	1	KB00C78YG02		
308	R61 033 410	Ball valve	FQ-115-DN25	1	1	1	1	1	1	KJ00P917G06	<BV1>	
309	R61 024 538	Ball valve	FSV-JA5GME-34	1	1	1	1	1	1	P636403X01	<BV2>	
310	R61 023 454	Strainer	28.6D-25.4D	1	1	1	1	1	1	KR48C459H01	<ST1>	
311	R63 Y03 454	Strainer	19.05D	1	1	1	1	1	1	W893281G01	<ST2>	
312	R61 007 413	Check joint L	TCJ-2GME-5	2	2	2	2	2	2	KR50C388H01	<CJ1,2>	
313	R61 101 418	Check valve	YCV15-014	2	2	2	2	2	2	P639220X01	<CV1,3>	
314	R61 042 425	Capillary tube assy		1	1		1	1		KJ00S505G08	<CP1> *	
315	R61 043 425	Capillary tube assy				1			1	KJ00S505G09	<CP1> *	
316	R61 037 403	Four way valve A SP kit		1	1	1	1	1	1	KJ00S506G05	<21S4a> *	Chg.
317	R61 038 403	Four way valve B SP kit		1	1	1	1	1	1	KJ00S506G06	<21S4b> *	Chg.
318	R61 019 242	Four way valve coil	SQ-A2520D-000028-RK	2	2	2	2	2	2	P472128X01	<21S4a,b>	
319	R63 046 232	Solenoid valve	FDF2A77	1	1	1	1	1	1	P631312X01	<SV1a>	
320	R61 097 232	Solenoid valve	FDF6A58	3	3	3	3	3	3	P631340X01	<SV2,12,13>	
321	R61 099 232	Solenoid valve	FDF11A27	1	1	1	1	1	1	P631341X01	<SV16>	
322	R61 069 243	Solenoid valve coil	FQ-A0120D-001734-RK	5	5	5	5	5	5	P472129X01	<SV1a,2,12,13,16>	
323	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	1	1	1	1	1	1	P632416X01	<LEV1>	
324	R61 111 401	Linear expansion valve coil	CAM-MD12MD-125	1	1	1	1	1	1	P472113X01	<LEV1>	
325	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	3	3	3	3	3	3	KR50C486H01	<LEV2a,2b,4>	
326	R61 142 401	Linear expansion valve coil	PAM-MD12MD-17	1	1	1	1	1	1	P472109X01	<LEV2a>	
327	R61 143 401	Linear expansion valve coil	PAM-MD12MD-18	1	1	1	1	1	1	P472110X01	<LEV2b>	
328	R61 170 401	Linear expansion valve coil	PAM-MD12MD-30	1	1	1	1	1	1	KR50G080H01	<LEV4>	
329	R61 056 208	Pressure switch	ACB-1UB28W	1	1	1	1	1	1	P426320X02	<63H1>	
330	R61 167 288	Pressure sensor	NSK-BH042D-500	1	1	1	1	1	1	KJ00S507G03	<63HS1> *	
331	R61 168 288	Pressure sensor	NSK-BH017D-505	1	1	1	1	1	1	KJ00S507G04	<63LS> *	
332	R61 280 200	Thermistor	PXM-41E-M105-01Y	6	6	6	6	6	6	P418144X01	<TH2,3,5,6,7,15>	
333	R61 294 200	Thermistor	PX2M-56D-M2	1	1	1	1	1	1	P418110X01	<TH4>	
334	R63 852 860	Rubber mount		4	4	4	4	4	4	W897574H01	For compressor	
335	R61 009 306	Bolt	M6	4	4	4	4	4	4	KJ12F711H05		
336	R61 001 310	Sensor holder		1	1	1	1	1	1	KB25B471H04		
337	R61 027 155	Attachment (HH)		2	2	2	2	2	2	KJ00F713G04		
338	R61 001 132	Attachment		1	1	1	1	1	1	KB02K008H01		
339	R61 005 609	Attachment Saddle		1	1	1	1	1	1	KL00L214G03		
340	R61 003 456	Saddle		1	1	1	1	1	1	KJ02K540H01		
341	R11 934 905	Packing		2	2	2	2	2	2	W483653G03		
342	R61 010 087	Screw upset	M5×12	3	3	3	3	3	3	S516322H01		
343	R61 015 306	Bolt	M5×13(10pcs)	3	3	3	3	3	3	KJ00S497G02	*9	
344	R12 001 902	Fusible plug		1	1	1	1	1	1	P649027X01		
345	R61 027 237	Belt heater SP kit	240V 45W	1	1	1	1	1	1	KJ00S233G07	*	

PUHY-EM72,EM96,EM120,HM72TXU-A
PUHY-EM72,EM96,EM120,HM72YXU-A

FUNCTIONAL PARTS (1)

No.	Part No.	Part Name	Spec.	PUHY-HM72TXU-A	PUHY-HM72YXU-A					Dwg. No.	Notes for the models	Revision info.
301	R69 249 478	Scroll compressor	HVK85FB-U	1						EP10235B02	*,*7 208/230V	
302	R69 250 478	Scroll compressor	HVK85FB-YE		1					EP10235B03	*,*8 460V	
303	R61 N82 480	Heat exchanger SP kit	L	1	1					KJ00S493G04	*	Chg.
304	R61 N83 480	Heat exchanger SP kit	R	1	1					KJ00S494G04	*	Chg.
305	R61 N84 480	Heat exchanger SP kit	B	1	1					KJ00S491G04	*	Chg.
306	R61 225 484	Accumulator assy SP kit		1	1					KJ00S504G02	*	
307	R61 074 487	Oil separator assy		1	1					KB00C78YG02		
308	R61 033 410	Ball valve	FQ-115-DN25	1	1					KJ00P917G06	<BV1>	
309	R61 024 538	Ball valve	FSV-JA5GME-34	1	1					P636403X01	<BV2>	
310	R61 023 454	Strainer	28.6D-25.4D	1	1					KR48C459H01	<ST1>	
311	R63 Y03 454	Strainer	19.05D	1	1					W893281G01	<ST2>	
312	R61 007 413	Check joint L	TCJ-2GME-5	2	2					KR50C388H01	<CJ1,2>	
313	R61 101 418	Check valve	YCV15-014	2	2					P639220X01	<CV1,3>	
314	R61 042 425	Capillary tube assy		1	1					KJ00S505G08	<CP1> *	
315	R61 043 425	Capillary tube assy								KJ00S505G09	<CP1> *	
316	R61 037 403	Four way valve A SP kit		1	1					KJ00S506G05	<21S4a> *	Chg.
317	R61 038 403	Four way valve B SP kit		1	1					KJ00S506G06	<21S4b> *	Chg.
318	R61 019 242	Four way valve coil	SQ-A2520D-000028-RK	2	2					P472128X01	<21S4a,b>	
319	R63 046 232	Solenoid valve	FDF2A77	1	1					P631312X01	<SV1a>	
320	R61 097 232	Solenoid valve	FDF6A58	3	3					P631340X01	<SV2,12,13>	
321	R61 099 232	Solenoid valve	FDF11A27	1	1					P631341X01	<SV16>	
322	R61 069 243	Solenoid valve coil	FQ-A0120D-001734-RK	5	5					P472129X01	<SV1a,2,12,13,16>	
323	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	1	1					P632416X01	<LEV1>	
324	R61 111 401	Linear expansion valve coil	CAM-MD12MD-125	1	1					P472113X01	<LEV1>	
325	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	3	3					KR50C486H01	<LEV2a,2b,4>	
326	R61 142 401	Linear expansion valve coil	PAM-MD12MD-17	1	1					P472109X01	<LEV2a>	
327	R61 143 401	Linear expansion valve coil	PAM-MD12MD-18	1	1					P472110X01	<LEV2b>	
328	R61 170 401	Linear expansion valve coil	PAM-MD12MD-30	1	1					KR50G080H01	<LEV4>	
329	R61 056 208	Pressure switch	ACB-1UB28W	1	1					P426320X02	<63H1>	
330	R61 167 288	Pressure sensor	NSK-BH042D-500	1	1					KJ00S507G03	<63HS1> *	
331	R61 168 288	Pressure sensor	NSK-BH017D-505	1	1					KJ00S507G04	<63LS> *	
332	R61 280 200	Thermistor	PXM-41E-M105-01Y	6	6					P418144X01	<TH2,3,5,6,7,15>	
333	R61 294 200	Thermistor	PX2M-56D-M2	1	1					P418110X01	<TH4>	
334	R63 852 860	Rubber mount		4	4					W897574H01	For compressor	
335	R61 009 306	Bolt	M6	4	4					KJ12F711H05		
336	R61 001 310	Sensor holder		1	1					KB25B471H04		
337	R61 027 155	Attachment (HH)		2	2					KJ00F713G04		
338	R61 001 132	Attachment		1	1					KB02K008H01		
339	R61 005 609	Attachment Saddle		1	1					KL00L214G03		
340	R61 003 456	Saddle		1	1					KJ02K540H01		
341	R11 934 905	Packing		2	2					W483653G03		
342	R61 010 087	Screw upset	M5×12	3	3					S516322H01		
343	R61 015 306	Bolt	M5×13(10pcs)	3	3					KJ00S497G02	*9	
344	R12 001 902	Fusible plug		1	1					P649027X01		
345	R61 027 237	Belt heater SP kit	240V 45W	1	1					KJ00S233G07	*	

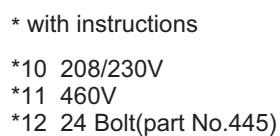

No.	Part No.	Part Name	Spec.	PUHY-EM144TXU-A	PUHY-EM168TXU-A	PUHY-EM192TXU-A	PUHY-EM144YXU-A	PUHY-EM168YXU-A	PUHY-EM192YXU-A	Dwg. No.	Notes for the models	Revision info.
401	R69 251 478	Scroll compressor	HVK107FA	1	1	1				EP10249B01	*,*10 208/230V	
402	R69 252 478	Scroll compressor	HVK107FA-Y				1	1	1	EP10249B02	*,*11 460V	
403	R61 N82 480	Heat exchanger SP kit	L	1	1	1	1	1	1	KJ00S493G04	*	Chg.
404	R61 N83 480	Heat exchanger SP kit	R	1	1	1	1	1	1	KJ00S494G04	*	Chg.
405	R61 N87 480	Heat exchanger SP kit	B	1	1	1	1	1	1	KJ00S907G02	*	Chg.
406	R61 225 484	Accumulator assy SP kit		1	1	1	1	1	1	KJ00S504G02	*	
407	R61 074 487	Oil separator assy		1	1	1	1	1	1	KB00C78YG02		
408	R61 033 410	Ball valve	FQ-115-DN25	1	1	1	1	1	1	KJ00P917G06	<BV1>	
409	R61 024 538	Ball valve	FSV-JA5GME-34	1	1	1	1	1	1	P636403X01	<BV2>	
410	R61 023 454	Strainer	28.6D-25.4D	1	1	1	1	1	1	KR48C459H01	<ST1>	
411	R63 Y03 454	Strainer	19.05D	1	1	1	1	1	1	W893281G01	<ST2>	
412	R61 007 413	Check joint L	TCJ-2GME-5	2	2	2	2	2	2	KR50C388H01	<CJ1,2>	
413	R61 101 418	Check valve	YCV15-014	2	2	2	2	2	2	P639220X01	<CV1,3>	
414	R61 044 425	Capillary tube assy		1	1		1	1		KJ00S505G10	<CP1> *	
415	R61 045 425	Capillary tube assy				1			1	KJ00S505G11	<CP1> *	
416	R61 042 425	Capillary tube assy								KJ00S505G08	<CP1> *	
417	R61 043 425	Capillary tube assy								KJ00S505G09	<CP1> *	
418	R61 037 403	Four way valve A SP kit		1	1	1	1	1	1	KJ00S506G05	<21S4a> *	Chg.
419	R61 038 403	Four way valve B SP kit		1	1	1	1	1	1	KJ00S506G06	<21S4b> *	Chg.
420	R61 019 242	Four way valve coil	SQ-A2520D-000028-RK	2	2	2	2	2	2	P472128X01	<21S4a,b>	
421	R63 046 232	Solenoid valve	FDF2A77	1	1	1	1	1	1	P631312X01	<SV1a>	
422	R61 097 232	Solenoid valve	FDF6A58	3	3	3	3	3	3	P631340X01	<SV2,12,13>	
423	R61 099 232	Solenoid valve	FDF11A27	1	1	1	1	1	1	P631341X01	<SV16>	
424	R61 069 243	Solenoid valve coil	FQ-A0120D-001734-RK	5	5	5	5	5	5	P472129X01	<SV1a,2,12,13,16>	
425	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	1	1	1	1	1	1	P632416X01	<LEV1>	
426	R61 111 401	Linear expansion valve coil	CAM-MD12MD-125	1	1	1	1	1	1	P472113X01	<LEV1>	
427	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	3	3	3	3	3	3	KR50C486H01	<LEV2a,2b,4>	
428	R61 142 401	Linear expansion valve coil	PAM-MD12MD-17	1	1	1	1	1	1	P472109X01	<LEV2a>	
429	R61 143 401	Linear expansion valve coil	PAM-MD12MD-18	1	1	1	1	1	1	P472110X01	<LEV2b>	
430	R61 170 401	Linear expansion valve coil	PAM-MD12MD-30	1	1	1	1	1	1	KR50G080H01	<LEV4>	
431	R61 056 208	Pressure switch	ACB-1UB28W	1	1	1	1	1	1	P426320X02	<63H1>	
432	R61 167 288	Pressure sensor	NSK-BH042D-500	1	1	1	1	1	1	KJ00S507G03	<63HS1> *	
433	R61 168 288	Pressure sensor	NSK-BH017D-505	1	1	1	1	1	1	KJ00S507G04	<63LS> *	
434	R61 280 200	Thermistor	PXM-41E-M105-01Y	6	6	6	6	6	6	P418144X01	<TH2,3,5,6,7,15>	
435	R61 294 200	Thermistor	PX2M-56D-M2	1	1	1	1	1	1	P418110X01	<TH4>	
436	R63 852 860	Rubber mount		4	4	4	4	4	4	W897574H01	For compressor	
437	R61 009 306	Bolt	M6	4	4	4	4	4	4	KJ12F711H05		
438	R61 001 310	Sensor holder		1	1	1	1	1	1	KB25B471H04		
439	R61 027 155	Attachment (HH)		4	4	4	4	4	4	KJ00F713G04		
440	R61 001 132	Attachment		1	1	1	1	1	1	KB02K008H01		
441	R61 005 609	Attachment Saddle		1	1	1	1	1	1	KL00L214G03		
442	R61 003 456	Saddle		1	1	1	1	1	1	KJ02K540H01		
443	R11 934 905	Packing		2	2	2	2	2	2	W483653G03		
444	R61 010 087	Screw upset	M5×12	3	3	3	3	3	3	S516322H01		
445	R61 015 306	Bolt	M5×13(10pcs)	3	3	3	3	3	3	KJ00S497G02	*12	


FUNCTIONAL PARTS (2)

18

No.	Part No.	Part Name	Spec.	PUHY-HM86TXU-A	PUHY-HM120TXU-A	PUHY-HM86YXU-A	PUHY-HM120YXU-A	Dwg. No.	Notes for the models	Revision info.
401	R69 251 478	Scroll compressor	HVK107FA	1	1			EP10249B01	*,*10 208/230V	
402	R69 252 478	Scroll compressor	HVK107FA-Y			1	1	EP10249B02	*,*11 460V	
403	R61 N82 480	Heat exchanger SP kit	L	1	1	1	1	KJ00S493G04	*	Chg.
404	R61 N83 480	Heat exchanger SP kit	R	1	1	1	1	KJ00S494G04	*	Chg.
405	R61 N87 480	Heat exchanger SP kit	B	1	1	1	1	KJ00S907G02	*	Chg.
406	R61 225 484	Accumulator assy SP kit		1	1	1	1	KJ00S504G02	*	
407	R61 074 487	Oil separator assy		1	1	1	1	KB00C78YG02		
408	R61 033 410	Ball valve	FQ-115-DN25	1	1	1	1	KJ00P917G06	<BV1>	
409	R61 024 538	Ball valve	FSV-JA5GME-34	1	1	1	1	P636403X01	<BV2>	
410	R61 023 454	Strainer	28.6D-25.4D	1	1	1	1	KR48C459H01	<ST1>	
411	R63 Y03 454	Strainer	19.05D	1	1	1	1	W893281G01	<ST2>	
412	R61 007 413	Check joint L	TCJ-2GME-5	2	2	2	2	KR50C388H01	<CJ1,2>	
413	R61 101 418	Check valve	YCV15-014	2	2	2	2	P639220X01	<CV1,3>	
414	R61 044 425	Capillary tube assy						KJ00S505G10	<CP1> *	
415	R61 045 425	Capillary tube assy						KJ00S505G11	<CP1> *	
416	R61 042 425	Capillary tube assy		1		1		KJ00S505G08	<CP1> *	
417	R61 043 425	Capillary tube assy			1		1	KJ00S505G09	<CP1> *	
418	R61 037 403	Four way valve A SP kit		1	1	1	1	KJ00S506G05	<21S4a> *	Chg.
419	R61 038 403	Four way valve B SP kit		1	1	1	1	KJ00S506G06	<21S4b> *	Chg.
420	R61 019 242	Four way valve coil	SQ-A2520D-000028-RK	2	2	2	2	P472128X01	<21S4a,b>	
421	R63 046 232	Solenoid valve	FDF2A77	1	1	1	1	P631312X01	<SV1a>	
422	R61 097 232	Solenoid valve	FDF6A58	3	3	3	3	P631340X01	<SV2,12,13>	
423	R61 099 232	Solenoid valve	FDF11A27	1	1	1	1	P631341X01	<SV16>	
424	R61 069 243	Solenoid valve coil	FQ-A0120D-001734-RK	5	5	5	5	P472129X01	<SV1a,2,12,13,16>	
425	R63 R34 401	Linear expansion valve	CAM-B35YGMD-2	1	1	1	1	P632416X01	<LEV1>	
426	R61 111 401	Linear expansion valve coil	CAM-MD12MD-125	1	1	1	1	P472113X01	<LEV1>	
427	R61 107 401	Linear expansion valve	PAM-BB0YGMD-2	3	3	3	3	KR50C486H01	<LEV2a,2b,4>	
428	R61 142 401	Linear expansion valve coil	PAM-MD12MD-17	1	1	1	1	P472109X01	<LEV2a>	
429	R61 143 401	Linear expansion valve coil	PAM-MD12MD-18	1	1	1	1	P472110X01	<LEV2b>	
430	R61 170 401	Linear expansion valve coil	PAM-MD12MD-30	1	1	1	1	KR50G080H01	<LEV4>	
431	R61 056 208	Pressure switch	ACB-1UB28W	1	1	1	1	P426320X02	<63H1>	
432	R61 167 288	Pressure sensor	NSK-BH042D-500	1	1	1	1	KJ00S507G03	<63HS1> *	
433	R61 168 288	Pressure sensor	NSK-BH017D-505	1	1	1	1	KJ00S507G04	<63LS> *	
434	R61 280 200	Thermistor	PXM-41E-M105-01Y	6	6	6	6	P418144X01	<TH2,3,5,6,7,15>	
435	R61 294 200	Thermistor	PX2M-56D-M2	1	1	1	1	P418110X01	<TH4>	
436	R63 852 860	Rubber mount		4	4	4	4	W897574H01	For compressor	
437	R61 009 306	Bolt	M6	4	4	4	4	KJ12F711H05		
438	R61 001 310	Sensor holder		1	1	1	1	KB25B471H04		
439	R61 027 155	Attachment (HH)		4	4	4	4	KJ00F713G04		
440	R61 001 132	Attachment		1	1	1	1	KB02K008H01		
441	R61 005 609	Attachment Saddle		1	1	1	1	KL00L214G03		
442	R61 003 456	Saddle		1	1	1	1	KJ02K540H01		
443	R11 934 905	Packing		2	2	2	2	W483653G03		
444	R61 010 087	Screw upset	M5×12	3	3	3	3	S516322H01		
445	R61 015 306	Bolt	M5×13(10pcs)	3	3	3	3	KJ00S497G02	*12	

FUNCTIONAL PARTS (2)


20

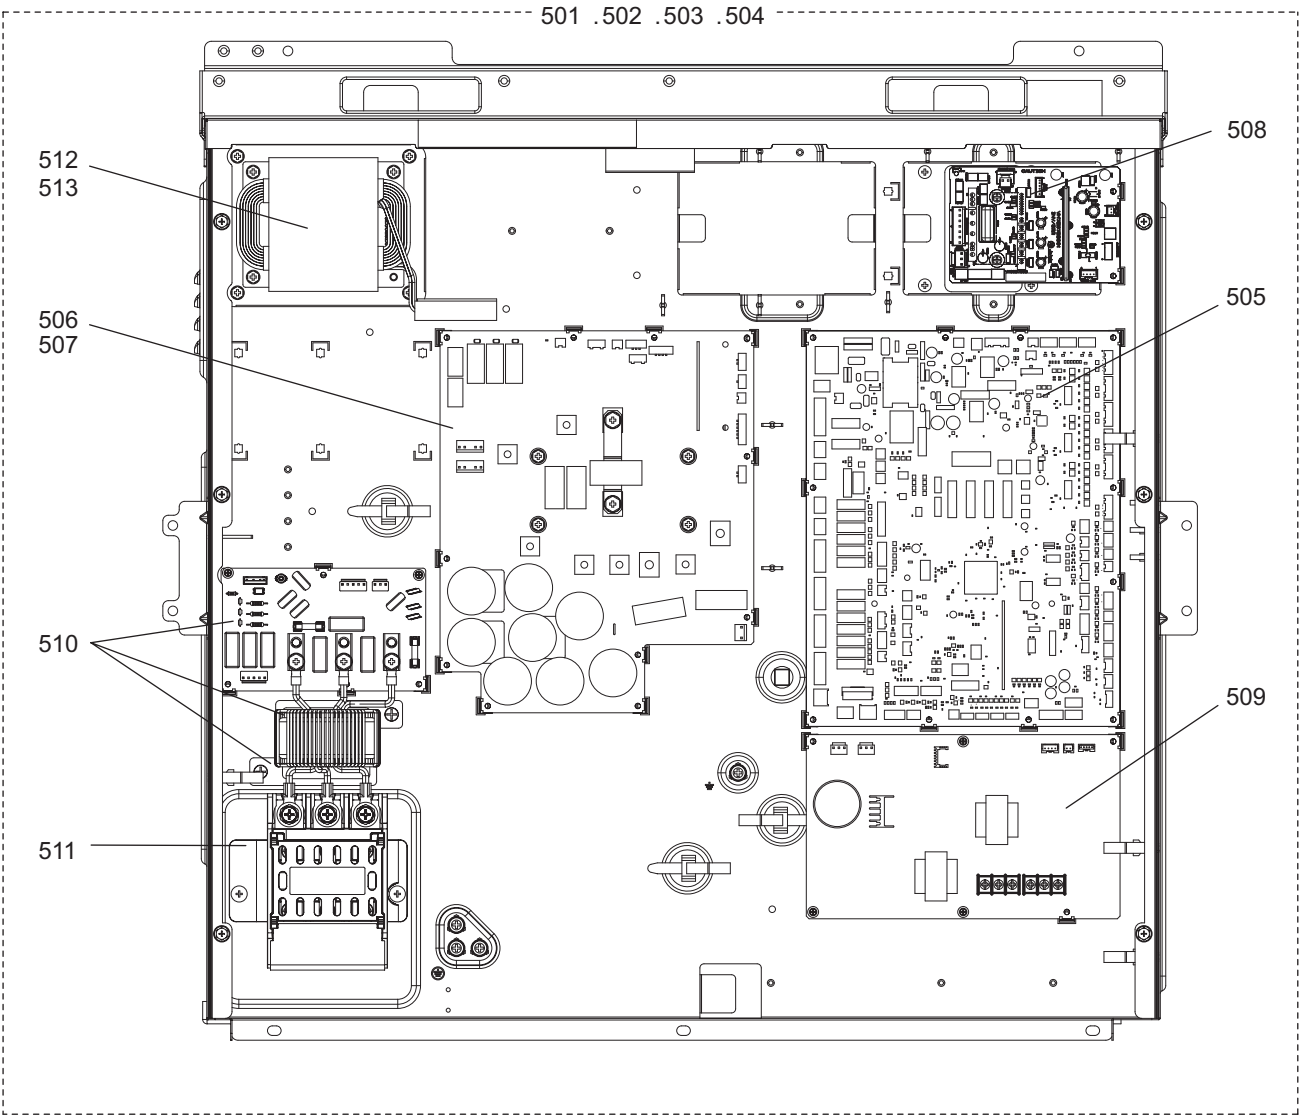

PUHY-EM72,EM96,EM120TXU-A
PUHY-HM72TXU-A

CONTROL BOX PARTS (1)


[illegible]

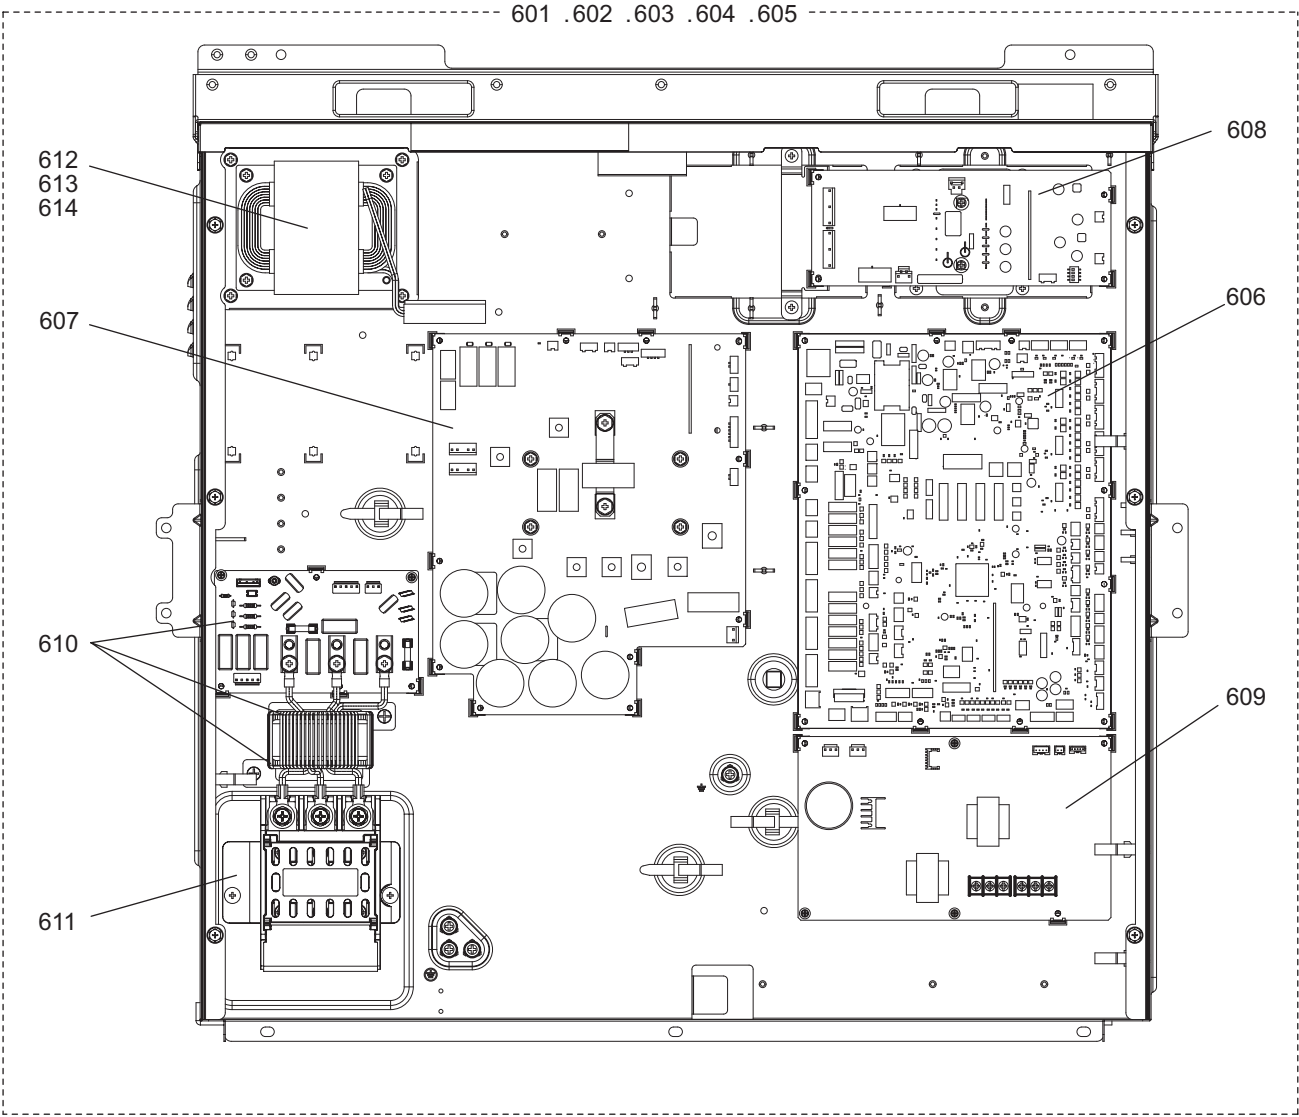

PUHY-EM144,EM168,EM192TXU-A
PUHY-HM96,HM120TXU-A

CONTROL BOX PARTS (2)


[illegible]

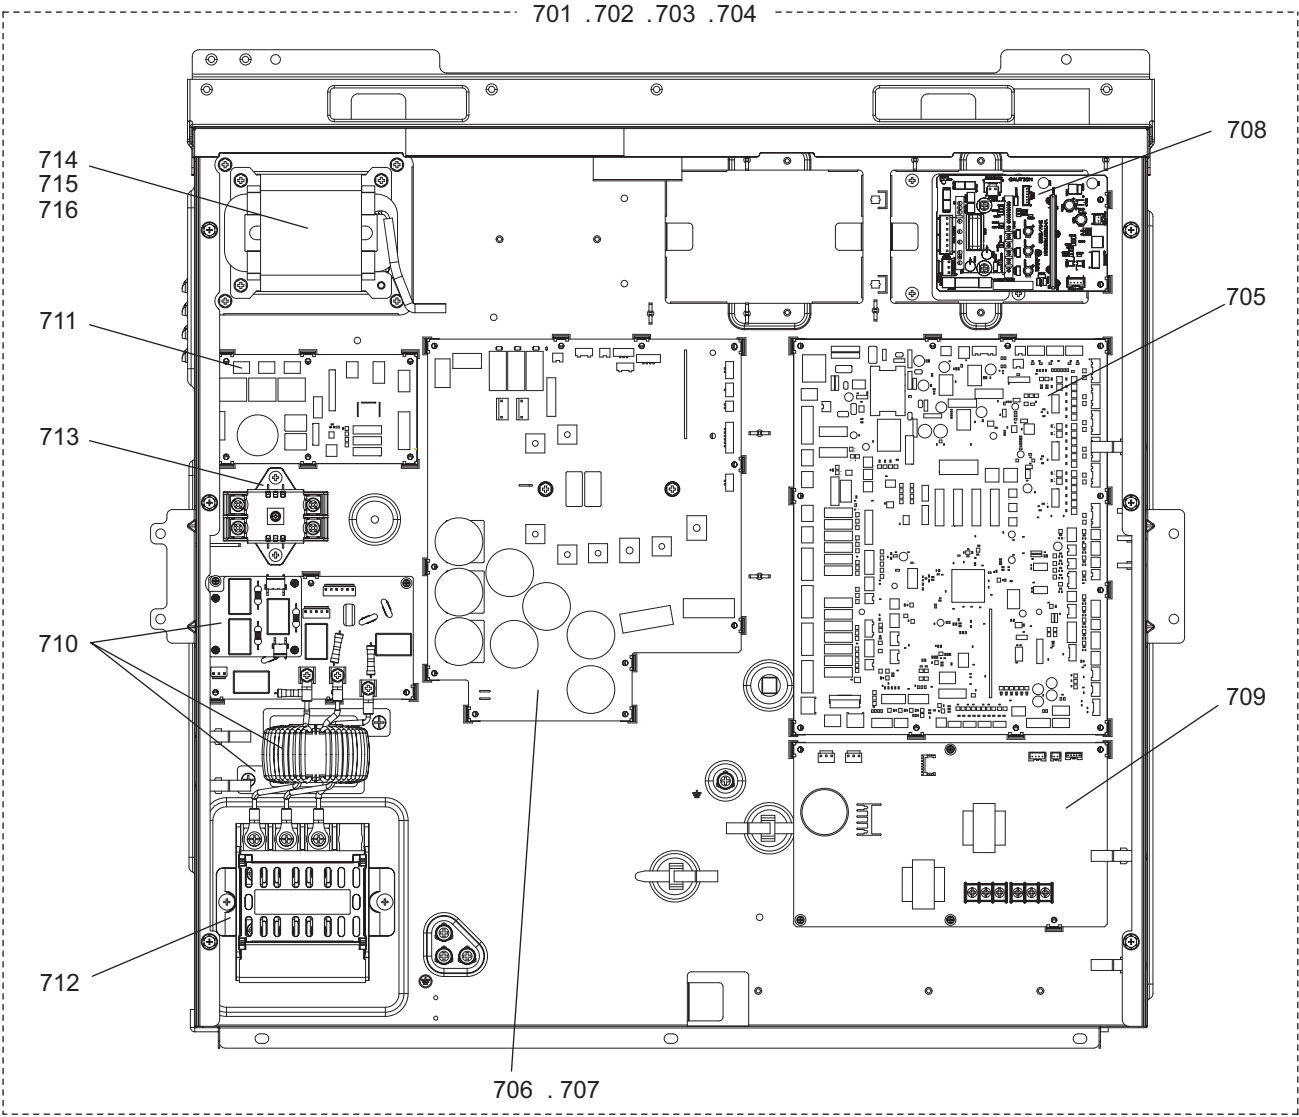

PUHY-EM72,EM96,EM120YXU-A
PUHY-HM72YXU-A

CONTROL BOX PARTS (3)

[illegible]

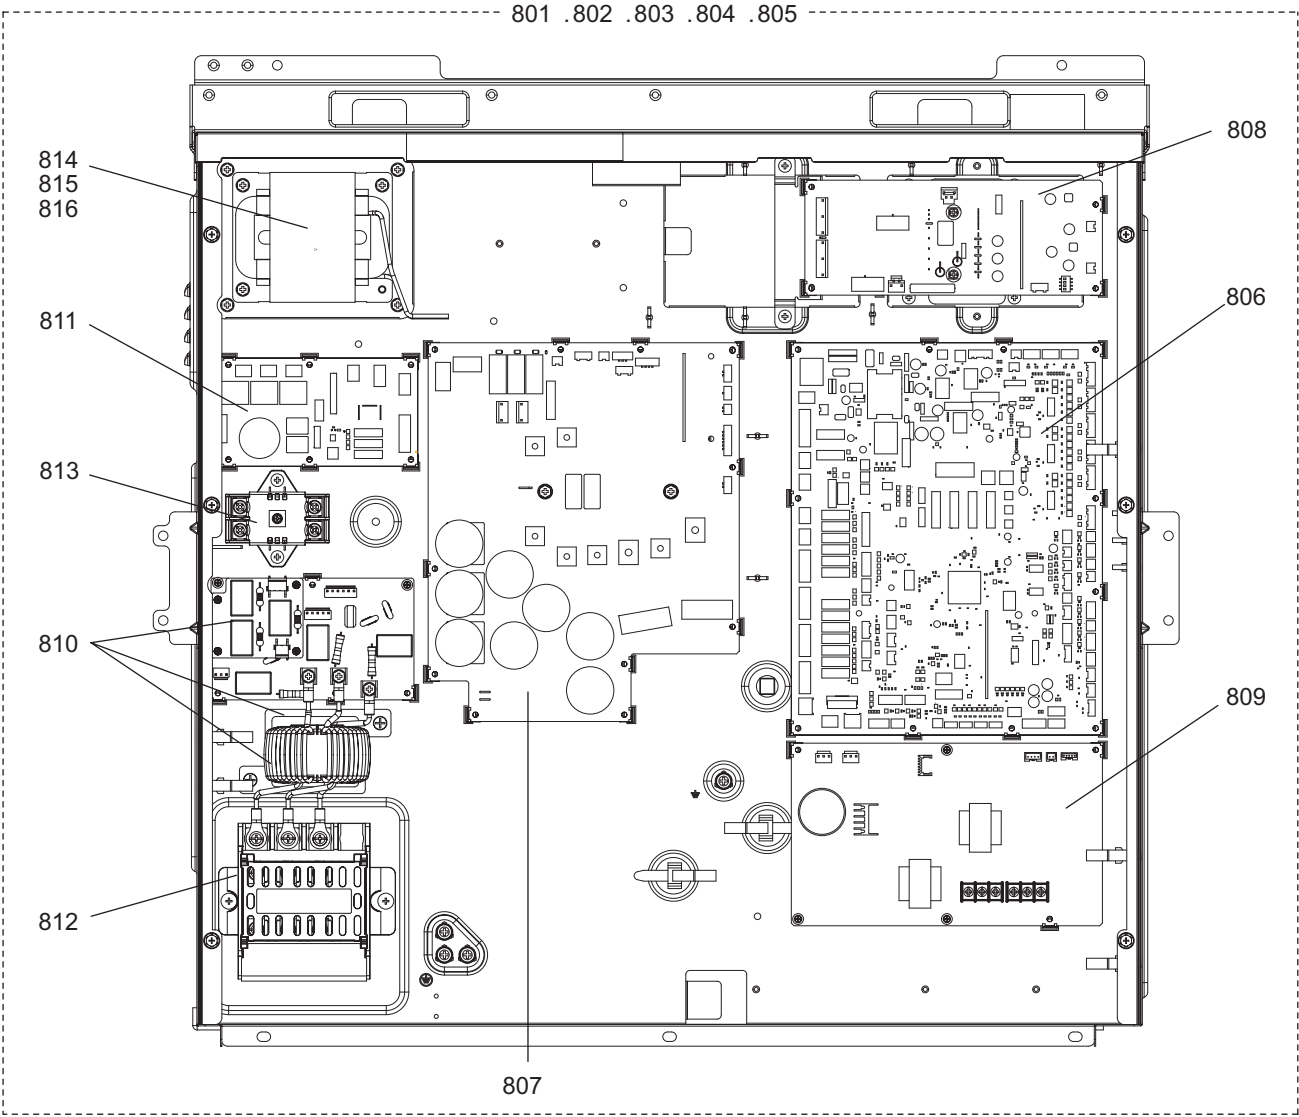

PUHY-EM144,EM168,EM192YXU-A
PUHY-HM96,HM120YXU-A

CONTROL BOX PARTS (4)

[illegible]

mitsubishi **electric** **corporation**

BWE02535A(20260531)