Reference Approval Construction

Job Name:	Location:
Purchaser:	Submitted By:
Submitted To:	Engineer:
Date:	Application:



- Backlit LCD
- Can be set and shown by 1°F/0.5°C.

## **■** Functions

1. Operation/Display

∴ Available 
 ∴ Not available


Item	On/DISPIRY O: Availab	Settina	Display
ON/OFF	Switches between ON and OFF.	0	0
Operation mode switching	Switches between Cool/Dry/Fan/Auto/Setback/Heat.	0	0
Hold	Switches between enable and disable the Hold function. If the Hold function is enable, the following functions will be prohibited. ON/OFF timer/Schedule (Weekly timer) / Auto return/ Auto-OFF timer	0	0
Temperature setting	Changes the set temperature.  * Set temperature range varies depending on the indoor unit model.	0	0
Fan speed setting	Changes fan speed.  * Available fan speeds vary depending on the model.	0	0
Air flow direction setting	Changes airflow direction.  * Available airflow directions vary depending on the model.	0	0
Louver setting	Switches between louver ON/OFF.	0	0
Ventilation equipment control	Interlocked setting and interlocked operation setting with City Multi LOSSNAY units can be performed. The Stop/Low/High settings of the ventilation equipment can be controlled.	0	0
Auto descending panel *1	Raises and lowers the automatic elevating panel.	0	×
Main display mode setting	The Main display can be displayed in two different modes: "Full" and "Basic."	0	0
B&W inversion	The colors of the display can be inverted, turning white background to black and black characters to white.	0	0
Clock *2	Date (year/month/day) and time (hour/minute) can be set. The set time as well as the day of the week will be displayed on the Main display. It is also possible to set not to display the time on the Main display. The clock can be displayed in 12-hour format (AM/PM before or after the time) and 24-hour format.	0	0
Daylight saving time	The start/end time for daylight saving time can be set. The daylight saving time function will be activated based on the setting contents.	0	
Room temp. display	The room temperature display can be enabled or disabled.		0
Error information	When an error occurs, an error code and the unit address appear.  The air-conditioning unit model, serial number, and contact number can be set to appear when an error occurs. (The above information needs to be entired in advance.)  *An error code may not appear depending on the error.		0
Filter information	A filter sign will appear when it is time to clean the filter.		0
Remote controller information	The version of the remote controller can be checked.		0
Refrigerant leakage error	An alarm buzzer sounds when refrigerant leakage is detected.		0

2. Schedule and timer setting O: Available X: Not available					
Item	Description	Setting	Display		
Timer	ON/OFF timer Turns ON and OFF daily at a set time.  • Time can be set in 5-minute increments.  • It is also possible to set the ON time only or the OFF time only. Auto-OFF timer Turns off the unit after a certain period of operation.  • Operation time can be set to a value from 30 to 240 minutes in 10-minute increments.	0	0		
Weekly timer	Weekly ON/OFF times and set temperatures can be set.  • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week.  • Not valid when the ON/OFF timer is set.	0	0		

3. Restriction settings ○: Available X: Not available Description Setting Display The following operation can be prohibited by applying certain settings on the centralized controller: ON/OFF, operation mode, set temperature, filter sign reset, air direction, fan speed and time! 'While an operation is prohibited, the operation icon lights up (only on the Main display in the "Full" mode). Allows/disallows local operation 0 The following operations can be prohibited: "Location," "On/Off," "Mode," "Set temp.," "Menu," "Fan," "Louver," "Vane," or "Hold." 0 0 Operation lock The room temperature range for each operation mode can be 0 0 restricted. The units operate at the preset temperature after a designated period. (Time can be set to a value from 30 to 120 minutes in 10-minute 0 Auto return X increments.)

Not valid when the temperature setting range is restricted. Administrator password (required for schedule setting etc.) and Maintenance password (required for test run and function setting etc.) can be set. 0

4. Miscellaneous items O: Avail		able X: Not available	
Item	Description		Display
Language Selection	Select the display language from the following 3 languages. English, French, Spanish	0	0
Brightness Contrast	The brightness of the LCD can be adjusted. The contrast of the LCD can be adjusted.	0	0
Manual vane Angle *1	Fixes the vane position for each air outlet.	0	
Service *1	Contains Test run, Function setting, Request code, and Error history.	0	0
3D i-see Sensor	Settings for 3D i-see Sensor can be made.	0	0

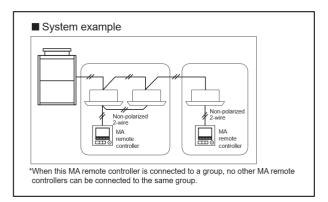

## ■ External dimension

