


2015
R410A

TECHNICAL & SERVICE MANUAL

Model name

PVIFY-P12NAMU-E PVIFY-P36NAMU-E
PVIFY-P18NAMU-E PVIFY-P48NAMU-E
PVIFY-P24NAMU-E PVIFY-P54NAMU-E
PVIFY-P30NAMU-E

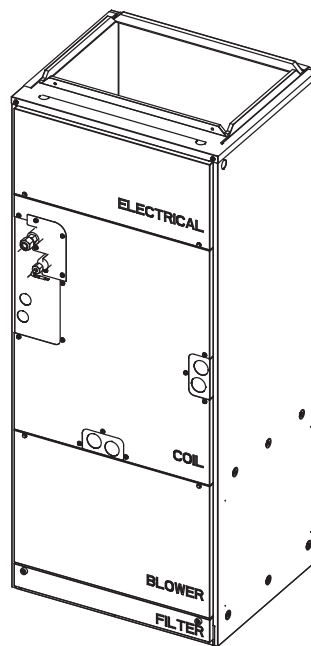

CITY MULTI

Safety Precautions

Read before installation and performing electrical work

- ♦Thoroughly read the following safety precautions prior to installation.
- ♦Observe these safety precautions for your safety.
- ♦This equipment may have adverse effects on the equipment on the same power supply system.
- ♦Contact the local power authority before connecting to the system.

Symbol explanations



WARNING

This symbol indicates that failure to follow the instructions exactly as stated poses the risk of serious injury or death.



CAUTION

This symbol indicates that failure to follow the instructions exactly as stated poses the risk of serious injury or damage to the unit.



Indicates an action that must be avoided.



Indicates important instructions.



Indicates a parts that requires grounding.



Indicates that caution must be taken with rotating parts. (This symbol is on the main unit label.) <Color: Yellow>



Indicates that the parts that are marked with this symbol pose a risk of electric shock. (This symbol is on the main unit label.) <Color: Yellow>



WARNING

Carefully read the labels affixed to the main unit.



WARNING

Do not use refrigerant other than the type indicated in the manuals provided with the unit and on the nameplate.

Doing so may cause the unit or pipes to burst, or result in explosion or fire during use, during repair, or at the time of disposal of the unit.

It may also be in violation of applicable laws. MITSUBISHI ELECTRIC CORPORATION cannot be held responsible for malfunctions or accidents resulting from the use of the wrong type of refrigerant.

Ask your dealer or a qualified technician to install the unit.

Improper installation by the user may result in water leakage, electric shock, or fire.

Properly install the unit on a surface that can withstand its weight.

Unit installed on an unstable surface may fall and cause injury.

Only use specified cables. Securely connect each cable so that the terminals do not carry the weight of the cable.

Improperly connected cables may produce heat and start a fire.

Take appropriate safety measures against wind gusts and earthquakes to prevent the unit from toppling over.

Improper installation may cause the unit to topple over and cause injury or damage to the unit.

Only use accessories (i.e., air cleaners, humidifiers, electric heaters) recommended by Mitsubishi Electric.

Do not make any modifications or alterations to the unit. Consult your dealer for repair.

Improper repair may result in water leakage, electric shock, or fire.

Do not touch the heat exchanger fins with bare hands.

The fins are sharp and pose a risk of cuts.

In the event of a refrigerant leak, thoroughly ventilate the room.

If gaseous refrigerant leaks out and comes in contact with an open flame, toxic gases will be generated.

Properly install the unit according to the instructions in the Installation Manual.

Improper installation may result in water leakage, electric shock, or fire.

Have all electrical work performed by an authorized electrician according to the local regulations and the instructions in this manual. Use a dedicated circuit.

Insufficient power supply capacity or improper installation of the unit may result in malfunctions of the unit, electric shock, or fire.

Keep electrical parts away from water.

Wet electrical parts pose a risk of electric shock, smoke, or fire.

Securely attach the control box cover.

If the cover is not installed properly, dust or water may infiltrate and pose a risk of electric shock, smoke, or fire.

Only use the type of refrigerant that is indicated on the unit when installing or relocating the unit.

Infiltration of any other types of refrigerant or air into the unit may adversely affect the refrigerant cycle and may cause the pipes to burst or explode.

When installing the unit in a small space, take appropriate precautions to prevent leaked refrigerant from reaching the limiting concentration.

Leaked refrigerant gas will displace oxygen and may cause oxygen starvation. Consult your dealer before installing the unit.

Consult your dealer or a qualified technician when moving or reinstalling the unit.

Improper installation may result in water leakage, electric shock, or fire.

After completing the service work, check for a refrigerant leak.

If leaked refrigerant is exposed to a heat source, such as a fan heater, stove, or electric grill, toxic gases will be generated.

Do not try to defeat the safety features of the unit.

Forced operation of the pressure switch or the temperature switch by defeating the safety features for these devices, or the use of accessories other than the ones that are recommended by Mitsubishi Electric may result in smoke, fire, or explosion.

Consult your dealer for proper disposal method.

Do not use a leak detection additive.

Precautions for handling units for use with R410A

CAUTION

Do not use the existing refrigerant piping.

A large amount of chlorine that may be contained in the residual refrigerant and refrigerator oil in the existing piping may cause the refrigerator oil in the new unit to deteriorate.

Use refrigerant piping materials made of phosphorus deoxidized copper. Keep the inner and outer surfaces of the pipes clean and free of such contaminants as sulfur, oxides, dust, dirt, shaving particles, oil, and moisture.

Contaminants in the refrigerant piping may cause the refrigerator oil to deteriorate.

Store the piping materials indoors, and keep both ends of the pipes sealed until immediately before brazing. (Keep elbows and other joints wrapped in plastic.)

Infiltration of dust, dirt, or water into the refrigerant system may cause the refrigerator oil to deteriorate or cause the compressor to malfunction.

Use a small amount of ester oil, ether oil, or alkyl benzene to coat flares and flanges.

Infiltration of a large amount of mineral oil may cause the refrigerator oil to deteriorate.

Charge the system with refrigerant in the liquid phase.

If gaseous refrigerant is drawn out of the cylinder first, the composition of the remaining refrigerant in the cylinder will change and become unsuitable for use.

Only use R410A.

The use of other types of refrigerant that contain chloride may cause the refrigerator oil to deteriorate.

Use a vacuum pump with a check valve.

If a vacuum pump that is not equipped with a check valve is used, the vacuum pump oil may flow into the refrigerant cycle and cause the refrigerator oil to deteriorate.

Prepare tools for exclusive use with R 410A. Do not use the following tools if they have been used with the conventional refrigerant: gauge manifold, charging hose, gas leak detector, check valve, refrigerant charge base, vacuum gauge, and refrigerant recovery equipment.

If the refrigerant or the refrigerator oil that may be left on these tools are mixed in with R410A, it may cause the refrigerator oil in the new system to deteriorate. Infiltration of water may cause the refrigerator oil to deteriorate. Leak detectors for conventional refrigerants will not detect an R410A leak because R410A is free of chlorine.

Do not use a charging cylinder.

If a charging cylinder is used, the composition of the refrigerant in the cylinder will change and become unsuitable for use.

Exercise special care when handling tools for use with R410A.

Infiltration of dust, dirt, or water into the refrigerant system may cause the refrigerator oil to deteriorate.



CONTENTS

I Features

| | |
|-------------------|---|
| [1] Features..... | 1 |
|-------------------|---|

II Components and Functions

| | |
|-----------------------------------|---|
| [1] Components and Functions..... | 2 |
|-----------------------------------|---|

III Specifications

| | |
|--|---|
| [1] Specifications..... | 5 |
| 1.Specifications..... | 5 |
| 2.Electrical component specifications..... | 7 |

IV Outlines and Dimensions

| | |
|----------------------------------|---|
| [1] Outlines and Dimensions..... | 8 |
|----------------------------------|---|

V Wiring Diagram

| | |
|-------------------------|----|
| [1] Wiring Diagram..... | 10 |
|-------------------------|----|

VI Refrigerant System Diagram

| | |
|-------------------------------------|----|
| [1] Refrigerant system diagram..... | 11 |
|-------------------------------------|----|

VII Microprocessor Control

| | |
|---|----|
| [1] Microprocessor Control..... | 12 |
| 1.Cool operation..... | 12 |
| 2.Fan operation..... | 13 |
| 3.Heat operation..... | 14 |
| 4.Auto operation [Automatic cool / heat change over operation]..... | 15 |
| 5.Heater control..... | 16 |
| 6.Humidifier control..... | 21 |
| 7.Fan indication..... | 21 |

VIII Troubleshooting


| | |
|--|----|
| [1] Troubleshooting..... | 22 |
| 1.Check methods..... | 22 |
| 2.DC fan motor (fan motor/indoor control board)..... | 26 |
| 3.Address switch setting..... | 27 |
| 4.Voltage test points on the control board..... | 28 |
| 5.Dipswitch setting (Factory setting)..... | 29 |

IX Disassembly Procedure

| | |
|---|----|
| [1] Disassembly Procedure..... | 32 |
| 1.Control box..... | 32 |
| 2.Thermistor (Return Air)..... | 33 |
| 3.Coil Assembly (thermistor, drainpan, heat exchanger)..... | 34 |
| 4.Blower/Fan Assembly..... | 36 |



[1] Features

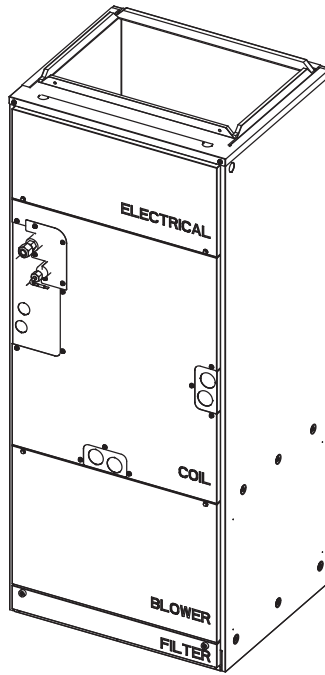


| Model | Cooling capacity/Heating capacity | |
|-----------------|-----------------------------------|-----------|
| | BTU/h | kW |
| PV FY-P12NAMU-E | 12000/13500 | 3.5/4.0 |
| PV FY-P18NAMU-E | 18000/20000 | 5.3/5.9 |
| PV FY-P24NAMU-E | 24000/27000 | 7.0/7.9 |
| PV FY-P30NAMU-E | 30000/34000 | 8.8/10.0 |
| PV FY-P36NAMU-E | 36000/40000 | 10.6/11.7 |
| PV FY-P48NAMU-E | 48000/54000 | 14.1/15.8 |
| PV FY-P54NAMU-E | 54000/60000 | 15.8/17.6 |


[1] Components and Functions

1. Indoor (Main) Unit


(1) Vertical

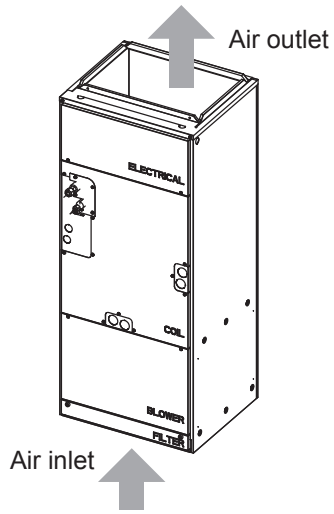


(2) Horizontal Right

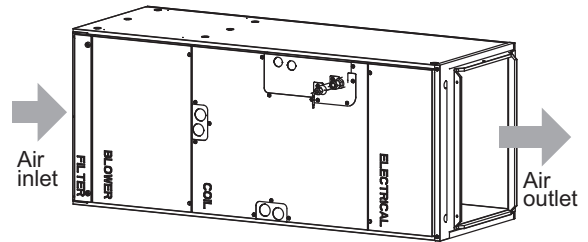

(3) Horizontal Left

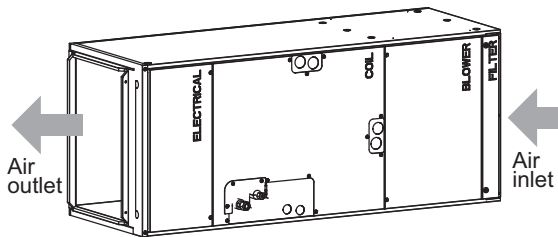

(4) Down Flow

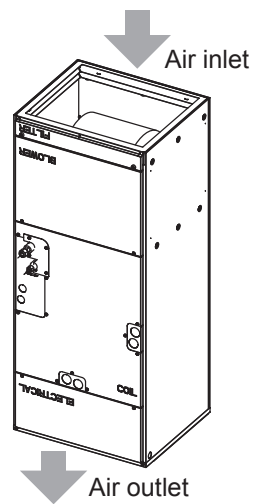


2. Remote Controller

[PAC-YT53CRAU]

Once the operation mode is selected, the unit will remain in the selected mode until changed.


(1) Remote Controller Buttons

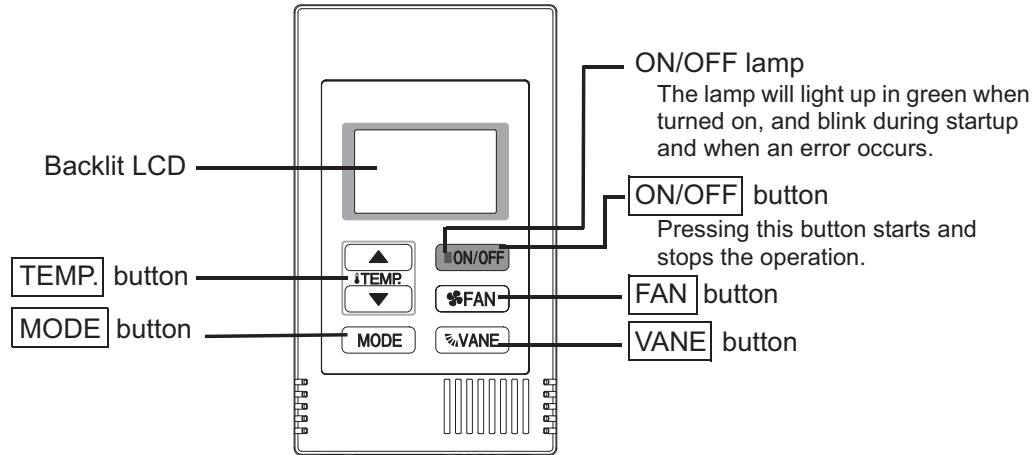

- ♦Keep the remote controller out of direct sunlight to ensure accurate measurement of room temperature.
- ♦The thermistor at the lower right-hand section of the remote controller must be free from obstructions to ensure accurate measurement of room temperature.
- ♦To set the functions that are not available on this controller (PAC-YT53CRAU), use MA remote controller or the centralized controller.

(2) Remote Controller Display

* All icons are displayed for explanation.

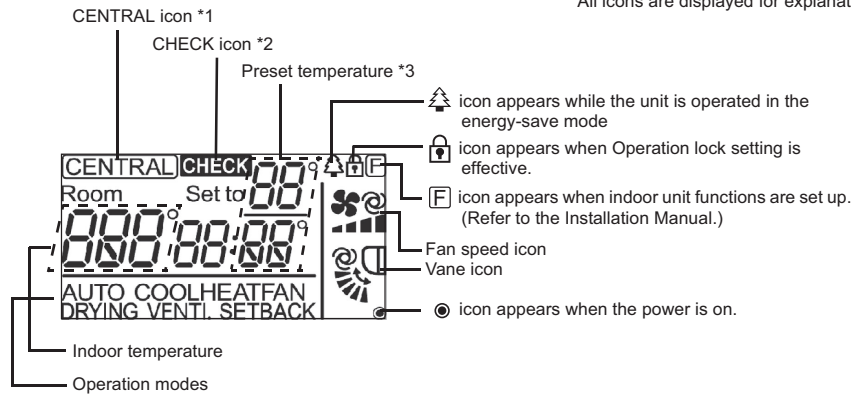

*1 **CENTRAL** icon


Appears when one of the following local operations is prohibited: ON/OFF; operation mode; preset temperature; fan speed; vane.

*2 **CHECK** icon


For M-Series and P-Series, when an error occurs, power indicator will blink, and refrigerant address (two digits), error code (two digits), and unit No. will blink.

For City Multi, when an error occurs, power indicator will blink, and unit address (three digits) and error code (four digits) will blink.

Check the error status, stop the operation, and consult your dealer.

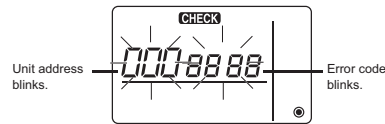


When only error code blinks, air conditioning units stay in operation, but an error may have occurred. Check the error code, and consult your dealer.

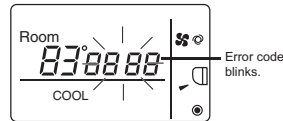


*3 Preset temperature

* Centigrade or Fahrenheit is selectable. Refer to the Installation Manual for details.

In COOL, HEAT, or AUTO (single set point) modes



In AUTO (dual set point) or SETBACK modes



[1] Specifications

1. Specifications

| Model | | PV FY-P12NAMU-E | PV FY-P18NAMU-E | PV FY-P24NAMU-E | PV FY-P30NAMU-E | |
|---|--------------------------------|--|---|-------------------|--------------------|--------------------|
| Power source | | 1-phase 208/230V 60Hz | | | | |
| Cooling capacity (Nominal) | *1 BTU / h | 12,000 | 18,000 | 24,000 | 30,000 | |
| | *1 kW | 3.5 | 5.3 | 7.0 | 8.8 | |
| | Power input | kW | 0.08 | 0.13 | 0.18 | 0.21 |
| | Current input | A | 0.80/0.70 | 1.20/1.10 | 1.60/1.40 | 2.00/1.70 |
| Heating capacity (Nominal) | *2 BTU / h | 13,500 | 20,000 | 27,000 | 34,000 | |
| | *2 kW | 4.0 | 5.9 | 7.9 | 10.0 | |
| | Power input | kW | 0.08 | 0.13 | 0.18 | 0.21 |
| | Current input | A | 0.80/0.70 | 1.20/1.10 | 1.60/1.40 | 2.00/1.70 |
| External finish | | Galvanized steel cabinet -Powder coated slate gray | | | | |
| External dimension H x W x D | | in. | 50-1/4x17x21-5/8 | | 54-1/4x21x21-5/8 | |
| | | mm | 1275 x 432 x 548 | | 1378 x 534 x 548 | |
| Net weight | | lbs (kg) | 113(51) | | 141(64) | |
| Heat exchanger | | Cross fin (Aluminium fin and copper tube) | | | | |
| FAN | Type x Quantity | | Sirocco fan x 1 | | | |
| | External static press. | in.WG | <0.30>-0.50-<0.80> | | | |
| | | Pa | <75>-125-<200> | | | |
| | Motor type | | DC motor | | | |
| | Motor output | kW | 0.121 | | 0.244 | |
| | Driving mechanism | | Direct-driven by motor | | | |
| | Airflow rate (Low-Mid-High) | cfm | 280-340-400 | 410-497-585 | 515-625-735 | 613-744-875 |
| m ³ / min | | 7.9-9.6-11.3 | 11.6-14.1-16.6 | 14.6-17.7-20.8 | 17.3-21.1-24.8 | |
| L / s | | 132-160-188 | 193-235-277 | 243-295-347 | 290-352-413 | |
| Sound pressure level (Low-Mid-High) (measured in anechoic room) | | dB <A> | 27-31-35 | 28-32-36 | 30-34-38 | 32-36-40 |
| Insulation material | | EPS, Polyethylene foam, Urethane foam | | | | |
| Air filter | | PP honeycomb fabric | | | | |
| Protection device | | Fuse | | | | |
| Refrigerant control device | | LEV | | | | |
| Connectable outdoor unit | | R410A CITY MULTI | | | | |
| Diameter of refrigerant pipe (O.D.) | Liquid (R410A) | in. (mm) | 1/4 (6.35) Brazed | 1/4 (6.35) Brazed | 3/8 (9.52) Brazed | 3/8 (9.52) Brazed |
| | Gas (R410A) | in. (mm) | 1/2 (12.7) Brazed | 1/2 (12.7) Brazed | 5/8 (15.88) Brazed | 5/8 (15.88) Brazed |
| Diameter of drain pipe | | in.(mm) | 3/4 (19.05) FPT | | | |
| Drawing | External | | PA94C316 | | | |
| | Wiring | | PA94C110 | | | |
| | Refrigerant cycle | | - | | | |
| Standard attachment | Document | | Installation Manual, Instruction Book | | | |
| | Accessory | | Tie band, Plastic tube, Drain pan seal | | | |
| Optional parts | External heater adapter | | PAC-YU25HT | | | |
| Remark | Installation | | Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual. Due to continuing improvement, above specifications may be subject to change without notice. | | | |

| | | | |
|--------|--|--|----------------|
| Note : | *1 Nominal cooling conditions | *2 Nominal heating conditions | Unit convertor |
| | Indoor : 80degF D.B. / 67degF W.B. (26.7degC D.B. / 19.4degC W.B.) | 70degF D.B. (21.1degC D.B.) | |
| | Outdoor : 95degF D.B. (35degC D.B.) | 47degF D.B. / 43degF W.B. (8.3degC D.B. / 6.1degC W.B.) | |
| | Pipe length : 25 ft. (7.6 m) | 25 ft. (7.6 m) | |
| | Level difference : 0 ft. (0 m) | 0 ft. (0 m) | |
| | *The external static pressure is set to 0.50in. WG(125Pa) at factory shipment. | | |
| | *Due to continuing improvement, above specification may be subject to change without notice. | | |
| | *Above specification data is subject to rounding variation. | | |

[III Specifications]

| Model | | PV FY-P36NAMU-E | PV FY-P48NAMU-E | PV FY-P54NAMU-E | |
|---|--------------------------------|---|---|--------------------|--------------------|
| Power source | | 1-phase 208/230V 60Hz | | | |
| Cooling capacity (Nominal) | *1 BTU / h | 36,000 | 48,000 | 54,000 | |
| | *1 kW | 10.6 | 14.1 | 15.8 | |
| | Power input kW | 0.34 | 0.42 | 0.48 | |
| | Current input A | 3.00/2.70 | 3.50/3.30 | 3.90/3.70 | |
| Heating capacity (Nominal) | *2 BTU / h | 40,000 | 54,000 | 60,000 | |
| | *2 kW | 11.7 | 15.8 | 17.6 | |
| | Power input kW | 0.34 | 0.42 | 0.48 | |
| | Current input A | 3.00/2.70 | 3.50/3.30 | 3.90/3.70 | |
| External finish | | Galvanized steel cabinet - Powder coated slate gray | | | |
| External dimension H x W x D | in. | 54-1/4x21x21-5/8 | 59-1/2x25x21-5/8 | | |
| | mm | 1378 x 534 x 548 | 1511 x 635 x 548 | | |
| Net weight | lbs (kg) | 141(64) | 172(78) | | |
| Heat exchanger | | Cross fin (Aluminium fin and copper tube) | | | |
| FAN | Type x Quantity | | Sirocco fan x 1 | | |
| | External static press. | in.WG | <0.30>-0.50-<0.80> | | |
| | | Pa | <75>-125-<200> | | |
| | Motor type | | DC motor | | |
| | Motor output | kW | 0.244 | 0.430 | |
| | Driving mechanism | | Direct-driven by motor | | |
| | Airflow rate (Low-Mid-High) | cfm | 767-931-1095 | 980-1190-1400 | 1040-1262-1485 |
| m ³ / min | | 21.7-26.4-31.0 | 27.7-33.7-39.6 | 29.4-35.7-42.0 | |
| L / s | | 362-440-517 | 463-562-660 | 492-595-702 | |
| Sound pressure level (Low-Mid-High) (measured in anechoic room) | dB <A> | 35-39-43 | 35-39-43 | 36-40-44 | |
| Insulation material | | EPS, Polyethylene foam,Urethane foam | | | |
| Air filter | | PP honeycomb fabric | | | |
| Protection device | | Fuse | | | |
| Refrigerant control device | | LEV | | | |
| Connectable outdoor unit | | R410A CITY MULTI | | | |
| Diameter of refrigerant pipe (O.D.) | Liquid (R410A) | in. (mm) | 3/8 (9.52) Brazed | 3/8 (9.52) Brazed | 3/8 (9.52) Brazed |
| | Gas (R410A) | in. (mm) | 5/8 (15.88) Brazed | 5/8 (15.88) Brazed | 5/8 (15.88) Brazed |
| Diameter of drain pipe | | in. (mm) | 3/4 (19.05) FPT | | |
| Drawing | External | | PA94C316 | | |
| | Wiring | | PA94C110 | | |
| | Refrigerant cycle | | - | | |
| Standard attachment | Document | | Installation Manual, Instruction Book | | |
| | Accessory | | Tie band, Plastic tube, Drain pan seal | | |
| Optional parts | External heater adapter | | PAC-YU25HT | | |
| Remark | Installation | | Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual. Due to continuing improvement, above specifications may be subject to change without notice. | | |

| Note : | *1 Nominal cooling conditions | *2 Nominal heating conditions | Unit convertor |
|--|--|--|---|
| Indoor : | 80degF D.B. / 67degF W.B. (26.7degC D.B. / 19.4degC W.B.) | 70degF D.B. (21.1degC D.B.) | kcal/h = kW x 860 BTU/h = kW x 3,412 |
| Outdoor : | 95degF D.B. (35degC D.B.) | 47degF D.B. / 43degF W.B. (8.3degC D.B. / 6.1degC W.B.) | cfm = m ³ /min x 35.31 lbs = kg / 0.4536 |
| Pipe length : | 25 ft. (7.6 m) | 25 ft. (7.6 m) | |
| Level difference : | 0 ft. (0 m) | 0 ft. (0 m) | |
| *The external static pressure is set to 0.50in. WG(125Pa) at factory shipment. | | | *Above specification data is subject to rounding variation. |
| *Due to continuing improvement, above specification may be subject to change without notice. | | | |

2. Electrical component specifications

| Component | Symbol | PVFY-P12NAMU-E | PVFY-P18NAMU-E | PVFY-P24NAMU-E |
|-----------------------------|-------------|---|----------------|----------------|
| Room temperature thermistor | TH21 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | | |
| Liquid pipe thermistor | TH22 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | | |
| Gas pipe thermistor | TH23 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | | |
| Fuse | FUSE | 250V 6.3A | | |
| Fan motor | | 8-pole, Output 121W SIC-71FW-D8121-3 | | |
| Linear expansion valve | LEV | 12VDC Stepping motor drive port diameter ø3.2 (0~2000 pulse) | | |
| Power supply terminal block | TB2 | (L1, L2, G) 250V 20A | | |
| Transmission terminal block | TB5 TB15 | (1, 2) 250V 15A, (M1, M2, S) 250V 20A | | |


| Component | Symbol | PVFY-P30NAMU-E | PVFY-P36NAMU-E |
|-----------------------------|-------------|---|----------------|
| Room temperature thermistor | TH21 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Liquid pipe thermistor | TH22 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Gas pipe thermistor | TH23 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Fuse | FUSE | 250V 6.3A | |
| Fan motor | | 8-pole, Output 244W SIC-81FW-D8244-1 | |
| Linear expansion valve | LEV | 12VDC Stepping motor drive port diameter ø3.2 (0~2000 pulse) | |
| Power supply terminal block | TB2 | (L1, L2, G) 250V 20A | |
| Transmission terminal block | TB5 TB15 | (1, 2) 250V 15A, (M1, M2, S) 250V 20A | |


| Component | Symbol | PVFY-P48NAMU-E | PVFY-P54NAMU-E |
|-----------------------------|-------------|---|----------------|
| Room temperature thermistor | TH21 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Liquid pipe thermistor | TH22 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Gas pipe thermistor | TH23 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Fuse | FUSE | 250V 6.3A | |
| Fan motor | | 8-pole, Output 430W M-MW-430-A-1 | |
| Linear expansion valve | LEV | 12VDC Stepping motor drive port diameter ø3.2 (0~2000 pulse) | |
| Power supply terminal block | TB2 | (L1, L2, G) 250V 20A | |
| Transmission terminal block | TB5 TB15 | (1, 2) 250V 15A, (M1, M2, S) 250V 20A | |

[1] Outlines and Dimensions

1. PVFY-P12,18, 24, 30, 36, 48, 54NAMU-E


Unit : mm(in.)

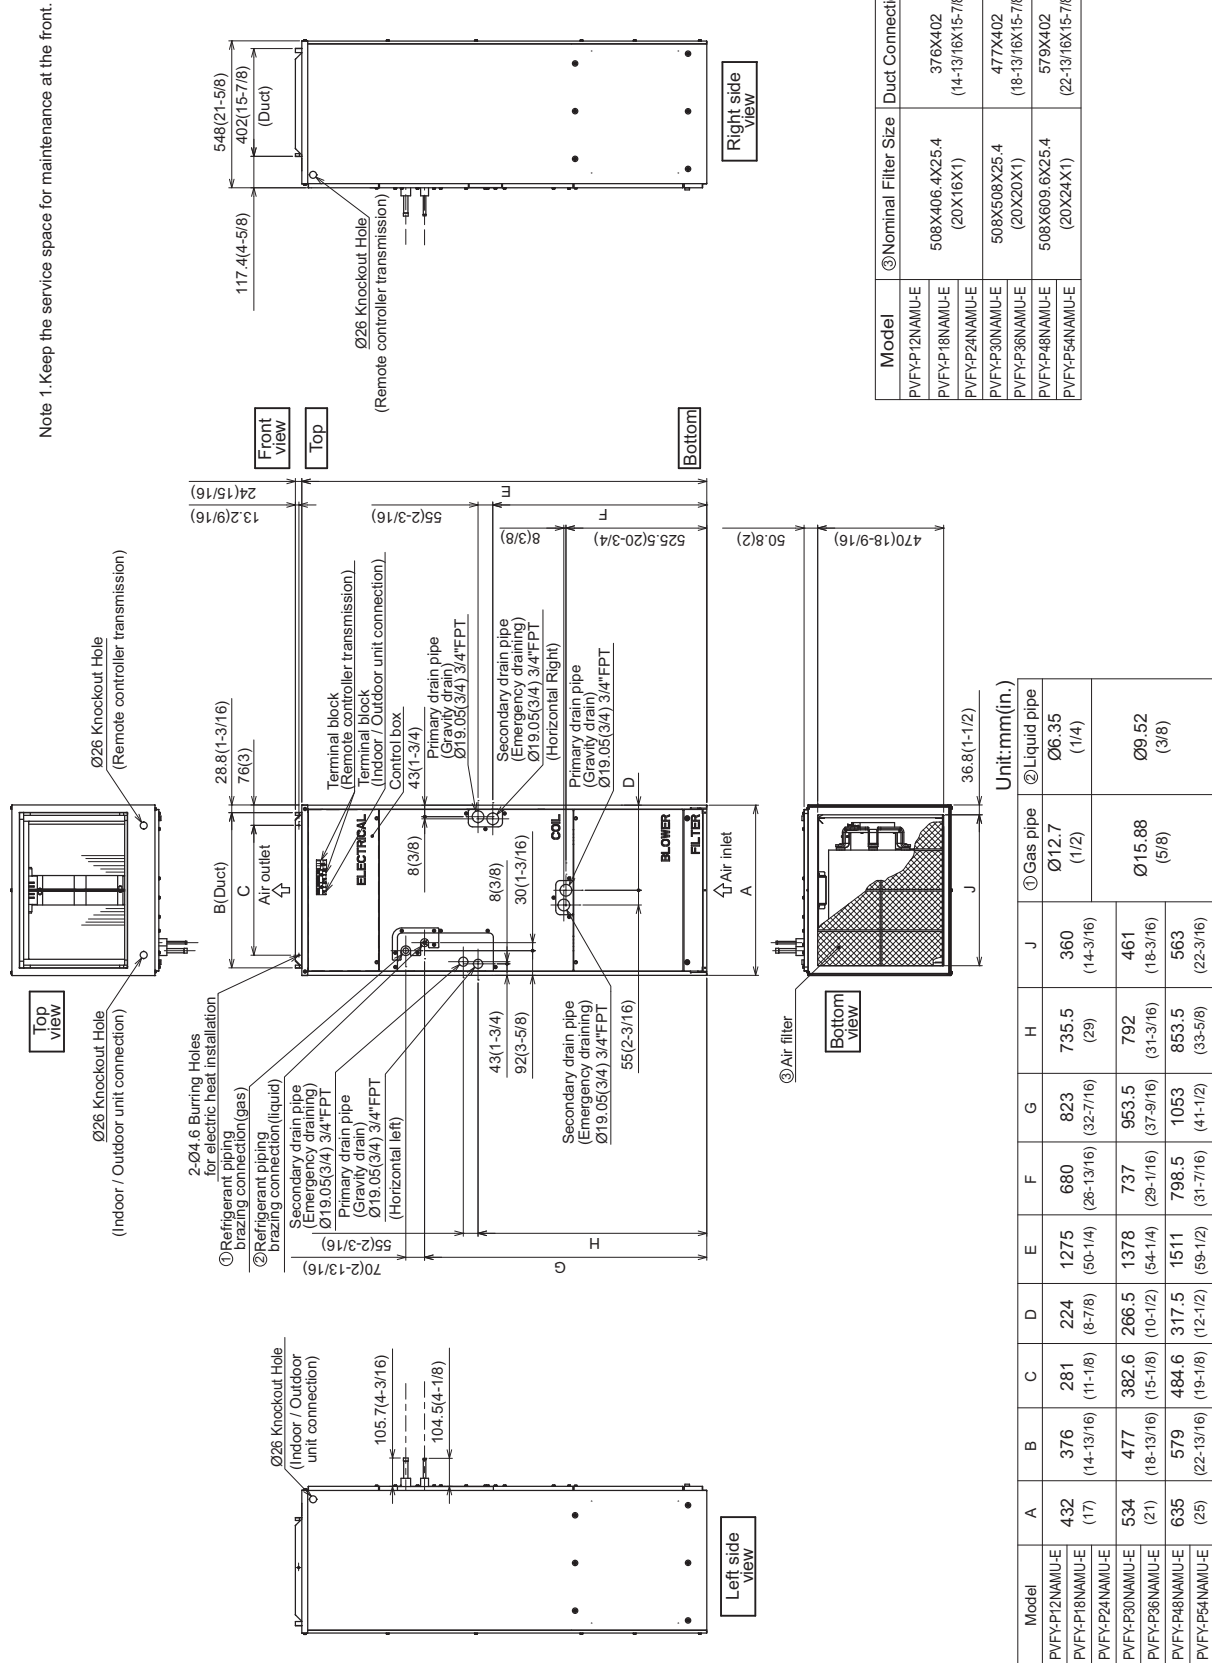

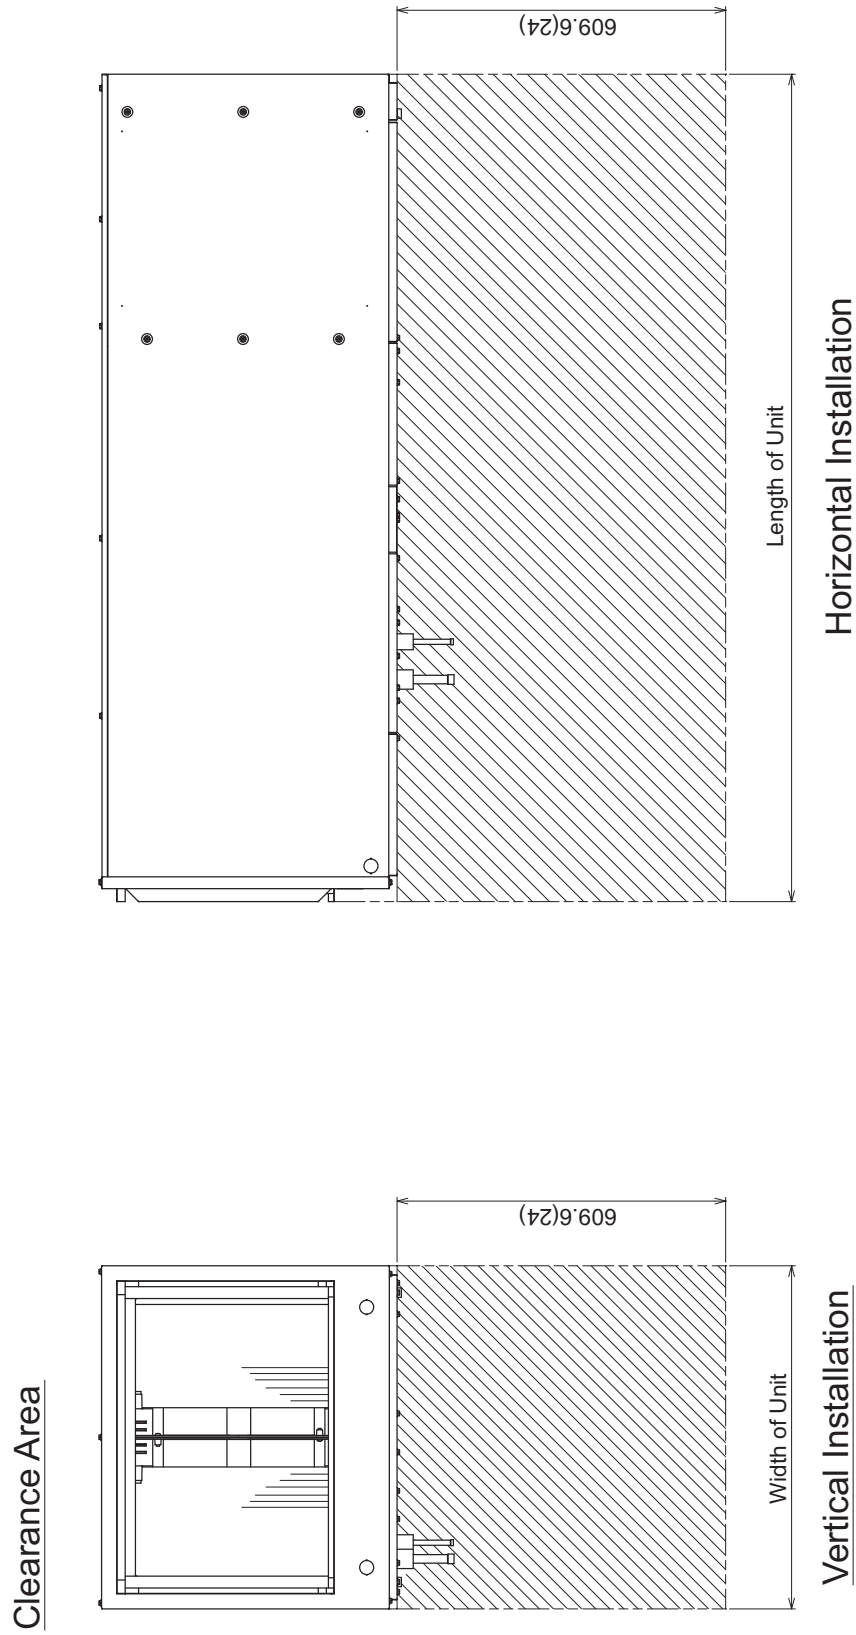

[1] Wiring Diagram

1. PVFY-P12, 18, 24, 30, 36, 48, 54NAMU-E

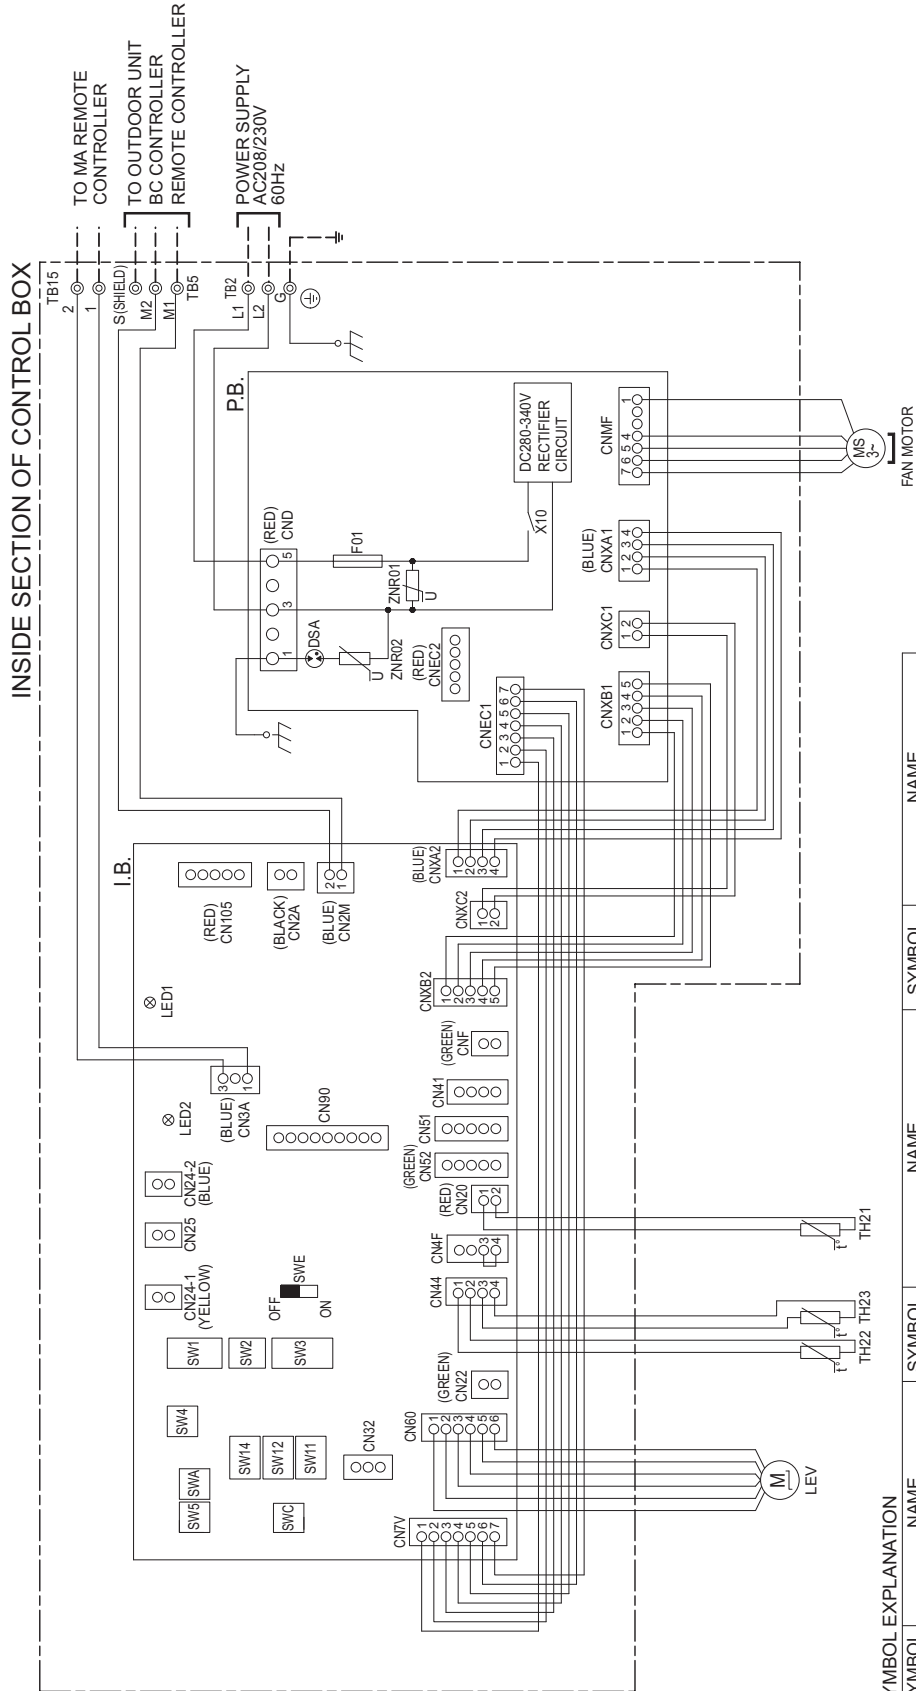

NOTE: 1. Symbols used in wiring diagram above are,

- : Connector
- : Terminal
- (Heavy dotted line): Field wiring


2. Use copper supply wires.

UTILISER DES FILS D'ALIMENTATION EN CUIVRE.

SYMBOL EXPLANATION

| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|----------|--------------------------------|--------|---|------------|--|
| I.B. | Indoor controller board | CN32 | Connector (Remote switch) | SW1(L.B.) | Switch (for mode selection) |
| P.B. | Power supply board | CN41 | Connector (HA terminal-A) | SW2(L.B.) | Switch (for capacity code) |
| TB2 | Power source terminal block | CN51 | Connector (Centrally control) | SW3(L.B.) | Switch (for mode selection) |
| TB5 | Transmission terminal block | CN52 | Connector (Remote indication) | SW4(L.B.) | Switch (for mode selection) |
| TB15 | Transmission terminal block | CN90 | Connector (Wireless) | SW5(L.B.) | Switch (for mode selection) |
| F01 | Fuse AC250V 6.3A | CN105 | Connector (TT terminal) | SW11(L.B.) | Switch (1st digit address set) |
| ZNR01,02 | Varistor | CN2A | Connector (0-10V Analog input) | SW12(L.B.) | Switch (10ths digit address set) |
| DSA | Arrester | CNEC2 | Connector (FAN indication) | SW14(L.B.) | Switch (connection No.set) |
| X10 | Aux. relay | CNF | Connector (Humidity input) | SWA(L.B.) | Switch (for static pressure selection) |
| CN22 | Connector (Fan control) | TH21 | Thermistor (inlet air temp.detection) | SWE(L.B.) | Connector (emergency operation) |
| CN24-1 | Connector (Heater control 1st) | TH22 | Thermistor (piping temp.detection/liquid) | LED1 | LED (Power supply) |
| CN24-2 | Connector (Heater control 2nd) | TH23 | Thermistor (piping temp.detection/gas) | LED2 | LED (Remote controller supply) |
| CN25 | Connector (Humidity output) | | | | |

[1] Refrigerant system diagram

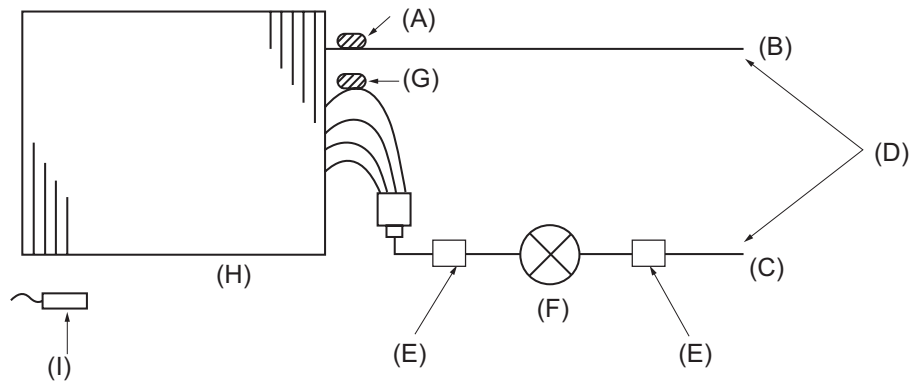


- (A) Gas pipe thermistor TH23
- (B) Gas pipe
- (C) Liquid pipe
- (D) Brazed connections
- (E) Strainer (#100 mesh)
- (F) Linear expansion valve
- (G) Liquid pipe thermistor TH22
- (H) Heat exchanger
- (I) Room temperature thermistor TH21

| Capacity | PVFY-P12, 18NAMU-E | PVFY-P24, 30, 36, 48, 54NAMU-E |
|-------------|--------------------|--------------------------------|
| Gas pipe | ø12.7 [1/2] | ø15.88 [5/8] |
| Liquid pipe | ø6.35 [1/4] | ø9.52 [3/8] |

[1] Microprocessor Control

1. Cool operation

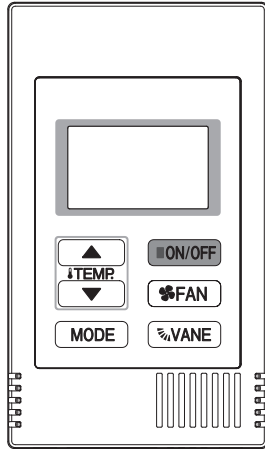

<How to operate>

1. Press POWER **ON/OFF** button.
2. Press the operation **MODE** button to display COOL.
3. Press the **TEMP.** button to set the desired temperature.

Note

The set temperature changes 2°F when the **TEMP.** button is pressed one time. Cooling 67 to 87°F

1. Thermoregulating function

(1) Thermoregulating function (Function to prevent restarting for 3 minutes)

When indoor units are connected to the PUHY/PURY/PQHY/PQRY series of outdoor units.

- ♦Room temperature ≥ desired temperature + 0.9°F ...Thermo ON
- ♦Room temperature < desired temperature - 0.9°F...Thermo OFF

When indoor units are connected to the PUMY series of outdoor units.

- ♦Room temperature ≥ desired temperature + 1.8°F ...Thermo ON
- ♦Room temperature < desired temperature ...Thermo OFF

(2) Anti-freezing control

♦Detected condition :

When the liquid pipe temp. (TH22) is 32°F or less in 16 minutes from compressors start up, anti-freezing control starts and the thermo OFF.

♦Released condition :

The timer which prevents reactivating is set for 3 minutes, and anti-freezing control is cancelled when any one of the following conditions is satisfied.

- 1) Liquid pipe temp. (TH22) turns 50°F or above.
- 2) The condition of the thermo OFF has become complete by thermoregulating, etc.
- 3) The operation modes became mode other than COOL.
- 4) The operation stopped.


2. Fan

(1) By the remote controller setting (switch of 3 speeds+Auto)

| Type | Fan speed notch |
|----------------------|------------------------------|
| 3 speeds + Auto type | [Low], [Med], [High], [Auto] |

- ♦When [Auto] is set, fan speed is changed depending on the value of: Room temperature - Desired temperature

2. Fan operation

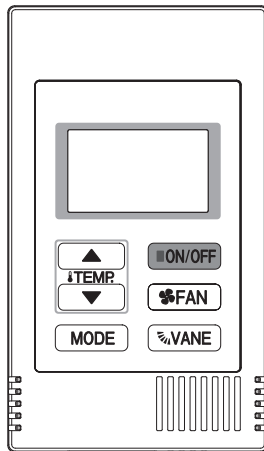

<How to operate>

1. Press POWER **ON/OFF** button.
2. Press the operation **MODE** button to display FAN.


1. Fan

- (1) Set by remote controller.

| Type | Fan speed notch |
|----------------------|------------------------------|
| 3 speeds + Auto type | [Low], [Med], [High], [Auto] |

♦When [Auto] is set, fan speed becomes [Low].

3. Heat operation

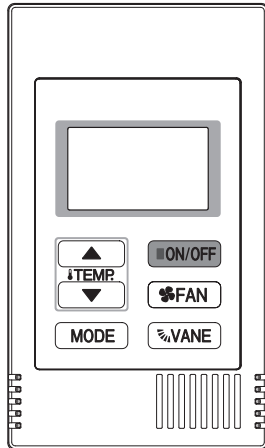

<How to operate>

1. Press POWER **ON/OFF** button.
2. Press the operation **MODE** button to display HEAT.
3. Press the **TEMP.** button to set the desired temperature.

Note

The set temperature changes 2°F when the **TEMP.** button is pressed one time. Heating 63 to 83°F.

1. Thermoregulating function

(1) Thermoregulating function (Function to prevent restarting for 3 minutes)

When indoor units are connected to the PUHY/PURY/PQHY/PQRY series of outdoor units.

- ♦Room temperature < desired temperature -0.9°F ...Thermo ON
- ♦Room temperature ≥ desired temperature +0.9°F ...Thermo OFF

When indoor units are connected to the PUMY series of outdoor units.

- ♦Room temperature < desired temperature -1.8°F ...Thermo ON
- ♦Room temperature ≥ desired temperature ...Thermo OFF

2. Fan

(1) By the remote controller setting (switch of 3 speeds+Auto)

| Type | Fan speed notch |
|----------------------|------------------------------|
| 3 speeds + Auto type | [Low], [Med], [High], [Auto] |

♦When [Auto] is set, fan speed is changed depending on the value of:


Desired temperature - Room temperature
Give priority to under-mentioned controlled mode

- 1) Hot adjust mode
- 2) Preheating exclusion mode
- 3) Thermo OFF mode (When the compressor off by the thermoregulating)
- 4) Cool air prevention mode (Defrosting mode)
- 5) Capacity increasing mode

(2) Hot adjust mode

♦The fan controller becomes the hot adjuster mode for the following conditions.

- 1) When starting the HEAT operation
- 2) When the thermoregulating function changes from OFF to ON.
- 3) When release the HEAT defrosting operation

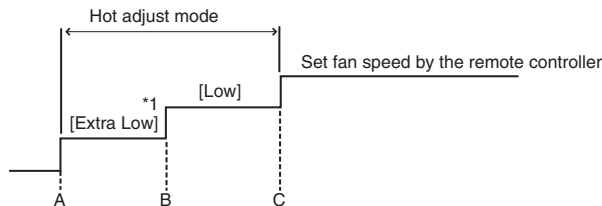

A: Hot adjust mode starts.

B: 5 minutes have passed since the condition A or the indoor liquid pipe temperature turned 95°F or more.

C: 2 minutes have passed since the condition A. (Terminating the hot adjust mode)

*1 The fan may stop, depending on the operation status of the indoor units or on the unit settings.

(3) Preheating exclusion mode

- ♦When the condition changes the auxiliary heater ON to OFF (thermoregulating or operation stop, etc.), the indoor fan operates in [Low] mode for 1 minute.

Note

This control is same for the model without auxiliary heater.


(4) Thermo OFF mode

- ♦When the thermoregulating function changes to OFF, the indoor fan operates in [Extra low].

(5) Heat defrosting mode

- ♦The indoor fan stops.

4. Auto operation [Automatic cool / heat change over operation]

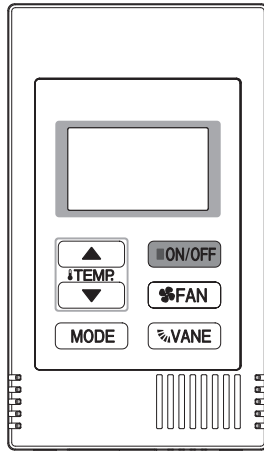

<How to operate>

1. Press POWER **ON/OFF** button.
2. Press the operation **MODE** button to display AUTO.
3. Press the **TEMP.** button to set the desired temperature.

Note

The set temperature changes 2°F when the **TEMP.** button is pressed one time. Automatic 67 to 83°F

1. Initial value of operation mode

- (1) HEAT mode for room temperature < Desired temperature
- (2) COOL mode for room temperature ≥ Desired temperature

2. Mode change

- (1) HEAT mode -> COOL mode
Room temperature ≥ Desired temperature + 3°F. or 3 min. has passed
- (2) COOL mode -> HEAT mode
Room temperature ≤ Desired temperature - 3°F. or 3 min. has passed

3. COOL mode

- (1) Same control as cool operation

4. HEAT mode

- (1) Same control as heat operation
The value "3°F" is modifiable from 1.8°F to 9°F by maintenance tool.

5. Heater control

1. Control specifications and DIP S/W setting

♦Table 1 shows how the field-installed heater is controlled. Select the desired pattern in the table below, and set the DIP S/W on the outdoor and indoor units as shown in Table 1. See section 3 "Installation" for details. The table below shows Heater Control patterns #1, 2, and 3.

Table.1

| Outdoor unit setting | Condition of outdoor unit | | PVFY-NAMU-E | | | | |
|---|--|--|-----------------------|-------|----------------|---------|-------|
| | | | DIP S/W (Indoor unit) | | Heater control | | |
| | | | SW3-2 | SW3-4 | Pattern | Defrost | Error |
| DIP S/W OFF In the case of: TGMU: S/W5-2 OFF THMU/YHMU/ TJMU/YJMU: S/W5-10 OFF TKMU/YKMU: SW4: 932 OFF PUMY: S/W4-4 OFF | N / A | | - | OFF | #1 | OFF | OFF |
| | | | OFF | ON | #2 | OFF | ON*1 |
| | | | ON | ON | #3 | OFF | ON*1 |
| DIP S/W ON In the case of: TGMU: S/W5-2 ON THMU/YHMU/ TJMU/YJMU: S/W5-10 ON TKMU/YKMU: SW4: 932 ON PUMY: S/W4-4 ON | <p>Condition of O/U</p> <p>Normal drive Defrost drive H/P drive H/P stop</p> <p>a b c d Outdoor temp.</p> <p>Parameters a/b/c/d are set by maintenance tool.</p> | Normal drive | - | OFF | #1 | OFF | OFF |
| | | | OFF | ON | OFF | OFF | OFF |
| | | | ON | ON | OFF | OFF | OFF |
| | | Defrost drive H/P drive H/P stop | - | OFF | #1 | OFF | OFF |
| | | | OFF | ON | #2 | OFF | ON*1 |
| | | | ON | ON | #3 | OFF | ON*1 |

*1. Not applicable to communication error, return air thermistor error, and motor error.

Table 2
When indoor units are connected to the PUHY/PURY/PQHY/PQRY series of outdoor units

| Heater control | | | DIP switch setting | | Initial setting |
|-------------------------------------|-----------------|--|--------------------|-------|-----------------|
| Pattern | Output | Details | SW3-2 | SW3-4 | |
| #1 (Enable heater basic control) | 1 st | Heater OFF Inlet air temp. \geq set temp. $+0.9^{\circ}\text{F}(+0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-2.7^{\circ}\text{F}(-1.5^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] or [ERROR] is displayed. | - | OFF | - |
| | | | | | |
| #2 (Enable heater comfort mode) | 1 st | Heater OFF Inlet air temp. \geq set temp. $+0.9^{\circ}\text{F}(+0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-0.9^{\circ}\text{F}(-0.5^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | OFF | ON | ○ |
| | | | | | |
| #3 (Enable heater economy mode) | 2 nd | Heater OFF Inlet air temp. \geq set temp. $+0.9^{\circ}\text{F}(+0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-1.8^{\circ}\text{F}(-1^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | ON | ON | - |
| | | | | | |
| #3 (Enable heater economy mode) | 1 st | Heater OFF Inlet air temp. \geq set temp. $-0.9^{\circ}\text{F}(-0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-2.7^{\circ}\text{F}(-1.5^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | ON | ON | - |
| | | | | | |
| #3 (Enable heater economy mode) | 2 nd | Inlet air temp. \geq set temp. $-0.9^{\circ}\text{F}(-0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-3.6^{\circ}\text{F}(-2^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | ON | ON | - |
| | | | | | |

1st: Heater output from CN24-1(yellow) on the indoor unit control board
 2nd: Heater output from CN24-2(blue) on the indoor unit control board

Table 3
When indoor units are connected to the PUMY series of outdoor units

| Heater control | | | DIP switch setting | | Initial setting |
|-------------------------------------|-----------------|---|--------------------|-------|-----------------|
| Pattern | Output | Details | SW3-2 | SW3-4 | |
| #1 (Enable heater basic control) | 1 st | Heater OFF Inlet air temp. \geq set temp. Heater ON Inlet air temp. $<$ set temp. $-3.6^{\circ}\text{F}(-2^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] or [ERROR] is displayed. | - | OFF | - |
| | | | | | |
| #2 (Enable heater comfort mode) | 1 st | Heater OFF Inlet air temp. \geq set temp. Heater ON Inlet air temp. $<$ set temp. $-1.8^{\circ}\text{F}(-1^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | OFF | ON | ○ |
| | | | | | |
| #3 (Enable heater economy mode) | 2 nd | Heater OFF Inlet air temp. \geq set temp. $+0.9^{\circ}\text{F}(+0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-1.8^{\circ}\text{F}(-1^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | ON | ON | - |
| | | | | | |
| #3 (Enable heater economy mode) | 1 st | Heater OFF Inlet air temp. \geq set temp. $-0.9^{\circ}\text{F}(-0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-2.7^{\circ}\text{F}(-1.5^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | ON | ON | - |
| | | | | | |
| | 2 nd | Inlet air temp. \geq set temp. $-0.9^{\circ}\text{F}(-0.5^{\circ}\text{C})$ Heater ON Inlet air temp. $<$ set temp. $-3.6^{\circ}\text{F}(-2^{\circ}\text{C})$ · The fan will stop and the heater will turn off when [DEFROST] is displayed. | ON | ON | - |
| | | | | | |

1st: Heater output from CN24-1(yellow) on the indoor unit control board
 2nd: Heater output from CN24-2(blue) on the indoor unit control board

Note

- (1) Turning on the heater with the fan setting set to OFF requires that the DIP S/W and connectors on the indoor units are set on site.

Fan control

| Pattern | PVFY-NAMU-E | | | |
|---------|--|--------------------------|-------------------|------------------------------------|
| | CN22 for FAN control (YU25) | DIP S/W3-4 (Indoor unit) | Fan in defrost | Fan (All modes other than Defrost) |
| 1 | Disabled (CN22 cannot be used with this unit) | OFF | Stop (Heater OFF) | Set (Heater ON) |
| 2 | | ON | Stop (Heater OFF) | High* ¹ (Heater ON) |

*1. While the heater is on, the fan will operate at high speed regardless of the fan setting on the remote controller.



*** If a heater is installed in the duct, do not use CN22. By doing so, the fan will turn off when the heater is on, which may result in fire.**

- (2) Back-up heating will not be performed when the heater turns on while demand control is performed (not a request item).
- (3) This is applicable only to the R410 series. Make the settings for the following dip switches on the outdoor unit control board before switching on the power.

2. PAC-YU25HT (Optional Parts) installation

The following section describes installation of the External Heater Adapter that connects to CITY MULTI air conditioner R410A series indoor unit. This products is the special wiring parts to drive an electric heater with the air conditioner.

(1) Parts list

•Check that the following parts are included in the package.

- 1) External output cable (with a yellow connector).....2 in total
Two types of cables with different connectors are included.
 - 2) Panel heater connector..... 3 in total
White: 1
Green: 2 (2 types)
- * Panel heater connectors cannot be used with this unit.

(2) Connection to the indoor unit


•Use the cables that fit the connectors on the indoor unit control board.

1) External output cable (with a yellow connector)

This cable is used to connect a relay circuit for an interlocked operation with either an electric or a panel heater. Select the heater output pattern (1st =CN24-1 or 2nd = CN24-2) to use, and connect the cable to the connector on the indoor unit control board that corresponds to the selection.

(3) Locally procured wiring

•A basic connection method is shown below.

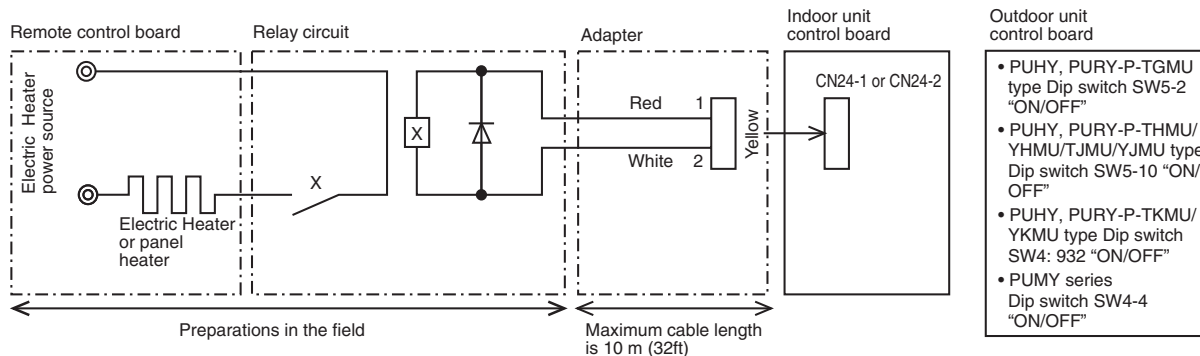

•For relay X use the specifications given below Operation coil

Rated voltage: 12VDC


Power consumption: 1W or less

* Use the diode that is recommended by the relay manufacturer at both ends of the relay coil.

•The length of the electrical wiring for the PAC-YU25HT is 2 meters (6-1/2 ft.)

- ♦To extend this length, use sheathed 2-core cable.
- Control cable type: CVV, CVS, CPEV or equivalent.
- Cable size: 0.5 mm² ~ 1.25 mm² (16 to 22 AWG)
- Don't extend the cable more than 10 meters (32ft)

Recommended circuit

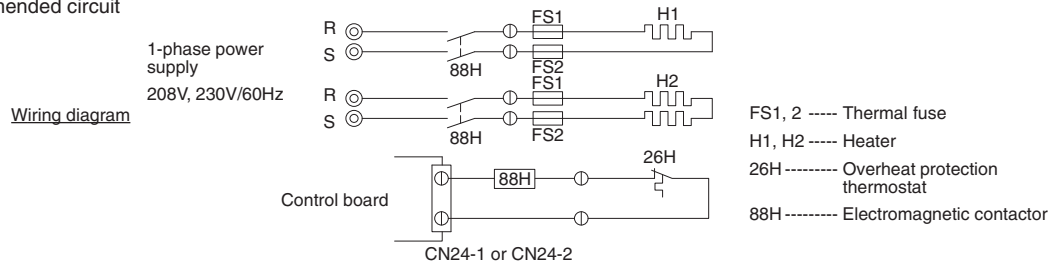

(4) Wiring restrictions

- ♦Keep the length of the cable connecting to the circuit board of the indoor unit shorter than 10 meters (32ft).
- ♦Longer than 10 meters (32ft) could cause improper operation.
- ♦Use a transit relay when extending wiring such as remote wiring.

6. Humidifier control

1. Control specifications and DIP S/W setting

The below table shows how the field installed humidifier and fan speed is controlled.


| DIP switch setting SW1 6 | Humidistat output CNF input | Condition (no defrost/no error) | CN25 output | Fan speed |
|-----------------------------|--------------------------------|---------------------------------|-------------|------------|
| OFF | OFF | Heat operation & Thermo OFF | OFF | RC setting |
| | | Heat operation & Thermo ON | OFF | RC setting |
| | ON | Heat operation & Thermo OFF | OFF | RC setting |
| ON | OFF | Heat operation & Thermo ON | ON | High |
| | | Heat operation & Thermo OFF | OFF | RC setting |
| | ON | Heat operation & Thermo ON | ON | High |
| - | - | Except for heat operation | OFF | RC setting |

RC:Remote controller

The fan continues to run for 30 seconds after the humidifier stops.

2. Installation

A basic connection method is shown below.

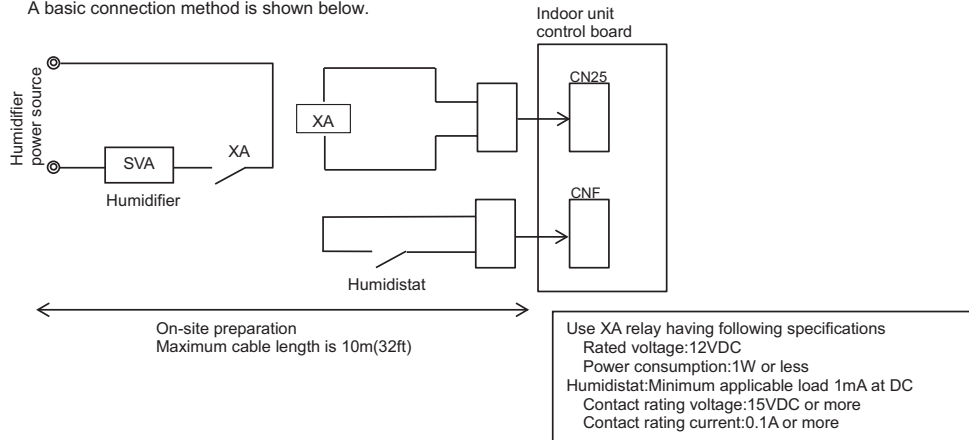

7. Fan indication


1. Indication specifications

The below table shows how the fan indication is controlled.

| Condition Fan speed | CNEC2 output | |
|------------------------|--------------------|--------------|
| | Relay on the board | No. of CNEC2 |
| Very low | X11 | 1 |
| Low | X12 | 2 |
| Middle | X13 | 3 |
| High | X14 | 4 |

2. Installation

A basic connection method is shown below.

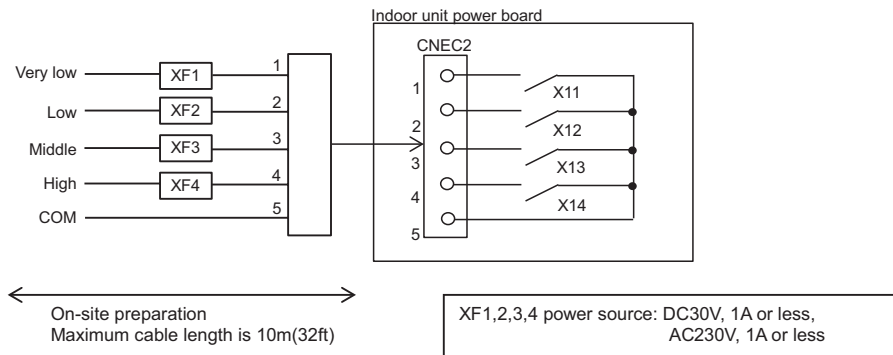

[1] Troubleshooting

1. Check methods

1. Component and check points

(1) Thermistor

- Room temperature thermistor (TH21)
- Liquid pipe thermistor (TH22)
- Gas pipe thermistor (TH23)

Disconnect the connector and measure the resistance between terminals with a tester.
(Ambient temperature 10°C - 30°C[50°F-86°F])

| | |
|---------------|---------------|
| Normal | Abnormal |
| 4.3kΩ - 9.6kΩ | Open or short |

(Refer to the thermistor characteristic graph below.)

1) Thermistor characteristic graph

Low-temperature thermistor

- Room temperature thermistor (TH21)
- Liquid pipe thermistor (TH22)
- Gas pipe thermistor (TH23)
- Drain sensor (DS)


- Thermistor R₀ = 15 kΩ±3%
- Multiplier of B = 3480 kΩ±2%

$$R_t = 15 \exp \left\{ 3480 \left(\frac{1}{273+t} - \frac{1}{273} \right) \right\}$$

| | | |
|------|-------|-------|
| 0°C | 32°F | 15kΩ |
| 10°C | 50°F | 9.6kΩ |
| 20°C | 68°F | 6.3kΩ |
| 25°C | 77°F | 5.2kΩ |
| 30°C | 86°F | 4.3kΩ |
| 40°C | 104°F | 3.0kΩ |

(A) Temperature (°C)[°F]

(B) Resistance (kΩ)

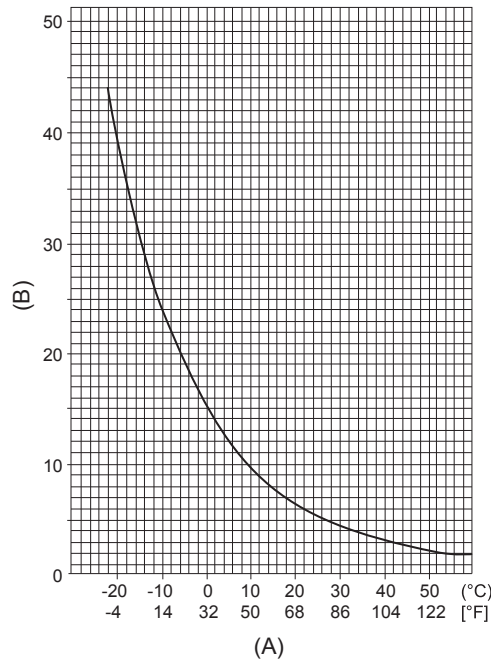

(2) Fan motor (CNMF)

Refer to the page on "DC fan motor (fan motor/indoor control board)."

(3) Linear expansion valve

Disconnect the connector, and measure the resistance between terminals with a tester.
Refer to the next page for details.


| | | | | | |
|-------------|------------------|-------------------|-------------------|-----------------|---------------|
| | Normal | | | | Abnormal |
| | 1-6 White-Red | 2-6 Yellow-Red | 3-6 Orange-Red | 4-6 Blue-Red | |
| (150Ω) ±10% | | | | | Open or short |
| | | | | | |

- (A) Red
- (B) Blue
- (C) Orange
- (D) Yellow
- (E) White
- (F) White

1) Summary of linear expansion valve (LEV) operation

- ♦The LEV is operated by a stepping motor, which operates by receiving a pulse signal from the indoor control board.
- ♦The LEV position changes in response to the pulse signal.

Indoor control board and LEV connection

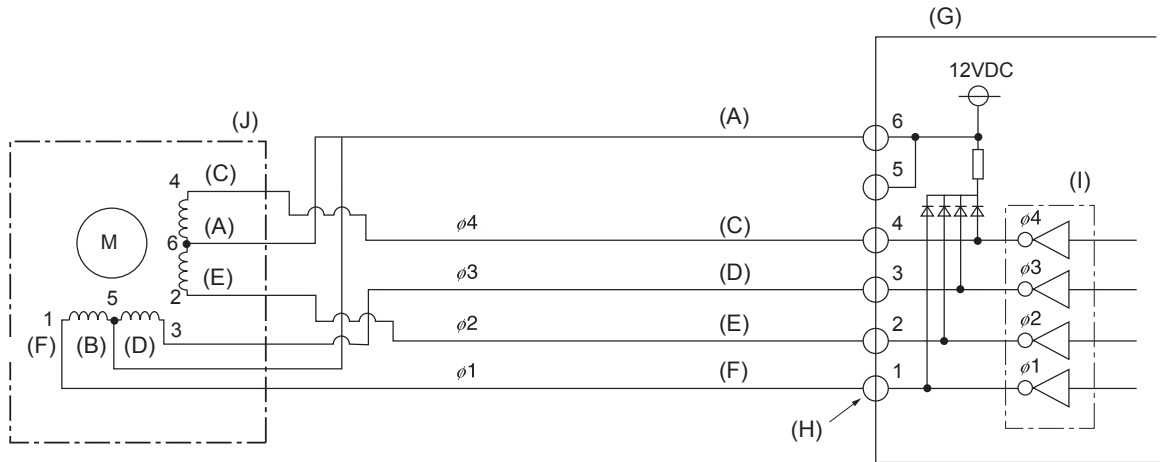

- | | |
|------------|----------------------------|
| (A) Red | (G) Control board |
| (C) Blue | (H) Connection (CN60) |
| (D) Orange | (I) Drive circuit |
| (E) Yellow | (J) Linear expansion valve |
| (F) White | |

Pulse signal output and valve operation

| Phase number | Output pulse | | | |
|--------------|--------------|-----|-----|-----|
| | 1 | 2 | 3 | 4 |
| ø1 | ON | OFF | OFF | ON |
| ø2 | ON | ON | OFF | OFF |
| ø3 | OFF | ON | ON | OFF |
| ø4 | OFF | OFF | ON | ON |


The output pulse changes in the following order:

When the valve closes 1 -> 2 -> 3 -> 4 -> 1

When the valve opens 4 -> 3 -> 2 -> 1 -> 4

- ♦When the valve position remains the same, all output signals will be OFF.
- ♦If any output signal is missing or if the signal remains ON, the motor vibrates and makes clicking noise.

2) LEV operation

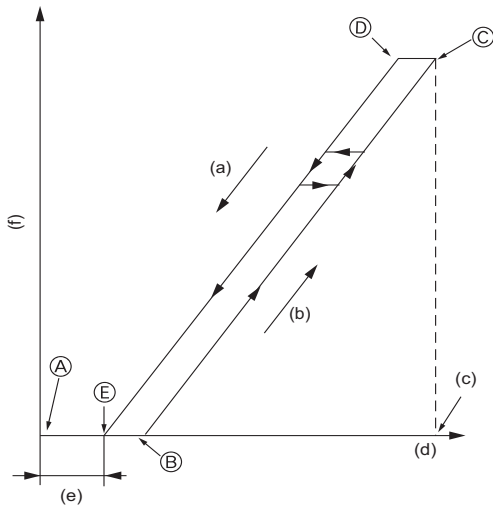


- (a) Close
- (b) Open
- (c) Fully open valve (2000 pulses or 3000 pulses)
- (d) No. of pulses
- (e) Extra tightening (41 - 100 pulse)
- (f) Valve opening degree

- ♦When the power is turned on, a pulse signal of fully open pulse + 10% pulse is output (valve closure signal), to bring the valve to position A.
- ♦When the valve is operating normally, it is free of vibration noise. If the valve locks or when it goes from point E to A in the figure, it makes louder noise than would be heard when there is an open phase.
- ♦Check for abnormal sound/vibration by placing the metal tip of a screwdriver against the valve and the handle side against your ear.

3) Troubleshooting

| Symptom | Checking Criteria | Remedy |
|---|--|--|
| Circuit failure on the microcomputer | <p>Disconnect the connectors on the control board, and connect LEDs to test the circuit as shown below.</p> <p>Pulse signals are output for 10 seconds when the main power is turned on. If there are LEDs that do not light up at all or remain lit after the pulses are turned off, there is a problem with the driving circuit.</p> | Replace the indoor control board if driving circuit failure is detected. |
| Locked LEV | The motor will idle and make small clicking noise if it is run while the LEV is locked. If this clicking noise is heard both when the valve is fully closed and while it is being opened, it indicates a problem. | Replace the LEV. |
| Disconnected or shorted LEV motor coils | Measure the resistance between the coils with a tester (red-white, red-orange, Red-yellow, Red-blue). The normal range of resistance is $150\Omega \pm 10\%$ | Replace the LEV. |

| Symptom | Checking Criteria | Remedy |
|--|---|--|
| <p>Valve closure failure (leaky valve)</p> | <p>To check the LEV on the indoor unit, check the indoor unit liquid pipe temperature that appears on the operation monitor on the outdoor unit's multi control board while operating the indoor unit in question in the FAN mode and the other indoor units in the cooling mode.</p> <p>(A) Termistor (TH22)</p>  <p>Normally, the LEV is fully closed while the unit is in the FAN mode. If the valve is leaky, liquid pipe thermistor reading will be lower than normal. If it is significantly lower than the inlet temperature on the remote controller, valve closure failure is suspected. If the amount of leakage is insignificant, replacement of LEV is unnecessary unless it is causing a problem.</p> | <p>Replace the LEV if the amount of leakage is great.</p> |
| <p>Misconnections of connectors or contact failure</p> | <p>Perform a visual check for disconnected connectors. Perform a visual check of lead wire color.</p> | <p>Disconnect the connectors on the control board and perform a continuity test.</p> |


2. DC fan motor (fan motor/indoor control board)

1. CAUTION

- ♦A high voltage is applied to the connector for connection to the fan motor (CNMF).
- ♦Do not unplug the connector CNMF with the unit energized to avoid damage to the indoor control board and fan motor.

2. Troubleshooting

Symptom : The indoor fan cannot turn around.


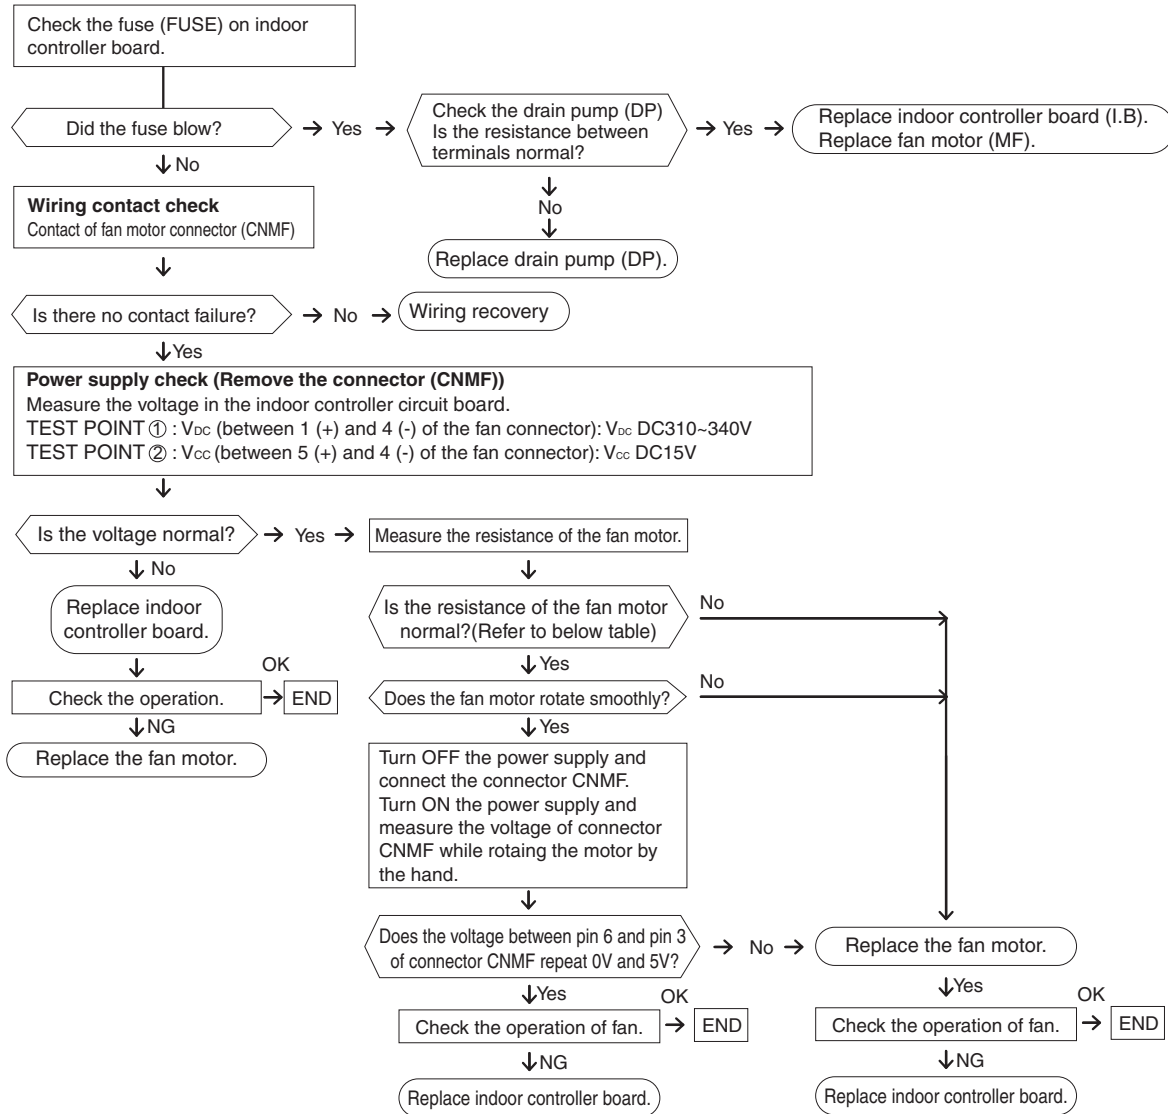


| | PV FY- P12,18,24,30,36 NAMU-E | PV FY- P48,54 NAMU-E |
|------------------|-------------------------------------|----------------------------|
| Measuring points | Resistance | |
| pin 1 - pin 3 | O.L. | 1MΩ |
| pin 4 - pin 3 | 50kΩ | 47kΩ |
| pin 5 - pin 3 | 150kΩ | 143kΩ |
| pin 6 - pin 3 | O.L. | O.L. |

*To measure the resistance, connect the negative (-) end of the tester to pin 3.

3. Address switch setting

Make sure that power to the unit is turned off.

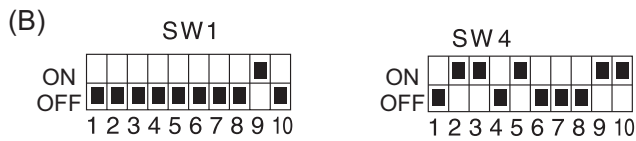
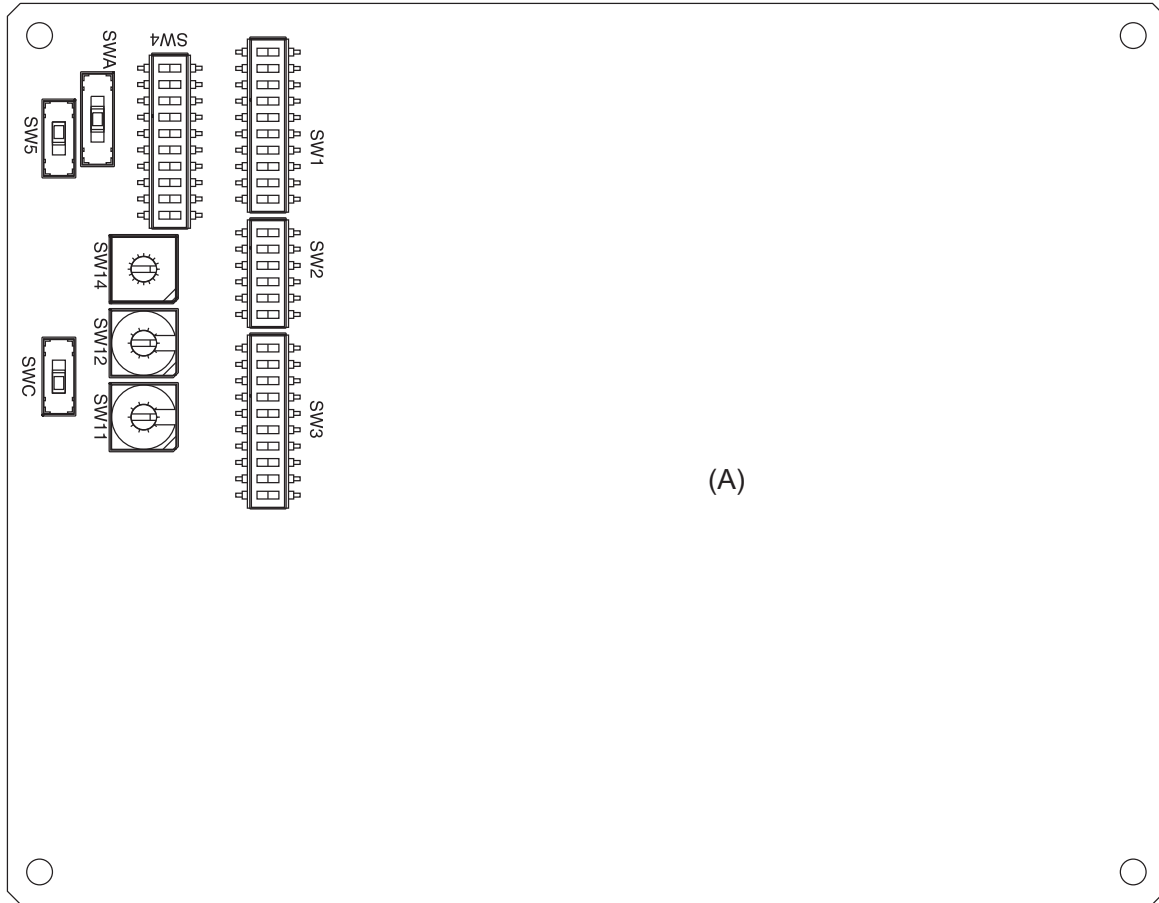


- (A) Indoor unit control board
- (B) Factory setting (all models)

1. When using an ME remote controller, set the address with the rotary switches (SW11, SW12).
 - ♦Address setting is not required when the unit remote controller is used.
 - On-site address setting is required for the indoor units to run.**
2. Address settings vary in different systems.
Refer to the section on address setting in the outdoor unit installation manual.
3. Address is set with a combination of SW12 (10's digit) and SW11 (1's digit).
To set the address to "3," set SW12 to "0" and SW11 to "3."
To set the address to "25," set SW 12 to "2" and SW 11 to "5."

4. Voltage test points on the control board

1. PVFY-P12, 18, 24, 30, 36, 48, 54NAMU-E

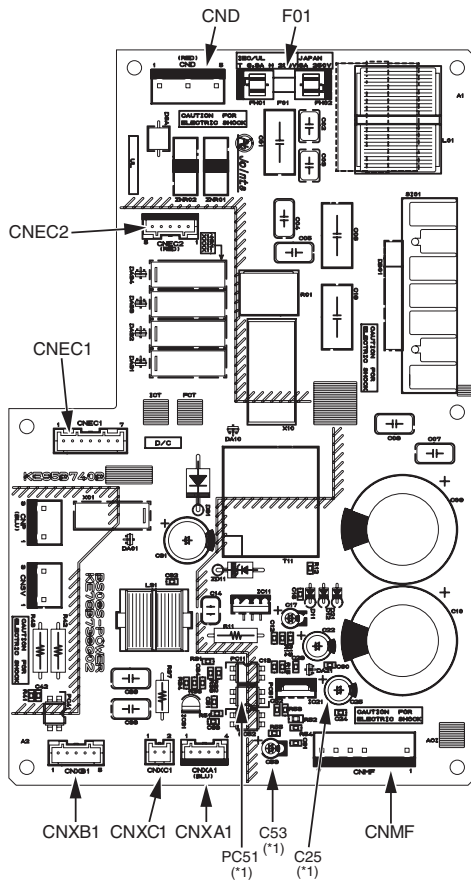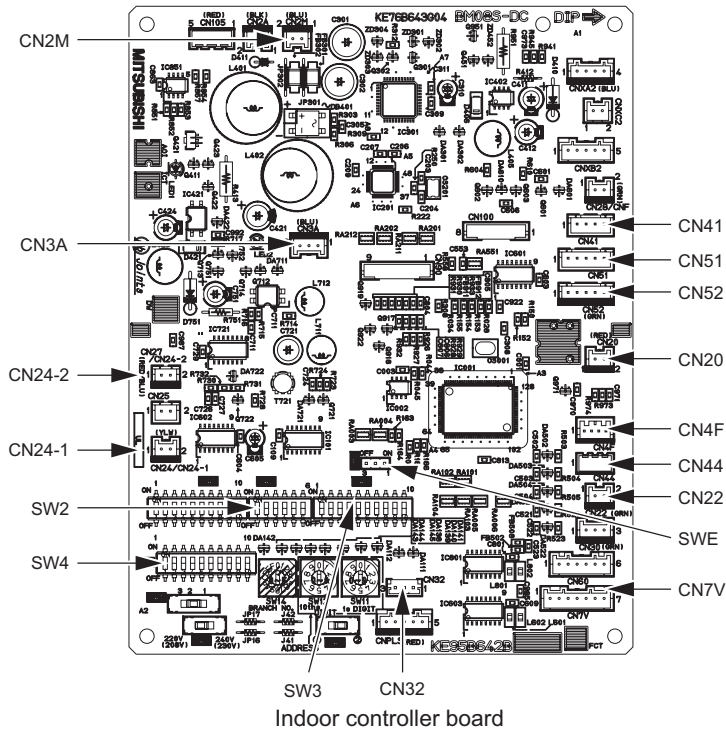

- F01 Fuse (AC 250V 6.3A)
- CND Power supply voltage (220 - 240VAC)
- CN2M For M-NET transmission cable connection (24 - 30VDC)
- SWE Emergency operation
- SW2 Capacity setting
- SW4 Function setting
- SW3 Function setting
- CN32 Remote start/stop adapter
- CN3A For MA remote controller cable connection (10 - 13 VDC (Between 1 and 3.))
- CN52 Remote display
- CN51 Centralized control
- CN41 JAMA standard HA terminal A
- CN44 Thermistor (liquid/gas temperature)
- CN4F Float sensor
- CN22 For fan control
- CN24-1 For 1st heater control
- CN24-2 For 2nd heater control
- CN20 Thermistor (Inlet temperature)
- CNMF Fan motor output
1 - 4: 294 - 340 VDC
5 - 4: 15 VDC
6 - 4: 0 - 6.5 VDC
7 - 4: Stop 0 or 15 VDC
Run 7.5 VDC
(0 - 15 pulse)
- CN7V Connect to the indoor power board
- CNEC1 Connect to the indoor controller board
- CNEC2 FAN OUT
- (*1)
V_{FG} Voltage on the (-) side of PC51 and C25 (Same with the voltage between 7 (+) and 4 (-) of CNMF)
- V_{CC} Voltage between the C25 pins 15 VDC (Same with the voltage between 5 (+) and 4 (-) of CNMF)
- V_{sp} Voltage between the C53 pins 0VDC (with the fan stopped) 1 - 6.5VDC (with the fan in operation) (Same with the voltage between 6 (+) and 4 (-) of CNMF)

5. Dipswitch setting (Factory setting)

1. Function setting

(1) SW1

| Switch position | Function | Switch setting | |
|-----------------|---|--|------------------------------|
| | | ON | OFF |
| 1 | Active Thermistor (Intake air thermistor) | Built-in thermistor on the remote controller | Indoor unit |
| 2 | Filter clogging detection | Available | Unavailable |
| 3 | Filter life | 2500 hr | 100 hr |
| 4 | Outdoor air intake | Enabled | Disabled |
| 5 | Remote display | Thermo-ON signal | Fan output |
| 6 | Humidifier operation | During heating mode | During heating operation |
| 7 | Fan speed | Low | Very low |
| 8 | Fan speed at heating Thermo-OFF | Preset fan speed | Follows the setting of SW1-7 |
| 9 | Auto restart after power failure | Enabled | Disabled |
| 10 | Power start/stop | Enabled | Disabled |

1) Adress board

Factory setting



(2) SW3


| Switch position | Function | Switch setting | |
|-----------------|--------------------|--|------------------------------|
| | | ON | OFF |
| 1 | Unit type | Cooling only | Heat pump |
| 2 | Heater thermo type | Type #2 (economy mode) | Type #1 (comfort mode) |
| 3 | - | - | - |
| 4 | Heater control | Enabled heater comfort and economy modes ^{*1} | Enabled heater basic control |
| 5 | - | - | - |
| 6 | - | - | - |
| 7 | - | - | - |
| 8 | Heating 4-deg up | Disabled | Enabled |
| 9 | - | - | - |
| 10 | - | - | - |

*1. While the heater is on, the fan will operate at high speed regardless of the fan setting on the remote controller.

1) Indoor control board

Dipswitch settings must be made while the unit is stopped.

Factory setting



2. Capacity code setting


(1) SW2

1) Indoor control board

Dipswitch settings must be made while the unit is stopped.

Factory setting

The switches are set to correspond to the unit capacity.

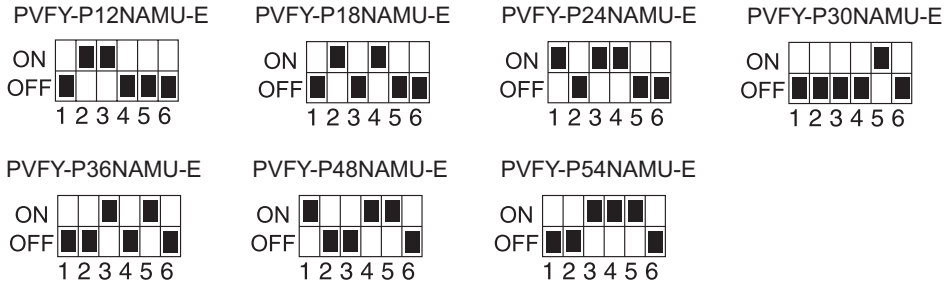


3. Model setting

(1) SW4

1) Indoor control board

Dipswitch settings must be made while the unit is stopped.

Factory setting



Note:

Changes made to the dipswitches SW1, SW2, and SW3 will become effective when the unit comes to a stop (remote controller off). There is no need to power cycle the unit.

4. Power voltage setting

(1) SW5

1) Indoor control board

Dipswitch settings must be operated with the main power turned OFF.

Factory setting




Set SW5 to 240V side when the power supply is 230 volts.
When the power supply is 208 volts, set SW5 to 220V side.

5. External static pressure


(1) SWA, SWC

1) Indoor control board

All models

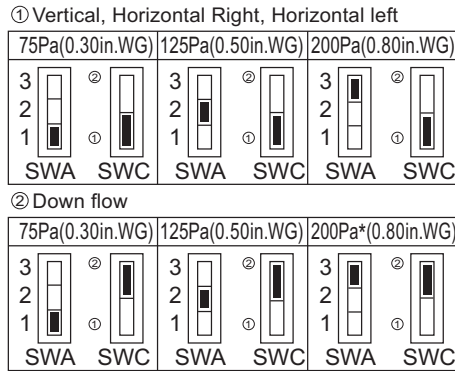

Factory setting

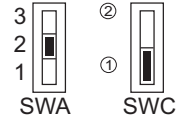

*PVFY-P36 in Downflow External static pressure: 150Pa (0.60in.WG)
 PVFY-P54 in Downflow External static pressure: 175Pa (0.70in.WG)

Note:

Changes that are made to the dipswitches SWA and SWC immediately become effective regardless of the unit's operation status (RUN/STOP) or the remote controller status (ON/OFF).

6. 1s and 10ths digits


(1) SW11, SW12 (Rotary switch)

The use of a network remote controller (PAR-F27MEA) requires address setting.

1) Indoor control board

Address settings must be made while the unit is stopped.

Factory setting



7. Connection No. setting

(1) SW14 (Rotary switch)

This switch is used when the unit connected to an R2 series of outdoor unit.

1) Indoor control board

Factory setting



Note:

Changes to the dipswitches SW11, SW12, SW14, and SW15 must be made while the unit is stopped and the remote controller is OFF.

[1] Disassembly Procedure

1. Control box

Exercise caution when removing heavy parts.

1. Remove the Electric panel (2 screws).
2. Remove the Control box cover (1 screw).

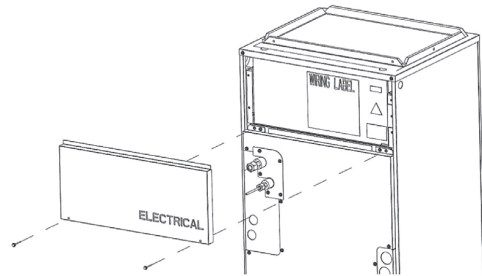


Fig.1

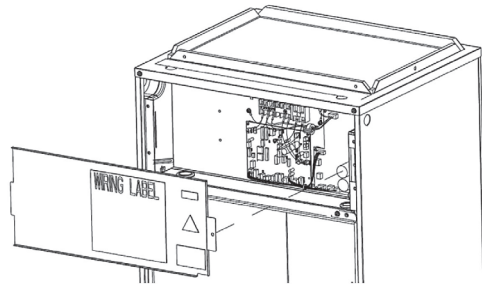


Fig.2

2. Thermistor (Return Air)

Exercise caution when removing heavy parts.

1. Remove the Filter panel (2 thumbscrews).
2. Remove the Blower panel (2 screws).

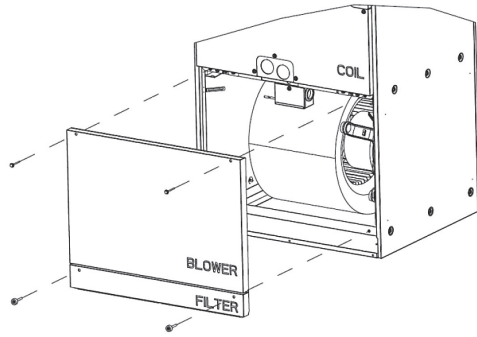


Fig.3

3. Remove the cover over the Return Air thermistor box and unplug the thermistor.
4. Pull out the thermistor holder and thermistor inside the box.

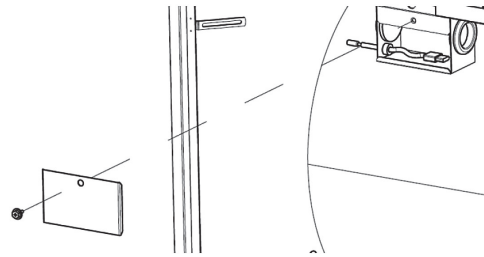


Fig.4

3. Coil Assembly (thermistor, drainpan, heat exchanger)

Exercise caution when removing heavy parts.

1. Remove the Electrical, Blower and Filter panel indicated in sections 1 and 2.
2. Remove the Coil panel by removing all of the screws securing it to the (3) smaller panels for refrigerant and drain lines.

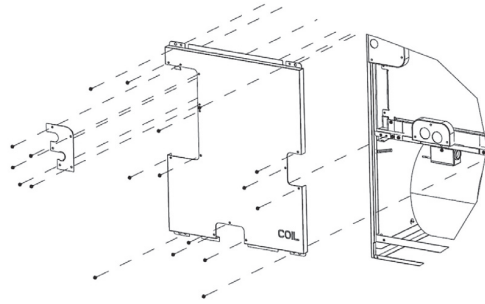


Fig.5

3. Slide the smaller panels in the directions indicated and remove.

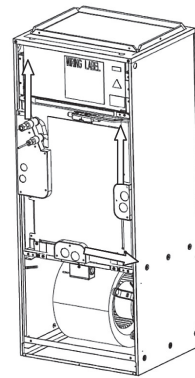


Fig.6

4. Remove the (1 or 2) brackets that secure the coil, unplug the thermistors and LEV from the control board and route the wires out of the control box area and into the coil section. Next, slide the coil from the frame.

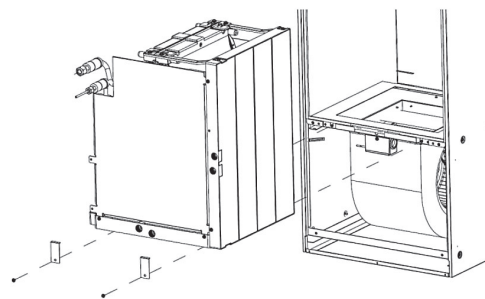


Fig.7

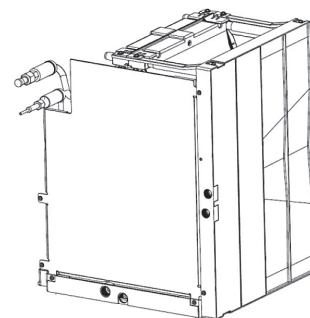


Fig.8

5. Remove the plate covering the coil assembly to access the thermistors.

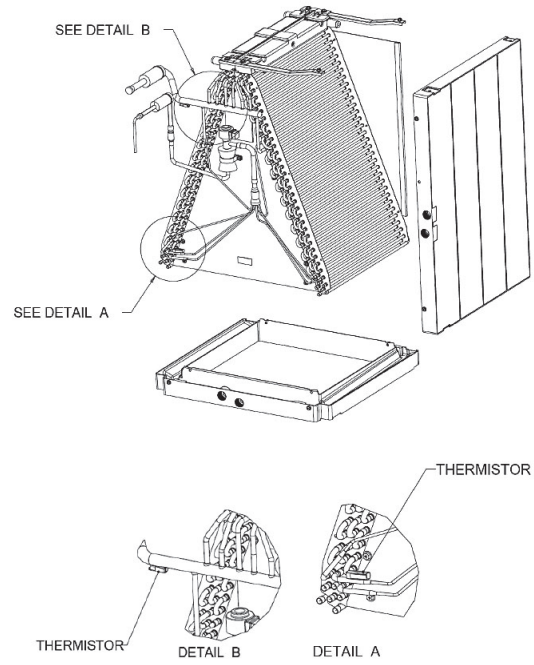


Fig.9

6. Remove lower and side drain pan.

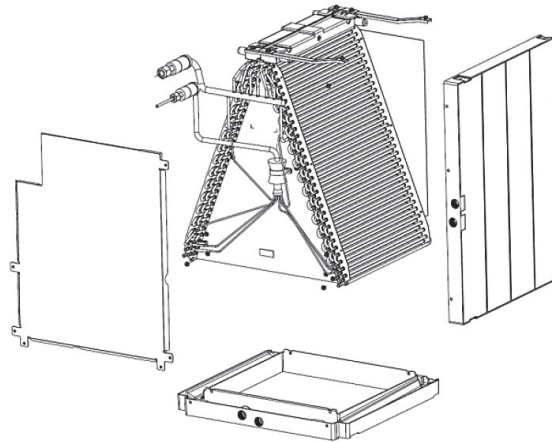


Fig.10

4. Blower/Fan Assembly

Exercise caution when removing heavy parts.

1. Remove the Blower and Filter panel (along with filter if installed) indicated in section 2.
2. Remove the (1 or 2) brackets that secure the coil assembly. (Fig.11)

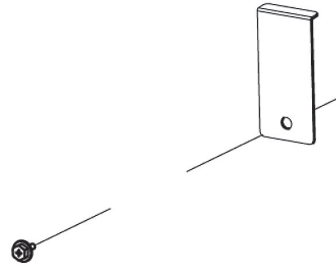


Fig.11

3. Remove the door that covers the small enclosure attached to the fan assembly (Fig.12). Unplug the motor and route the wire harness out of the enclosure.
4. Remove the (2) screws that secure the fan assembly and slide out.

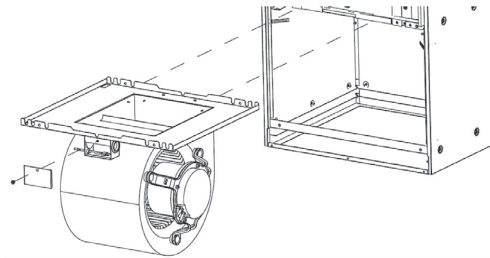


Fig.12

mitsubishi electric corporation

www.MitsubishiElectric.com
