


AIR CONDITIONING SYSTEMS

# CITY MULTI

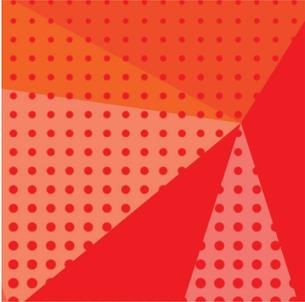


## DATA BOOK

MODEL

---

## CONTROLLER

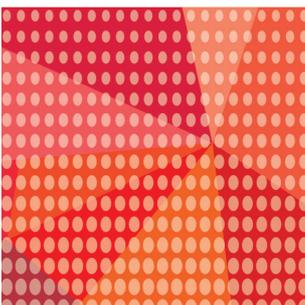

DATA BOOK describes the technical specifications of MITSUBISHI ELECTRIC Corp.'s CITY MULTI air conditioning system products.

DATA BOOK CONTROLLER MEES24K065 is updated from DATA BOOK CONTROLLER MEES21K058. The contents below are added as well as some minor revisions.

AE-200A/AE-50A/EW-50A have been changed to AE-C400A/EW-C50A.

PAR-40MAAU has been changed to PAR-42MAAUB.

PZ-61DR-E has been changed to PZ-62DR-EA.

BACS-AP50E has been added to the lineup.

PZ-43SMF-E has been deleted from the lineup.

LMAP04-E has been deleted from the lineup.

We recommend DATA BOOK users to read carefully and take advantage of all the contents inside to design the CITY MULTI air conditioning system and/or to prepare documents for promotions.

Along with the DATA BOOK, MITSUBISHI ELECTRIC provides a Design-Tool software to ensure the users to design the system correctly and simplify the calculations. Please contact your local distributor for this software.

Please be notified that specifications are subject to change without notice due to continual improvements of the product. For any inquiries, please contact your local distributor.

## Registered trademarks

- Microsoft®, Windows®, Windows Vista®, and Edge® are registered trademarks of Microsoft Corporation US in the USA and other countries.
- Pentium® and Core™ are trademarks or registered trademarks of Intel Corporation.
- Oracle® is a registered trademarks of Oracle and/or its affiliates.



Java™ is a registered trademark of Oracle and/or its affiliates.

- BACnet® is a registered trademark of ASHRAE.
- Google Chrome™ is a trademark of Google LLC in the U.S. and other countries.
- Safari® is a trademark of Apple Inc., registered in the U.S. and other countries.
- The Bluetooth® word mark is trademark of Bluetooth SIG, Inc., USA.

**Controller**

1. Air-conditioner Network System (MELANS) .....	2
1-1. Function table of controllers.....	3
2. Local remote controller .....	4
2-1. MA Touch Remote Controller [PAR-CT01MAU-SB].....	4
2-2. MA remote controller [PAR-42MAAUB] .....	5
2-3. ME remote controller [PAR-U01MEDU].....	6
2-4. Simple MA remote controller [PAC-YT53CRAU].....	7
2-5. Wireless remote controller [PAR-FL32MA/PAR-SL101A-E/PAR-FA32MA/PAR-SA9CA-E/ PAR-SR4LU-E/PAR-SF9FA-E/PAR-SL94B-E] .....	8
2-6. LOSSNAY remote controller for LGH-FRVX2-E/FRVXT2-E [PZ-62DR-EA].....	10
3. System controller .....	11
3-1. ON/OFF remote controller [PAC-YT40ANRA] .....	11
3-2. Touch controller [TC-24B].....	13
3-3. Centralized controller with LCD [AE-C400A] .....	21
3-4. Centralized controller without LCD [EW-C50A] .....	29
3-5. Power supply unit [PAC-SC51KUA] .....	36
3-6. BACnet <sup>®</sup> function [EW-C50A/AE-C400A/BACS-AP50E].....	37
3-7. Transmission booster [PAC-SF46EPA-G] .....	40
3-8. AHC ADAPTER [PAC-IF01AHC-J].....	42
3-9. PI controller [PAC-YG60MCA].....	47
3-10.DIDO controller [PAC-YG66DCA] .....	53
3-11.AI controller [PAC-YG63MCA].....	63
3-12.Cloud system connection device [MCC-50A] .....	72
4. System component .....	73
4-1. S/Y/H2i Y/R2/H2i R2-Series .....	73
4-2. Outdoor unit input/output connector .....	75
4-3. WY/WR2-Series.....	77
4-4. Heat source unit input/output connector .....	79
4-5. Indoor unit "-E/-A" type input/output connector.....	80

# System Controller

MITSUBISHI ELECTRIC's Air-conditioner Network System (MELANS) leads air conditioner management a PC browser and Network era.

## ▶ MELANS

Use of our MELANS products enhances EFFICIENCY and QUALITY of air-conditioning, contributing to ENERGY SAVING and reduction in running cost. We offer a wide variety of MELANS products to meet all requirements - from the smallest and simplest to the largest and most complex.

We have local remote controllers and various system controllers, as well as BMS interface etc. Above all, with AE-C400A/EW-C50A, PC browser and long distance remote control (monitoring and operating) via communication Network is possible and easy.

### Local Remote Controller

All of the local remote controllers feature liquid crystal and LED displays and easy to operate.

#### Remote Controller



#### Simple Remote Controller



#### Wireless Remote Controller


Receiver		Transmitter	
PAR-FA32MA PAR-SA9CA-E	PAR-SF9FA-E	PAR-FL32MA	PAR-SL101A-E
		* For the combinations of the receiver, transmitter, and indoor unit, refer to the compatibility table on the page describing the wireless remote controller.	
PAR-SR4LU-E	PAR-SL94B-E		

### System Controller

#### Touch Controller



#### ON/OFF Remote Controller

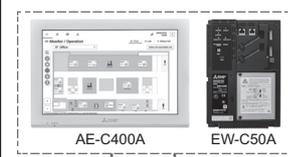

#### AHC ADAPTER



#### PI Controller



#### DIDO Controller



#### AI Controller




\*1 Advanced HVAC CONTROLLER

### CITY MULTI OUTDOOR UNIT

- S :PUMY
- Y :PUHY
- H2i Y :PUHY-HP
- H2i R2 :PURY-HP
- R2 :PURY
- WY :PQHY
- WR2 :PQRY

### INDOOR UNIT

- PEFY ● PCFY
- PMFY ● PKFY
- PLFY ● PFFY
- PVFY

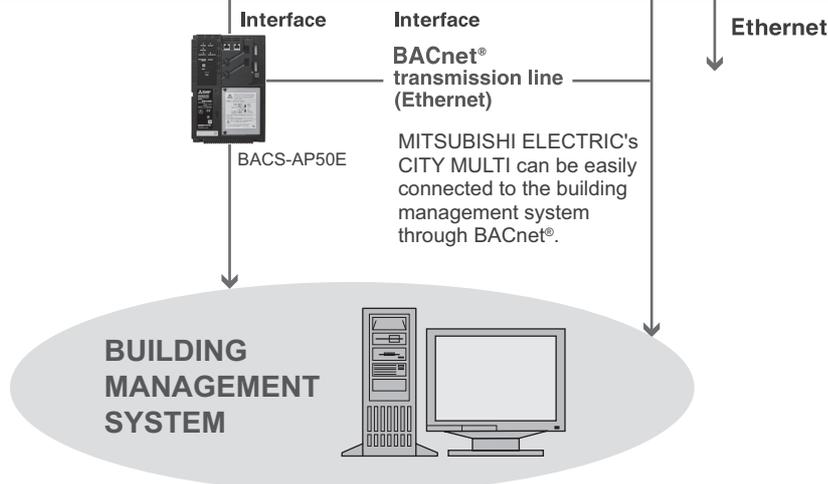

\*Some controllers cannot be used in combination with certain models of devices.

1-1. Function table of controllers

Model	Local remote controller *5						System controller *5					
	PAR-CT01MAU	PAR-42MAAUB	PAR-U01MEDU	PAC-YT53CRAU	PAR-FL32MA	PAR-SL101A-E	PAC-YT40ANRA	TC-24B	AE-C400A		EW-C50A	
Controllable Groups/Indoors (Group/Indoor) *4	1/16	1/16	1/16	1/16	1/16	1/1	16/50	24/24	50/50*10		50/50*10	
									AE-C400A	Browser	Browser	
<b>■Operation</b>												
ON/OFF	○	○	○	○	○	○	◎	◎	◎ ■	◎ ■	◎ ■	
Mode (cool/heat/dry/fan/auto)	○	○	○	○	○	○	N	◎	◎ ■	◎ ■	◎ ■	
Mode (Setback) *7	○	○	○	○	N	○	N	◎	◎ ■	◎ ■	◎ ■	
Temperature setting	○	○	○	○	○	○	N	◎	◎ ■	◎ ■	◎ ■	
Dual set point *7	○	○	○	○	N	○ *9	○ *8	◎	◎ ■	◎ ■	◎ ■	
Local Permit/Prohibit	N	N	N	N	N	N	N	◎	◎ ■	◎ ■	◎ ■	
Fan speed	○	○	○	○	○	○	N	◎	◎ ■	◎ ■	◎ ■	
Air flow direction	○	○	○	○	○	○	N	◎	◎ ■	◎ ■	◎ ■	
<b>■Status monitoring</b>												
ON/OFF	○	○	○	○	○	○	◎	◎	◎	○	○	
Mode (cool/heat/dry/fan)	○	○	○	○	○	○	N	○	○	○	○	
Temperature setting	○	○	○	○	○	○	N	○	○	○	○	
Local Permit/Prohibit	○	○	○	○	N	N	○	○	○	○	○	
Fan speed	○	○	○	○	○	○	N	○	○	○	○	
Air flow direction	○	○	○	○	○	○	N	○	○	○	○	
Indoor temperature	○	○	○	○	N	N	N	○	○	○	○	
Filter sign	○	○	○	N	N	N	N	○	○	○	○	
Error flashing	○	○	○	○	N	N	○	◎	○	○	○	
Error code	○	○	○	○	N	N	○	○	○	○	○	
Operation hour	N	N	N	N	N	N	N	N	N	N	N	
<b>■Scheduling</b>												
One day	○	○	○	N	N	N	N	○	◎ ■	◎ ■	◎ ■	
ON/OFF times per day	1	1	1	N	1	1	N	16	24	24	24	
Weekly	○	○	○	N	N	N	N	○	◎ ■	◎ ■	◎ ■	
ON/OFF times per week	8 x 7	8 x 7	8 x 7	N	N	N	N	16 x 7	24 x 7	24 x 7	24 x 7	
Annual	N	N	N	N	N	N	N	N	◎ ■	◎ ■	◎ ■	
Optimized start-up	N	N	N	N	N	N	N	N	○	○	○	
Auto-OFF timer	○	○	○	N	N	N	N	N	N	N	N	
Min. timer setting unit (minute)	5	5	5	N	10	10	N	5	1	1	1	
<b>■Recording</b>												
Error log	○	○	○	N	N	N	N	○	○	○	○	
Daily/monthly report	N	N	N	N	N	N	N	N	N	N	N	
Charge function	N	N	N	N	N	N	N	N	○	N	○	
Energy management data	N	N	N	N	N	N	N	N	○	○	○	
<b>■Other</b>												
Temp-set limitation by Local R/C	○	○	○	○	N	N	N	N	N	N	N	
Temp-set limitation by System controller *6	○ *2	○ *2	○	○ *2	N	N	N	○	○	○	○	
Operation lock	○	○	○	○	N	N	N	◎	N	N	N	
Night setback	N	N	N	N	N	N	N	N	○	○	○	
Sliding temperature control	N	N	N	N	N	N	N	N	○	○	○	
BACnet® connection	N	N	N	N	N	N	N	N	●	●	●	
<b>■Operating on LOSSNAY (Group/Interlocked)</b>												
ON/OFF	N / ○	N / ○	N / ○	N / ○	N / ○ *3	N / ○ *3	◎ / ◎ *1	◎ / ◎	◎ / ◎	◎ / ◎	◎ / ◎	
Fan speed	N / ○	N / ○	N / ○	N	N	N	N	◎ / ◎	◎ / ◎	◎ / ◎	◎ / ◎	
Ventilation mode	N / N	N / N	N	N	N	N	N	◎ / N	◎ / N	◎ / N	◎ / N	
<b>■Status monitoring on LOSSNAY (Group/Interlocked)</b>												
ON/OFF	N / ○	N / ○	N / ○	N / ○	N	N	N	○ / ○	◎ / ◎	◎ / ◎	◎ / ◎	
Fan speed	N / ○	N / ○	N / ○	N	N	N	N	○ / ○	○ / ○	○ / ○	○ / ○	
Ventilation mode	N	N	N	N	N	N	N	○ / N	○ / N	○ / N	○ / N	
CO <sub>2</sub> indication	N	N	N	N	N	N	N	N	○ / N	○ / N	○ / N	

◎: Each group/Batched      ○: Each group      ●: AE-C400A/EW-C50A license registration possible.      N: Not Available (Not Used.)      ■: Block

- \*1. Interlock is set at Local remote controller.
- \*2. This function can only be set on the ME remote controller.  
This function cannot be used with the MA/Simple MA remote controller.  
(However, the validity of this function with the MA/Simple MA remote controller depends on the indoor unit model, and it is possible to use this function with them.)
- \*3. Interlock is set from system controllers (Except PAC-YT40ANRA) or local remote controllers.
- \*4. The maximum number of controllable units decreases depending on the indoor unit model.
- \*5. For indoor use only.
- \*6. No license is required for the TC-24B.
- \*7. This function is supported only when all of the indoor units, remote controllers, and system controllers that are connected to a given group features said function.
- \*8. Please contact your local distributor regarding the availability of this function.
- \*9. Function setting of this remote controller is necessary.
- \*10. The maximum number of connectable units depends on the model. Refer to the Technical Manual.

2-1. MA Touch Remote Controller [PAR-CT01MAU-SB]



- Backlit LCD
- Color LCD
- Can be set and shown by 1°F/0.5°C.

CONTROLLER

■ Functions

1. Operation/Display

○: Available X: Not available

Item	Description	Setting	Display
ON/OFF	Switches between ON and OFF.	○	○
Operation mode switching	Switches between Cool/Dry/Fan/Auto/Setback/Heat.	○	○
Hold	Switches between enable and disable the Hold function. If the Hold function is enable, the following functions will be prohibited. Timer/Schedule (Weekly timer) /Auto return/Auto-OFF timer	○	○
Temperature setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Changes fan speed. * Available fan speeds vary depending on the model.	○	○
Air flow direction setting	Changes airflow direction. * Available airflow directions vary depending on the model.	○	○
Louver setting	Switches between louver ON/OFF.	○	○
Ventilation equipment control	Interlocked setting and interlocked operation setting with City Multi LOSSNAY units can be performed. The Stop/Low/High settings of the ventilation equipment can be controlled.	○	○
Auto descending panel *1	Raises and lowers the automatic elevating panel.	○	○
Touch panel & Backlit full color LCD	Pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen. The color of the background can be changed.	○	○
Main display mode setting	The Main display can be displayed in two different modes: "Full" and "Basic." The icon explanation setting can be enabled or disabled.	○	○
Clock *2	Date (year/month/day) and time (hour/minute) can be set. The set time as well as the day of the week will be displayed on the Main display. It is also possible to set not to display the time on the Main display. The clock can be displayed in 12-hour format (AM/PM before or after the time) and 24-hour format.	○	○
Daylight saving time	The start/end time for daylight saving time can be set. The daylight saving time function will be activated based on the settings.	○	X
Room temp. display	The room temperature display can be enabled or disabled.	—	○
Error information	When an error occurs, an error code and the unit address appear. Air conditioning unit model, serial number, and contact number can be set to appear when an error occurs. (The information above needs to be entered in advance.) * An error code may not appear depending on the error.	—	○
Filter information	A filter sign will appear when it is time to clean the filter.	—	○
Touch panel	The touch panel can be cleaned and calibrated.	○	—
Bluetooth connection, Bluetooth, Screen update	The Bluetooth connection information can be acquired. Using an Application, a logo image as well as settings data can be sent to the remote controller.	○	○
Remote controller information	The version of the remote controller can be checked.	—	○

2. Schedule and timer setting

○: Available X: Not available

Item	Description	Setting	Display
Timer	ON/OFF timer Turns ON and OFF daily at a set time. • Time can be set in 5-minute increments. • It is also possible to set the ON time only or the OFF time only. Auto-OFF timer Turns off the unit after a certain period of operation. • Operation time can be set to a value from 30 to 240 minutes in 10-minute increments.	○	○
Weekly timer	Weekly ON/OFF times and set temperatures can be set. • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week. * Not valid when the ON/OFF timer is set.	○	○

3. Restriction settings

○: Available X: Not available

Item	Description	Setting	Display
Allows/disallows local operation	The following operation can be prohibited by applying certain settings on the centralized controller: ON/OFF, operation mode setting, temperature setting, and filter sign reset. * While an operation is prohibited, the operation icon lights up (only on the Main display in "Full" mode).	X	○
Operation lock	The following operations can be prohibited: "Location," "On/Off," "Mode," "Set temp.," "Menu," "Fan," "Louver," "Vane," or "Hold."	○	○
Temperature range restriction	The room temperature range for each operation mode can be restricted.	○	○
Auto return	The units operate at the preset temperature after a designated period. (Time can be set to a value from 30 to 120 minutes in 10-minute increments.) * Not valid when the temperature setting range is restricted.	○	X
Password	Administrator password (required for schedule setting etc.) and Maintenance password (required for test run and function setting etc.) can be set.	○	X

4. Miscellaneous items


○: Available X: Not available

Item	Description	Setting	Display
Language Selection	English, French, Spanish	○	○
Brightness	The brightness of the LCD can be adjusted. The "Stay lit" setting can be enabled or disabled.	○	○
Manual vane Angle *1	Fixes the vane position for each air outlet.	○	X
Service *1	Contains Test run, Function setting, Request code, and Error history.	○	○
Design	The color of the background or character can be changed.	○	○

\*1 This function is active only for the units that support the function.


\*2 The clock is accurate within 50 seconds per month (at the temperature of 25°C [77°F]). The clock is backed up for 7 days.

■ System example

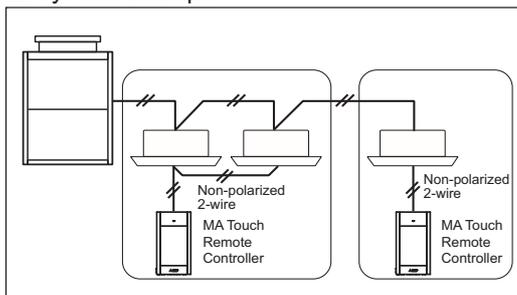

\*When a PAR-CT01MAU is connected to a group, no other MA remote controllers can be connected to the same group.

■ External dimension

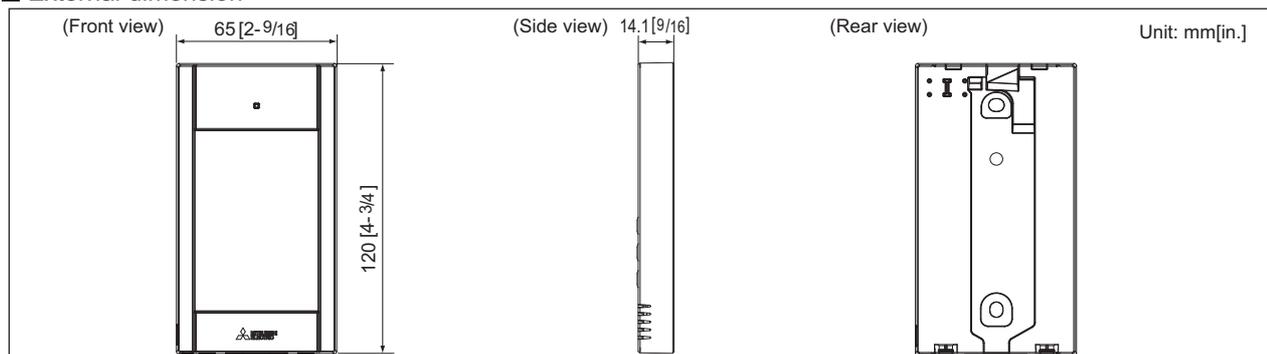

2-2. MA remote controller [PAR-42MAAUB]



- Backlit LCD
- Can be set and shown by 1°F/0.5°C.


■ Functions

1. Operation/Display

○: Available X: Not available

Item	Description	Setting	Display
ON/OFF	Switches between ON and OFF.	○	○
Operation mode switching	Switches between Cool/Dry/Fan/Auto/Setback/Heat.	○	○
Hold	Switches between enable and disable the Hold function. If the Hold function is enable, the following functions will be prohibited. ON/OFF timer/Schedule (Weekly timer)/Auto return/Auto-OFF timer	○	○
Temperature setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Changes fan speed. * Available fan speeds vary depending on the model.	○	○
Air flow direction setting	Changes airflow direction. * Available airflow directions vary depending on the model.	○	○
Louver setting	Switches between louver ON/OFF.	○	○
Ventilation equipment control	Interlocked setting and interlocked operation setting with City Multi LOSSNAY units can be performed. The Stop/Low/High settings of the ventilation equipment can be controlled.	○	○
Auto descending panel *1	Raises and lowers the automatic elevating panel.	○	X
Main display mode setting	The Main display can be displayed in two different modes: "Full" and "Basic."	○	○
B&W inversion	The colors of the display can be inverted, turning white background to black and black characters to white.	○	○
Clock *2	Date (year/month/day) and time (hour/minute) can be set. The set time as well as the day of the week will be displayed on the Main display. It is also possible to set not to display the time on the Main display. The clock can be displayed in 12-hour format (AM/PM before or after the time) and 24-hour format.	○	○
Daylight saving time	The start/end time for daylight saving time can be set. The daylight saving time function will be activated based on the setting contents.	○	X
Room temp. display	The room temperature display can be enabled or disabled.	—	○
Error information	When an error occurs, an error code and the unit address appear. The air-conditioning unit model, serial number, and contact number can be set to appear when an error occurs. (The above information needs to be entered in advance.) * An error code may not appear depending on the error.	—	○
Filter information	A filter sign will appear when it is time to clean the filter.	—	○
Remote controller information	The version of the remote controller can be checked.	—	○
Refrigerant leakage error	An alarm buzzer sounds when refrigerant leakage is detected.	—	○

■ External dimension

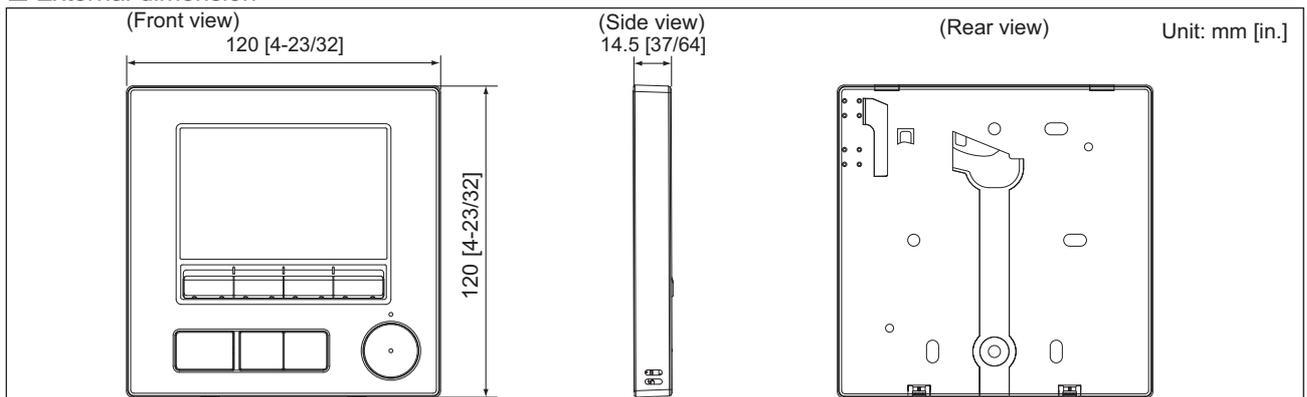

2. Schedule and timer setting

○: Available X: Not available

Item	Description	Setting	Display
Timer	ON/OFF timer Turns ON and OFF daily at a set time. • Time can be set in 5-minute increments. • It is also possible to set the ON time only or the OFF time only. Auto-OFF timer Turns off the unit after a certain period of operation. • Operation time can be set to a value from 30 to 240 minutes in 10-minute increments.	○	○
Weekly timer	Weekly ON/OFF times and set temperatures can be set. • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week. • Not valid when the ON/OFF timer is set.	○	○

3. Restriction settings

○: Available X: Not available

Item	Description	Setting	Display
Allows/disallows local operation	The following operation can be prohibited by applying certain settings on the centralized controller: ON/OFF, operation mode, set temperature, filter sign reset, air direction, fan speed and timer. * While an operation is prohibited, the operation icon lights up (only on the Main display in the "Full" mode).	X	○
Operation lock	The following operations can be prohibited: "Location," "On/Off," "Mode," "Set temp.," "Menu," "Fan," "Louver," "Vane," or "Hold."	○	○
Temperature range restriction	The room temperature range for each operation mode can be restricted.	○	○
Auto return	The units operate at the preset temperature after a designated period. (Time can be set to a value from 30 to 120 minutes in 10-minute increments.) * Not valid when the temperature setting range is restricted.	○	X
Password	Administrator password (required for schedule setting etc.) and Maintenance password (required for test run and function setting etc.) can be set.	○	X


4. Miscellaneous items

○: Available X: Not available

Item	Description	Setting	Display
Language Selection	Select the display language from the following 3 languages. English, French, Spanish	○	○
Brightness Contrast	The brightness of the LCD can be adjusted. The contrast of the LCD can be adjusted.	○	○
Manual vane Angle *1	Fixes the vane position for each air outlet.	○	X
Service *1	Contains Test run, Function setting, Request code, and Error history.	○	○
3D i-see Sensor	Settings for 3D i-see Sensor can be made.	○	○

\*1 This function is active only for the units that support the function.  
 \*2 The clock is accurate within 45 seconds per month (at the temperature of 77°F [25°C]). The clock is backed up for 3 days.

■ System example

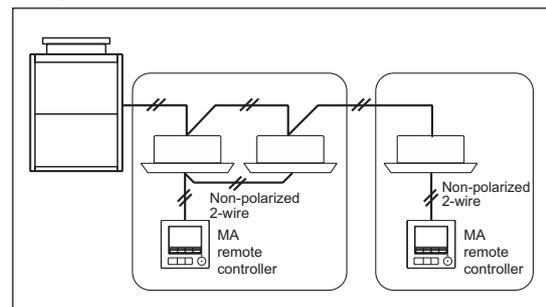

\*When this MA remote controller is connected to a group, no other MA remote controllers can be connected to the same group.

2-3. ME remote controller [PAR-U01MEDU]



- ME remote controller is a remote controller designed to control Mitsubishi Electric's air conditioning units and also allows for the control of other manufacturer's products connected via Mitsubishi Electric's AHC (Advanced HVAC CONTROLLER).
- It can control up to sixteen indoor units and one AHC.
- ME remote controller features such basic functions as operations and monitoring of air conditioning units and schedule-control functions and is equipped with four built-in sensors (temperature, humidity, occupancy, brightness), which enable an integrated control of the system, including the humidifiers and ventilation units connected to the system via AHC, to help create a comfortable environment. When the built-in occupancy sensor detects vacancy in a specific zone, the controller uses its internal function to reduce energy-consumption.

■ Functions

1. Operation/Display

○: Available X: Not available

Item	Description	Setting	Display
ON/OFF	Switches between ON and OFF.	○	○
Operation mode switching	Switches between Cool/Drying/Fan/Auto/Setback/Heat. * Available operation mode varies depending on the model.	○	○
Hold	Switches between enable and disable the Hold function. If the Hold function is enable, the following functions will be prohibited. Timer/Schedule (Weekly timer) /Auto return	○	○
Temperature setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Changes fan speed. * Available fan speeds vary depending on the model.	○	○
Air flow direction setting	Changes airflow direction. * Available airflow directions vary depending on the model.	○	○
Louver setting	Switches between louver ON/OFF. * Available Louver setting vary depending on the model.	○	○
Ventilation equipment control	Interlocked setting and interlocked operation setting with City Multi LOSSNAY units can be performed. The Stop/Low/High settings of the ventilation equipment can be controlled.	○	○
Backlight	Touching the screen turns the backlight on. It will stay lit for the amount of time that was specified on the MENU screen.	○	○
Clock display	Date (year/month/day) and time (hour/minute) can be set. The set time as well as the day of the week will be displayed on the Home display. The clock can be displayed in 12-hour format (AM/PM before or after the time) and 24-hour format.	○	○
Daylight saving	Sets the daylight saving time period.	○	X
Room temp./ humidity display	Displays the room temperature and humidity on the Home display.	—	○
Error information	When an error occurs, an error code and the unit address appear. A contact number can be set to appear when an error occurs. (The above information needs to be entered in the Service menu.)	—	○
Filter information	A filter sign will appear when it is time to clean the filter.	—	○

2. Schedule and timer setting

○: Available X: Not available

Item	Description	Setting	Display
Schedule (Weekly timer)	Weekly ON/OFF times, operation mode, and set temperatures can be set. • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week. * Not valid when the ON/OFF timer is set.	○	○
Timer	ON/OFF timer Turns ON and OFF daily at a set time. • Time can be set in 5-minute increments. • It is also possible to set the ON time only or the OFF time only. Auto-OFF timer Turns off the unit after a certain period of operation. • Operation time can be set to a value from 30 to 240 in 10-minute increments.	○	○

3. Energy-save control assist function

○: Available X: Not available

Item	Description	Setting	Display
Energy-save control during vacancy	When vacancy is detected by the occupancy sensor, the energy-save control assist function is activated. Five control types are available for selection: ON/OFF/Operation mode/Set temperature/Fan speed/Thermo-off. The brightness sensor can be used in conjunction with the occupancy sensor to detect the occupancy/vacancy status more accurately.	○	○

4. Restriction settings

○: Available X: Not available

Item	Description	Setting	Display
Allows/disallows local operation	The following operation can be prohibited by applying certain settings on the centralized controller: ON/OFF, operation mode setting, temperature setting, fan speed, air direction, and filter sign reset. * While an operation is prohibited, the operation icon lights up.	X	○
Operation lock	The following operation can be prohibited respectively: ON/OFF, operation mode setting, temperature setting, Hold setting, and airflow direction setting.	○	○
Temperature range restriction	The room temperature range for each operation mode can be restricted.	○	○
Auto return	The units operate at the preset temperature after a designated period. (Time can be set to a value from 10 to 120 in 10-minute increments.) * Not valid when the temperature setting range is restricted.	○	X
Password	User password (required for schedule setting etc.) and Service password (required for test run and function setting etc.) can be set.	○	X

5. AHC control functions

○: Available X: Not available


Item	Description	Setting	Display
Status monitor	Displays the status of general equipments connected to the AHC.	X	○
Humidity setting	Sets the humidity level in 1% increments for the humidifier connected to the AHC, if any.	○	○

6. Miscellaneous items


○: Available X: Not available

Item	Description	Setting	Display
Service	Contains Set up, Error history, and Test run.	○	○

■ System example

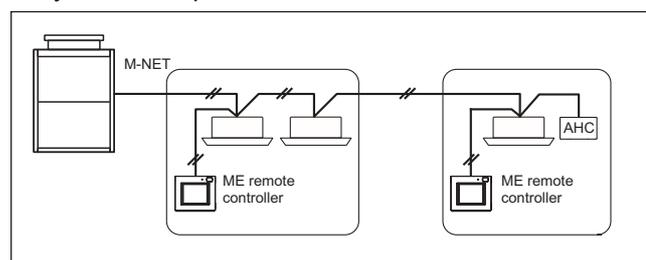

■ External dimension

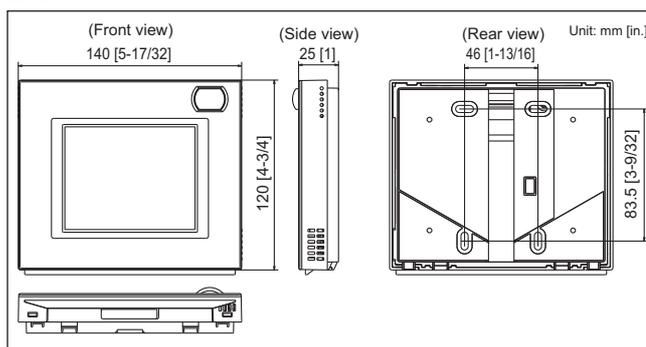

2-4. Simple MA remote controller [PAC-YT53CRAU]



- Control: ON/OFF, room temperature, vane, fan speed, and operation mode
- The only wiring required is cross-over wiring based on two-wire signal lines.
- Room temperature sensors are built-in.
- Set temperature range limit
- Can operate all types of indoor units
- \* : Since this controller has limited functions, it should always be used in conjunction with standard controller or centralized controller.
- Backlit LCD
- Flat back


■ Functions

○: Available X: Not available


Item	Description	Setting	Display
ON/OFF	Changes between ON and OFF.	○	○
Operation mode switching *1	Select from COOL, DRYING, FAN, AUTO, and HEAT.	○	○
Temperature setting *1	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Changes the fan speed. *The settable fan speed varies depending on the indoor unit model to be connected.	○	○
Vane setting	Switches the vane directions. *The settable vane direction varies depending on the indoor unit model to be connected.	○	○
Ventilation equipment control	Interlocked setting and interlocked operation setting with City Multi LOSSNAY units can be performed. The Stop/Low/High settings of the ventilation equipment can be controlled.	○	○
Backlight	Pressing the button lights up a backlight. The light automatically turns off after a certain period of time. (The brightness settings can be selected from Bright, Dark, and Light off.)	○	○
Error information	Displays the current error status with the address. *The address may not be displayed depending on the error status.	—	○
Allows/disallows local operation	By setting a centralized controller, the following local operations can be prohibited: ON/OFF, operation mode, preset temperature; *The CENTRAL icon appears while local operations are prohibited.	X	○
Operation lock	Locks all buttons.	○	○
Temperature range restriction	The preset temperature range can be restricted for each operation mode (COOL/HEAT/AUTO).	○	○
Room temperature detection	The temperature sensor is built-in on the remote controller.	—	—
Various settings	The following settings can be made by setting the dip switches. • Remote controller Main/Sub setting • Temperature display unit setting (Celsius/Fahrenheit) • Cooling/heating display in AUTO mode • Indoor temperature display	—	—

\*1 AUTO mode is settable only when those functions are available on the indoor unit.

■ System example

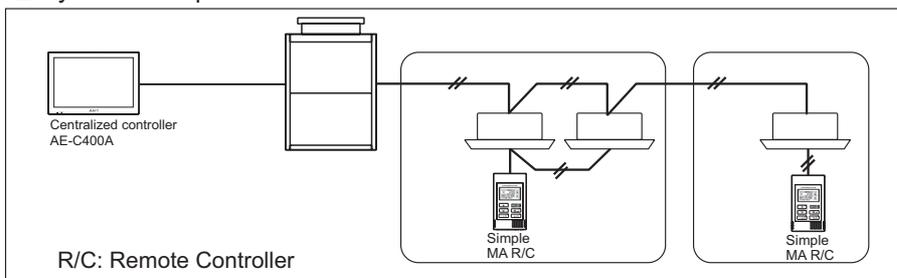

■ External dimension

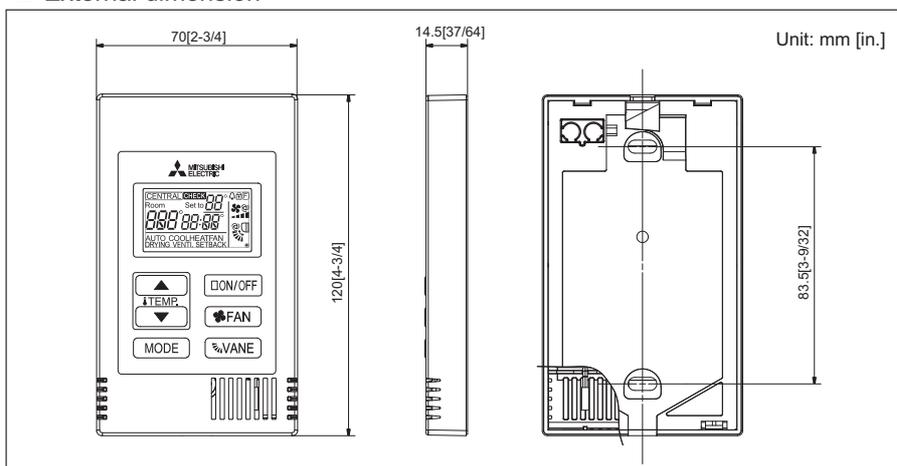

2-5. Wireless remote controller [PAR-FL32MA/PAR-SL101A-E/PAR-FA32MA/PAR-SA9CA-E/PAR-SR4LU-E/PAR-SF9FA-E/PAR-SL94B-E]

CONTROLLER



PAR-FL32MA




PAR-SL101A-E



PAR-FA32MA/PAR-SA9CA-E



PAR-SR4LU-E

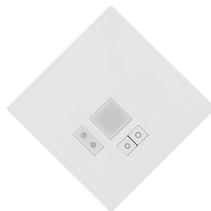

PAR-SF9FA-E  
(2×2 Cassette signal receiver)



PAR-SL94B-E  
(Wireless remote controller kit for ceiling-suspended type)

■ Functions (PAR-FL32MA)

○: Available X: Not available

■ Functions (PAR-SL101A-E)

Item	Description	Setting	Display
ON/OFF	ON and OFF operation for a single group	○	○
Operation mode switching	Switches between Cool/Dry/Fan/Heat/Auto. *1	○	○
Temperature setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Models with 4 air flow speed settings: Hi/Mid-1/Mid-2/Low Models with 3 air flow speed settings: Hi/Mid/Low Models with 2 air flow speed settings: Hi/Low Auto setting varies depending on the model.	○ <sup>*3</sup>	○ <sup>*3</sup>
Air flow direction setting	Air flow direction angles (4-angle, Swing) Auto Louver ON/OFF. Air flow direction settings vary depending on the model.	○ <sup>*3</sup>	○ <sup>*3</sup>
Timer operation	One ON/OFF setting can be set per day.	○	○
Permit/Prohibit local operation	Individually prohibit operation of each local remote control function (ON/OFF, Change operation mode, Set temperature, Reset filter).	X	○ <sup>*2</sup>
Indoor unit intake temperature	Measures the intake temperature of the indoor unit when the indoor unit is operating.	X	X
Error	When an error occurs on the air conditioner unit, the operation lamp on the signal receiving unit will flash.	X	○
Test run	This operates air conditioner units in test run mode.	○	○

Item	Description	Setting	Display
OFF/ON	OFF and ON operation for a single group	○	○
Operation mode switching	Switches between Cool/Dry/Fan/Heat/Auto *1/Dual set point *1	○	○
Temperature setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Models with 4 air flow speed settings: Hi/Mid-1/Mid-2/Low Models with 3 air flow speed settings: Hi/Mid/Low Models with 2 air flow speed settings: Hi/Low Auto setting varies depending on the model.	○ <sup>*3</sup>	○ <sup>*3</sup>
Air flow direction setting	Air flow direction angles (4-angle, Swing) Auto Louver ON/OFF. Air flow direction settings vary depending on the model.	○ <sup>*3</sup>	○ <sup>*3</sup>
Timer operation	One OFF/ON setting can be set for one day.	○	○
Permit/Prohibit local operation	Individually prohibit operation of each local remote control function (OFF/ON, Change operation mode, Set temperature, Reset filter).	X	○ <sup>*2</sup>
Indoor unit intake	Measures the intake temperature of the indoor unit when the indoor unit is operating.	X	X
Error	When an error occurs on the air conditioner unit, the operation lamp on the signal receiving unit will flash.	X	○
Test run	This operates air conditioner units in test run mode.	○	○
Individual vane settings	The airflow directions of the four vanes can each be adjusted independently. Easily set the optimum airflow according to the room setting.	○	X
3D i-see Sensor (Direct/Indirect Airflow)	Pressing the i-see button enables direct or indirect setting of all vanes.	○	X

\*1. Auto only supported for the CITY MULTI R2- and WR2-Series. Operation modes vary depending on the air conditioner unit.

\*2. If operation is performed when the local remote controller inactivation command is received from the main system controller, a buzzer will sound an LED will flash.

\*3. Some models will have different display for the air flow direction and fan speed. Set the flow direction and fan speed when performing initial setting.

## 2. Local remote controller

Controller

Indoor unit model	Receiver model	Transmitter model
PMFY-P NBMU-E	PAR-FA32MA	PAR-FL32MA
PFFY-P NEMU-E		
PFFY-P NRMU-E		
PEFY-P NMSU-E		
PEFY-P NMAU-E4/E5		
PEFY-P NMH(S)U-E(2)		
PEFY-P NMHU-E-OA		
PVfy-P NAMU-E1		
PEFY-AF1200CFMR-E		
PEFY-L NMSU-A	PAR-FA32MA	PAR-FL32MA
PEFY-L NMAU-A	PAR-SA9CA-E	PAR-SL101A-E

Indoor unit model	Receiver model	Transmitter model
PCFY-P NKMU-E	PAR-FA32MA	PAR-FL32MA
PCFY-L NKMU-A	PAR-SL94B-E *1	
PKFY-P NLMU-E	Built-in	
PKFY-L NLMU-A		
PKFY-P NKMU-E2		
PKFY-L NKMU-A		
PLFY-EP NEMU1-E(1) *3	PAR-SR4LU-E	PAR-FL32MA
PLFY-EL NEMU-A *3		PAR-SL101A-E *4
PLFY-P NFMU-E *3	PAR-FA32MA	PAR-FL32MA *2
PLFY-L NFMU-A *3	PAR-SF9FA-E	PAR-SL101A-E *4


\*1 PAR-SL94B-E includes a wireless remote controller.

\*2 PAR-SL101A-E is required to use the direct/indirect setting and individual vane setting.

\*3 Use either PAR-SL101A-E or PAR-FL32MA to control each indoor unit, not both.

\*4 Multiple indoor units cannot be controlled with the PAR-SL101A-E. Only one indoor unit can be used in each group.

### External dimension

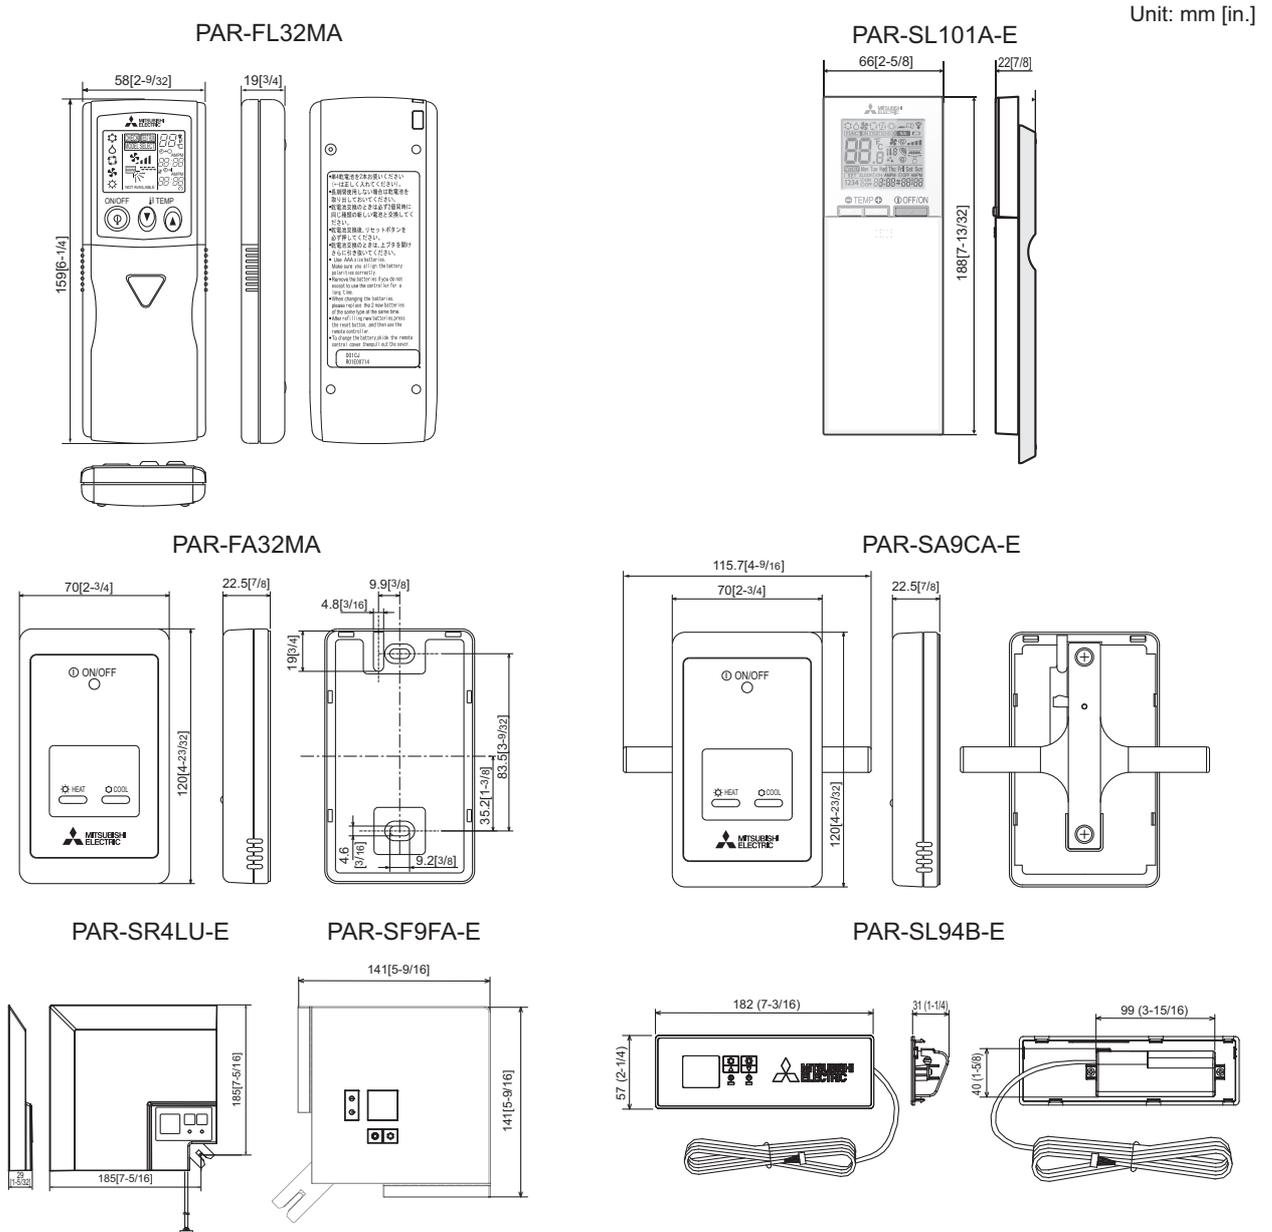

2-6. LOSSNAY remote controller for LGH-FRVX2-E/FRVXT2-E [PZ-62DR-EA]

CONTROLLER




■ Functions


Model name	PZ-62DR-EA
Compatible series	LGH-FRVX2/FRVXT2
Fan speed selection	4 fan speeds and Auto (Auto is available when using a CO <sub>2</sub> sensor)
Control with a CO <sub>2</sub> sensor (Mitsubishi Electric and field supply)	Yes (Fan speed automatically changes from 25% to 100% depending on the CO <sub>2</sub> concentration*)
Ventilation mode selection	Energy recovery/Bypass/Auto
Night-purge	Yes
Function setting with remote controller	Yes
Bypass temp. free setting	Yes
Flexible airflow setting	Yes (Both supply and exhaust fan speeds can be set separately from 25% to 100% in 5% pitches)
ON/OFF timer	Yes
Auto-off timer	Yes
Weekly timer	Yes
Fan speed timer	Yes
Operation restrictions (ON/OFF, ventilation mode, fan speed)	Yes
Operation restrictions (fan speed skip setting)	Yes
Screen contrast adjustment	Yes
Language selection	Yes (11 languages)
CO <sub>2</sub> concentration indication (Mitsubishi Electric and field supply)	Yes
Filter cleaning sign	Yes (Maintenance interval can be changed)
LOSSNAY core cleaning sign	Yes
Error indication	Yes (Displays model name, serial number, contact information)
Error history	Yes
OA/RA/SA temp. display	Yes

\*When using a CO<sub>2</sub> sensor. Upper and lower limits may differ.

■ System example

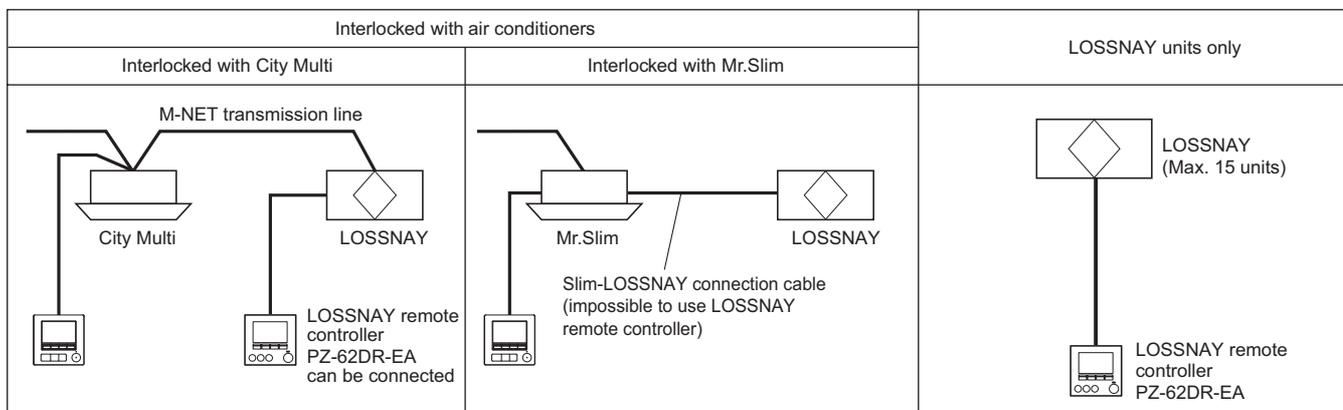


■ External dimension

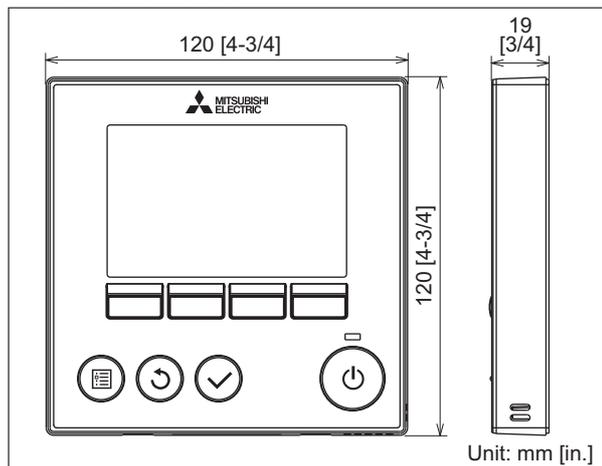

Language
English
German
Spanish
French
Russian
Dutch
Turkish
Polish
Czech
Hungarian
Bulgarian

Unit: mm [in.]

3-1. ON/OFF remote controller [PAC-YT40ANRA]

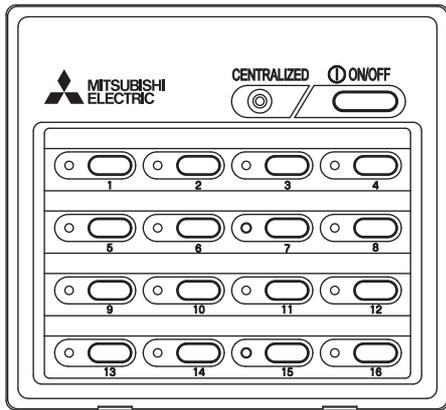

- Control of up to 16 groups/50 indoor units is possible.
  - Up to 16 groups/50 units can be operated with one ON/OFF remote controller.
  - A general-purpose interface is available for control, allowing general devices to also be turned ON and OFF.
- Just press a switch to start.
  - All of the units can be started and stopped by pressing the main switch, and each unit in the group can be started and stopped with individual switches.
- LED flashing during failure.
  - If any error should occur in the air conditioner, its details can be confirmed easily with the flashing LED. The LED also indicates whether each group is running or stopped.
- Interlock operation with external system is possible.
  - It can be flexibly interlocked with a card reader, fire alarm system, or building management system, etc., using the incorporated external input/output function.
- Flexible group setting.
  - Groups can be easily configured, allowing the group pattern to be freely set according to the layout.
  - The ON/OFF remote controller can be connected at the indoor/outdoor transmission line without the power supply unit.

**NOTE**

The dual set point function is available depending on the controller version. Please contact your local distributor regarding the availability of this function.


■ Functions

○: Each group      △: Each floor  
 ◎: Group or collective      ×: Not available


Item	Description	Operations	Display
ON/OFF	ON and OFF operation for the air conditioner units	◎	◎
Operation mode switching	Not available	×	×
Temperature setting	Not available	×	×
Fan speed setting	Not available	×	×
Air flow direction setting	Not available	×	×
Manual operation prohibit/permit (ON/OFF, operation mode, setting temperature, filter reset)	Compatible only with external input.	×	×
Specific mode operation prohibit (Cooling prohibit, heating prohibit, cooling/heating prohibit)	Not available	×	×
Room temperature display	Not available	—	×
Error display	LED flashes during failure. (The error code can be confirmed by removing the cover.)	—	△
Schedule operation	Not available	×	×
Ventilation operation (independent)	Group operation is only possible with LOSSNAY units. ※: Only ON/OFF of group.	○	○
Ventilation operation (interlocked)	The LOSSNAY will run in interlock with the operation of the indoor unit. ※: The fan rate and mode cannot be changed. The LED will turn ON only during operation after interlocking.	△	△
External input (Timer connection, emergency stop input, etc.)	The following can be input with the level signals or pulse signals. Level signal: "Emergency stop input" or "Collective ON/OFF" Pulse signal: "Collective ON/OFF" or "Local remote controller prohibit/permit" One input can be selected from those above.	◎*1	—
External output (Error output, operation output)	"ON/OFF" and "error/normal" are output with the level signal. ※: The optional output cable is required.	—	◎*1

\*1 Not applicable to groups

■ System example

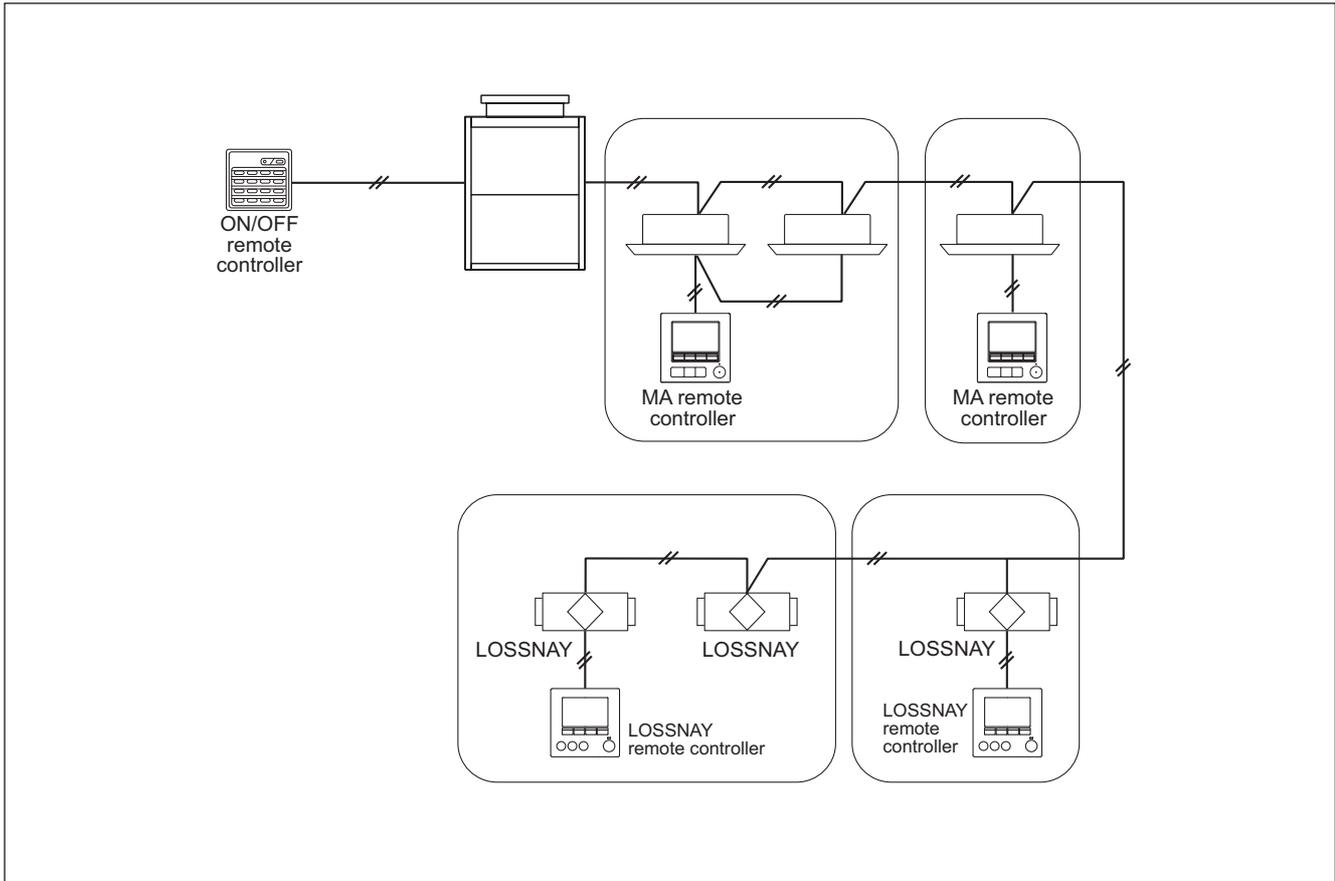

■ External dimension

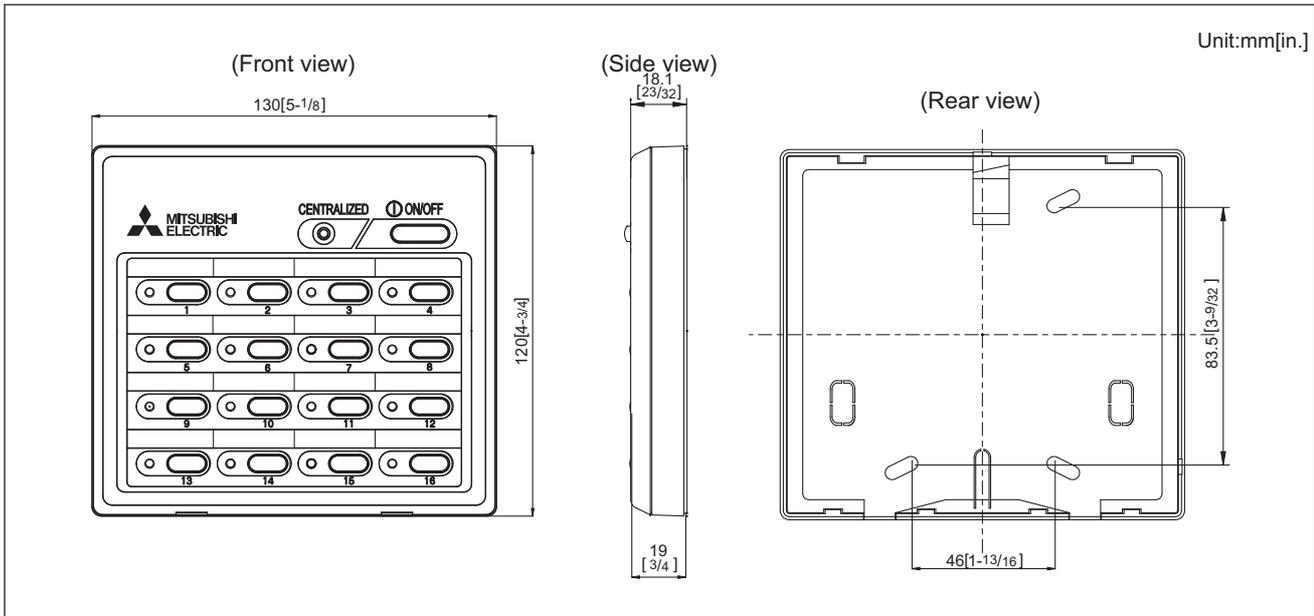

3-2. Touch controller [TC-24B]




- TC-24B features a 5 inch wide color LCD touch panel. The settings for air conditioning units can be changed by touching the corresponding icons on the display. On the panel of TC-24B are 3 buttons; ON/OFF, SETBACK and HOLD enabling simple and quick operation.
- One TC-24B can control up to 24 groups/units of air conditioners.
- Operation status displayed on easy-to-read LCD. The group currently operating can be seen at a glance with the operation status display. TC-24B operation is limited to basic functions such as ON/OFF, Operation mode changeover, temperature setting and Prohibit operation by local remote controller.
- Up to 12 patterns of weekly schedule can be set. "ON/OFF", "Operation mode", "Set Temperature", "Fan speed", "Air flow direction" and "Permit / Prohibit local operation" can be scheduled with up to 16 settings in one pattern.
- Up to 5 patterns of today's schedule can be set.
- Independent LOSSNAY operation is possible. Automatic ventilation, Normal ventilation and Ventilation with heat exchanger can be switched from the system controller.
- TC-24B is equipped with a system changeover function which an operation mode can be switched to an optimal mode depending on indoor temperature setting and target temperature of each group or a representative indoor unit.

■ Functions

□: Each unit ○: Each group ●: Each block  
 ◎: Group or collective ✕: Not available


Item	Description	Operations	Display
ON/OFF	ON and OFF operation for the air conditioner units. Even when only a single indoor unit connected to the touch controller will operate and collective ON/OFF lamp will light up.	◎	◎
Operation mode switching	Switches between Cool/Drying/Auto/Fan/Heat/Setback. Operation modes vary depending on the air conditioner unit. Auto mode and Setback mode are for CITY MULTI R2/H2 (R2)/WR2-Series only.	◎	◎
Temperature setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	◎	◎
Fan speed setting	Models with 5 air flow speed settings: Hi/Mid-1/Mid-2/Low, Auto Models with 4 air flow speed settings: Hi/Mid-1/Mid-2/Low Models with 3 air flow speed settings: Hi/Mid/Low Models with 2 air flow speed settings: Hi/Low * Fan speed setting (including Auto) varies depending on the model.	◎	◎
Air flow direction setting	Air flow direction angles 4-angle or 5-angle, Swing, Auto Louver ON/OFF * Air flow direction settings vary depending on the model.	◎	◎
Hold	Prohibits the scheduled operation from being executed.	◎	◎
Permit/Prohibit	The ON/OFF, operation mode, setting temperature, fan speed, air direction, and filter sign reset operations using the local remote controllers can be prohibited. Only ON/OFF and filter reset can be prohibited for the LOSSNAY group.	◎	◎
Operation lock	Child proof. (ON/OFF, operation mode, setting temperature, fan speed, HOLD)	◎	◎
Room temperature display	The room temperature can be displayed.	✕	○
Error display	When an error is occurring on an air conditioner unit, the affected unit and the error code are displayed. * When an error occurs, the "ON/OFF" LED flashes. The operation monitor screen shows an abnormal icon over the unit. The error monitor screen shows the abnormal unit address and error code. The error log monitor screen shows the time and date, the abnormal unit address, error code, and source of detection.	✕	□◎
Schedule operation	Weekly schedule setting of up to 12 patterns is available. In one pattern, up to 16 settings of "ON/OFF", "Operation mode", "Set Temperature", "Fan speed", "Air flow direction", and "Permit/Prohibit local operation" can be scheduled. Today's schedule allows setting of up to 5 patterns. *Time setting unit: 5 minute /unit	○	○
Ventilation (independent)	Switches the mode "Bypass/Heat recovery/Auto" for LOSSNAY groups.	◎	◎
Ventilation (interlocked)	The LOSSNAY will run in interlock with the operation of the indoor unit. The mode cannot be changed. The LED will turn ON during operation after interlocking.	◎	◎
Temperature set limitation	Batch-setting to temperature range limit in cooling, heating, and auto modes. This function cannot be used with the MA remote controller. (Depends on the indoor unit model.)	◎	◎
System changeover	Operation mode can be switched to an optimal mode depending on indoor temperature setting and target temperature of each group or a representative indoor unit. * When this function is used, the system changeover function of the outdoor unit cannot be used.	●	-
External input (Emergency stop input, etc.)	The following input with level signals or pulse signals are available. Level signal: "Emergency stop input" or "Collective ON/OFF" Pulse signal: "Collective ON/OFF" or "Local remote controller prohibit/permit" One input can be selected from those above. * An external input/output adapter (PAC-YT51HAA-J (sold separately)) is required. Relays and DC power supply or other devices must be prepared at the site.	◎	◎
External output (Error output, operation output)	"ON/OFF" and "error/normal" are output with the level signal. * An external input/output adapter (PAC-YT51HAA-J (sold separately)) is required. Relays and DC power supply or other devices must be prepared at the site.	◎	◎

■ External dimension

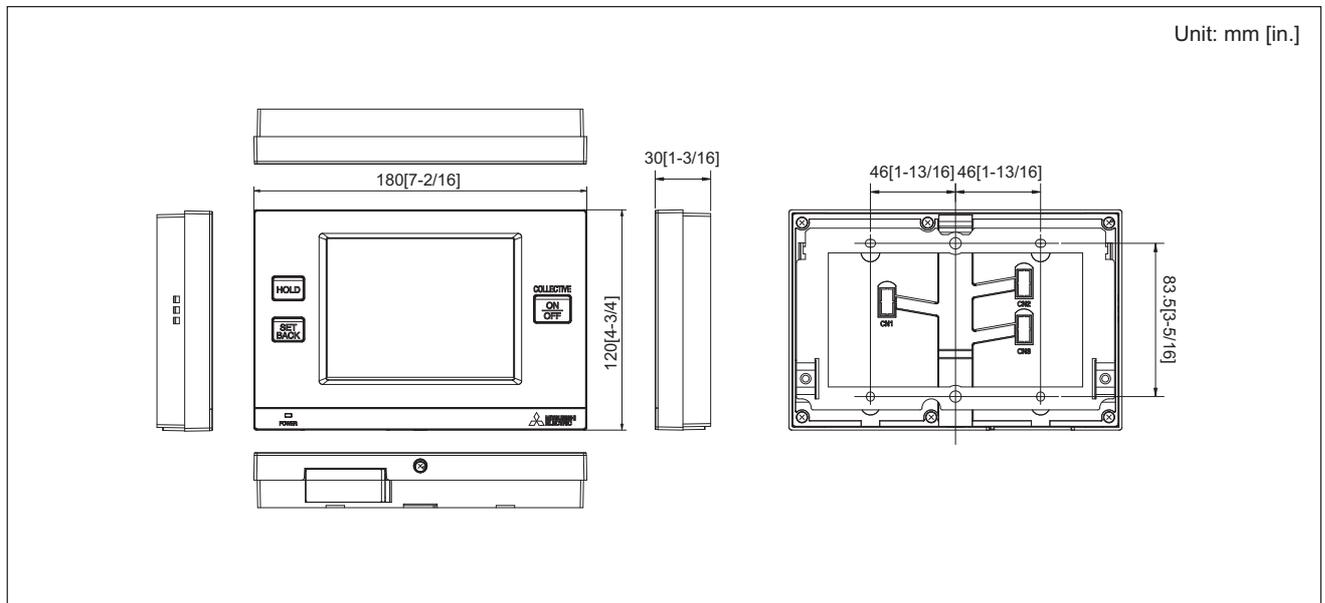


■ System example

(1) Connection with CITY MULTI units

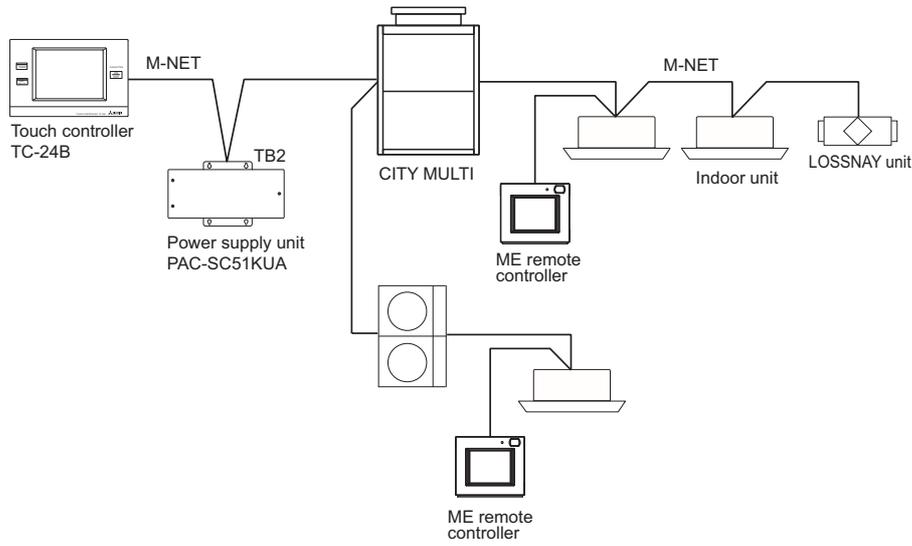

(2) Connection with CITY MULTI and Mr.SLIM units

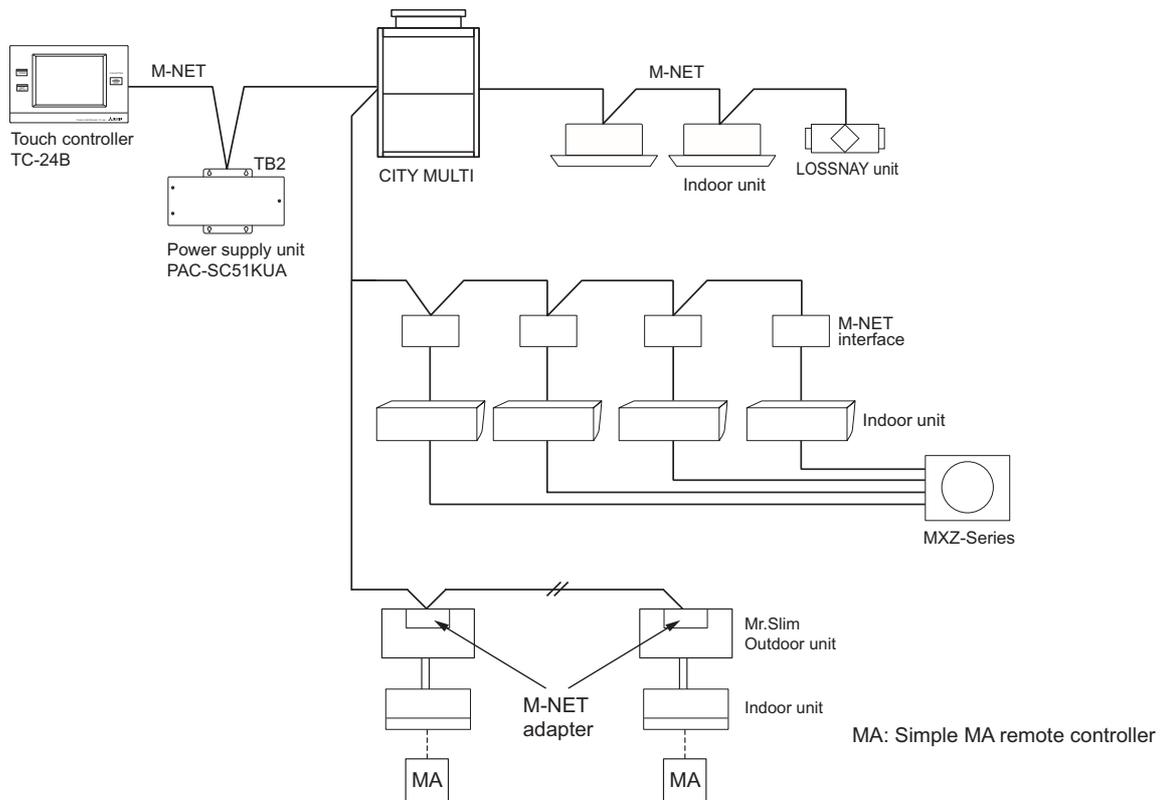

1. Power supply to TC-24B

TC-24B needs DC power supply of M-NET (24~32VDC) for centralized control transmission use, operation.

(1). Power supply of M-NET from power supply unit PAC-SC51KUA.

Power supply unit PAC-SC51KUA is recommended for TC-24B. See the diagram below; for details, please refer to the installation manual of Power supply unit PAC-SC51KUA

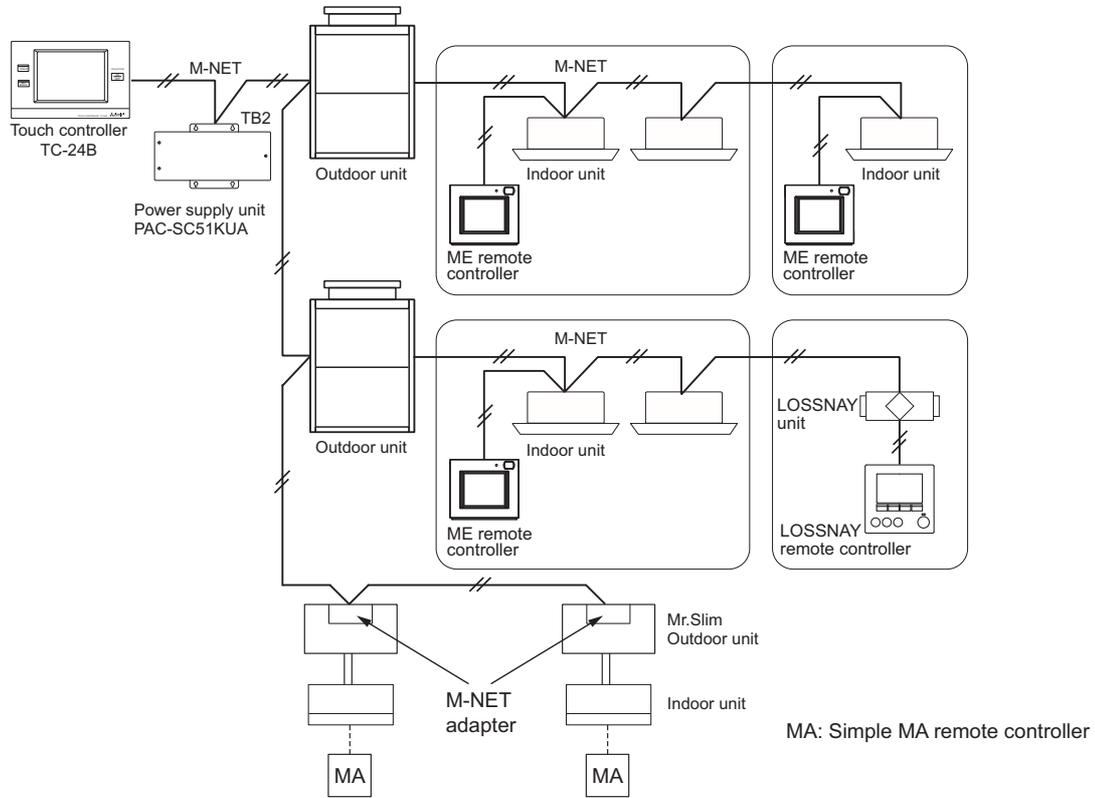


Fig. 1 Basic structure of TC-24B and PAC-SC51KUA

(2). Power supply of M-NET from outdoor unit connector TB7.

As shown on Fig. 2, TC-24B receives power supply of M-NET from R410A outdoor unit connector TB7.

In case one of the outdoor units should change its power supply, switch CN41 to CN40.

However, if the outdoor unit shuts down, TC-24B will also automatically shut down.

Therefore, this scheme is not recommended for air conditioning system consisting of multiple outdoor units.

\*NOTE: This method applies to R410A CITY MULTI outdoor unit except PUMY (S-Series), PUHY/PURY-T(S)KMU, and PUHY/PURY-T(S)LMU models.

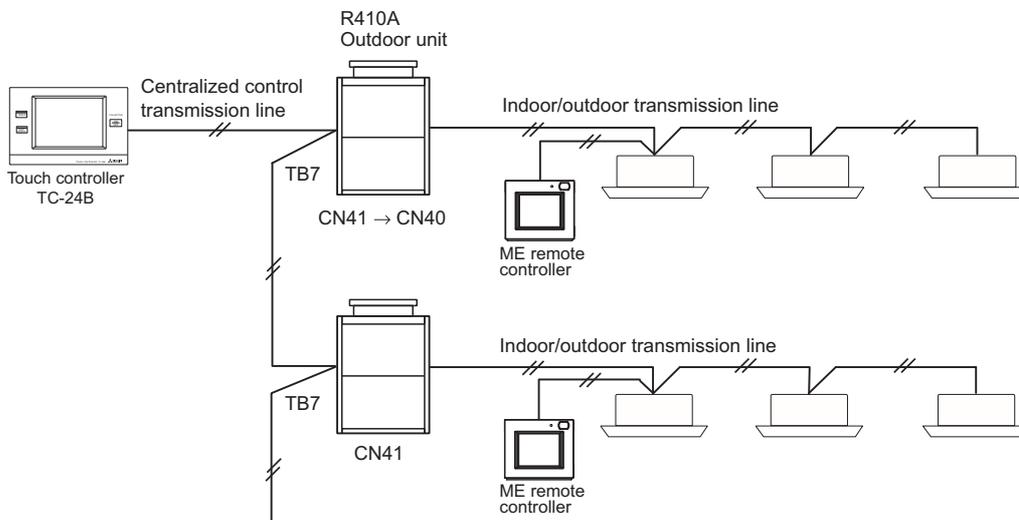


Fig. 2 TC-24B, TB7 scheme

- (3). Power supply of M-NET from outdoor unit connector TB3.  
 TC-24B can also receive power supply from R410A/R407C/R22 outdoor unit connector TB3. However, if the outdoor unit shuts down, TC-24B will also automatically shut down. Therefore, this scheme is not recommended for air conditioning system consisting of multiple outdoor units.


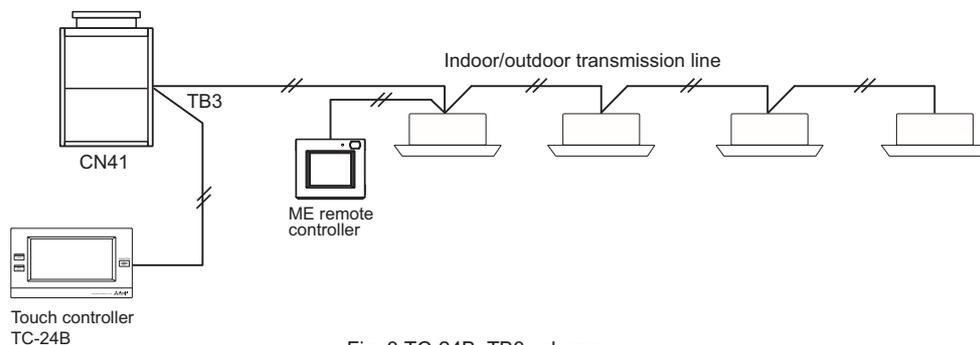


Fig. 3 TC-24B, TB3 scheme.

2. External input/output usage

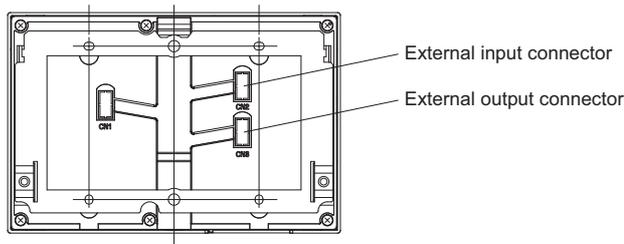

(1). External signal input function

※ External signal input requires the external I/O adapter (Model: PAC-YT51HAA-J) sold separately.


1). External input

External no-voltage contact signal can be used to send signals indicating the following status of all air conditioning units that are controlled : Emergency stop/Normal, ON/OFF, and local remote controller operation Prohibit/Permit. The above settings can be made using the external input setting on the Initial Setting screen accessed from the Service Menu screen.


No	External signal input function	Remarks
1	Do not use external input signal (factory setting)	
2	Execute emergency stop/normal with level signal	The local remote controller ON/OFF operations, and the controller ON/OFF operation and prohibit/enable change operations will be prohibited during emergency stop.
3	Perform ON/OFF with level signal	The local remote controller ON/OFF operations, and the controller ON/OFF operations and prohibit/enable change operations will be prohibited.
4	Perform ON/OFF, prohibit/enable with pulse signals.	Set the pulse width while the contact is ON to 0.2 to 1 sec.

2). Level signal and pulse signal

(A) Level signal

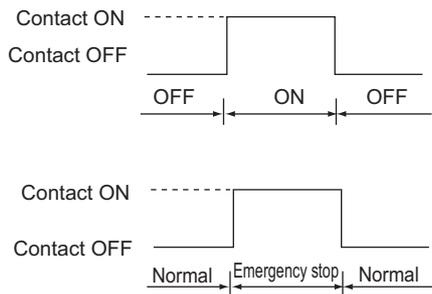

(B) Pulse signal (Example) for ON/OFF

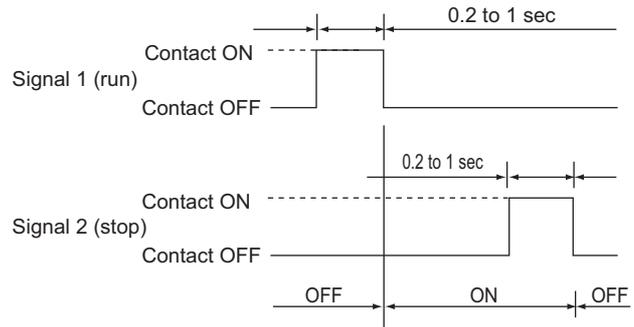

※ The prohibit/enable input is the same.

3). External input specifications

CN2	Lead wire	Emergency stop/normal level signal	ON/OFF, level signal	ON/OFF, prohibit/enable pulse signal
No.1	Green	Built-in power supply for external input (DC5V)		
No.2	Yellow	Emergency stop/normal input	ON/OFF input	ON input
No.3	Orange	Not used	Not used	OFF input
No.4	Red	Not used	Not used	Local remote controller operation prohibit input
No.5	Brown	Not used	Not used	Local remote controller operation enable input

(A) For level signal


- ① When the emergency stop/normal signal is selected, the status will change from normal to emergency stop when the external input signal contact changes from OFF to ON, and will change from emergency stop to normal when the contact changes from ON to OFF. Emergency stop signal will bring the air conditioners to stop, and canceling the emergency stop will not automatically reset these units. To go back to the previous operation status, they must be manually turned back on.
- ② When the ON/OFF signal is selected, the status will change from OFF to ON when the external input signal contact changes from OFF to ON, and will change from ON to OFF when the contact changes from ON to OFF.

(B) For pulse signal


- ① Even if the ON signal is input during ON, the status will remain ON.
- ② If local remote controller operation is prohibited, ON/OFF, operation mode, set temperature, filter sign reset, fan speed, and air direction settings will be prohibited, and also timer (schedule) settings from the local remote controllers will be deactivated. Depending on the models of the connected air conditioning units and remote controllers, operation of some of the items above may not be disabled.
- ③ Set the pulse width (contact ON time) to 0.2 to 1 sec.

4). Recommended circuit example

(A) For level signal

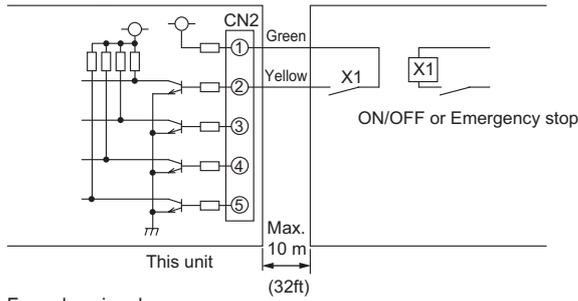

(B) For pulse signal

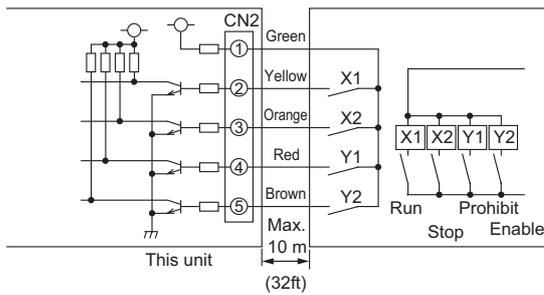

- ① The relays and extension cables, etc. must be prepared separately at the site.
- ② Use a no-voltage contact and minute load relay (minimum application load 5VDC-1mA).
- ③ The length of the connection cable extension should not exceed 10 m (32 ft). (Use a cable of 0.3 mm<sup>2</sup> (22 AWG) or thicker.)
- ④ Cut of the cable not being used close the connector and properly insulate the cut off ends with tape or the like.

(2). External signal output function

\* External signal output requires the external I/o adapter (Model: PAC-YT51HAA-J) sold separately.

1). External output


When one or more air conditioners are running, the "ON" signal will be output and if a malfunction occurs in one or more air conditioners, the "Malfunction" signal will be shown.

2). External output specifications

CN 3	Lead wire	Details of each terminal
No.1	Brown	ON/OFF
No.2	Red	Malfunction/normal
No.3	Orange	Common (External ground)
No.4	Yellow	

① " ON" signal and " Malfunction" signal will both be output.


3). Recommended circuit example

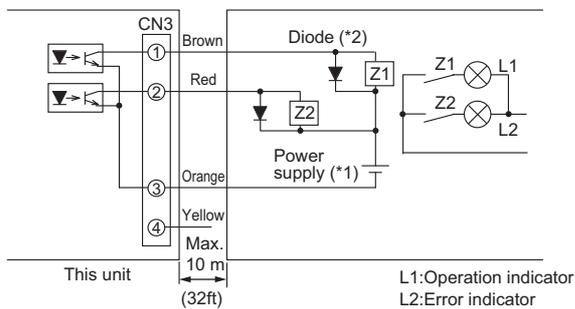

Use Z1 and Z2 relays having the following specifications.  
 Operation coil :12VDC,24VDC  
 Rated voltage :12VDC,24VDC  
 Power Consumption : 0.9W or less  
 (\*1)Prepare a power supply separately according to the relay being used. (12VDC or 24VDC)  
 (\*2)Always insert a diode on both ends of the relay coil.

- ① Each element will turn on while ON operation or a malfunction occurs.
- ② The connection cable can be extended up to 10m (32ft).
- ③ The relays, lamps, diodes and extension cables, etc. must be prepared separately at the site.

3. Screens of TC-24B

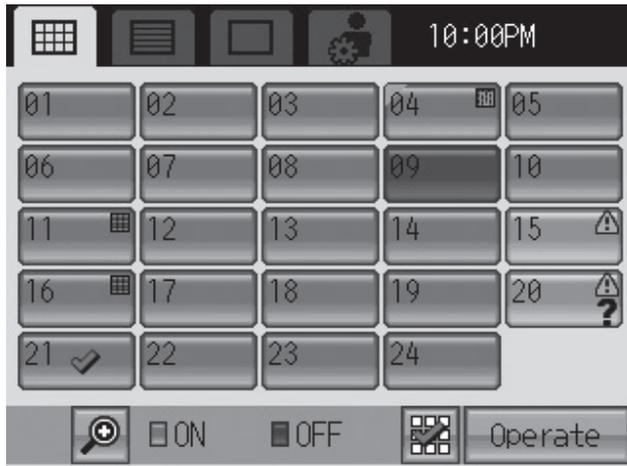

GRID (S)




GRID (L)




LIST



GROUP

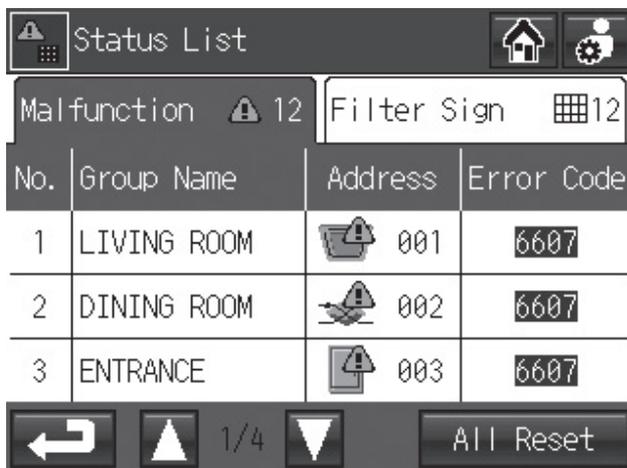

Status List

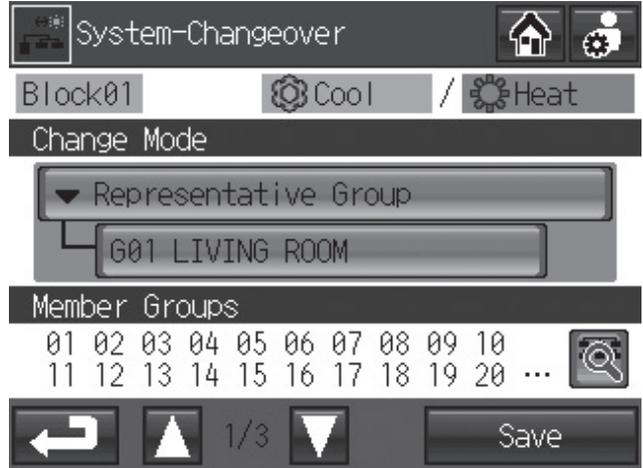


System-Changeover


CONTROLLER




Operation Lock

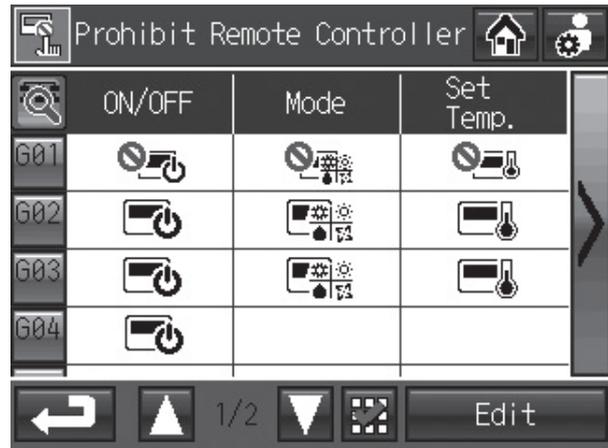

Prohibit Remote Controller

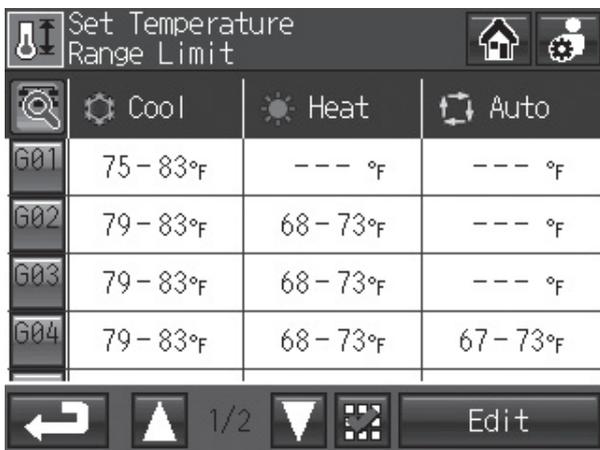

Set Temperature Range Limit

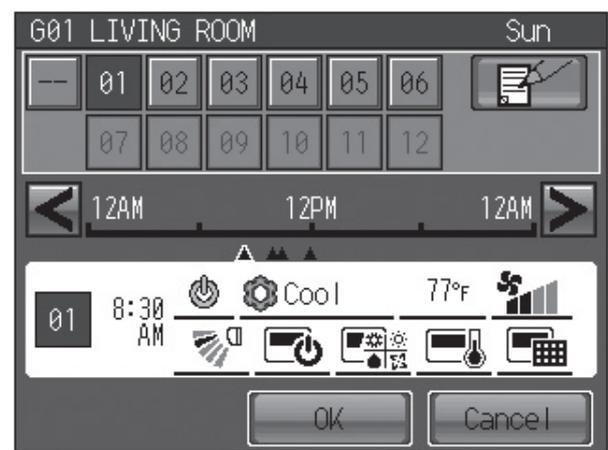


Set Schedule



Display Format

3-3. Centralized controller with LCD [AE-C400A]

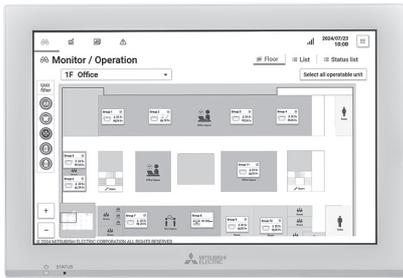


- A. The centralized controller of AE-C400A combines Web function, which enable the air conditioner system management on a PC browser screen. \*1  
 The management even carried out at a long distance place via the internet.  
 \*1 Operating system requirement: Microsoft® Windows 11® (64bit), Microsoft® Windows 10® (64bit), MacOS®  
 Browser requirement: Microsoft® Edge®, Google Chrome™, Safari®
- B. Together with PI controller, DIDO controller, or Modbus\*2, many optional functions like "Peak-cut", "Energy saving", "General equipment management", "Scheduling" etc, can be carried out. Refer to section of PI and/or DIDO controller for details on these controllers.  
 \*2 For connectable unit models, refer to the Instruction Book (Detailed Operations) for AE-C400A/EW-C50A.
- C. One AE-C400A can control up to 50 units (including LOSSNAY). Up to 400 units (including LOSSNAY) can be controlled from one AE-C400A connected with seven AE-C400A/EW-C50A units.  
 \*The maximum number of connectable units depends on the model. Refer to the Technical Manual.
- D. Taking advantage of AE-C400A's Web functions, alarming E-mail containing address and error code can be sent to appointed E-mail address upon any fault happen at the air conditioner system.  
 This could release standby personnel and save operation cost.
- E. The interlock-control option enables interlocked operations of air conditioning unit groups and the general equipment groups, based on the changes of status in the ON/OFF, Mode, or Error signals. (Can be set from the Initial Setting Tool only)
- F. CO<sub>2</sub> level can be indicated on AE-C400A's LCD by connecting CO<sub>2</sub> sensor to LOSSNAY.

○: Available, ×: Not available

Model		Common functions			Basic functions				Schedule functions	Other functions			
		Display screen (LCD/Web)	Floor layout screen (LCD/Web)	Error display	ON/OFF	Mode selection	Temperature setting	Temperature display	Schedule	External Input/Output	Demand function	Charge function	Energy management
Air conditioning units	City Multi (including H2i series)		○	○	○	○	○	○	○	○	○	○	○
	City Multi (excluding H2i Multi-S series)	S-series	○	○	○	○	○	○	○	○	○	○	○
	HYBRID City Multi (HVRF)		○	○	○	○	○	○	○	○	○	○	○
	Commercial PAC (PFAV, PFV/PEV)		○	○	○	○	○	○	○	○	○	○	○
	Mr. SLIM	P-series	○	○	○	○	○	○	○	○	○	○	○
		S-series	○	○	○	○	○	○	○	○	○	○	○
RAC	M-series	○	○	○	○	○	○	○	○	○	○	○	
LOSSNAY	LOSSNAY (with M-NET)		○	○	○	○	×	×	×	○	○	○	×
	OA processing unit [Group]		○	○	○	○	○	○	○	○	○	○	○
	OA processing unit [Interlocked LOSSNAY]		×	×	○	×	×	×	×	×	×	○	×
Refrigerant equipment	e-series	EACV/EAHV-P/M1500 (50HP)/P/M1800 (60HP)	○	○	○	○	○	○	○	○	○	×	×
		EACV/EAHV-P900 (30HP)	○	○	○	○	○	○	○	○	○	×	×
	Hot Water Heat Pump	HWHP (QAHV)	○	○	○	○	○	○	○	○	○	×	×
		HWHP	HWHP (CAHV)	○	○	○	○	○	○	○	○	×	×
System component	PI controller (60) [PAC-YG60MCA]		○	○	○	×	×	×	×	×	×	×	○
	DIDO controller (66) [PAC-YG66DCA]		○	○	○	○	×	×	×	○	○	×	×
	AI controller (63) [PAC-YG63MCA]		○	○	○	×	×	×	○	×	×	×	○

External dimension

CONTROLLER

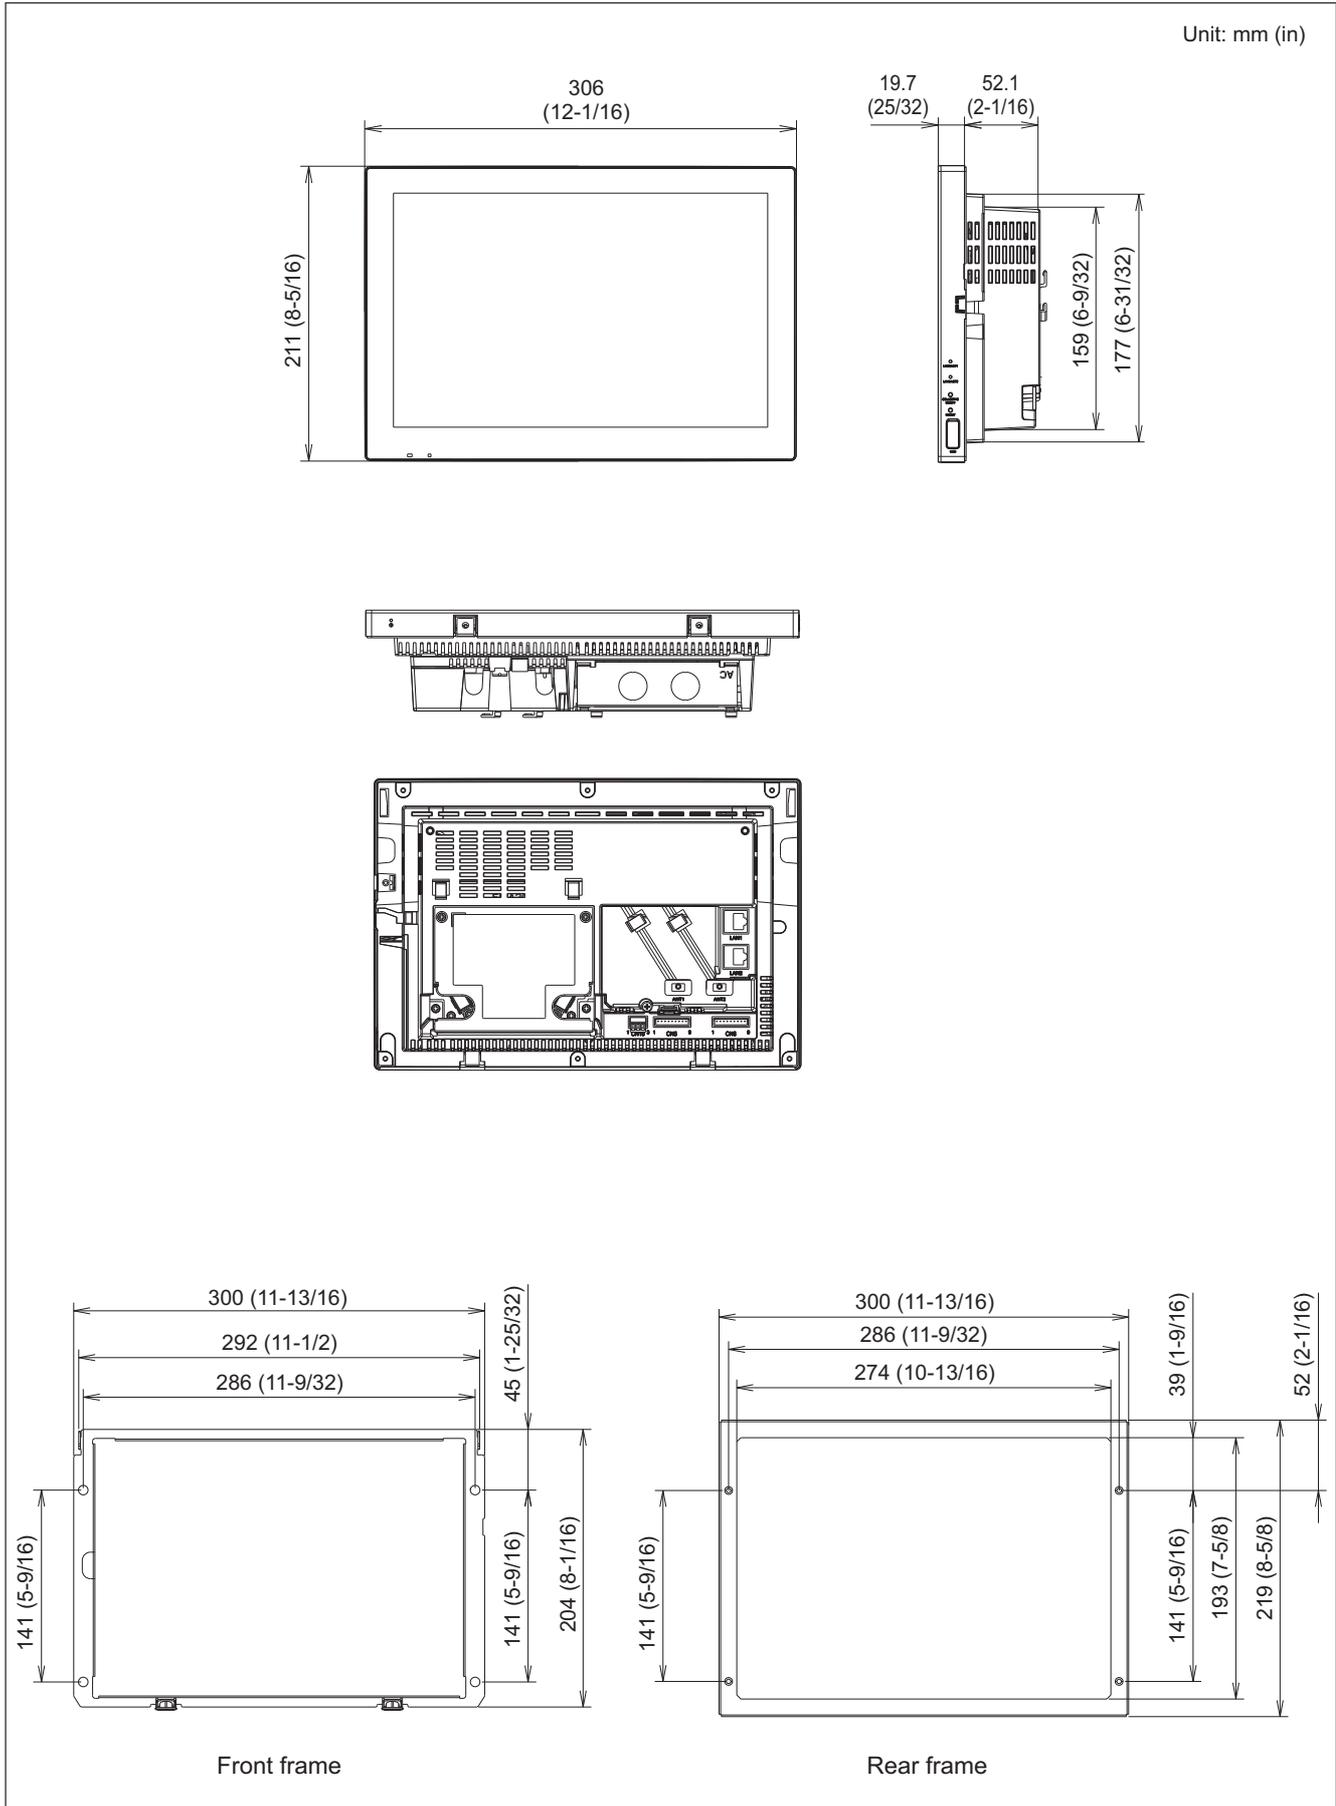

**1. Power supply to AE-C400A**

AE-C400A needs AC power (100-240VAC) and M-NET; the former is for centralized control transmission use and the latter is for AE-C400A's operating and LAN function use.

Except when the equivalent power consumption exceeds 0.75, the power supply unit, the power supply unit PAC-SC51KUA or the power supply from the outdoor unit to M-NET is not necessary.

For more details, please refer to the Installation Manual of AE-C400A.

(1) The basic scheme is as follows.

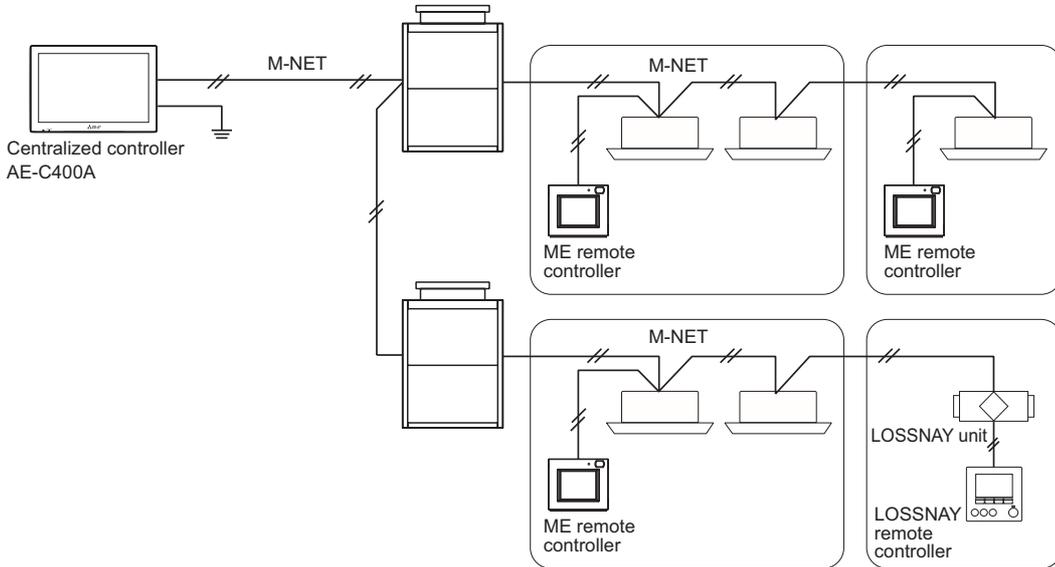


Fig.1 AE-C400A basic scheme.

**2. M-NET power supply**

AE-C400A has a built-in function to supply power to the M-NET transmission line.

The power supply coefficient of AE-C400A/EW-C50A is 0.75. For power supply coefficient and power consumption coefficient, refer to section 3-7. Transmission booster [PAC-SF46EPA-G].

**Note:** When supplying power from the power supply units that are connected to the same centralized control transmission cable, make sure to disconnect CN21 to prevent supplying power from AE-C400A/EW-C50A.

**3. External input/output usage**

To use external inputs, external outputs, and RS-485 input, initial settings are required. For details, refer to the Instruction Book (Detailed Operations) for AE-C400A/EW-C50A.


- To use the external signal input, an external I/O adapter (PAC-YG10HA-E; sold separately) and an external power supply are required.

**Note:** When using EW-C50A, connect the external input/output adapter to each AE-C400A/EW-C50A. (External input signal to AE-C400A cannot perform the collective operations (e.g., emergency stop) for EW-C50A systems.)

**[External input]**

The external input function of the controller controls the connected units according to the external contact signals (12 V or 24 V DC) that are input to the controller.)

An external input/output adapter is required for each controller to use the external input function.

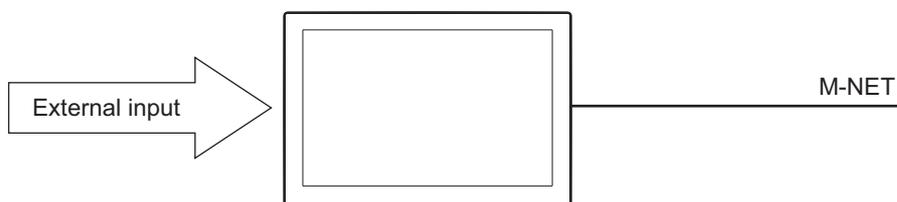

(1) Recommended circuit examples (external input)


Follow the conditions below when connecting an external input circuit.

- Because the controller uses photocoupler input, an external power supply (12 V or 24 V DC) is required. Because no external power supply is supplied with the controller, procure it locally.
- Procure relays and extension cables locally.

**Note:**

- To prevent malfunction, connect the external power supply to the input circuit with the correct polarity.
- Connect terminals (5) to (8) of the connector to the negative side of the external power supply. (See the figure below.)
- Cut unused cables near the connector, and insulate the cut end of the cables with tape.

1) Level signal (relay driving)

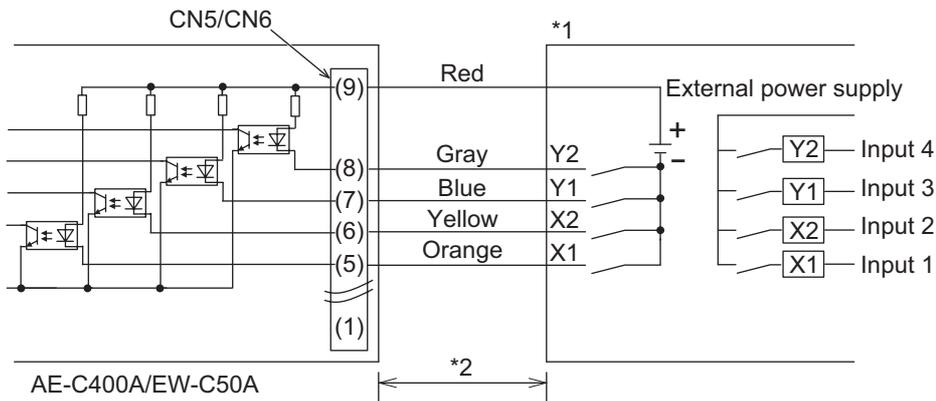

\*1 Unsupplied parts


\*2 External input/output adapter

The total wiring length of the external input/output adapter and an extension cable must be 100 m (328-1/16 ft) or shorter. (Use a cable of at least 0.3 mm<sup>2</sup> in diameter (AWG 22).)

As the cable length increases, the cable will be more affected by electrical noise interference.

Take appropriate measures against electrical noise interference depending on the cable length.

2) Pulse signal (relay driving)

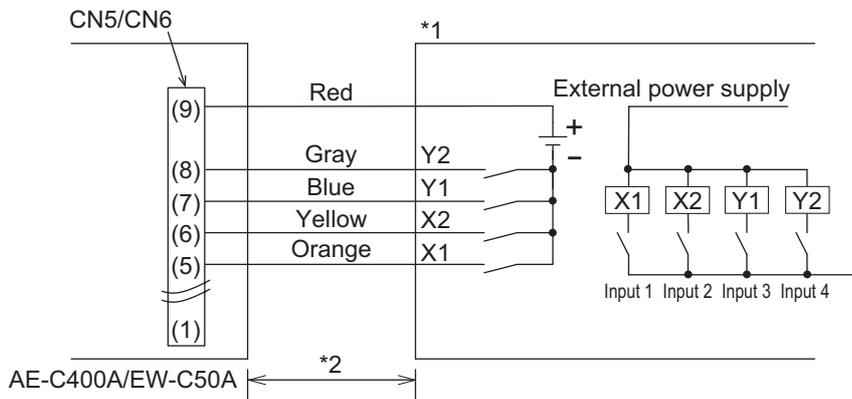

\*1 Unsupplied parts

\*2 External input/output adapter


The total wiring length of the external input/output adapter and an extension cable must be 100 m (328-1/16 ft) or shorter. (Use a cable of at least 0.3 mm<sup>2</sup> in diameter (AWG 22).)

As the cable length increases, the cable will be more affected by electrical noise interference.

Take appropriate measures against electrical noise interference depending on the cable length.

**[RS-485 input (CN10)]**


Watt-hour meters that support RS-485 (Modbus RTU) communication can be connected to this connector to capture watt-hour data. For details on watt-hour meter settings, refer to the manual for the watt-hour meter.

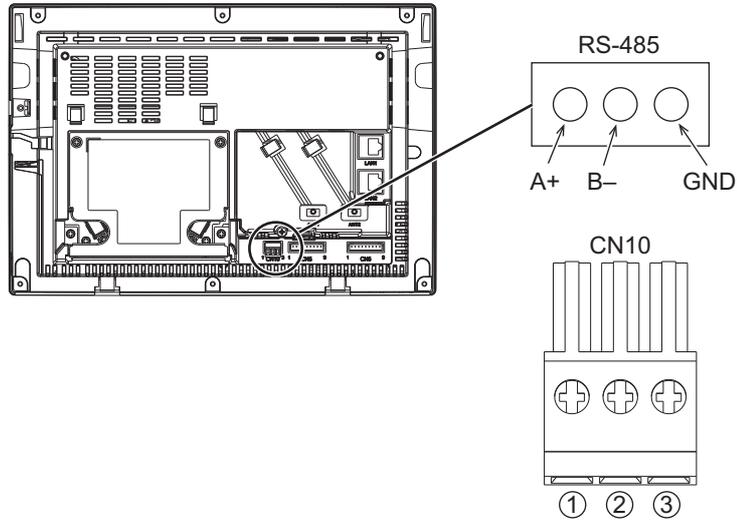

(1) Recommended circuit examples (RS-485 input)

**Note:**

- To connect the watt-hour meter cable to the connector, use a precision Phillips screwdriver (#0). (Specified torque: 0.25 N·m).
- Be sure to check the polarity of the terminals before connecting the cables.

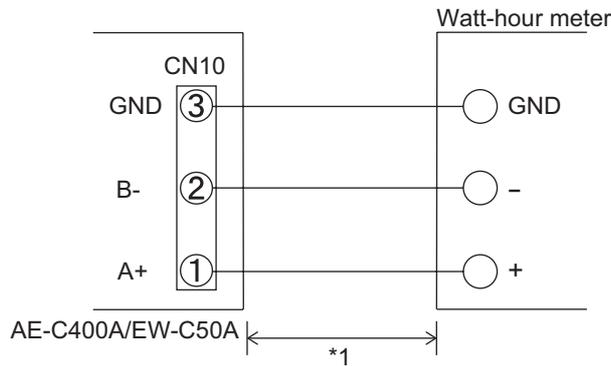

**\*1 External input/output adapter**

For the maximum wiring length between the controller and the watt-hour meter, see the AE-C400A/EW-C50A Technical Manual.

Connect both GND twisted-pair wires to the GND.

When using a shielded cable, connect the shield to the GND.

**[External output]**

The external output function of the controller outputs the statuses of the units that are controlled by the controller and those controlled by other controllers (AE-C400A/EW-C50A).

An external input/output adapter is required for each of the controller and other controllers (AE-C400A/EW-C50A) to use the external output function.



(1) Recommended circuit examples (external output)


Follow the conditions below when connecting an external output circuit.

- Because the controller uses transistor output (sink type), an external power supply (12 V or 24 V DC) is required. Because no external power supply is supplied with the controller, procure it locally.
- Procure relays, indicator lamps, diodes, and extension cables locally.

**Note:**

- To prevent malfunction, connect the external power supply to the output circuit with the correct polarity. Especially when using a relay with a built-in surge-protection diode, be sure to connect the external power supply with the correct polarity.
- Connect terminal (1) of the connector to the negative side of the external power supply. (See the figure below.)
- Do not connect the external power supply with no relays (no load) connected.
- Install a diode at both ends of the relay coil. (Relays with built-in diode are recommended.)
- Cut unused cables near the connector, and insulate the cut end of the cables with tape.

1) Relay driving

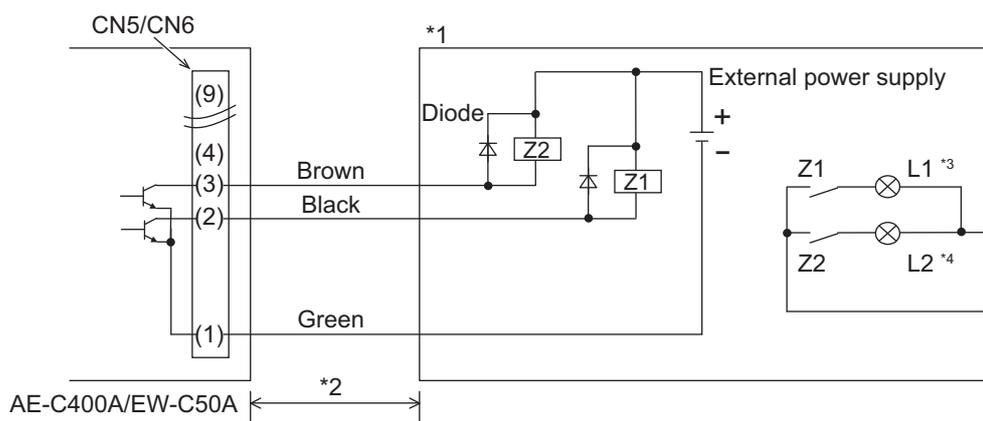

\*1 Unsupplied parts

\*2 External input/output adapter


The total wiring length of the external input/output adapter and an extension cable must be 10 m (32-3/4 ft) or shorter. (Use a cable of at least 0.3 mm<sup>2</sup> in diameter (AWG 22).)

\*3 Output 1 (L1: Indicator lamp)

\*4 Output 2 (L2: Indicator lamp)

**Note:** Each element turns on when a signal is output.

**Note:** When connecting the external input/output cables to connector CN5 on the controller, punch out the knockout hole.

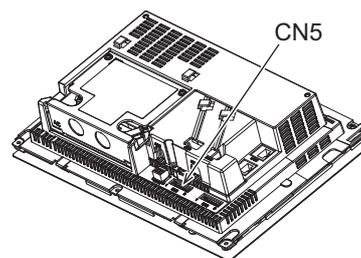

4. Connecting network cables


Before installing the controller, complete LAN wiring work so that LAN cables can be connected to the controller.

**Note:** When monitoring air-conditioning units and other equipment via the Internet, ensure security by using security devices such as VPN router to prevent unauthorized access and tampering.

(1) Connecting LAN cables

1) Connect a LAN cable to the LAN1 or LAN2 port of the controller.

- When the LAN cable exceeds 100 m (328-1/16 ft), relay the LAN cables, using a switching HUB.

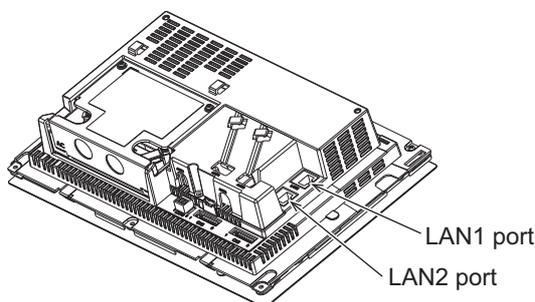

5. Liquid crystal displays of AE-C400A


CONTROLLER




Floor Layout Screen



Floor Layout Screen (Zoom-In Display)

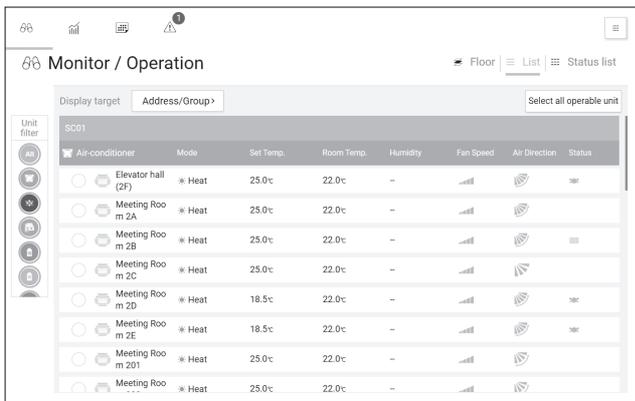

List Screen

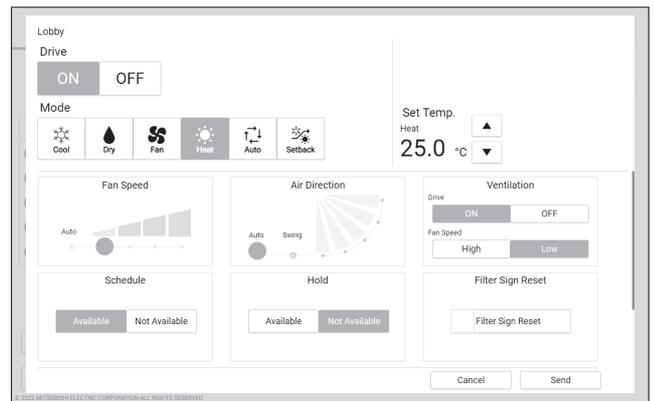


Operation Screen




Outdoor Unit Display Screen




Usage Status Screen

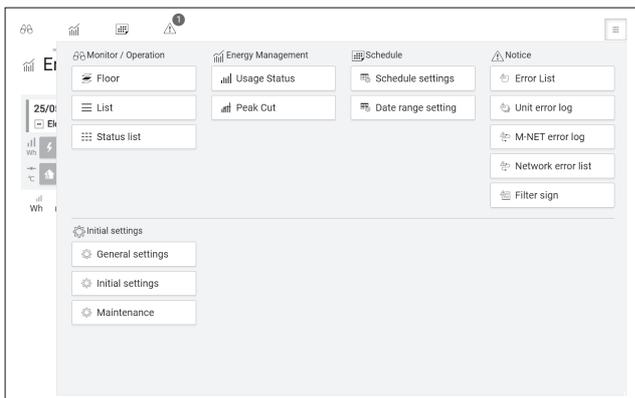


Panorama View Screen

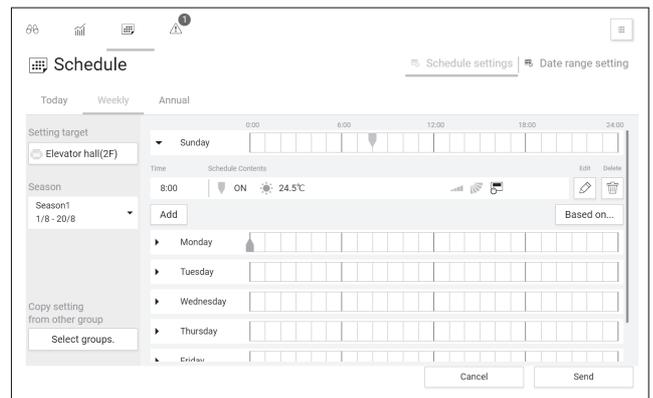

Weekly Schedule Screen

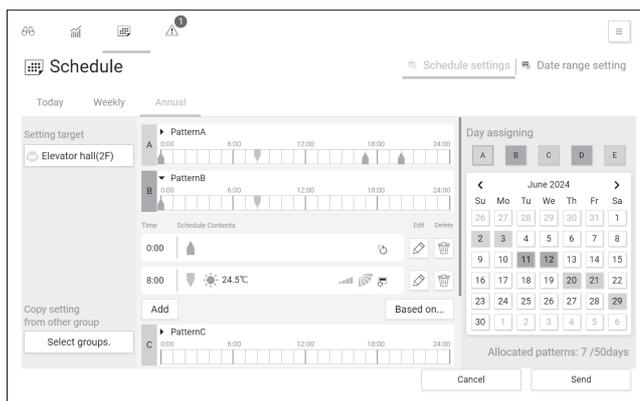

Annual Schedule Screen

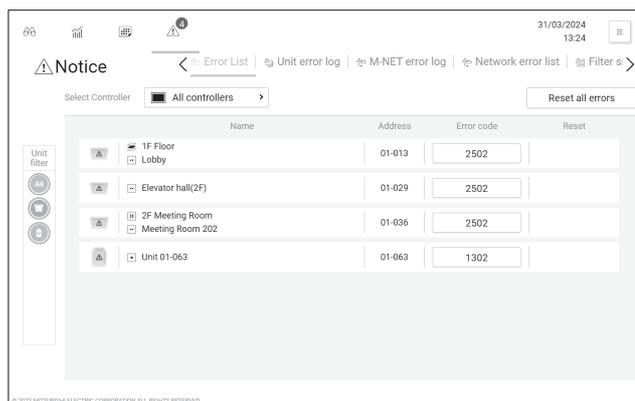

Error List Screen

6. Option

AE-C400A

Item	Model	Quantity	Remarks
Electrical box	PAC-YK94UTB-J	1	Required to install the controller.
Mounting kit for control panel	PAC-YK96TK-J	1	
Mounting attachment for wall-surface installation			
Replacement attachment	PAC-YK91RF-J	1	
External input/output adapter	PAC-YG10HA-E	1 or 2	Required to use the external input/output function. Prepare one adapter when using either of the external input/output connectors (CN5 and CN6), or two adapters when using both.

EW-C50A

Item	Model	Quantity	Remarks
External input/output adapter	PAC-YG10HA-E	1 or 2	Required to use the external input/output function. Prepare one adapter when using either of the external input/output connectors (CN5 and CN6), or two adapters when using both.

## 3-4. Centralized controller without LCD [EW-C50A]




- A. The centralized controller of EW-C50A combines Web function, which enable the air conditioner system management on a PC browser screen. \*1  
The management even carried out at a long distance place via the internet.  
\*1 Operating system requirement: Microsoft® Windows 11® (64bit), Microsoft® Windows 10® (64bit), MacOS®  
Browser requirement: Microsoft® Edge®, Google Chrome™, Safari®
- B. Together with PI controller, DIDO controller, or Modbus, many optional functions like "Peak-cut", "Energy saving", "General equipment management", "Scheduling" etc, can be carried out. Refer to section of PI and/or DIDO controller for details on these controllers.  
\*2 For connectable unit models, refer to the Instruction Book (Detailed Operations) for AE-C400A/EW-C50A.
- C. One EW-C50A can control up to 50 units (including LOSSNAY).  
\*The maximum number of connectable units depends on the model. Refer to the Technical Manual.
- D. Taking advantage of EW-C50A's Web functions, alarming E-mail containing address and error code can be sent to appointed E-mail address upon any fault happen at the air conditioner system.  
This could release standby personnel and save operation cost.
- E. The interlock-control option enables interlocked operations of air conditioning unit groups and the general equipment groups, based on the changes of status in the ON/OFF, Mode, or Error signals. (Can be set from the Initial Setting Tool only)
- F. CO<sub>2</sub> level can be indicated on EW-C50A's Web browser by connecting CO<sub>2</sub> sensor to LOSSNAY.

Refer to 3-3. Centralized controller with LCD [AE-C400A] for connectable units and functions.

External dimension

CONTROLLER

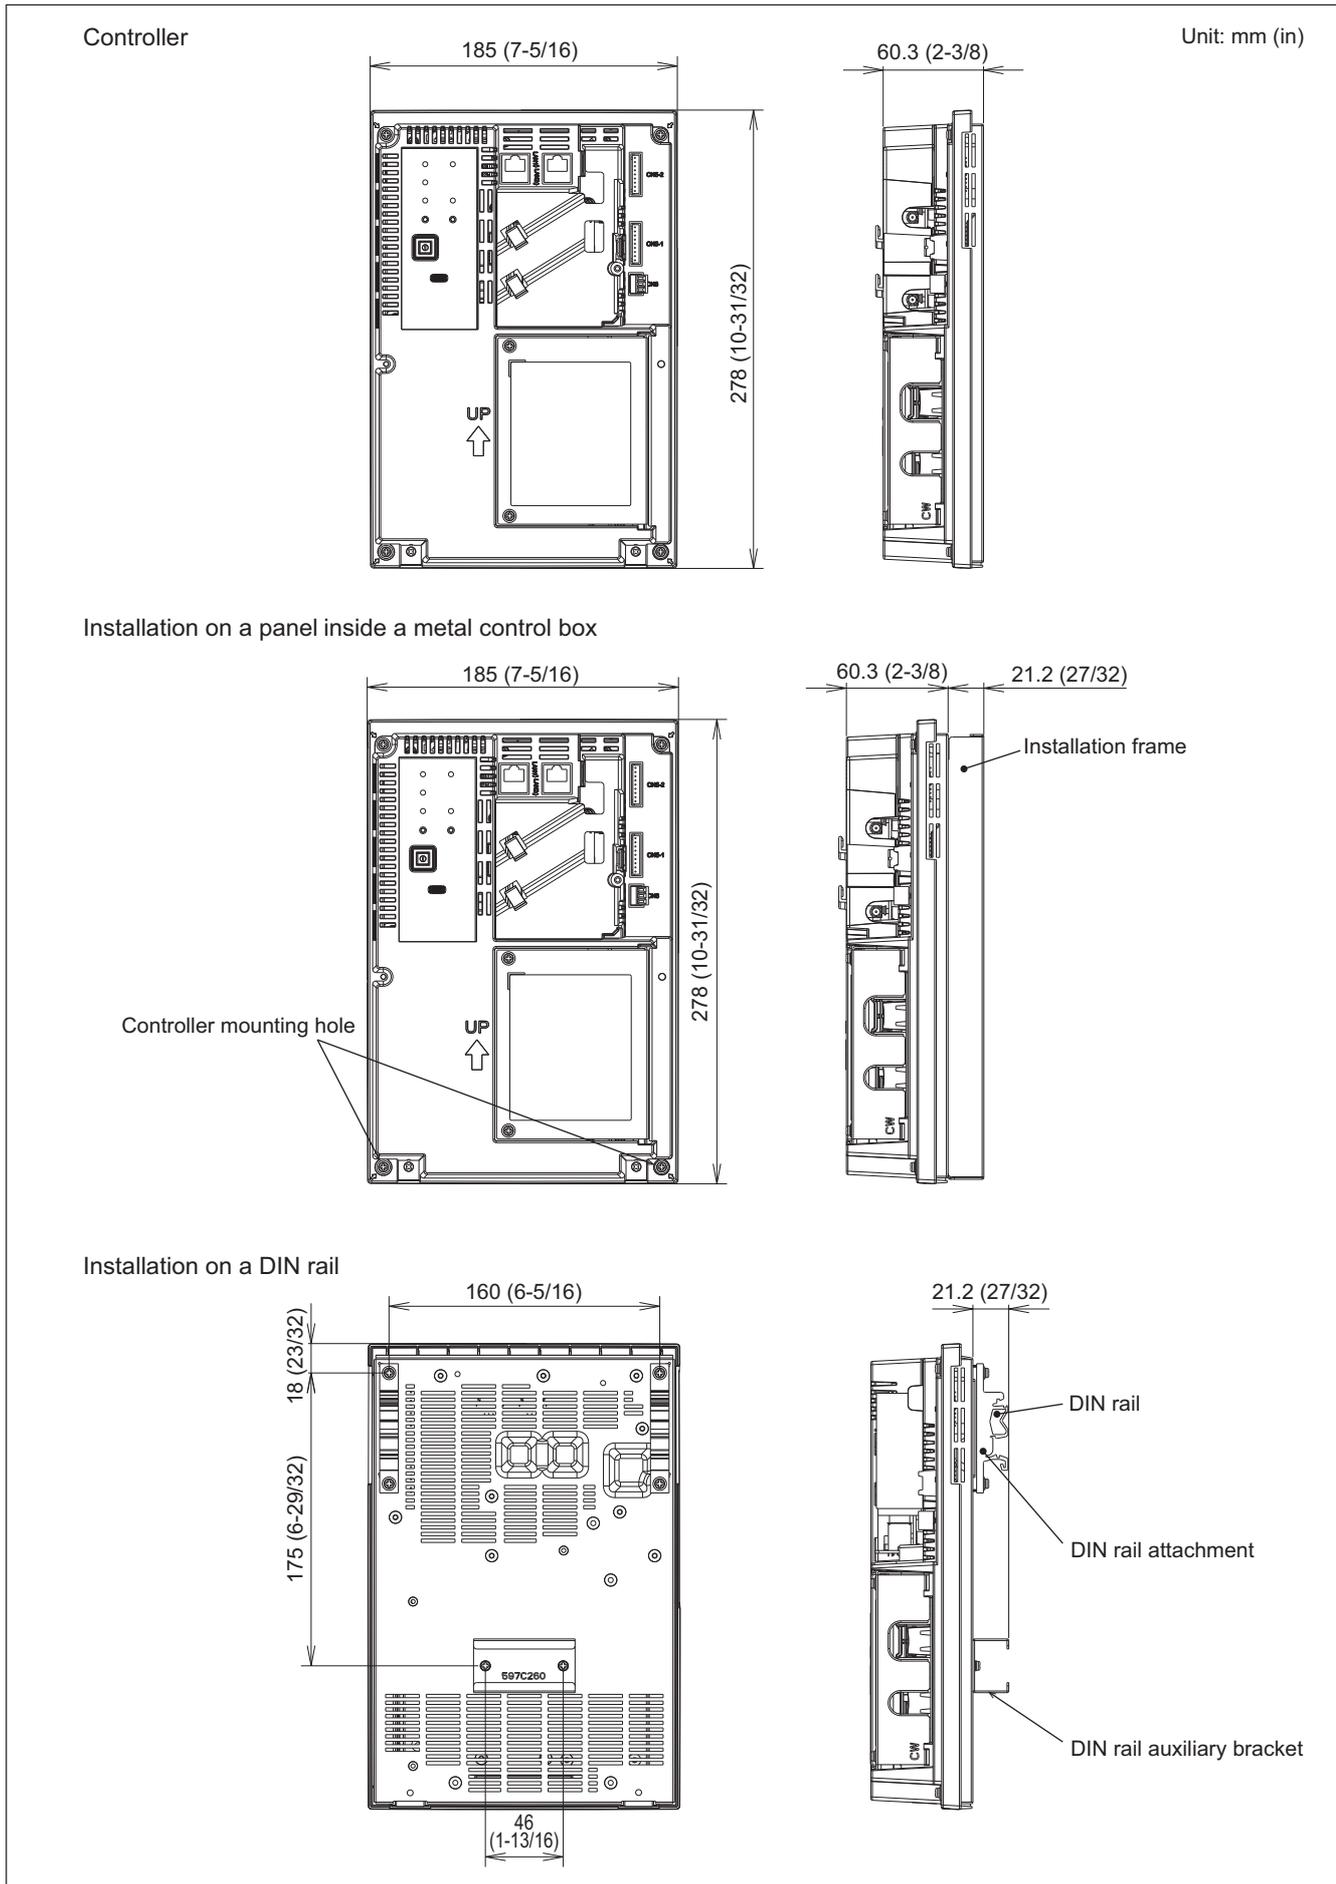

**1. Power supply to EW-C50A**

EW-C50A needs AC power (100-240VAC) and M-NET; the former is for centralized control transmission use and the latter is for EW-C50A's operating and LAN function use.

Except when the equivalent power consumption exceeds 0.75, the power supply unit, the power supply unit PAC-SC51KUA or the power supply from the outdoor unit to M-NET is not necessary.

For more details, please refer to the Installation Manual of EW-C50A.

(1) The basic scheme is as follows.

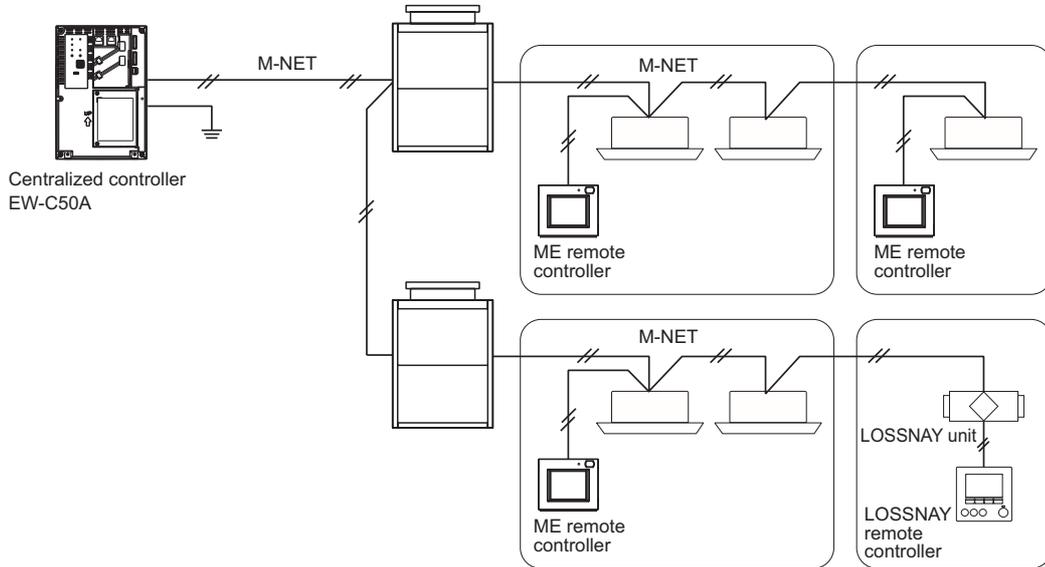


Fig.1 EW-C50A basic scheme.

**2. M-NET power supply**

EW-C50A has a built-in function to supply power to the M-NET transmission line.

The power supply coefficient of AE-C400A/EW-C50A is 0.75. For power supply coefficient and power consumption coefficient, refer to section 3-7. Transmission booster [PAC-SF46EPA-G].

**Note:** When supplying power from the power supply units that are connected to the same centralized control transmission cable, make sure to disconnect CN21 to prevent supplying power from AE-C400A/EW-C50A.

**3. External input/output usage**

To use external inputs, external outputs, and RS-485 input, initial settings are required. For details, refer to the Instruction Book (Detailed Operations) for AE-C400A/EW-C50A.


- To use the external signal input, an external I/O adapter (PAC-YG10HA-E; sold separately) and an external power supply are required.

**Note:** When using EW-C50A, connect the external input/output adapter to each AE-C400A/EW-C50A. (External input signal to AE-C400A cannot perform the collective operations (e.g., emergency stop) for EW-C50A systems.)

**[External input]**

The external input function of the controller controls the connected units according to the external contact signals (12 V or 24 V DC) that are input to the controller.)

An external input/output adapter is required for each controller to use the external input function.

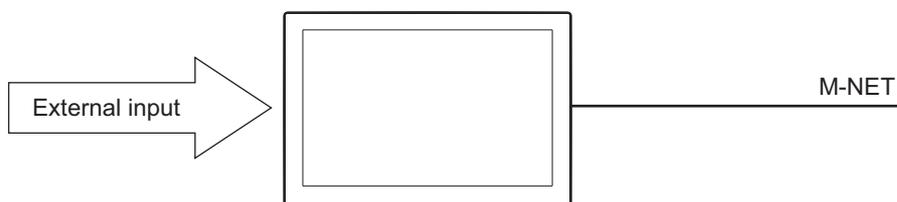

(1) Recommended circuit examples (external input)


Follow the conditions below when connecting an external input circuit.

- Because the controller uses photocoupler input, an external power supply (12 V or 24 V DC) is required. Because no external power supply is supplied with the controller, procure it locally.
- Procure relays and extension cables locally.

**Note:**

- To prevent malfunction, connect the external power supply to the input circuit with the correct polarity.
- Connect terminals (5) to (8) of the connector to the negative side of the external power supply. (See the figure below.)
- Cut unused cables near the connector, and insulate the cut end of the cables with tape.

1) Level signal (relay driving)

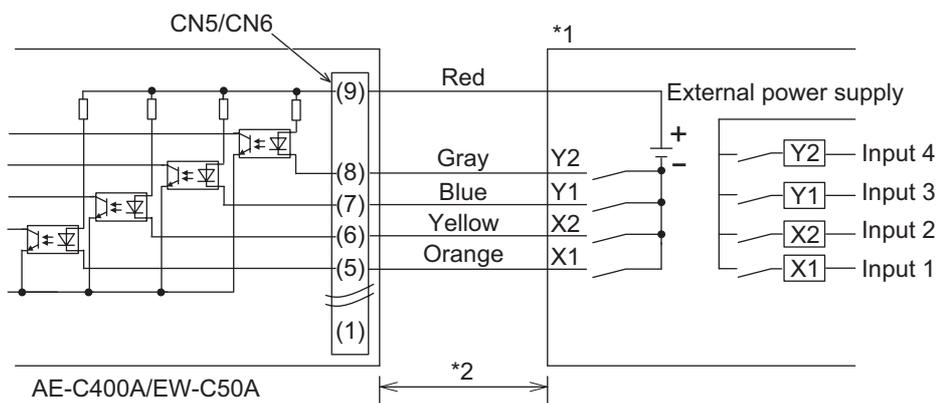

\*1 Unsupplied parts


\*2 External input/output adapter

The total wiring length of the external input/output adapter and an extension cable must be 100 m (328-1/16 ft) or shorter. (Use a cable of at least 0.3 mm<sup>2</sup> in diameter (AWG 22).)

As the cable length increases, the cable will be more affected by electrical noise interference.

Take appropriate measures against electrical noise interference depending on the cable length.

2) Pulse signal (relay driving)

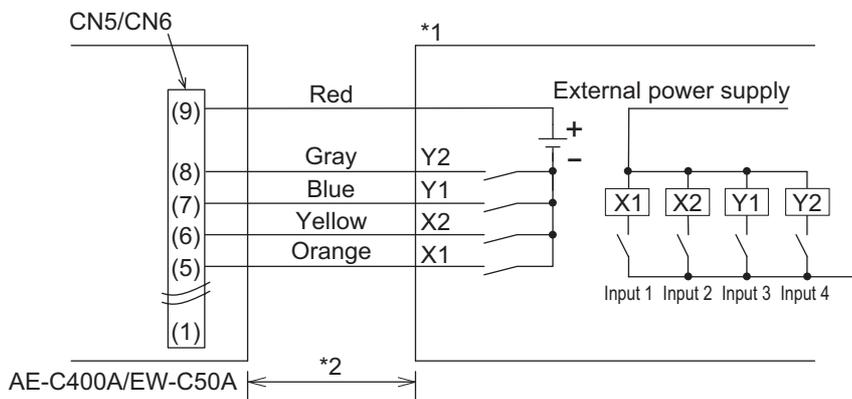

\*1 Unsupplied parts

\*2 External input/output adapter


The total wiring length of the external input/output adapter and an extension cable must be 100 m (328-1/16 ft) or shorter. (Use a cable of at least 0.3 mm<sup>2</sup> in diameter (AWG 22).)

As the cable length increases, the cable will be more affected by electrical noise interference.

Take appropriate measures against electrical noise interference depending on the cable length.

**[RS-485 input (CN10)]**


Watt-hour meters that support RS-485 (Modbus RTU) communication can be connected to this connector to capture watt-hour data. For details on watt-hour meter settings, refer to the manual for the watt-hour meter.

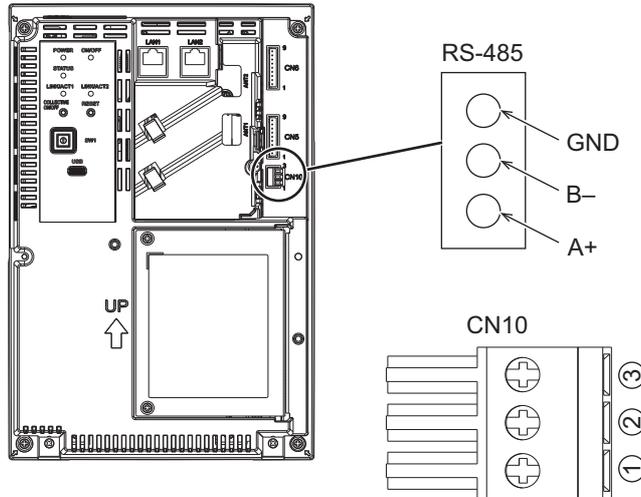

(1) Recommended circuit examples (RS-485 input)

**Note:**

- To connect the watt-hour meter cable to the connector, use a precision Phillips screwdriver (#0). (Specified torque: 0.25 N·m).
- Be sure to check the polarity of the terminals before connecting the cables.

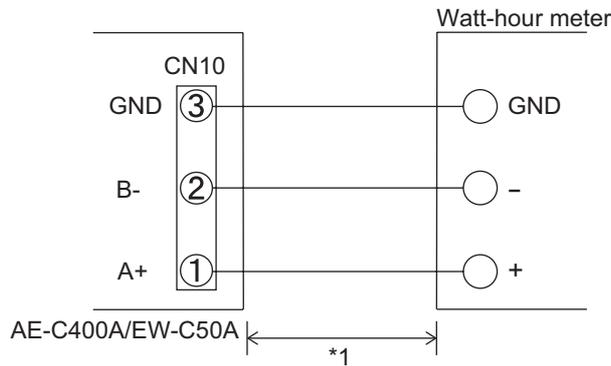

**\*1 External input/output adapter**

For the maximum wiring length between the controller and the watt-hour meter, see the AE-C400A/EW-C50A Technical Manual.


Connect both GND twisted-pair wires to the GND.

When using a shielded cable, connect the shield to the GND.

**[External output]**

The external output function of the controller outputs the statuses of the units that are controlled by the controller and those controlled by other controllers (AE-C400A/EW-C50A).

An external input/output adapter is required for each of the controller and other controllers (AE-C400A/EW-C50A) to use the external output function.

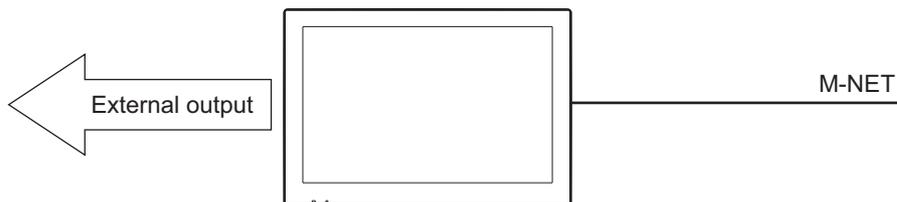

(1) Recommended circuit examples (external output)


Follow the conditions below when connecting an external output circuit.

- Because the controller uses transistor output (sink type), an external power supply (12 V or 24 V DC) is required. Because no external power supply is supplied with the controller, procure it locally.
- Procure relays, indicator lamps, diodes, and extension cables locally.

**Note:**

- To prevent malfunction, connect the external power supply to the output circuit with the correct polarity. Especially when using a relay with a built-in surge-protection diode, be sure to connect the external power supply with the correct polarity.
- Connect terminal (1) of the connector to the negative side of the external power supply. (See the figure below.)
- Do not connect the external power supply with no relays (no load) connected.
- Install a diode at both ends of the relay coil. (Relays with built-in diode are recommended.)
- Cut unused cables near the connector, and insulate the cut end of the cables with tape.

1) Relay driving

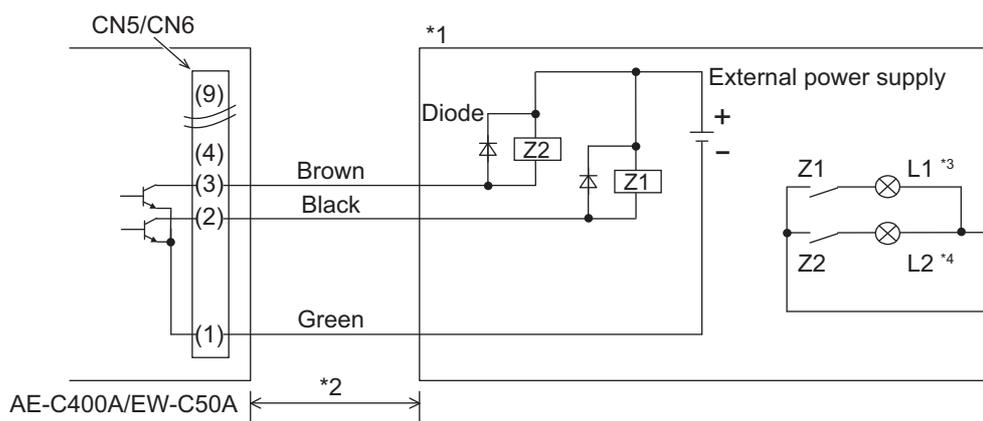

\*1 Unsupplied parts

\*2 External input/output adapter


The total wiring length of the external input/output adapter and an extension cable must be 10 m (32-3/4 ft) or shorter. (Use a cable of at least 0.3 mm<sup>2</sup> in diameter (AWG 22).)

\*3 Output 1 (L1: Indicator lamp)

\*4 Output 2 (L2: Indicator lamp)

**Note:** Each element turns on when a signal is output.

**Note:** When connecting the external input/output cables to connector CN5 on the controller, punch out the knockout hole.

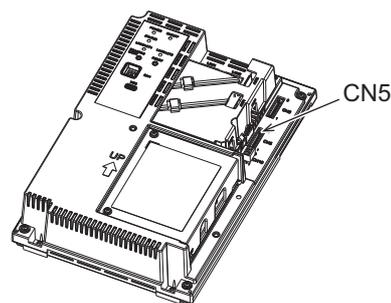

#### 4. Connecting network cables


Before installing the controller, complete LAN wiring work so that LAN cables can be connected to the controller.

**Note:** When monitoring air-conditioning units and other equipment via the Internet, ensure security by using security devices such as VPN router to prevent unauthorized access and tampering.

##### (1) Connecting LAN cables

1) Connect a LAN cable to the LAN1 or LAN2 port of the controller.

•When the LAN cable exceeds 100 m (328-1/16 ft), relay the LAN cables, using a switching HUB.

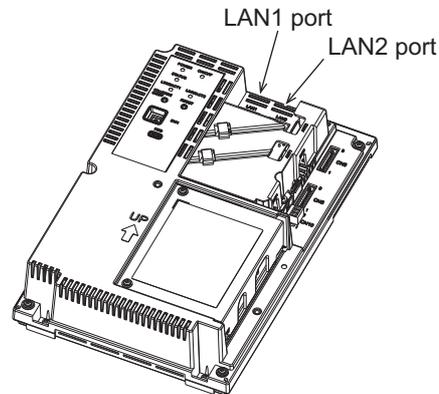


#### 5. Confirming the LAN transmission delay time

Connect a monitoring PC to a device such as HUB that is connected to the AE-C400A/EW-C50A. Send a command from the PC to the EW-C50A, and receive the response from the EW-C50A.

Check the time between sending and receiving on the PC display.

##### Sample system connection

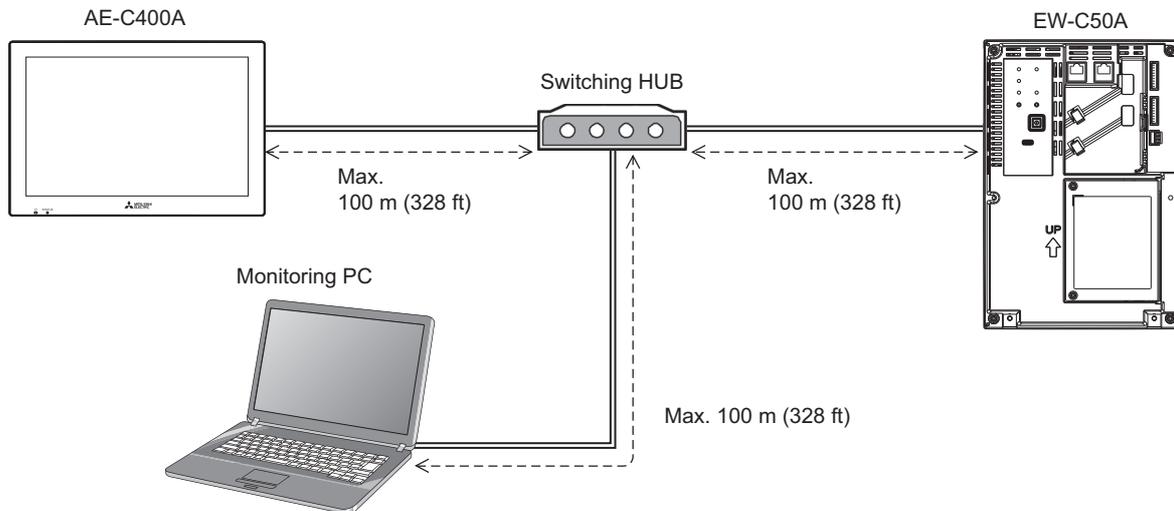

**3-5. Power supply unit [PAC-SC51KUA]**

PAC-SC51KUA supplies DC power of M-NET (23-32 V) at TB2 (for centralized transmission use).

The power supply coefficient is 5. For power consumption coefficient, refer to section 3-7. Transmission booster [PAC-SF46EPA-G].

(1) When using PAC-SC51KUA as the power supplier for system controller, the capacity for system controller is considered as follows.


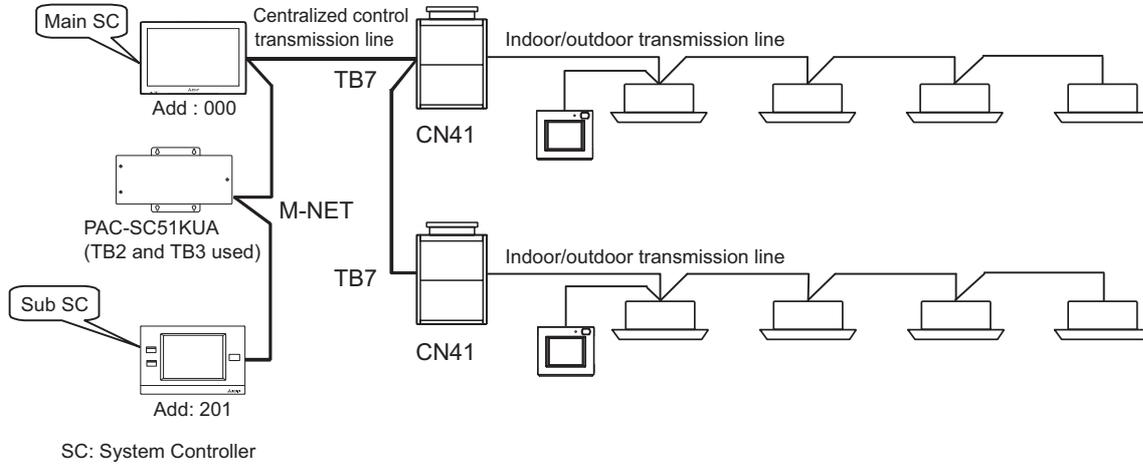


Fig.1 Equivalent power consumption of controllers

External dimension

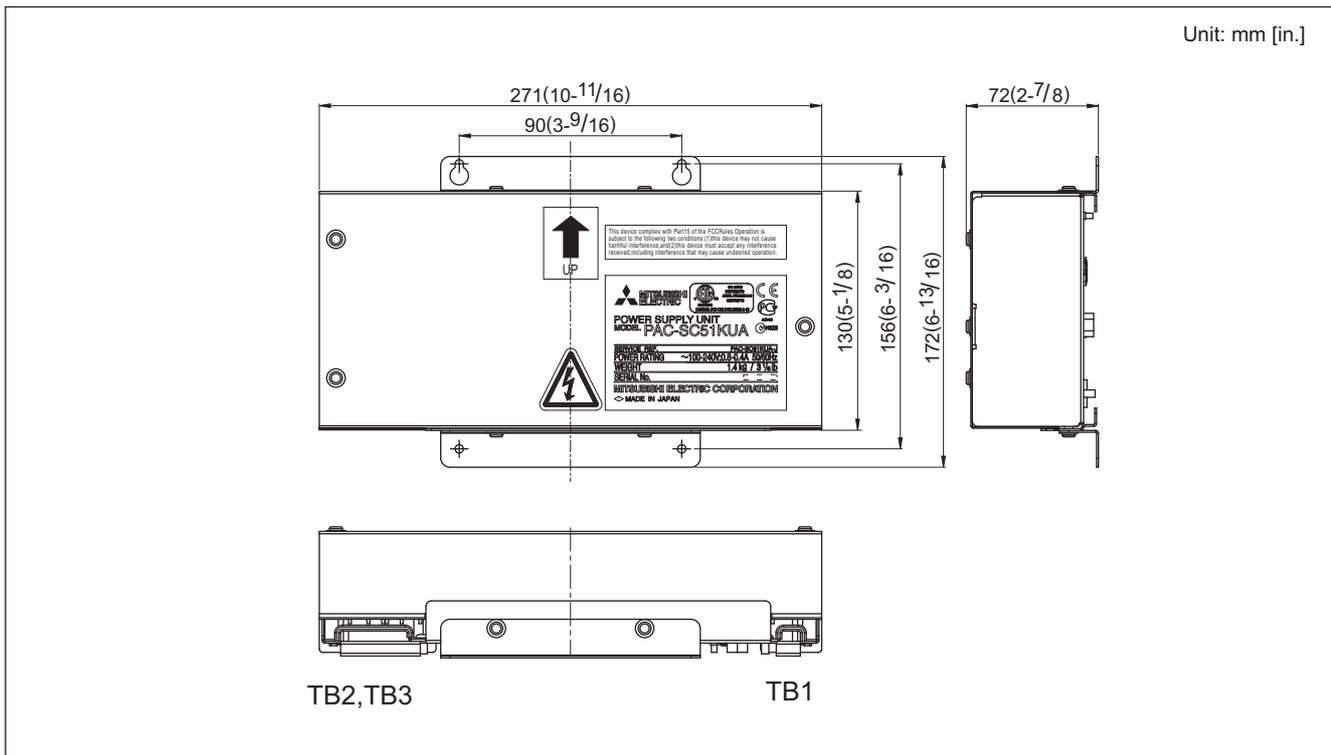

### 3-6. BACnet<sup>®</sup> function [EW-C50A/AE-C400A/BACS-AP50E]

CITY MULTI can easily combine into a Building Management System (BMS) via EW-C50A (AE-C400A) or BACS-AP50E (BM ADAPTER). BACnet<sup>®</sup> is an open transmission protocol widely used at BMS, and related equipment control. CITY MULTI is compatible with large-scale BMS management via BACnet<sup>®</sup>.

EW-C50A (AE-C400A)/BACS-AP50E can control up to 50 units/groups (including LOSSNAY).

\*To use the BACnet<sup>®</sup> function on EW-C50A (AE-C400A), BACnet<sup>®</sup> license registration is required.

Note that EW-C50A/AE-C400A and BACS-AP50E cannot be used together.

#### ■ Functions

FUNCTION	CONTENT
Operation	
ON/OFF	ON/OFF
Mode	Cooling/Drying/Heating/Auto/Fan/Setback
Fan Speed	Low-Mid2-Mid1-High-Auto
Air Direction	Horizontal-Downblow 60%-80%-100%-Swing
Set Temperature	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.
Filter Sign Reset	Normal/Reset
Permit/Prohibit	ON/OFF, Mode, Filter sign reset, Set temp, Fan speed
Forced Off	Reset/Execute
Ventilation Mode	Heat Recovery/Bypass/Auto
Air to Water Mode	Heating/ECO/Hot Water/Antifreeze/Cooling

FUNCTION	CONTENT
Monitoring	
ON/OFF	ON/OFF
Mode	Cooling/Drying/Heating/Auto/Fan/Setback
Fan Speed	Low-Mid2-Mid1-High-Auto
Air Direction	Horizontal-Downblow 60%-80%-100%-Swing
Set Temperature	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.
Filter Sign	ON/OFF
Permit/Prohibit	ON/OFF, Mode, Filter sign reset, Set temp, Fan speed
Indoor Temperature	Temperature
Alarm Signal	Normal/Error
Error Code	2 Character code- Indicates all unit alarms
Error Code Detail	4 Character code- Indicates all unit alarms
Communication State	Normal/Error
Ventilation Mode	Heat Recovery/Bypass/Auto
Air to Water Mode	Heating/ECO/Hot Water/Antifreeze/Cooling
Charge function *1	Group, Interlocked Units [0.1 kWh]
PI controller Electric Energy *1	[0.1 kWh]
Apportionment Parameter *1	No Units
Night Purge State *1	ON/OFF
Thermo On/Off State	ON/OFF
External Heat Source State	ON/OFF
Trend Log	Indoor Temp, Charge function *1, PI controller Electric Energy *1, Apportionment Parameter *1
COP *2	COP value


\*1. Not available on BACS-AP50E.

\*2. On EW-C50A/AE-C400A, the target outdoor units must be enabled in the outdoor unit measurement settings by the initial setting tool.


External dimension (BACS-AP50E)

Controller


Unit: mm (in)

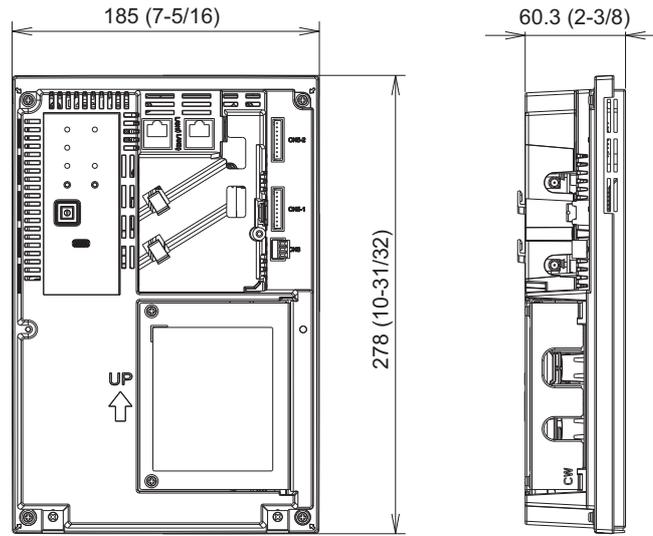


Installation on a panel inside a metal control box

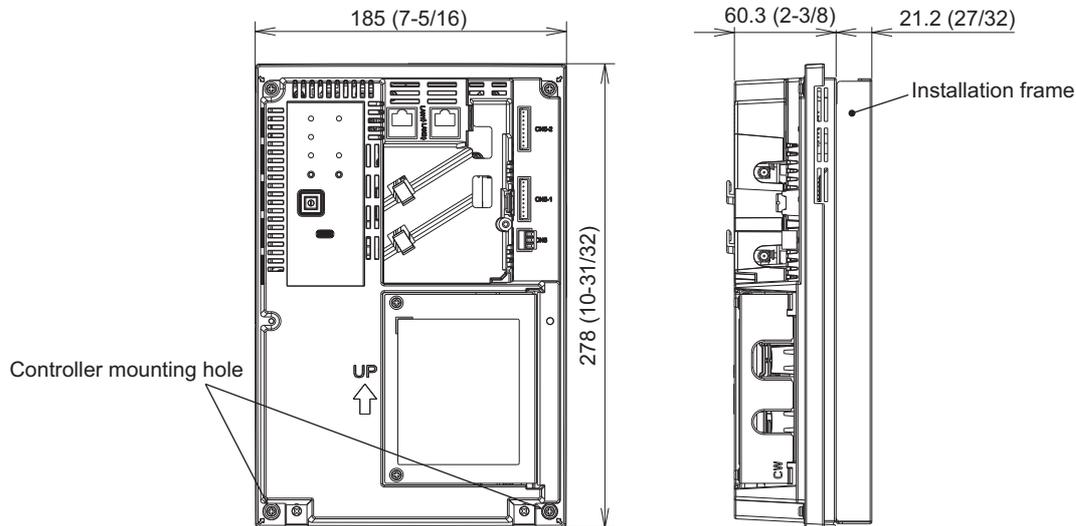

Installation on a DIN rail

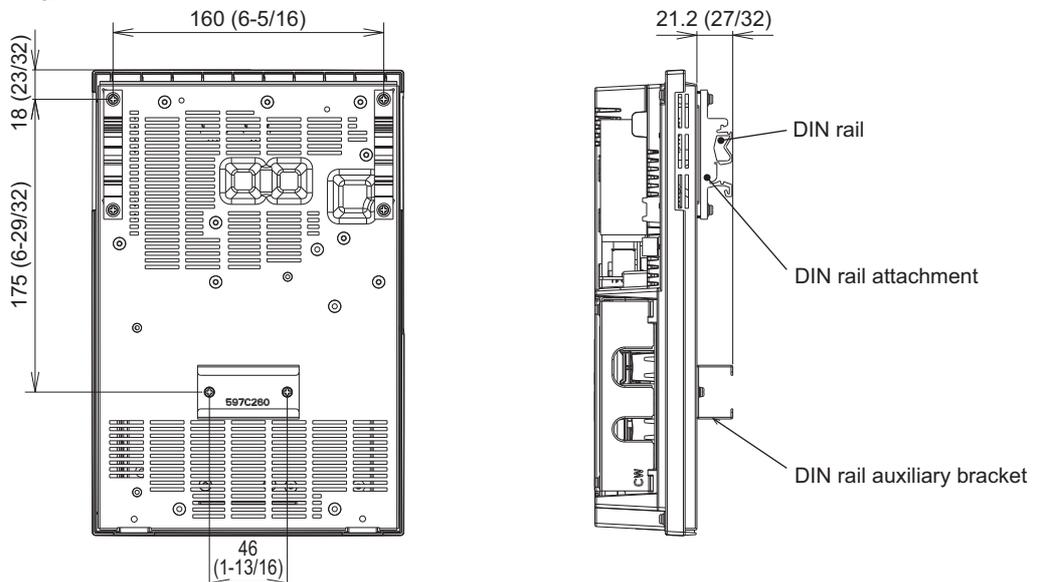

■ System example

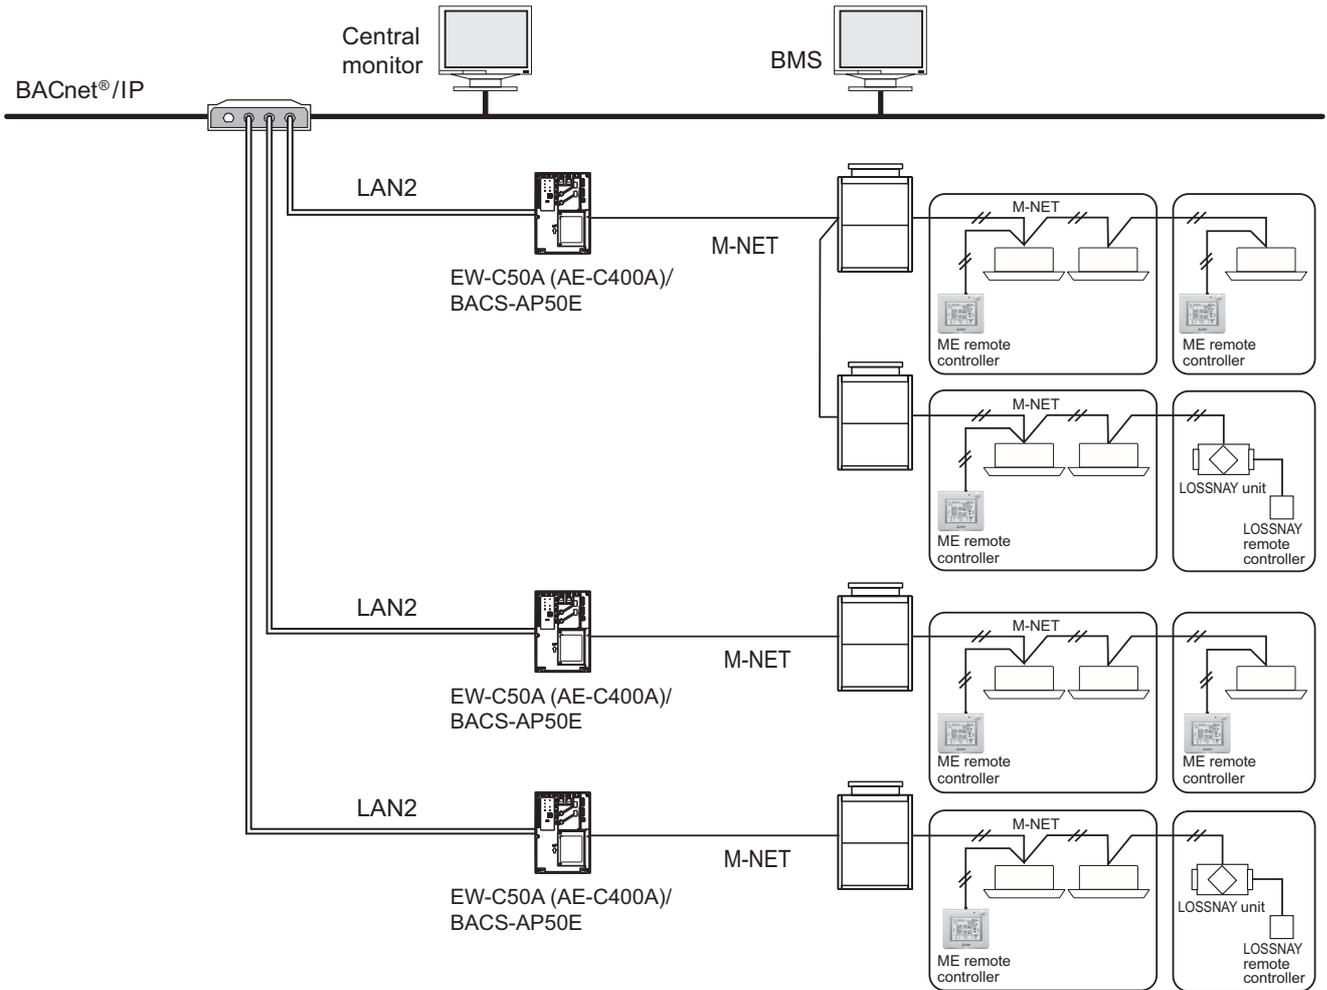

**3-7. Transmission booster [PAC-SF46EPA-G]**

The Outdoor unit supplies transmission power 30VDC for the indoor-outdoor transmission line at its connector TB3 and TB7. The power is consumed by the Indoor unit, ME remote controller, and System controllers.

When the total quantity of Indoor units, and ME remote controller, and equivalent number of units is over 40, or when transmission power supply is not enough, the transmission booster PAC-SF46EPA-G should be designed into the air-conditioner system to ensure the system communication.

Designing PAC-SF46EPA-G into an air-conditioner system.

Taking the power consumption of Indoor unit as 1, the equivalent power consumption or supply of others are listed at Table 1 and Table 2.

Table 1 The equivalent power consumption and the equivalent number of units

Category	Model	The equivalent power consumption	The equivalent number of units
Indoor unit	Sized P04-P96, PEFY-AF1200CFM-E	1	1
	PEFY-AF1200CFMR-E	2	2
BC controller	CMB	2	1
HBC controller	CMB-WP	2	1
PWFY *1	P36NMU-E-BU	6	1
	P36NMU-E2-AU	1	1
	P72NMU-E2-AU	5	1
MA remote controller/LOSSNAY	PAR-CT01MAU PAR-42MAAUB PAR-41MAAU PAR-40MAAU PAC-YT53CRAU PAR-FA32MA LGH-F-RX <sub>s</sub> -E1 LGH-F-RVX-E LGH-FRVX2-E LGH-FRVXT2-E PZ-60DR-E PZ-61DR-E PZ-62DR-EA PZ-43SMF-E	0	0
ME remote controller	PAR-U01MEDU	0.5	1
System controller	AE-C400A/EW-C50A AE-200A/AE-50A/EW-50A LM-AP	0	0
	AG-150A-A EB-50GU-A PAC-IF01AHC-J	0.5	1
	TC-24B	1.5	5
	PAC-YG60MCA PAC-YG66DCA PAC-YG63MCA	0.25	1
ON/OFF controller	PAC-YT40ANRA	1	1
MN converter	CMS-MNG-E	2	1
Outdoor/Heat source unit	TB7 power consumption	0	0
System control interface	MAC-333IF-E	0	0
A-M converter	PAC-IF01MNT-E	1	2

\*1 PWFY cannot be connected to PUMY model.

Table 2 The equivalent power supply

Category	Model	The equivalent power supply		
Transmission Booster	PAC-SF46EPA-G	25 *1		
Power supply unit	PAC-SC51KUA	5		
Expansion controller	PAC-YG50ECA	6		
BM ADAPTER	BACS-AP50E	0.75		
	BAC-HD150	6		
System controller	AE-C400A/EW-C50A	0.75		
	AE-200A/AE-50A	0.75		
	EW-50A	1.5		
	LM-AP	0		
Outdoor/Heat source unit		TB3 and TB7 total	TB7 only	TB3 only
	Outdoor unit other than the following units *2	32 *1	6	32*1 - equivalent power supplied to TB7
	S-Series outdoor unit	12 *1	0	12 *1
	TLMU/TKMU outdoor unit	32 *1	- *3	32 *1

\*1 When one or more indoor units listed below is connected, subtract 3 from the equivalent power supply.

Table 3

Category	Model
Indoor unit	Sized P72, P96 PEFY-AF1200CFM(R)-E

\*2 If PAC-SC51KUA is used to supply power at TB7 side, no power supply need from Outdoor/Heat source unit at TB7, Connector TB3 itself will therefore have 32.


With the equivalent power consumption values and the equivalent number of units in Table 1 and Table 2, PAC-SF46EPA-G can be designed into the air-conditioner system to ensure proper system communication according to (A), (B), (C).

- (A) Firstly, count from TB3 at TB3 side the total equivalent number of units of Indoor units, ME remote controller, and System controllers. If the total equivalent number of units reaches 40, a PAC-SF46EPA-G should be set.
- (B) Secondly, count from TB7 side to TB3 side the total transmission power consumption. If the total equivalent power supply reaches 32, a PAC-SF46EPA-G should be set. Yet, if a PAC-SC51KUA or another controller with a built-in power supply, such as AE-C400A/EW-C50A, is used to supply power at TB7 side, count from TB3 side only.
- (C) Thirdly, count from TB7 at TB7 side the total transmission power consumption. If the total equivalent power supply for only TB7 reaches 6, a PAC-SF46EPA-G should be set. Also, count from TB7 at TB7 side the total equivalent number of units of System controllers, and so on. If the total equivalent number of units reaches 40, a PAC-SF46EPA-G should be set.

\* The equivalent power supply of S-Series outdoor unit is 12.

\* When one or more indoor units listed in Table 3 is connected, subtract 3 from the equivalent power supply.

External dimension

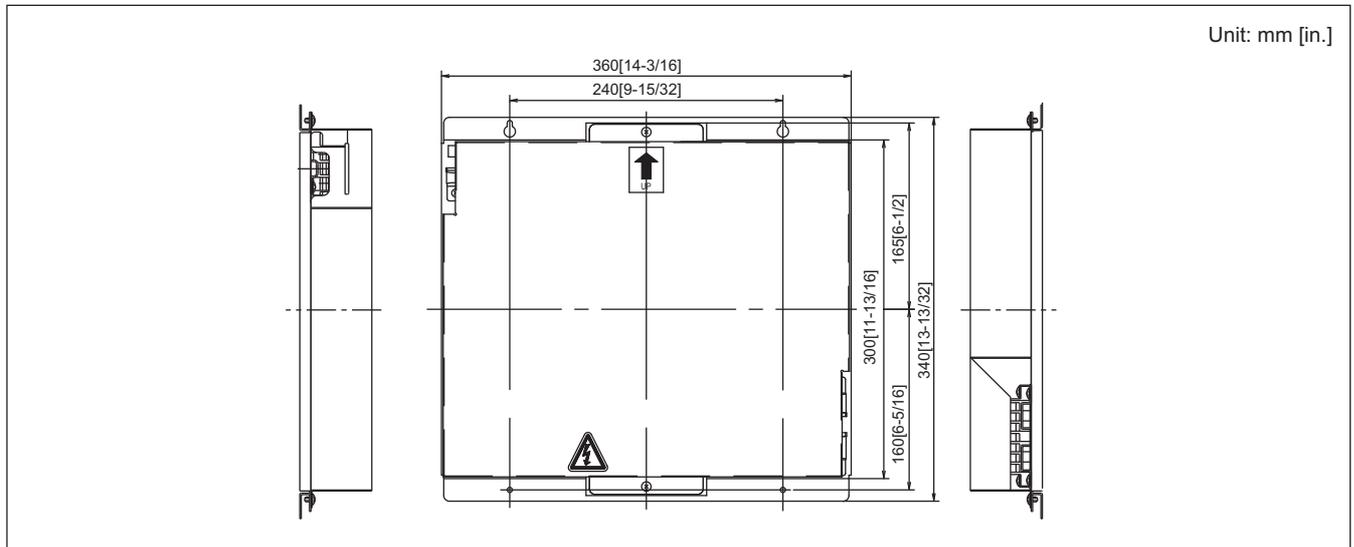

Unit: mm [in.]

### 3-8. AHC ADAPTER [PAC-IF01AHC-J]

The Advanced HVAC CONTROLLER (AHC) comprises MITSUBISHI ELECTRIC's AHC ADAPTER (PAC-IF01AHC-J) and α2 SIMPLE APPLICATION CONTROLLER\* (ALPHA2).

\* α2 SIMPLE APPLICATION CONTROLLER is one of the Programming Logic Controllers manufactured by MITSUBISHI ELECTRIC CORPORATION.

AHC allows for the connection of MITSUBISHI ELECTRIC's air conditioning network system (M-NET) to other systems, which was not possible with the use of ALPHA2 alone. AHC provides the following functions:

- 1) Controls external devices using the sensor data of the air conditioning units connected to M-NET
- 2) Interlocks the operation of air conditioning units and external devices that are connected to ALPHA2
- 3) Controls air conditioning units that are connected to M-NET
- 4) Allows for the combined use of items 1)-3) above
- 5) Monitors the input/output status of ALPHA2 via a remote controller or a centralized controller


Compatible controllers

- Remote Controller: PAR-U01MEDU, PAR-U02MEDA
- Centralized Controller: AE-C400/EW-C50

\* Refer to the manual that came with ALPHA2 for information about ALPHA2.

\* Use of the AHC ADAPTER requires either a remote controller or a centralized controller.

#### External Dimensions

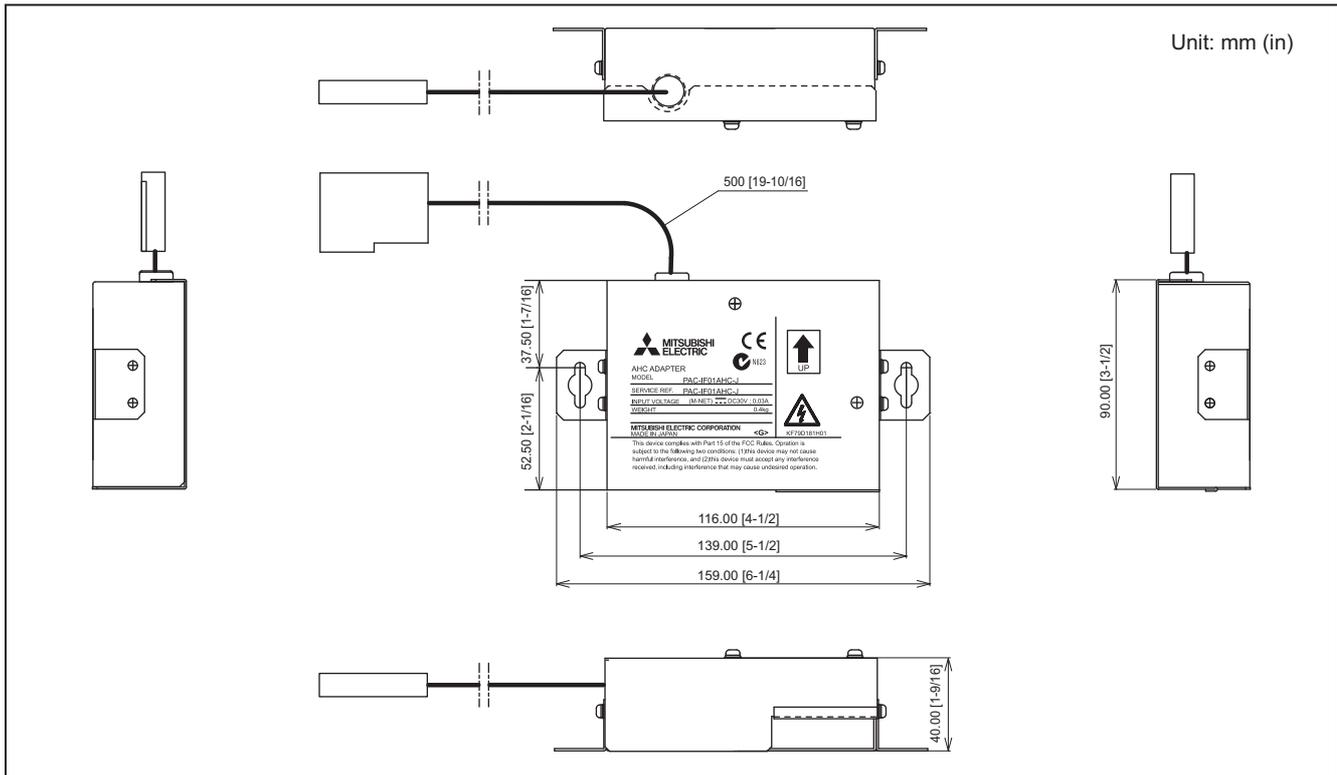

#### Usage Restrictions

- This manual contains explanations and figures to help the user to properly install, program, and operate AHC.
- All the examples and figures contained in this manual are there for the sole purpose of clarification. It is not guaranteed that AHC will properly work in the types of applications used as examples or are shown in figures. MITSUBISHI ELECTRIC shall not be held responsible for any damage or loss that may result from the use of AHC in the manners shown in the examples and figures contained in this manual.
- Thoroughly read the technical manual, and check the surrounding for safety before changing the settings of AHC in operation (e.g., changing programs or parameters, forcing signal output, or changing the operation status).




1. Specifications

(1) Device specifications

Item		Specifications	
Power supply	M-NET	17–32 VDC	
Interface	M-NET transmission terminal	Exclusively for connection to M-NET	
	Connector for ALPHA2	Exclusively for connection to ALPHA2	
Ambient conditions	Temperature	Operating temperature range	-10°C – +55°C [+14°F – +131°F]
		Storage temperature range	-20°C – +60°C [-4°F – +140°F]
	Humidity		30%–90% RH (Non-condensing)
Dimensions (W × H × D)		116 × 90 × 40 mm [4-9/16 × 3-1/2 × 1-9/16 in.]	
Weight		0.4 kg [0.9lbs]	
Installation conditions		Inside the metal control box * To be used in a business office or similar environment	

1) System configuration

The figure below only shows the transmission cable connections. Power cables are omitted.

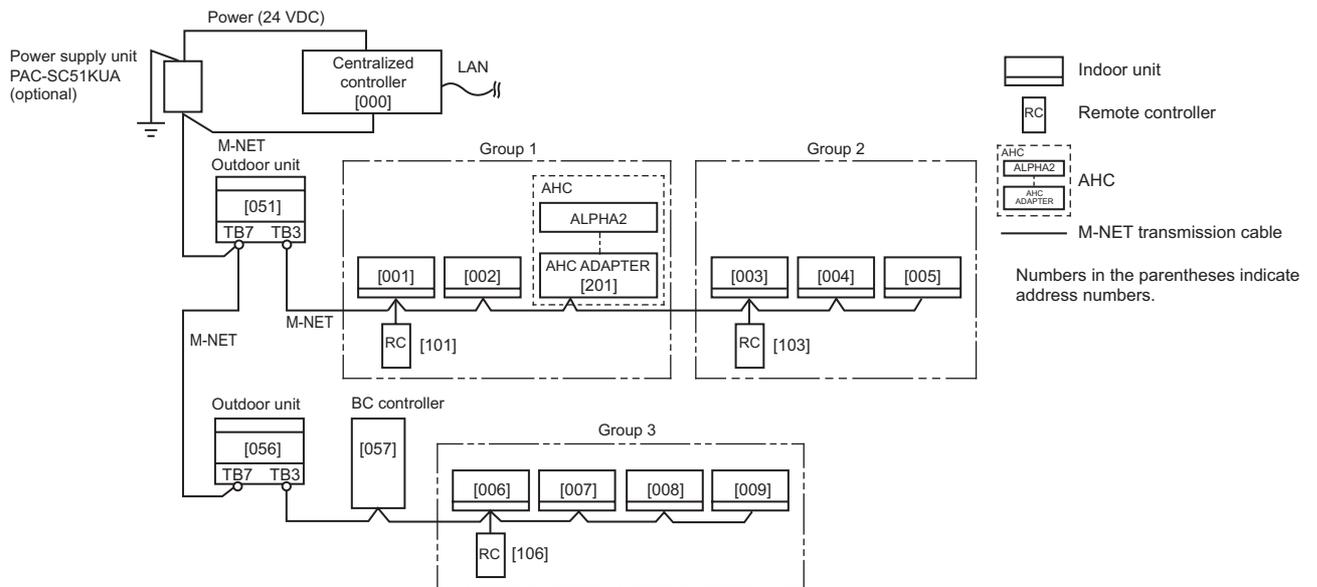

\* AHC ADAPTER requires either an outdoor unit or a power supply device as a power source.

2) Functions

AHC comprises of an ALPHA2 and an AHC ADAPTER. The use of AHC ADAPTER requires the use of ALPHA2.

The following ALPHA2 are compatible with AHC. Other types of ALPHA2 do not support AHC.

- AL2-14MR-A
- AL2-14MR-D
- AL2-24MR-A
- AL2-24MR-D

Compatible controllers

- Remote Controller: PAR-U01MEDU, PAR-U02MEDA
- Centralized Controller: AE-C400/EW-C50

AHC enables the connection of M-NET with other systems, which was not possible with the use of ALPHA2 alone. AHC supports the functions listed in Table 1.

Table 1 AHC function list

AHC function	Example	Supplemental Inf.
1) Controls external devices using the sensor data of the air conditioning units connected to M-NET.	<ul style="list-style-type: none"> <li>External heaters are controlled, using the temperature sensors on air conditioning units or on remote controllers.</li> </ul>	By using the sensor on the air conditioning unit connected to the M-NET, no other external sensors will be required.*1
2) Interlocks the operation of air conditioning units and external devices that are connected to ALPHA2.	<ul style="list-style-type: none"> <li>The operation of external heaters is interlocked with the operation of air conditioning units in heating operation.</li> <li>The operation of external humidifiers is interlocked with up to 16 air conditioning units. Humidifiers will go into operation whenever at least one air conditioning unit is in operation.</li> </ul>	Operation status data of a maximum of 2 groups of units can be simultaneously collected. Each group can contain a maximum of 16 units. Error status of a maximum of 50 units can be simultaneously collected.
3) Controls air conditioning units that are connected to M-NET.	<ul style="list-style-type: none"> <li>The ON/OFF operation of air conditioning units is interlocked with the insertion/removal of a card into or out of a card reader.</li> </ul>	A maximum of 2 groups of units can be simultaneously controlled. Each group can contain a maximum of 16 units.
4) Allows for the combined use of the items 1)-3) above.	<ul style="list-style-type: none"> <li>Drying operation of air conditioning units is controlled, using the built-in humidity sensor on the remote controller.</li> </ul>	
5) Monitors the input/output status of ALPHA2 via a remote controller or a centralized controller.		

\*1 The sensor on the air conditioning unit connected to the M-NET will collect data at 70-second intervals. If a real time control at intervals shorter than 70 seconds is required, connect a sensor to the Analog Input on ALPHA2.

**Note:** For detailed information about the functions supported by AHC, refer to the technical manual that came with the AHC.

#### (2) Field-supplied items

The following items are required to install AHC ADAPTER.

\* Two types of installation options (A and B in the table below) are available for AHC ADAPTER. Select the one that is best suited for a given environment.

Field-supplied items	Specifications
A Unit fixing screw (required when using L-fittings)	M4 x 2 pcs.
B DIN rail and fixing screw (required when using DIN rails)	DIN rail width: 35 mm (1-13/32 in) Applicable type (IEC 60715/DIN 60715): TH35-7.5Fe, TH35-7.5Al
Functional ground wire	* Use a wire with an appropriate diameter so that the wire can be fixed with the cable strap below the terminal block. A diameter of 10 mm is recommended.
Sleeved ring terminal	M3.5 ring terminal (for M-NET transmission cables (A, B, S)) M4 ring terminal (for functional ground wire)
Transmission cable	<ul style="list-style-type: none"> <li>CVVS Min. 1.25 mm<sup>2</sup> (Min. AWG 16)</li> <li>* CPEVS: PE*1 insulated PVC*1 sheathed shielded communication cable</li> <li>* CVVS: PVC*1 insulated PVC*1 sheathed shielded control cable</li> <li>* Use cables with an appropriate diameter so that the cables can be fixed with the cable strap below the terminal block. A diameter of 10 mm is recommended.</li> </ul>

\*1 PE: Polyethylene; PVC: Polyvinyl chloride

#### [Parts to be Purchased Separately]

Name	Model	Application	Remark
Power supply unit	PAC-SC51KUA	Power supply to the M-NET transmission line	This is not required when power is to be supplied from an outdoor unit.

[ALPHA2 components]

Name	Model	Power source specification	Optional module (Note 1)	Number of ports				Remark
				Digital Input (DI)	Analog Input (AI)(Note 2)	Digital Output (DO)	Analog Output (AO)(Note 2)	
ALPHA2	AL2-14MR-D	Requires a separate 24 VDC power source.	-	8	(8)*	6	-	
			AL2-4EX	12	(8)*	6	-	
			AL2-4EYT or AL2-4EYR	8	(8)*	10	-	
			AL2-2DA	8	(8)*	6	2	
	AL2-24MR-D	Requires a separate 24 VDC power source.	-	15	(8)*	9	-	
			AL2-4EX	19	(8)*	9	-	
			AL2-4EYT or AL2-4EYR	15	(8)*	13	-	
			AL2-2DA	15	(8)*	9	2	
	AL2-14MR-A	Requires a separate 100-240 VAC power source.	-	8	-	6	-	
			AL2-4EX-A2	12	-	6	-	
			AL2-4EYR	8	-	10	-	
			-	15	-	9	-	
	AL2-24MR-A	Requires a separate 100-240 VAC power source.	-	15	-	9	-	
			AL2-4EX-A2	19	-	9	-	
			AL2-4EYR	15	-	13	-	
			-	15	-	13	-	

\* The AI ports for the DC type are shared by DI, with a maximum number of 8 AI ports.

\* AI and AO cannot be used with the AC type ALPHA2.

(Note 1) I/O Extension Module /Analog Expansion Module  
I/O Extension module

- EI: Digital input extension module of ALPHA2. 4 digital input ports can be added.  
Type name: AL2-4EX-A2 (AC type) and AL2-4EX (DC type)
- EO: Digital output extension module of ALPHA2. 4 digital output ports can be added.  
Type name: AL2-4EYR (AC type) and AL2-4EYT (DC type)

Analog Expansion module

- AO: Analog output extension module of ALPHA2. 2 analog output ports can be used.  
Type name: AL2-2DA (DC type)

Only one of the above EI, EO, and AO can be used.

(Note 2) Analog signals that can be used for AI and AO of the DC type ALPHA2

- Analog Input (AI): 0-10V, PT100(\*), thermocouple(\*)
- (\*) To use a PT100 or thermocouple, a temperature sensor module is required separately.  
Type name: AL2-2PT-ADP(Pt100 sensor), AL2-2TC-ADP(Thermocouple)  
(Converts the Pt100/thermocouple to 0-10V)
- Analog Output (AO): 0-10V, 4-20mA

For details, refer to the ALPHA2 manuals (Installation Manual and Hardware Manual).


[Commercially available parts]

Name	Application	Remark
External 24 VDC power source	Supplies power to the ALPHA2 and/or Extension module.	Check to see if an external 24 VDC power source is required for a specific ALPHA2 and an Extension module.
Sensor	Measures temperature and humidity, etc.	Some sensors require additional parts.

For details, refer to the ALPHA2 manuals (Installation Manual and Hardware Manual).


## 2. Wiring Instructions

Connecting the Power and M-NET Transmission Cable.

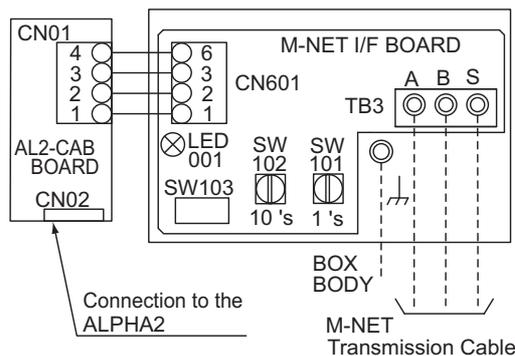


3. Combination and Application Example of the Input Information and Equipment Items

**Interlocking with the external Ventilator Using the Start and Stop Information of Multiple Air Conditioners**

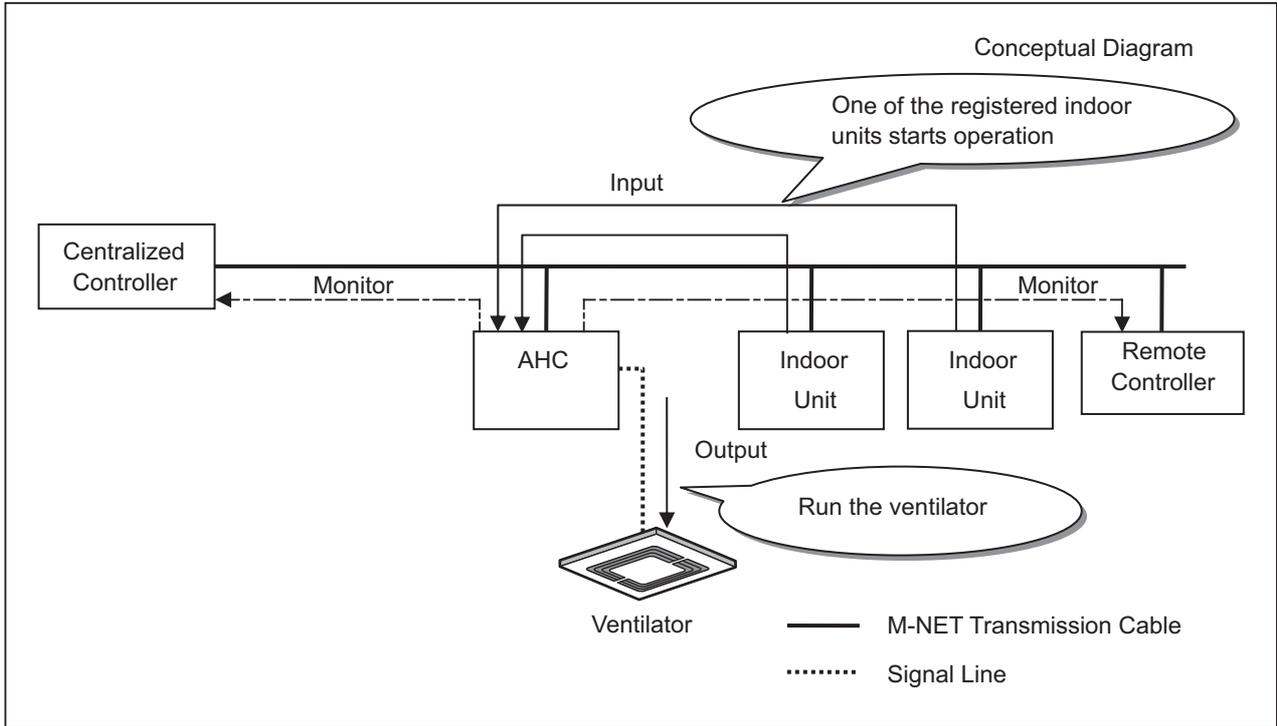


**Interlocking the Heater, Humidifier, and Fan**

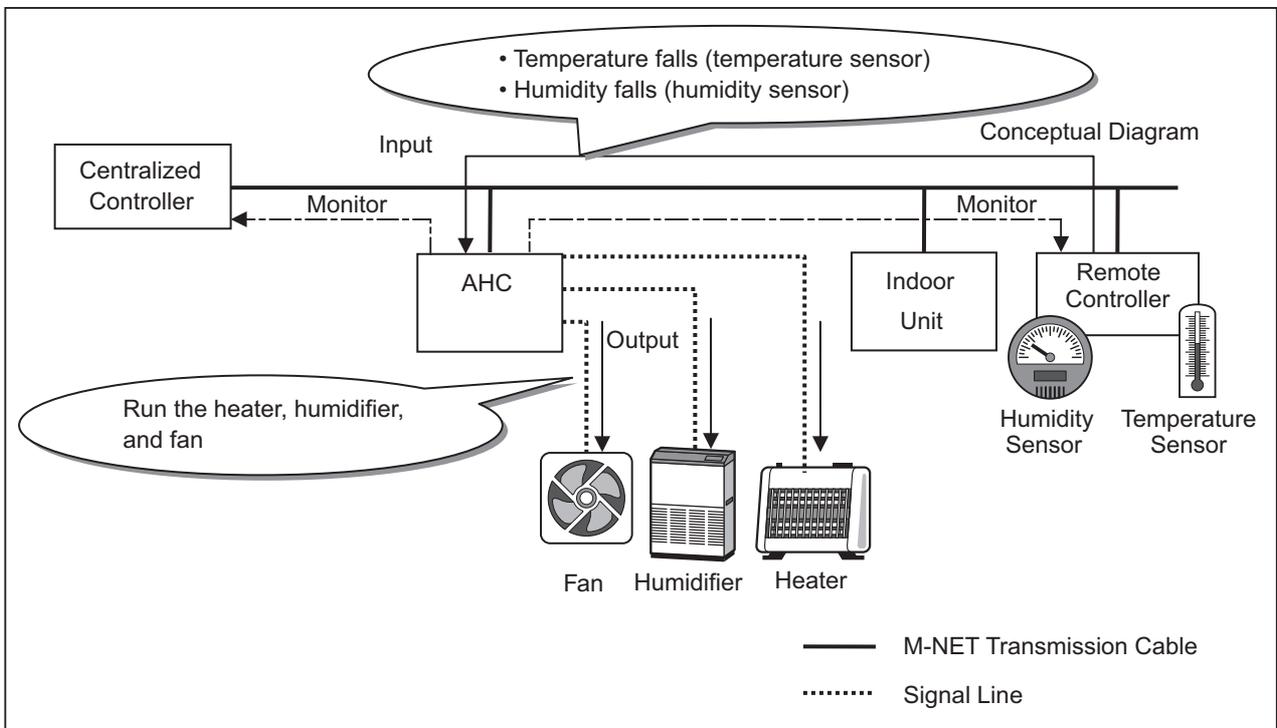

3-9. PI controller [PAC-YG60MCA]

The PI controller counts pulses from a power meter, gas meter, water meter, and calorimeter. Combining the use of the AE-C400A and EW-C50A allows for calculating the charges for each unit and performing peak-cut (e.g., demand control) operation. The meters can be monitored on AE-C400A LCD.

External Dimensions

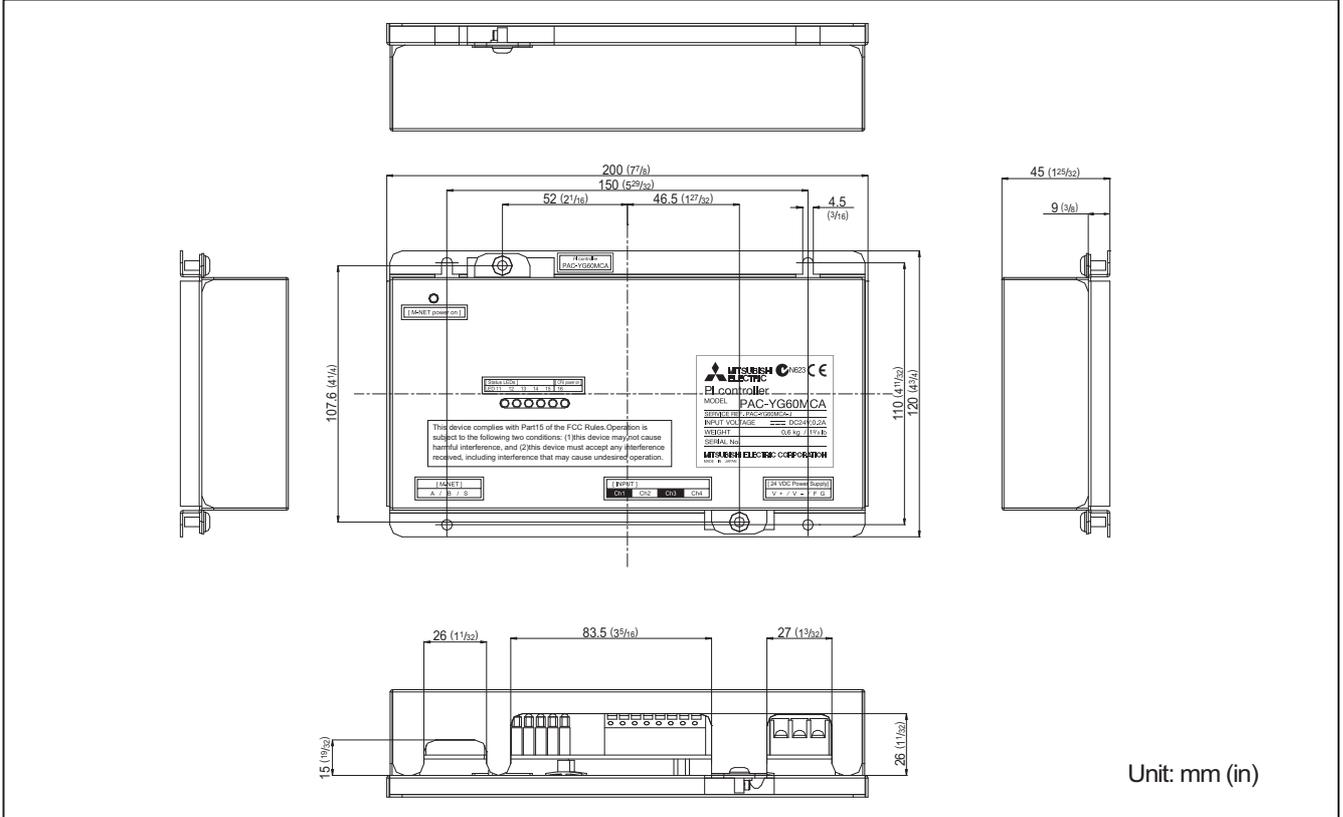

Usage Restrictions

- Mitsubishi Electric does not take financial responsibility for damages caused by issues beyond our control or special circumstances (predicable or unpredictable); and secondary or accidental damages, and damages to other objects. We also do not take financial responsibility for opportunities lost as a result of device failure, or electrical power failure at the end-user site.




Mitsubishi Electric does not take financial responsibility caused by end-users' requests including, but not limited to, device testing, startup, readjustment, and replacement.

- Because the PI controller only counts pulses, accuracy and performance of pulse conversion depend on the meter.
- Mitsubishi Electric does not take financial responsibility for damages caused by issues beyond our control or special circumstances (predicable or unpredictable); and secondary or accidental damages and damages to other object.
- Depending on each country's laws and regulations, etc., there may be cases these measured charges cannot be used for certificate of transaction.

1. Specifications


(1). Device Specifications

Item	Rating and Specification	
Power Supply	24 VDC ±10%: 5 W	
Interface	M-NET communication	17 to 30 VDC (*1)
	Non-voltage a-contact input	Number of contacts: 4 Pulse signal: a-contact Pulse width: 100 ms to 300 ms (Idle period until next pulse: 100 ms or more)  Rated voltage: 24 VDC Rated current: 1 mA or less (*2)
Environment Conditions	Temperature	Operating temperature range 0 to 40°C [32°F to 104°F] Storage temperature range -20 to 60°C [-4°F to 140°F]
	Humidity	30 to 90%RH (no condensation)
Dimensions	200 (W) × 120 (H) × 45 (D) mm / 77/8 (W) × 43/4 (H) × 125/32 (D) in	
Weight	0.6 kg / 13/8 lb	
Time Backup During Power Failure	In the event of power failure or shut-off, the internal capacitor will continue to track time for approximately one week. (The internal capacitor takes about 24 hours to fully charge; a replacement battery is not necessary.)	
Installation Environment	Inside the metal control board (indoors) * Use this product in a hotel, a business office environment or similar environment.	

\*1: Supply electric power from a power unit for the transmission line or an outdoor unit. Furthermore, the power consumption factor of the M-NET circuitry of this device is "1/4".

\*2: Supply electric power from the main unit to the contacts of the meters.

\*3: M3 is the size of the screw on the terminal block (ISO metric screw thread). The number indicates the screw diameter (mm).

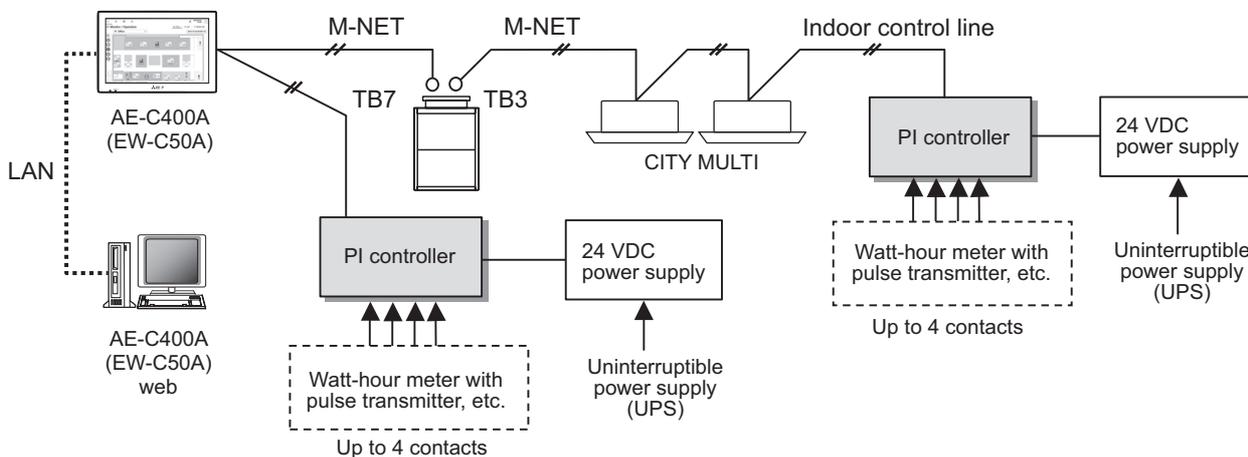

\*This figure omits the power supply line and only shows the transmission line.

<Restrictions>

The maximum settable total number of built-in PI controllers and PI controllers (PAC-YG60MCA) for each AE-C400A/EW-C50A is 15. The number of units that can be connected to one AE-C400A/EW-C50A is up to 50 including this device, indoor units, LOSSNAY units, etc.

**NOTE**

- For the shield ground of the M-NET centralized control line for central control, use single-point grounding at the power unit for the transmission line.  
However, when supplying electric power to the M-NET centralized control line from the R410A-Series outdoor unit\*<sup>1</sup> without using a power supply unit for the transmission line, use single-point grounding at the TB7 of that outdoor unit. \*1 : Except PUMY model and PUHY/PURY-TLMU/TKMU model (Y/R2/H2i R2-Series)  
Furthermore, when connecting this device to the M-NET indoor control line, use grounding at the TB3 for each outdoor unit system.
- Connecting an Uninterruptible power supply (UPS) to the 24 VDC power supply is recommended in order to prevent the loss of pulse data in the event of a power failure.  
If a UPS cannot be connected, try to make the AC power supply to the 24 VDC power supply as much same as the AC power supply line to the meters.
- This device does not support level meters. To use a level meter, incorporate a Converter circuit externally and convert to pulse input.
- If the M-NET transmission line of this device is connected to an M-NET indoor control line and the outdoor unit is down because, for example, the power supply is interrupted for servicing or there is a failure, the PI controller cannot be controlled from the system controller.

#### (2). Parts Purchased Separately

Prepare the following parts to install this device.

CONTROLLER

Required Part	Specification
Unit fixing screws	M4 screw × 4 (* M4: ISO metric screw thread)
Power supply for this device	Power source: 24 VDC 0.2 A (Minimum loading), SELV circuit, power line with grounding terminal Ripple noise: Lower than 200 mVp-p Compatible specification Authorized or CE marked products Subject to regulations: - IEC60950 (or EN60950) - CISPR22/24 (or EN55022/24) - IEC61000-3-2/3-3 (or EN61000-3-2/3-3)
Power line	Use a sheathed vinyl cord or cable. At least 0.75 mm <sup>2</sup> (AWG18)
M-NET transmission line	Type of the cable: Sheathed vinyl cords or cable which comply with the following specifications or equivalent. • CPEV $\phi$ 1.2 mm to $\phi$ 1.6 mm • CVVS 1.25 mm <sup>2</sup> to 2 mm <sup>2</sup> (AWG16 to 14) * CPEV: PE insulated PVC sheathed shielded communication cable * CVVS: PVC insulated PVC sheathed shielded control cable PE: Polyethylene PVC: Polyvinyl chloride Power needs to be supplied to the M-NET circuitry of this device. Use an outdoor unit or a separately purchased power supply unit for the transmission line.
Signal lines	Shows the size of the electric wire (copper wire) that is adapted to the terminal block of this device. Electric wire size..... (1)Solid wire: $\phi$ 0.65 mm (AWG21) - $\phi$ 1.2 mm (AWG16) (2)Stranded wire: 0.75 mm <sup>2</sup> (AWG18) - 1.25 mm <sup>2</sup> (AWG16) Single strand: At least $\phi$ 0.18 mm

#### [Parts to be Purchased Separately]

Name	Model	Application	Remark
Power supply unit	PAC-SC51KUA	Power supply to the M-NET transmission line	This is not required when power is to be supplied from an outdoor unit.


#### [Commercially available parts]

Part	Use	Remark
External 24 VDC power source	Supplies power to the PI controller.	Refer to "Power supply for this device" in "Required Part" above for the capacity of the power supply.

#### [Recommended Pulse Specifications]

Prepare a measuring instrument that measures the type of pulse signals indicated in table below.

Type	Specification
Output pulse relay method	Semiconductor relay method
Output pulse width	100 ~ 300 ms (100 ms and above) Choose an instrument that outputs non-voltage a-contact point pulse per each pulse output.
Pulse unit	Watt-hour meter: 0.1 kWh/pulse, 1 kWh/pulse recommended Water meter: m <sup>3</sup> /pulse Gas meter: m <sup>3</sup> /pulse Calorimeter: MJ/pulse * Except for the watt-hour meter, select instruments that take measurements in the appropriate pulse unit.




2. Wiring Instructions

(1). Connecting the Power and M-NET Transmission Lines

Tightening torque for terminal screws: 1 N·m

Connect the M-NET transmission line of this device to a power supply unit (PAC-SC51KUA) for the transmission line or an outdoor unit (either a centralized control line or indoor control line can be connected).

\* Only the M-NET circuitry of this device receives the power from the M-NET transmission line. The power consumption factor is "1/4".

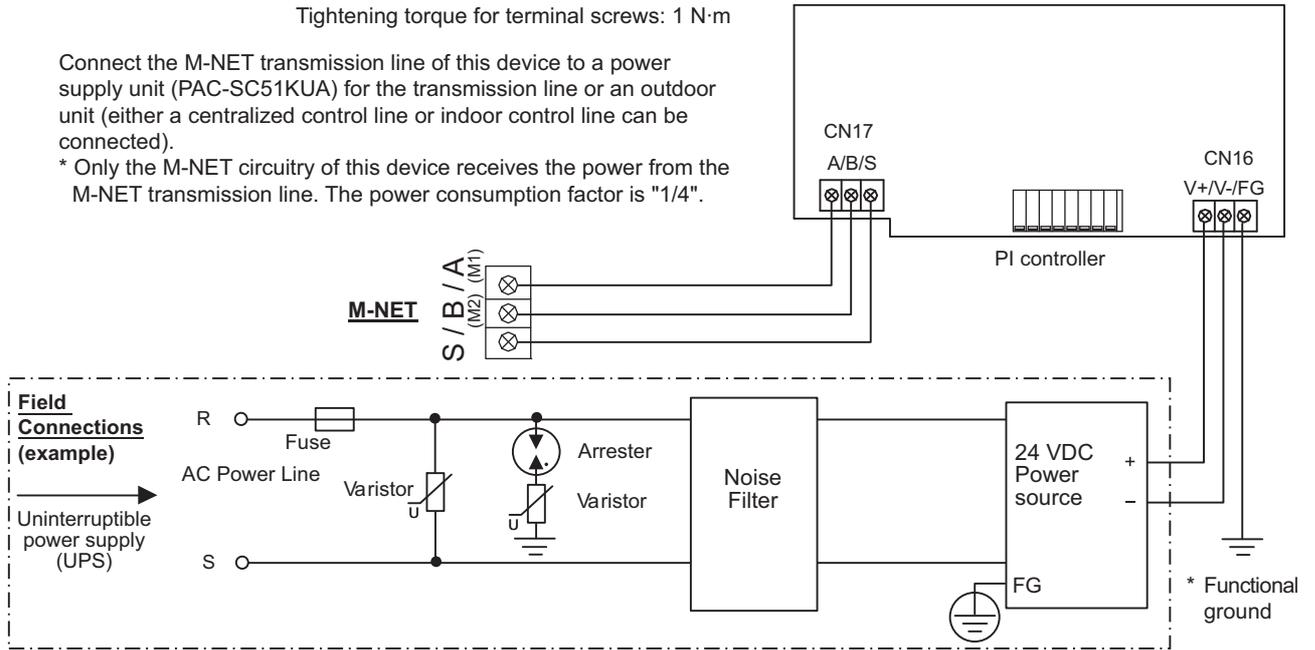


**CAUTION**

- Use a power line and M-NET transmission line that satisfy the specifications described in "1-(2). Parts Purchased Separately".
- Attach a circuit comprising the following components to the supply primary side of the 24 VDC power supply. (1) Varistor, (2) Arrester, (3) Noise filter, (4) Fuse
- It is important to pay attention to the polarity when connecting to the 24 VDC power supply terminal block. Connecting the positive and negative in the reverse order will cause a failure.
- Fix the power line and M-NET transmission line in place on the outside to ensure that the terminal block is not affected by any external force. Not securely connecting and fixing the wires in place may cause heat generation and fire.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires. Cover the shielded line of the M-NET transmission line with materials such as vinyl tape and prevent short-circuiting with the plates.

## (2). Connecting the Signal Lines

- Separately procure items such as terminal blocks and cables locally.
- The maximum wire length is 100 m (328 ft).  
However, since the use of long wires makes the device susceptible to noise, using wires shorter than 10 m (32.8 ft) is recommended.

## 1) Pulse input (non-voltage a-contact)

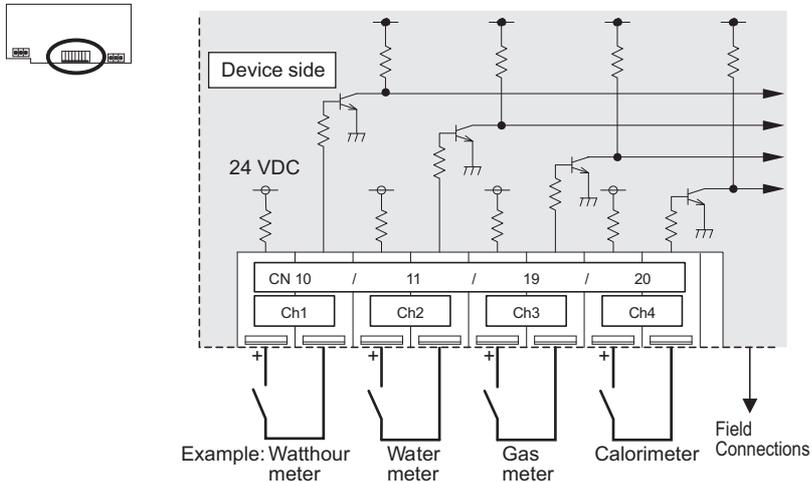**NOTE**

- The pulse unit (weight) can be added to each of the inputs of channels 1 to 4.
- Be sure to set the pulse unit (weight) settings from a system controller (AE-C400A/EW-C50A).  
If the pulse unit (weight) value has not been set as required, the charge function and peak cut control will not work normally because correct measurement of usage amounts will not be made.
- This device does not support level meters.  
To use a level meter, incorporate a Converter circuit externally and convert to pulse input.

**CAUTION**

- The polarity of the input terminals is important, so be sure to match the polarity when using contacts that have polarity.
- Select a contact with a minimum applicable load of 1 mA or less.
- Supply 24 VDC 1 mA from the positive terminal to the contacts of the meters.
- The pulse unit of the watt-hour meter being used should be 1 kWh/pulse or less. Note that the apportioning error will increase if a watt-hour meter with large pulse unit is used.
- The input signal line should not come into contact with or be installed alongside the M-NET transmission line and power supply line. Care must also be taken to avoid wiring loops.
- Strip  $12 \pm 1$  mm ( $15/32 \pm 1/32$  in) of the wire coating and insert firmly into the terminal.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
- Perform wiring so that the terminal block is not strained.  
If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.

**3. System Operation Test**

Do not turn the power OFF after starting operation. The power rate will not be counted while the power interruption.  
Forcible pulse input must never be carried out after startup.


3-10. DIDO controller [PAC-YG66DCA]

The DIDO controller is used in combination with a AE-C400A/EW-C50A to operate general-purpose equipment, as well as to monitor operating and error status. It is equipped with two sets of standard terminals (Channels 1 and 2), and four sets of expansion connectors for the input/output terminals. Expansion cable is optional.

Operation can be monitored or performed from the AE-C400A LCD.

In addition, this device includes a function that interlocks M-NET devices such as indoor units, general equipment, etc.

External Dimensions

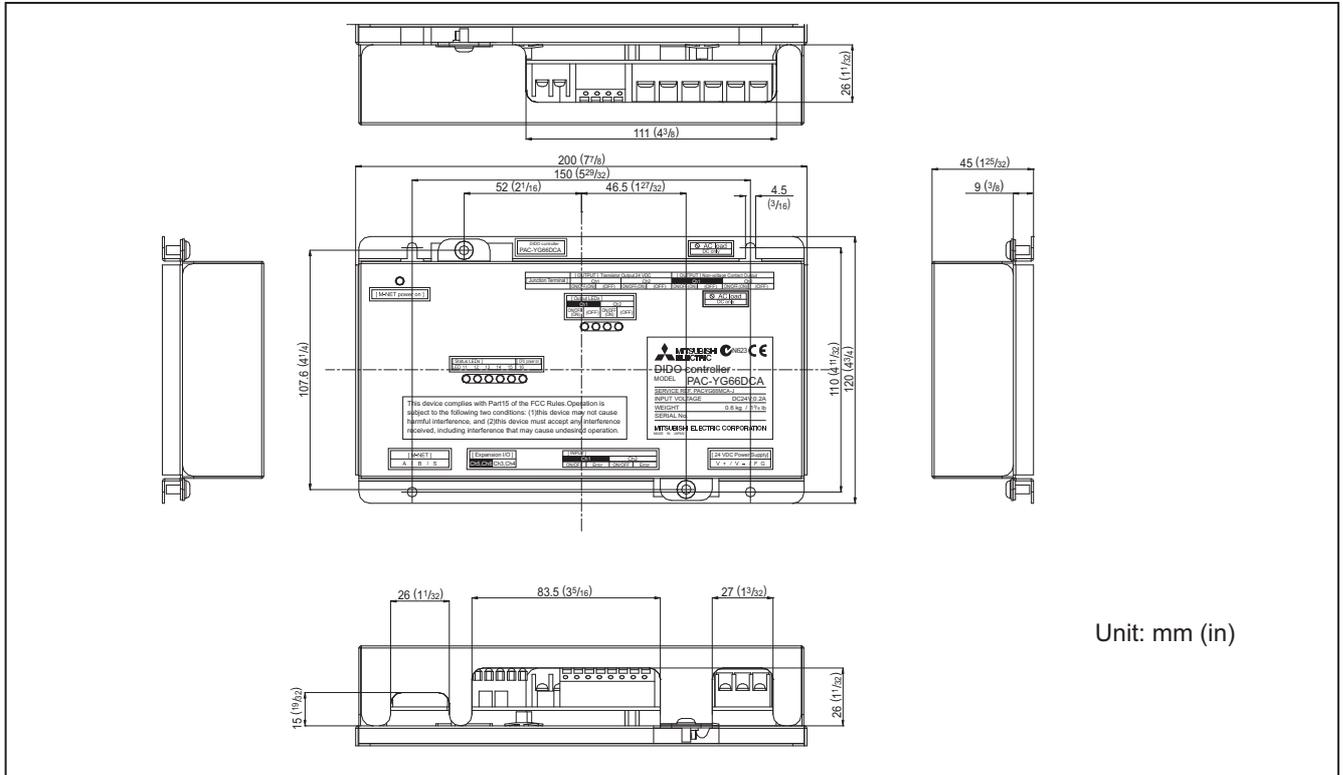

**CAUTION**

Usage Restrictions


- Mitsubishi Electric does not take financial responsibility for damages caused by issues beyond our control or special circumstances (predicable or unpredictable); and secondary or accidental damages, and damages to other objects. We also do not take financial responsibility for opportunities lost as a result of device failure, or electrical power failure at the end-user site.

Mitsubishi Electric does not take financial responsibility caused by end-users' requests including, but not limited to, device testing, startup, readjustment, and replacement.

- Do not use this device in disaster prevention, security, or "critical to life" applications.
- It is recommended to provide an external switch for general-purpose equipment in case of a failure of the DIDO controller or a peripheral part.

## 1. Specifications

## (1). Device Specifications

Item	Rating and Specification					
Power Supply	24 VDC $\pm$ 10%: 5 W (*1)				Screw terminal block (M3) (*8)	
Interface	M-NET communication		17 to 30 VDC (*2)		Screw terminal block (M3) (*8)	
	Standard	Output (*3)	ON/OFF, (ON) (*4)	Non-voltage Relay contact (2)	Applied load MAX: 24 VDC, 5 W MIN: 5 VDC, 2 mW * AC loads cannot be connected.	Screw terminal block (M3.5) (*8)
				Transistor (2)	24 VDC 40 mA or less (*5)	Screwless terminal block
			(OFF) (*4)	Non-voltage Relay contact (2)	Applied load MAX: 24 VDC, 5 W MIN: 5 VDC, 2 mW * AC loads cannot be connected.	Screw terminal block (M3.5) (*8)
				Transistor (2)	24 VDC 40 mA or less (*5)	Screwless terminal block
		Input	ON/OFF	Non-voltage a contact (2 each)	24 VDC 1 mA or less (*6)	Screwless terminal block
			Error/Normal			
		Expansion	Output	Transistor (4 each)	24 VDC 40 mA or less (*5)	9 pin connector
			(OFF) (*4)			
		Input	ON/OFF	24 VDC input (4 each)	24 VDC 1 mA or less (*7)	9 pin connector
	Error/Normal					
	Output Pulse Width		1s $\pm$ 30 ms			
Interlock Function	Interlock M-NET devices and output contacts according to status of input contacts. (*8)					
Environment Conditions	Temperature		Operating temperature range	0 to 40°C [32°F to 104°F]		
			Storage temperature range	-20 to 60°C [-4°F to 140°F]		
	Humidity		30 to 90%RH (no condensation)			
Dimensions	200 (W) $\times$ 120 (H) $\times$ 45 (D) mm / 7 7/8 (W) $\times$ 4 3/4 (H) $\times$ 1 25/32 (D) in					
Weight	0.6 kg / 1 3/8 lbs					
Time Backup During Power Failure	In the event of power failure or shut-off, the internal capacitor will continue to track time for approximately one week. (The internal capacitor takes about 24 hours to fully charge; a replacement battery is not necessary.)					
Installation Environment	Inside the metal control board (indoors) * Use this product in a hotel, a business office environment or similar environment.					

\*1: For details, refer to "1-(2). Parts Purchased Separately".

\*2: Supply electric power from a power unit for the transmission line or an outdoor unit.

Furthermore, the power consumption factor of the M-NET circuitry of this device is "1/4".

\*3: Non-voltage Relay contact or transistor is available for output. Only one can be used at a time.

\*4: ( ) is in the case of a pulse.


\*5: The output is open collector type. Power must be supplied from an external power source to the output circuit of this device.

\*6: Power is supplied from this device to the external contacts.

\*7: Power must be supplied from an external power source.

\*8: M3 and M3.5 are sizes of the screw on the terminal block (ISO metric screw thread).

The number indicates the screw diameter (mm).

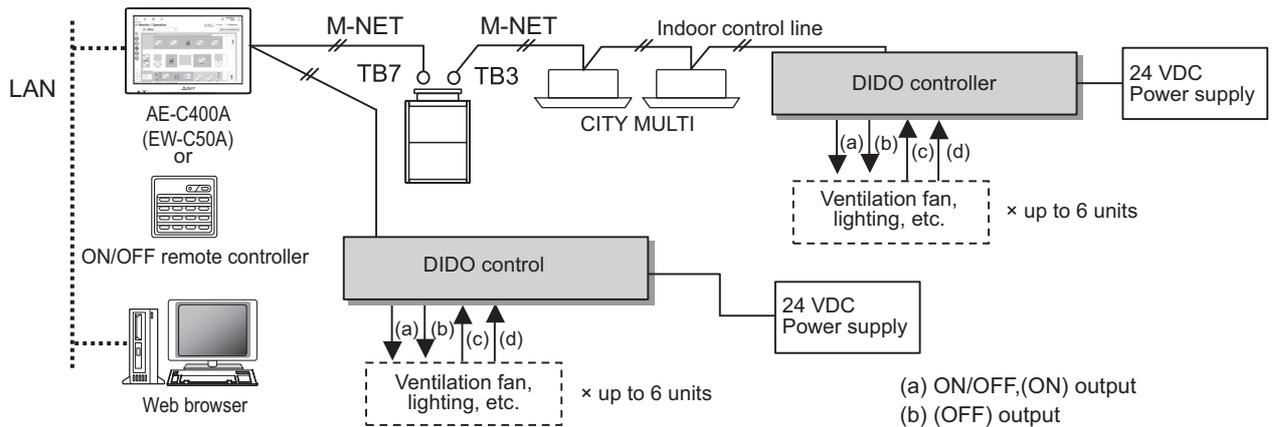

\*This figure omits the power supply line and only shows the transmission line.

- (a) ON/OFF,(ON) output
  - (b) (OFF) output
  - (c) ON/OFF input
  - (d) Error/Normal input
- Standard: Terminal block (for 2 units)  
 Expansion: Connectors (for 4 units)  
 Total: 6 units

<Restrictions>

Maximum of 50 units (50 channels) per AE-C400A/EW-C50A

However, the number of units that can be connected to a AE-C400A/EW-C50A is up to 50 including the number of contacts used on this device, an indoor unit, LOSSNAY unit, etc.

Up to 6 contacts can be connected to the DIDO controller (1 M-NET address). One contact connected to this device is calculated as the equivalent of one indoor unit connected to AE-C400A/EW-C50A.

For example, 5 contacts connected to the DIDO controller are calculated as the equivalent of 5 indoor units connected to AE-C400A/EW-C50A.

**NOTE**

- For the shield ground of the M-NET centralized control line, use single-point grounding at the power unit for the transmission line.  
 However, when supplying electric power to the M-NET centralized control line from the R410A-Series outdoor unit<sup>\*1</sup> without using a power supply unit for the transmission line, use single-point grounding at the TB7 of that outdoor unit. \*1: Except PUMY model and PUHY/PURY-T(S)LMU/T(S)KMU model (Y/R2/H2i R2-Series)  
 Furthermore, when connecting this device to the M-NET indoor control line, use grounding at the TB3 for each outdoor unit system.
- If the M-NET transmission line of this device is connected to the M-NET indoor control line and the outdoor unit is down because, for example, the power supply is interrupted for servicing or there is a failure, the DIDO controller cannot be controlled from the system controller.
- Controlling the ON/OFF remote controller is only possible with channel 1 of a standard terminal block.
- When AE-C400A/EW-C50A is connected, monitoring control can only be performed from AE-C400A/EW-C50A Web. Monitoring control cannot be performed from the ON/OFF remote controller.

## (2). Parts Purchased Separately

Prepare the following parts to install this device.

Required Part	Specification
Unit fixing screws	M4 screw × 4 (*M4: ISO metric screw thread)
Power supply for this device	<p>Commercially available power source: 24 VDC±10% 0.2 A (Minimum loading), SELV circuit, power line with grounding terminal</p> <p>Ripple noise: Lower than 200 mVp-p</p> <p>Compatible specification</p> <p>Authorized or CE marked products</p> <p>Subject to regulations: - IEC60950 (or EN60950)</p> <p>- CISPR22/24 (or EN55022/24)</p> <p>- IEC61000-3-2/3-3 (or EN61000-3-2/3-3)</p> <p>When using transistor output (including extension output) for the 24 VDC output of this device, increase the capacity to match the number used.</p> <ul style="list-style-type: none"> <li>• 1 set used: 0.3 ADC (Minimum)</li> <li>• 2 sets used: 0.4 ADC (Minimum)</li> <li>• 3 sets used: 0.5 ADC (Minimum)</li> <li>• 4 sets used: 0.6 ADC (Minimum)</li> <li>• 5 sets used: 0.7 ADC (Minimum)</li> <li>• 6 sets used: 0.8 ADC (Minimum)</li> </ul> <p>* The increase of the power supply capacity is 0.1 ADC for every set.</p>
Power line	Use a sheathed vinyl cord or cable. At least 0.75 mm <sup>2</sup> (AWG18)
M-NET transmission line	<p>Type of the cable: Sheathed vinyl cords or cable which comply with the following specifications or equivalent.</p> <ul style="list-style-type: none"> <li>• CPEV <math>\varnothing</math>1.2 mm to <math>\varnothing</math>1.6 mm</li> <li>• CVVS 1.25 mm<sup>2</sup> to 2 mm<sup>2</sup> (AWG 16 to 14)</li> </ul> <p>* CPEV: PE insulated PVC sheathed shielded communication cable</p> <p>* CVVS: PVC insulated PVC sheathed shielded control cable</p> <p>PE: Polyethylene PVC: Polyvinyl chloride</p> <p>Power needs to be supplied to the M-NET circuitry of this device. Use an outdoor unit or a separately purchased power supply unit for the transmission line.</p>
Signal lines	<p>Use electric wire of an appropriate size for the terminal block of this device.</p> <p>Electric wire size ··· (1) Solid wire: <math>\varnothing</math>0.65 mm (AWG21) - <math>\varnothing</math>1.2 mm (AWG16)</p> <p>(2) Stranded wire: 0.75 mm<sup>2</sup> (AWG18) - 1.25 mm<sup>2</sup> (AWG16)</p> <p>Single strand: At least <math>\varnothing</math>0.18 mm</p> <p>To use an expansion input/output, use a separately purchased external input/output adapter.</p>

## [Parts to be Purchased Separately]

Name	Model	Application	Remark
Power supply unit	PAC-SC51KUA	Power supply to the M-NET transmission line	This is not required when power is to be supplied from an outdoor unit.
External I/O adapter	PAC-YG10HA-E	Connection adapter for using an expansion input/output	This is required when an expansion input/output is used.

## [Commercially available parts]

Name	Application	Remark
External 24 VDC power source	Supplies power when to use the DIDO controller or transistor output.	Refer to "Power supply for this device" in "Required Part" above for the power supply capacity.
Relay device	Requires commercially available relay device depending on the electric specifications with an external device.	


2. Wiring Instructions

(1). Connecting the Power and M-NET Transmission Lines

Tightening torque for terminal screws: 1 N·m

Connect the M-NET transmission line of this device to a power supply unit (PAC-SC51KUA) for the M-NET transmission line or an outdoor unit (either a centralized control line or indoor control line can be connected).

\* Only the M-NET circuitry of this device receives the power from the M-NET transmission line. The power consumption factor is "1/4".

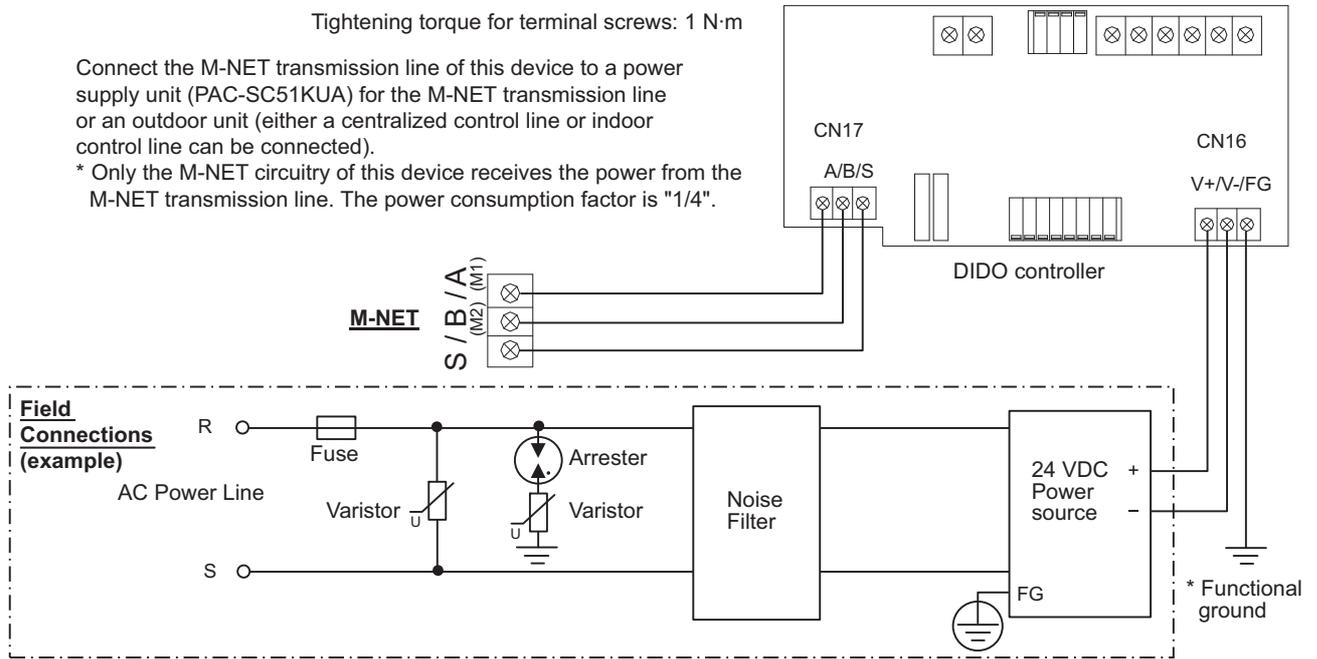

**CAUTION**

- Use a power line and M-NET transmission line that satisfy the specifications described in "1-(2). Parts Purchased Separately".
- Attach a circuit comprising the following components to the supply primary side of the 24 VDC power supply. (1) Varistor, (2) Arrester, (3) Noise filter, (4) Fuse
- It is important to pay attention to the polarity when connecting to the 24 VDC power supply terminal block. Connecting the positive and negative in the reverse order will cause a failure.
- Fix the power line and M-NET transmission line in place on the outside to ensure that the terminal block is not affected by any external force. Not securely connecting and fixing the wires in place may cause heat generation and fire.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires. Cover the shielded line of the M-NET transmission line with materials such as vinyl tape and prevent short-circuiting with the plates.


(2). Connecting the Signal Lines

- Separately procure the relay, power supply for the relay, terminal block, and cable locally.
- The maximum wire length is 100 m (328 ft). However, since the use of long wires makes the device susceptible to noise, using wires shorter than 10 m (32.8 ft) is recommended.
- Connect another relay within 10 m (32.8 ft) from DIDO controller to extend the input line.

1) Standard Terminals (Channels 1 and 2)

(1-1) Input

(a) Non-voltage a-contact Inputs

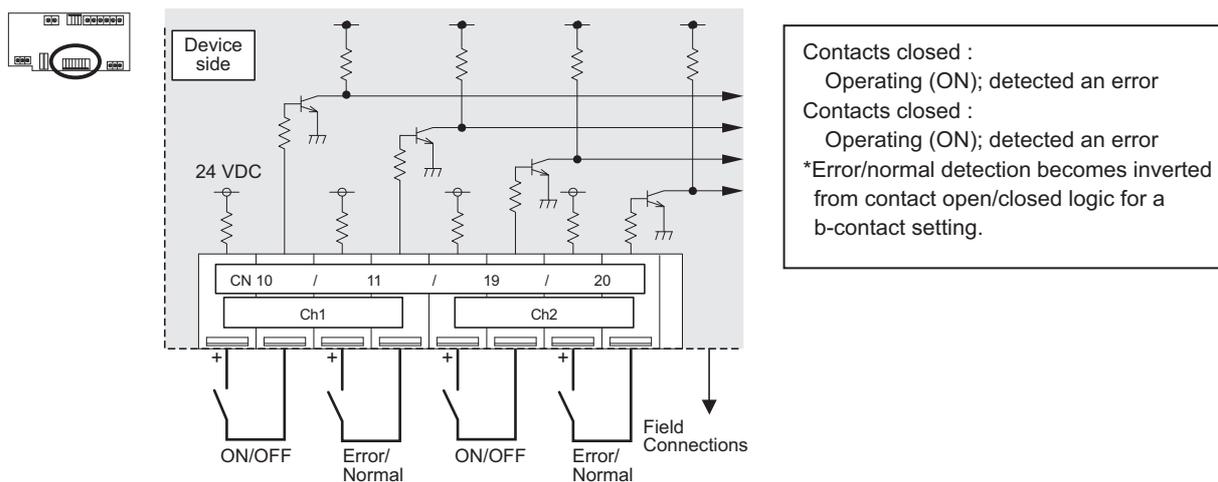

**NOTE**

- Connect the operate/stop (ON/OFF) inputs so that closing the contact operates (ON) the device and opening the contact stops (OFF) the device.
- The error/normal inputs of channels 1 and 2 can be switched between a-contact and b-contact.



**CAUTION**

- The polarity of the input terminals is important, so be sure to match the polarity when using contacts that have polarity.
- Select a contact with a minimum applicable load of 1 mADC or less.
- Supply 24 VDC 1 mA from the positive terminal to the external contacts.
- Do not install alongside or in contact with other wires.
- Strip  $12 \pm 1$  mm ( $15/32 \pm 1/32$  in) of the wire coating and insert firmly into the terminal.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
- Perform wiring so that the terminal block is not strained.  
If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.

(1-2) Output

Non-voltage Relay contact or transistor is available for output. Only one can be used at a time.

(a) Non-voltage Relay Contact Outputs

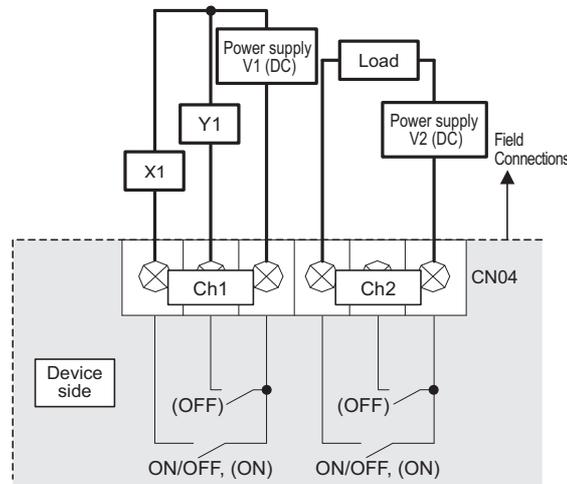

Operate (ON) output :  
 Contacts closed  
 Stop (OFF) output :  
 Contacts open  
 \*Upon pulse output, the (ON), (OFF) contacts close according to the output content. ((ON) and (OFF) refer to the junctions in the diagram.)


( ) is in the case of a pulse.

Tightening torque for terminal screws: 1 N·m

**CAUTION**

- To use X1 and Y1 relay, obtain one that satisfies the following specifications.  
 Operating coil  
 [Applied load]  
 MAX: 24 VDC, 5 W (Built-in diode)  
 MIN: 5 VDC, 2 mW (Built-in diode)  
 \*1 AC loads cannot be connected.  
 \*2 Provide a power supply (V1, V2) that matches the load and relay to be used.
- To drive a direct load, use ones within the following.  
 [Applied load]  
 MAX: 24 VDC, 5 W  
 MIN: 5 VDC, 2 mW  
 \* AC loads cannot be connected.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
- Perform wiring so that the terminal block is not strained.  
 If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.
- Do not connect the wires directly from the top of the control panel to the terminal block.  
 Moisture may enter this device along the wiring and cause electric shock or fire.

(b) Transistor Outputs (Open Collector)

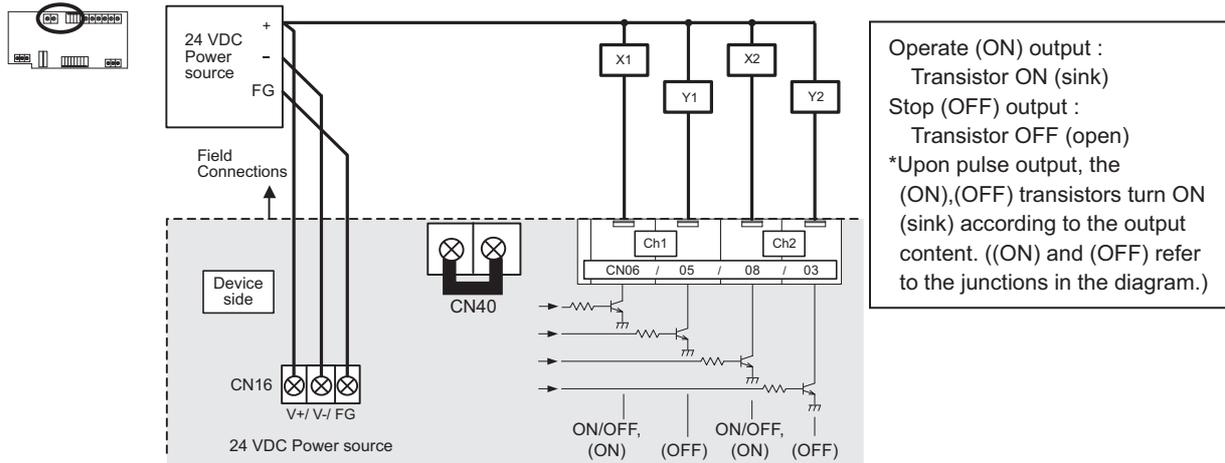

Tightening torque for terminal screws: 1 N·m ( ) is in the case of a pulse.

**NOTE** The junction terminal block CN40 (for 24 VDC) is provided. Use them as relay terminals if necessary.


**CAUTION**

- When X1, X2, Y1 and Y2 relays are used, select ones that satisfy the following specifications.
  - Operating coil
  - Rated voltage: 24 VDC (Built-in diode)
  - Power consumption: 0.9 W or less
  - (\*1) Be sure to use the ones with the voltages rated above. Exceeding the rated voltage may affect the ON/OFF of other outputs.
  - (\*2) When using a separate power supply for this device, connect GND of the power supply to V- of CN16 of the terminal block of this device.
  - (\*3) Use a relay with a withstanding voltage of at least 2000 VAC between the coil and contact. Otherwise, there is the likelihood of an electric shock or fire.
- Strip 12 ± 1 mm (15/32 ± 1/32 in) of the wire coating and insert firmly into the terminal.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
- Perform wiring so that the terminal block is not strained. If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.
- Do not connect the wires directly from the top of the control panel to the terminal block. Moisture may enter this device along the wiring and cause electric shock or fire.

2) Expansion Connectors (Channels 3 to 6)

(2-1) Expansion Inputs/Outputs

Purchase an optional external input/output adapter (model: PAC-YG10HA-E) when using expansion inputs/outputs. PAC-YG66DCA has two expansion connectors, and up to two external input/output devices can be connected to each connector. An optional external input/output adapter is required for each connector used.

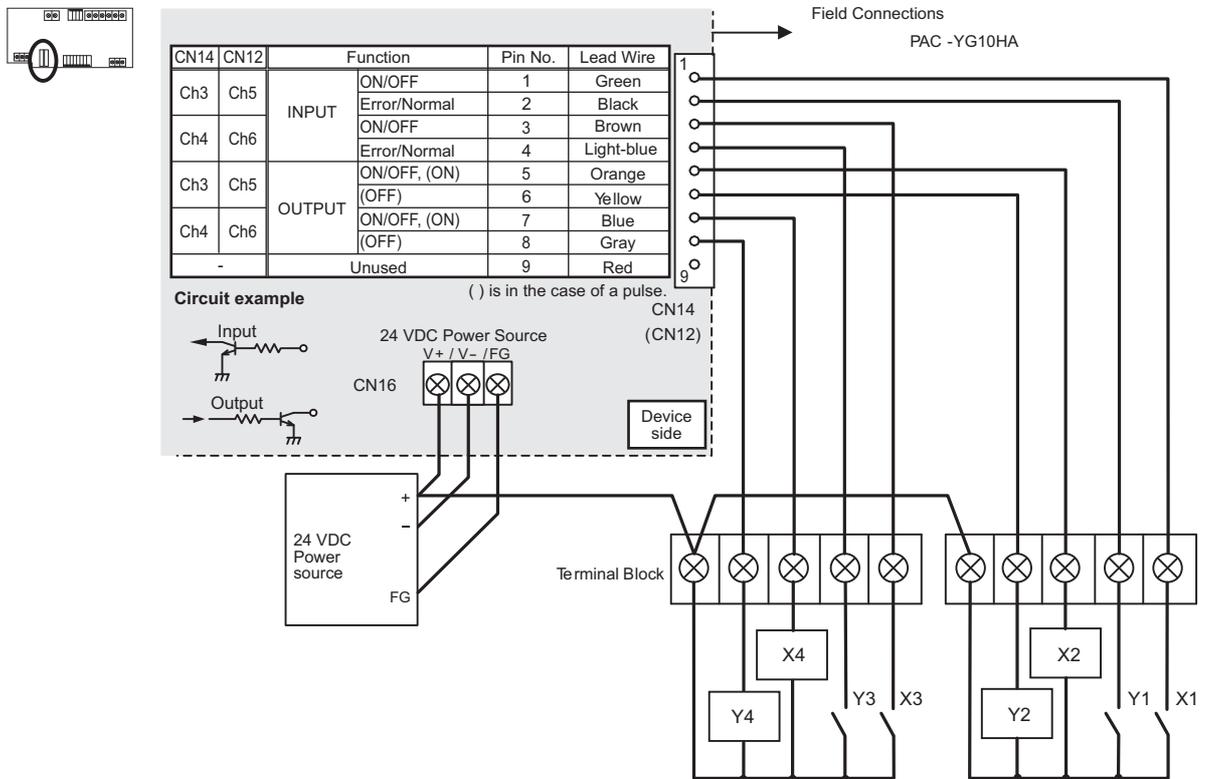

**[Input]**  
 Contacts closed (24 VDC applied): Operating (ON); detected an error  
 Contacts open : Stopped (OFF); detected as normal  
 \* Error/normal detection becomes inverted from contact open/closed logic for a b-contact setting.

**[Output]**  
 Operate (ON) output : Transistor ON (sink)  
 Stop (OFF) output : Transistor OFF(open)  
 \* Upon pulse output, the (ON), (OFF) transistors turn ON (sink) according to the output content. ((ON) and (OFF) refer to the junctions in the diagram.)

**CAUTION**

- When using X1, X2, X3, X4, Y1, Y2, Y3 and Y4 relays, select ones that satisfy the following specifications.
  - Operating coil Rated voltage: 24 VDC (Built-in diode)
  - Power consumption: 0.9 W or less
  - (\*1) Be sure to use the ones with the voltages rated above. Exceeding the rated voltage may affect the ON/OFF of other outputs.
  - (\*2) When using a separate power supply for this device, connect GND of the power supply to V- of CN16 of the terminal block of this device.
  - (\*3) Use a relay with a withstanding voltage of at least 2000 VAC between the coil and contact. Otherwise, there is the likelihood of an electric shock or fire.
- Select a contact with a minimum applicable load of 1 mADC or less for the input contact.
- Do not install alongside or in contact with other wires.

3. Interlock control

The DIDO controller (PAC-YG66DCA) has an interlock control function, which enables operation or set temperature change on the M-NET devices such as indoor units and also enables signal output to the contacts on the DIDO controller.

Interlock control covers the units connected to the DIDO controller with M-NET system.

AE-C400A/EW-C50A must be connected to use the function.


Ask your dealer for interlock control setting. The setting requires special tool support.



Before using the interlock control, you must agree to the following.

1. This feature must not be used for disaster prevention or security purpose.  
(Not designed to be used in situations that are life-threatening)
2. No functions must be added that allow the malfunctioning unit to run by defeating the safety features, such as an external ON/OFF switch or a short-circuit.
3. Those settings for the function that are not supported by the interlocked units must not be made. All the settings must be made within the specified range.  
(Failure to observe these precautions may result in malfunctions and failures.)
4. Perform a test run for interlock control, and confirm the correct settings and normal operation.
5. The system must be configured in the way that integrates the operation of the interlocked fire and emergency control systems.

Item	Content	Remarks
Number of events	24 events	1 event interlock with 1 unit
Determinant condition for interlock control	At input contact change	<ul style="list-style-type: none"> <li>• Operation input ON/OFF</li> <li>• Error input Error/Normal</li> </ul>
Interlock control contents (to be output)	1 action for 1 condition <ul style="list-style-type: none"> <li>• ON/OFF operation of indoor units</li> <li>• Operation mode change of indoor units</li> <li>• Temperature setting of indoor units (*1)</li> <li>• Contact output to DIDO controller (*2)</li> </ul>	Interlock control covers the units connected to DIDO controllers with M-NET system. (*1) Temperature setting range: 19-28°C (Standard setting) (*2) DIDO controller itself or other DIDO controllers in the same M-NET system.
Other	Interlock control prohibition function is enabled at emergency stop from AE-C400A/EW-C50A	

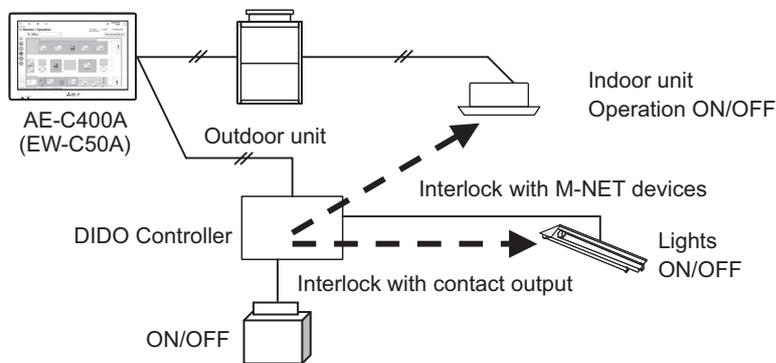


Interlock control of DIDO controller (example)

Note: Do not use Interlock control function on both AE-C400A/EW-C50A and DIDO controller at the same time.

### 3-11. AI controller [PAC-YG63MCA]

The AI controller measures temperature and humidity; it also has an alarm capability if the measurement data exceeds defined setpoints. Historical measurement data can be displayed via only the AE-C400A/EW-C50A LCD. Temperature and humidity can be displayed on the AE-C400A LCD. Furthermore, an alarm can be output if measurement data exceeds a preset upper or lower limit. The AI controller also features a function that interlocks M-NET devices for indoor units, etc.

#### External Dimensions

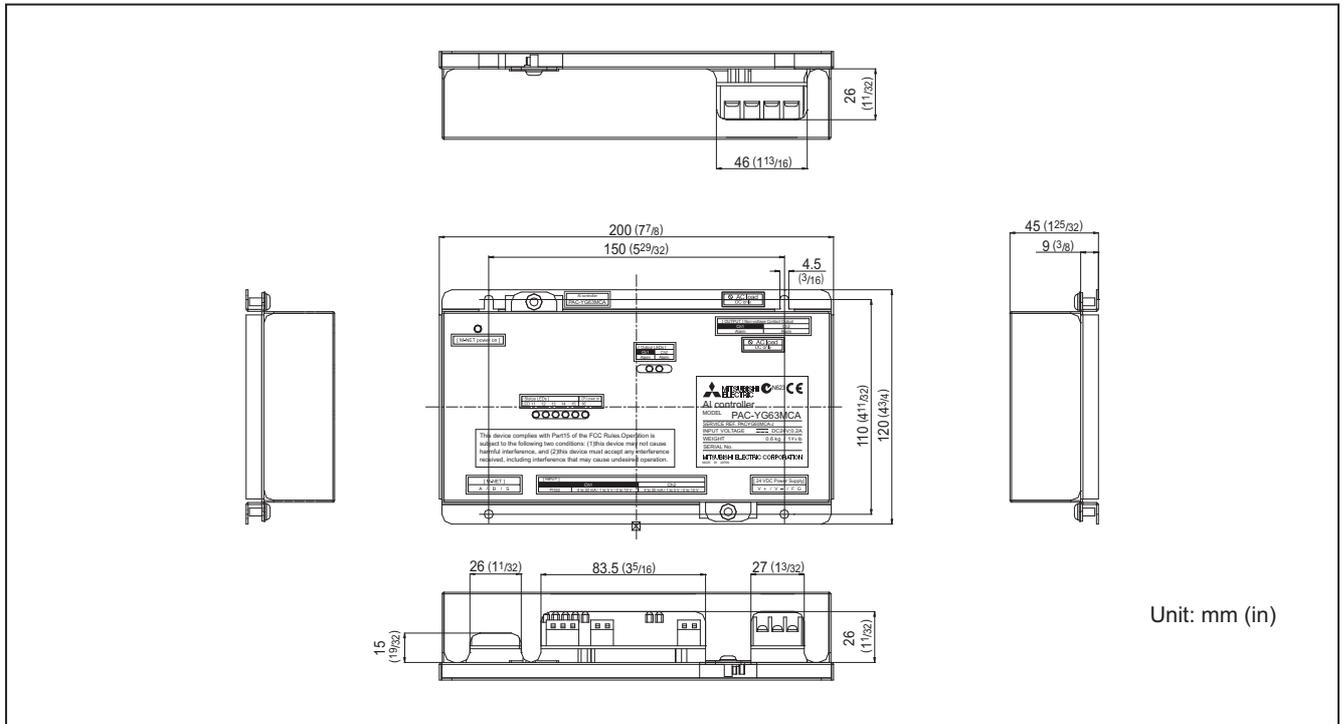

#### Usage Restrictions



Mitsubishi Electric does not take financial responsibility for damages caused by issues beyond our control or special circumstances (predicable or unpredictable); and secondary or accidental damages, and damages to other objects. We also do not take financial responsibility for opportunities lost as a result of device failure, or electrical power failure at the end-user site.

Mitsubishi Electric does not take financial responsibility caused by end-users' requests including, but not limited to, device testing, startup, readjustment and replacement.

Do not use this device in disaster prevention security or "critical to life" applications.

## 1. Specifications

## (1). Device Specifications

Item	Description						
Power Supply	24 VDC ± 10%: 5 W					Screw terminal block (M3) (*5)	
Interface	M-NET communication		17 to 30 VDC (*1)			Screw terminal block (M3) (*5)	
	Input	Ch	Sensor	Measurement target	Measurement range	Measurement error	External connection method
		Ch1	Pt100 (3-wire system)		Temperature	-30 to 60°C [-22 to 140°F]	$\pm 0.3\%FS \pm 0.1^\circ C (0.18^\circ F)$ [at 25°C(77°F)] <sup>(*3)</sup>
	Analog		4 to 20 mADC	Temperature/humidity	(Set by system controller)	$\pm 0.5\%FS \pm 0.1^\circ C (0.18^\circ F)$ $\pm 0.5\%FS \pm 0.1\%RH$ [at 25°C(77°F)] <sup>(*3)</sup>	Screwless terminal block (2 poles)
			1 to 5 VDC				
	0 to 10 VDC						
Ch2	Analog	4 to 20 mADC	Temperature/humidity	(Set by system controller)	$\pm 0.5\%FS \pm 0.1^\circ C (0.18^\circ F)$ $\pm 0.5\%FS \pm 0.1\%RH$ [at 25°C(77°F)] <sup>(*3)</sup>	Screwless terminal block (2 poles)	
		1 to 5 VDC					
		0 to 10 VDC					
Output	Upper/lower limit alarm interlock output (non-voltage contact)		Applied load MAX: 24 VDC, 5 W MIN: 5 VDC, 2 mW * AC loads cannot be connected.			Screw terminal block (M3.5) (*5)	
Interlock Function	Interlock M-NET devices according to measurement data values. (*4)						
Environment Conditions	Temperature		Operating temperature range	0 to 40°C [32°F to 104°F]			
	Humidity		Storage temperature range	-20 to 60°C [-4°F to 140°F]			
			30 to 90%RH (no condensation)				
Dimensions	200 (W) × 120 (H) × 45 (D) mm / 77/8 (W) × 43/4 (H) × 125/32 (D) in						
Weight	0.6 kg / 13/8 lb						
Time Backup During Power Failure	In the event of power failure or shut-off, the internal capacitor will continue to track time for approximately one week. (The internal capacitor takes about 24 hours to fully charge; a replacement battery is not necessary.)						
Installation Environment	Inside the metal control board (indoors) * Use this product in a hotel, a business office environment or similar environment.						

\*1: Supply electric power from a power supply unit for the transmission line or an outdoor unit. Furthermore, the power consumption factor of the MNET circuitry of this unit is "1/4".


\*2: Configure the dip switch settings for the analog input method to use.

\*3: The measurement error for the system includes the measurement error for this unit, sensor, and wiring.

a%FS (full scale) = a% × ([measurement range's upper limit value] - [lower limit value])

\*4: Settings for the interlock function are performed from the Maintenance Tool. For details, refer to the operation manual for the Maintenance Tool.

\*5: M3 and M3.5 are sizes of the screw on the terminal block (ISO metric screw thread). The number indicates the screw diameter (mm).

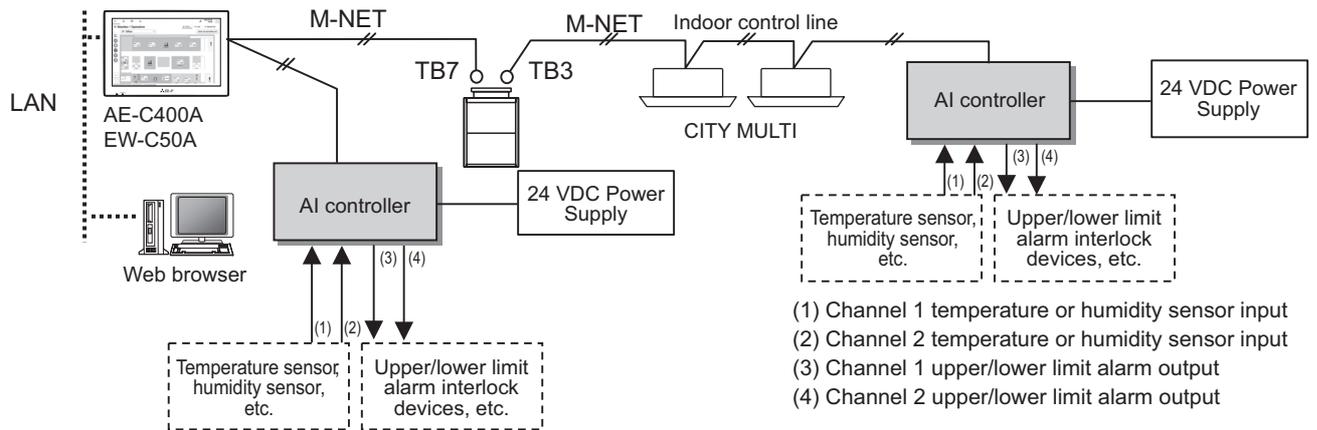

\*This figure omits the power supply line and only shows the transmission line.

<Restrictions>

Maximum of 50 units per AE-C400A/EW-C50A

However, the number of units that can be connected to a AE-C400A/EW-C50A is up to 50 including this device, an indoor unit, LOSSNAY unit, etc.

**NOTE**

- For the shield ground of the M-NET centralized control line, use single-point grounding at the power unit for the transmission line.  
However, when supplying electric power to the M-NET centralized control line from the R410A-Series outdoor unit\*1 without using a power supply unit for the transmission line, use single-point grounding at the TB7 of that outdoor unit. \*1: Except PUMY model and PUHY/PURY-T(S)LMU/T(S)KMU model (Y/R2/H2i R2-Series)  
Furthermore, when connecting the M-NET transmission line of this device to the M-NET indoor control line, use grounding at the TB3 for each outdoor unit system.
- If the M-NET transmission line of this device is connected to an M-NET indoor control line and the outdoor unit is down because, for example, the power supply is interrupted for servicing or there is a failure, the AI controller can not be set and monitored from the system controller.
- The sensor connected to the AI controller can only be monitored from AE-C400A/EW-C50A LCD.  
The sensor can be monitored from the AE-C400A LCD.

## (2). Parts Purchased Separately

Prepare the following parts to install this device.

Required Part	Specification
Unit fixing screws	M4 screw × 4 (* M4: ISO metric screw thread)
Power supply for this device	Commercially available power source: 24 VDC ± 10% 0.2 A (Minimum loading), SELV circuit, power line with grounding terminal Ripple noise: Lower than 200 mVp-p Compatible specification Authorized or CE marked products. Subject to regulations: - IEC60950 (or EN60950) - CISPR22/24 (or EN55022/24) - IEC61000-3-2/3-3 (or EN61000-3-2/3-3)
Power supply for sensors	A separate power supply for sensors may be required. In the case of 24 VDC voltage, the capacity of the power supply for this unit can be increased so that the power supply can be shared.
Power line	Use a sheathed vinyl cord or cable. At least 0.75 mm <sup>2</sup> (AWG18)
M-NET transmission line	Type of the cable: Sheathed vinyl cords or cable which comply with the following specifications or equivalent. • CPEV $\phi$ 1.2 mm to $\phi$ 1.6 mm • CVVS 1.25 mm <sup>2</sup> to 2 mm <sup>2</sup> (AWG 16 to 14) * CPEV: PE insulated PVC sheathed shielded communication cable * CVVS: PVC insulated PVC sheathed shielded control cable PE: Polyethylene PVC: Polyvinyl chloride Power needs to be supplied to the M-NET circuitry of this device. Use an outdoor unit or a separately purchased power supply unit for the transmission line.
Signal lines (Sensor input lines)	Shows the size of the electric wire (copper wire) that is adapted to the terminal block of this device. Refer to the usage and cautionary items of the sensor when performing settings. However, use a line with shielded line. Electric wire size … (1)Solid wire: $\phi$ 0.65 mm (AWG21) - $\phi$ 1.2 mm (AWG16) (2)Stranded wire: 0.75 mm <sup>2</sup> (AWG18) - 1.25 mm <sup>2</sup> (AWG16) Single strand: At least $\phi$ 0.18 mm

## [Parts to be Purchased Separately]

Name	Model	Application	Remark
Power supply unit	PAC-SC51KUA	Power supply to the M-NET transmission line	This is not required when power is to be supplied from an outdoor unit.

## [Commercially available parts]

Part	Use	Remark
External 24 VDC power source	Supplies power to the AI controller.	Refer to "Power supply for this device" and "Power supply for sensors" in "Required Part" above for the capacity of the power supply.
Sensor	Measures temperature and humidity.	Temperature sensor (PAC-SE42TS-E) cannot be connected.


2. Wiring Instructions

(1). Connecting the Power and M-NET Transmission Lines

Tightening torque for terminal screws: 1 N·m

Connect the M-NET transmission line of this device to a power supply unit (PAC-SC51KUA) for the M-NET transmission line or an outdoor unit (either a centralized control line or indoor control line can be connected).

\* Only the M-NET circuitry of this device receives the power from the M-NET transmission line. The power consumption factor is "1/4".

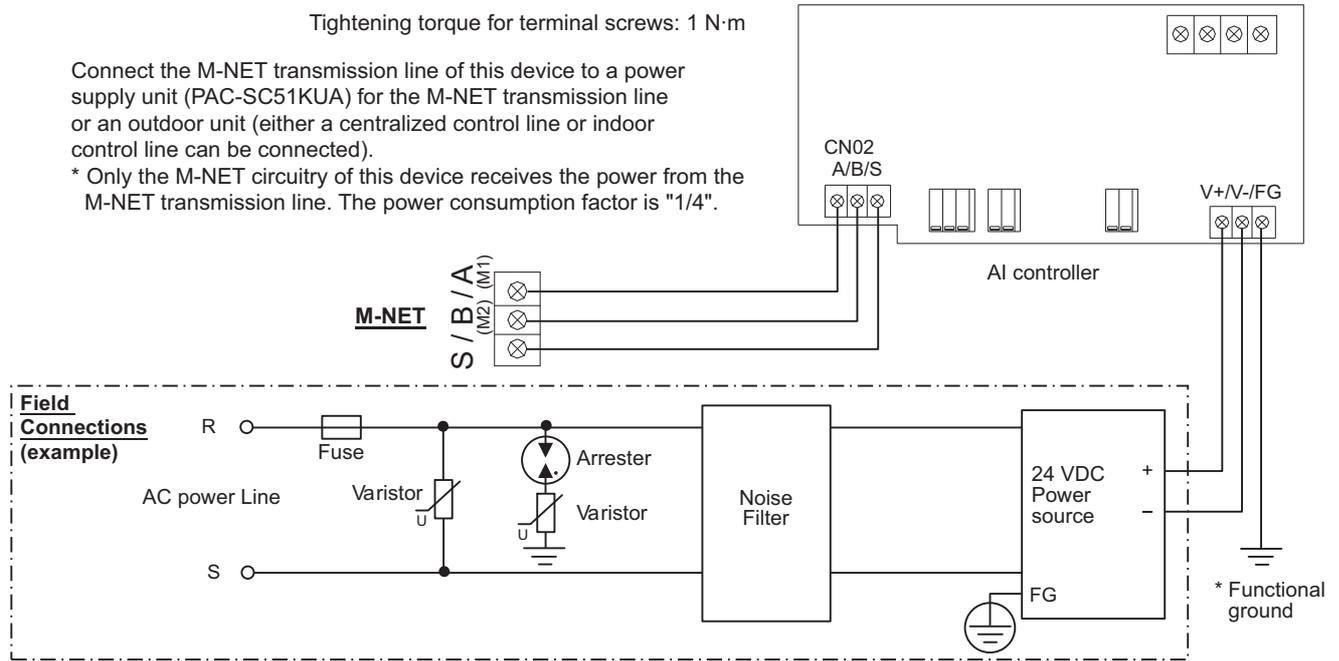

**CAUTION**

- Use a power line and M-NET transmission line that satisfy the specifications described in "1-(2). Parts Purchased Separately".
- Attach a circuit comprising the following components to the supply primary side of the 24 VDC power supply. (1) Varistor, (2) Arrester, (3) Noise filter, (4) Fuse
- It is important to pay attention to the polarity when connecting to the 24 VDC power supply terminal block. Connecting the positive and negative in the reverse order will cause a failure.
- Fix the power line and M-NET transmission line in place on the outside to ensure that the terminal block is not affected by any external force.  
Not securely connecting and fixing the wires in place may cause heat generation and fire.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires. Cover the shielded line of the M-NET transmission line with materials such as vinyl tape and prevent short-circuiting with the plates.


**NOTE**

- If the M-NET transmission line of this device is connected to an M-NET indoor control line and the outdoor unit is down because, for example, the power supply is interrupted for servicing or there is a failure, the AI controller cannot be set and monitored from the system controller.
- Be sure to ground this device, PAC-SC51KUA and 24 VDC Power source.  
Measurement accuracy may be affected if devices are not grounded.

## (2). Connecting the Sensors


- For channel 1, select one of the following four types: Pt100 detection, 4 to 20 mA DC, 1 to 5 VDC, or 0 to 10 VDC analog input.
- For channel 2, select one of the following three types: 4 to 20 mA DC, 1 to 5 VDC, or 0 to 10 VDC analog input.
- The wire length depends on the specifications of the sensor. However, since the use of long wires makes the device susceptible to noise, using wires shorter than 12 m (39.4 ft) is recommended. Use a shielded line for the sensor line and connect to the FG terminal on this unit or the FG terminal on the control panel.

## 1) Channel 1 Pt100 Input

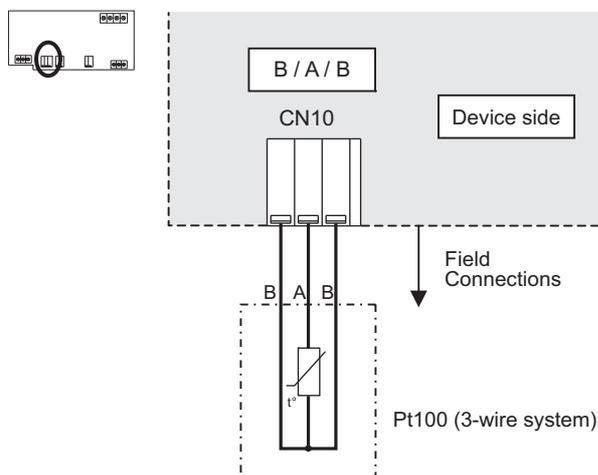

 **CAUTION**

- Use a 3-wire system for Pt100.
- A/B polarity is important for Pt100.  
Be sure to match the polarity when using Pt100.
- Do not install the sensor input line parallel to or near the M-NET transmission line or power line.  
Also avoid loop wiring.  
Furthermore, confirm the precautions for the sensor.
- Strip  $12 \pm 1$  mm ( $15/32 \pm 1/32$  in) of the wire coating and insert firmly into the terminal.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
- Perform wiring so that the terminal block is not strained.  
If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.


2) Channel 1 (Channel 2) Analog Input (4 to 20 mADC, 1 to 5 VDC, 0 to 10 VDC)



(a) When 1 to 5 VDC, 0 to 10 VDC, or 4 to 20 mADC (type for which power is supplied to the sensor) is connected

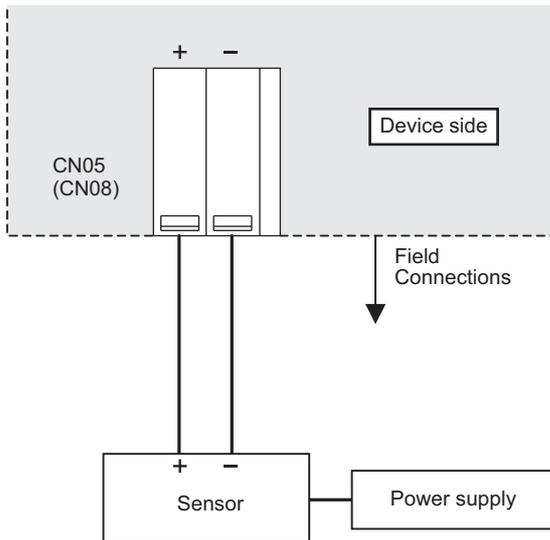

(b) When 4 to 20 mADC (type for which power is supplied to the signal line) is connected

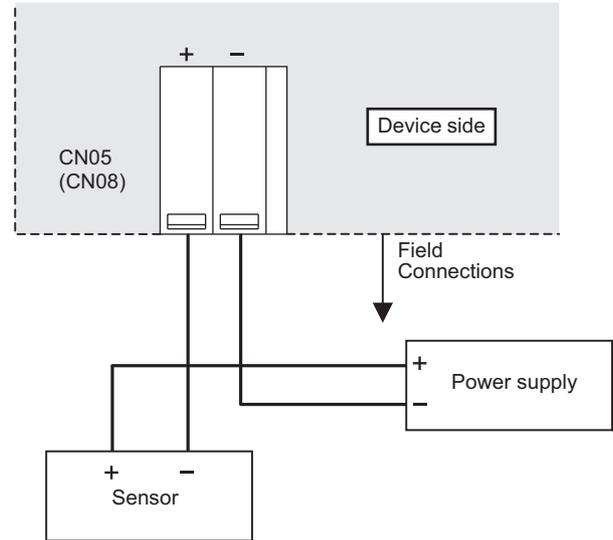


**CAUTION**

- Select a power supply that is suitable for the sensor to be used.
  - Do not install the sensor input line parallel to or near the M-NET transmission line or power line. Also avoid loop wiring.
  - Furthermore, confirm the precautions for the sensor.
  - Strip  $12 \pm 1$  mm ( $15/32 \pm 1/32$  in) of the wire coating and insert firmly into the terminal.
  - Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
  - Perform wiring so that the terminal block is not strained.
- If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.

## (3). Connecting Alarm Setpoint Outputs (Non-voltage Contacts)

The maximum wire length is 100 m. However, since the use of long wires makes the device susceptible to noise, using wires no more than 10 m long is recommended.

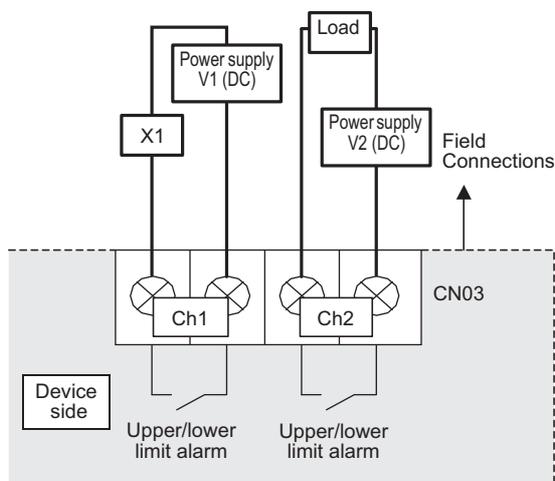

\* The contact of the internal relay is always ON during detection of an upper/lower limit alarm. (Level output)

Tightening torque for terminal screws: 1 N·m.

**CAUTION**

- To use X1 relay, obtain one that satisfies the following specifications.
  - Operating coil
  - [Applied load]
  - MAX: 24 VDC, 5 W (Built-in diode)
  - MIN: 5 VDC, 2 mW (Built-in diode)
  - \*1 AC loads cannot be connected.
  - \*2 Provide a power supply (V1, V2) that matches the load and relay to be used.
- To drive a direct load, use ones within the following.
  - [Applied load]
  - MAX: 24 VDC, 5 W
  - MIN: 5 VDC, 2 mW
  - \* AC loads cannot be connected.
- Make sure that the copper wiring is not short-circuiting the plates (cover, lower case) or neighboring wires.
- Perform wiring so that the terminal block is not strained.
  - If strained, use a wire guide or junction terminal to alleviate the stress on the terminal block.
- Do not connect the wires directly from the top of the control panel to the terminal block.
  - Moisture may enter this device along the wiring and cause electric shock or fire.

3. Interlock control

AI controller (PAC-YG63MCA) has an interlock control function, which enables operation or set temperature change on the M-NET devices such as indoor units.


Interlock control covers the units connected to the AI controller with M-NET system. AE-C400A/EW-C50A must be connected to use the function.

Ask your dealer for interlock control setting. The setting requires special tool support.

**! CAUTION** Before using the interlock control, you must agree to the following.


1. This feature must not be used for disaster prevention or security purpose.  
(Not designed to be used in situations that are life-threatening)
2. No functions must be added that allow the malfunctioning unit to run by defeating the safety features, such as an external ON/OFF switch or a short-circuit.
3. Those settings for the function that are not supported by the interlocked units must not be made. All the settings must be made within the specified range.  
(Failure to observe these precautions may result in malfunctions and failures.)
4. Perform a test run for interlock control, and confirm the correct settings and normal operation.
5. The system must be configured in the way that integrates the operation of the interlocked fire and emergency control systems.

Item	Content	Remarks
Number of events	24 events	1 event interlock with 1 unit
Determinant condition for interlock control	Measurement value Measurement interval is 1 to 7200 seconds.	<ul style="list-style-type: none"> <li>• Exceeding measurement value in setting range</li> <li>• Exceeding upper/lower limit alarm detection value and cancellation value</li> </ul>
Interlock control contents (to be output)	1 action for 1 condition <ul style="list-style-type: none"> <li>• ON/OFF operation of indoor units</li> <li>• Operation mode change of indoor units</li> <li>• Temperature setting of indoor units (*1)</li> <li>• Contact output to DIDO controller</li> </ul>	Interlock control covers the units connected to AI controllers with M-NET system. (*1) Temperature setting range: 19-28°C (Standard setting)
Other	Interlock control prohibition function is enabled at emergency stop from AE-C400A/EW-C50A	

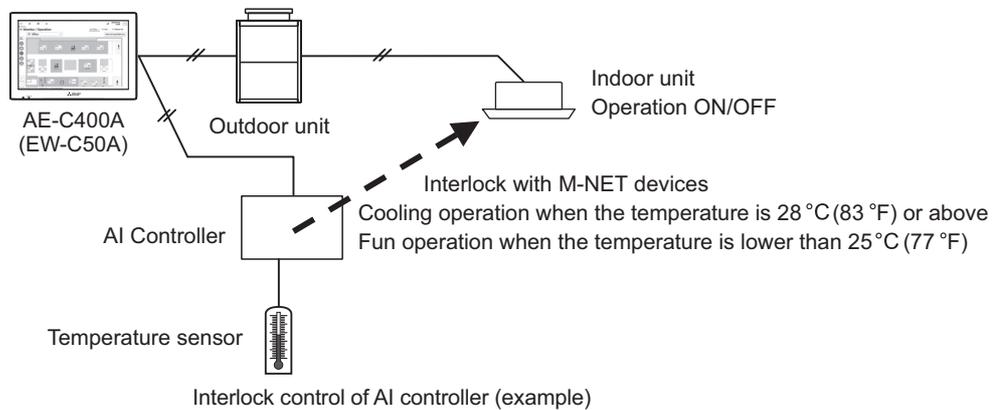

3-12. Cloud system connection device [MCC-50A]

■ System example

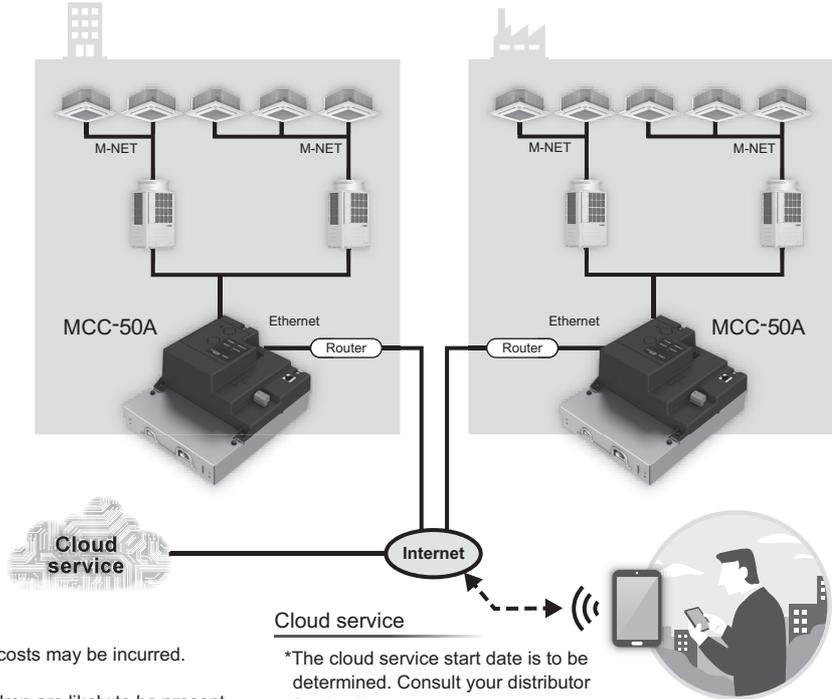

MCC-50A

- \*An Internet connection is required. Depending on the network environment, communication costs may be incurred. Ensure sufficient network security.
- \*This device is not suitable for use in locations where children are likely to be present.
- \*Up to 50 CITY MULTI indoor units can be connected to each MCC-50A.

Cloud service

- \*The cloud service start date is to be determined. Consult your distributor for detail.

■ Product specifications


Item		Specifications	
Power supply		100–240 VAC ± 10%; 50/60 Hz Single-phase	
M-NET power feeding coefficient		1.5	
Network interface		100BASE-TX	
Ambient conditions	Temperature	Operating temperature range	+14°F – +131°F (-10°C – +55°C)
		Storage temperature range	-4°F – +140°F (-20°C – +60°C)
	Humidity		30%–90% RH (Non-condensing)
Dimensions (W × H × D)		6-13/16 × 8-4/16 × 3-15/16 in (172 × 209 × 100 mm) * 6-13/16 × 10 × 3-15/16 in (172 × 253 × 100 mm) when using L-fittings	
Weight		3-3/4 lbs (1.7 kg)	

■ Connectable units

CITY MULTI

\*Certain other products that are connectable to the M-NET may be connectable to the Cloud system connection device. Consult your nearest distributor for detail.

■ External dimensions

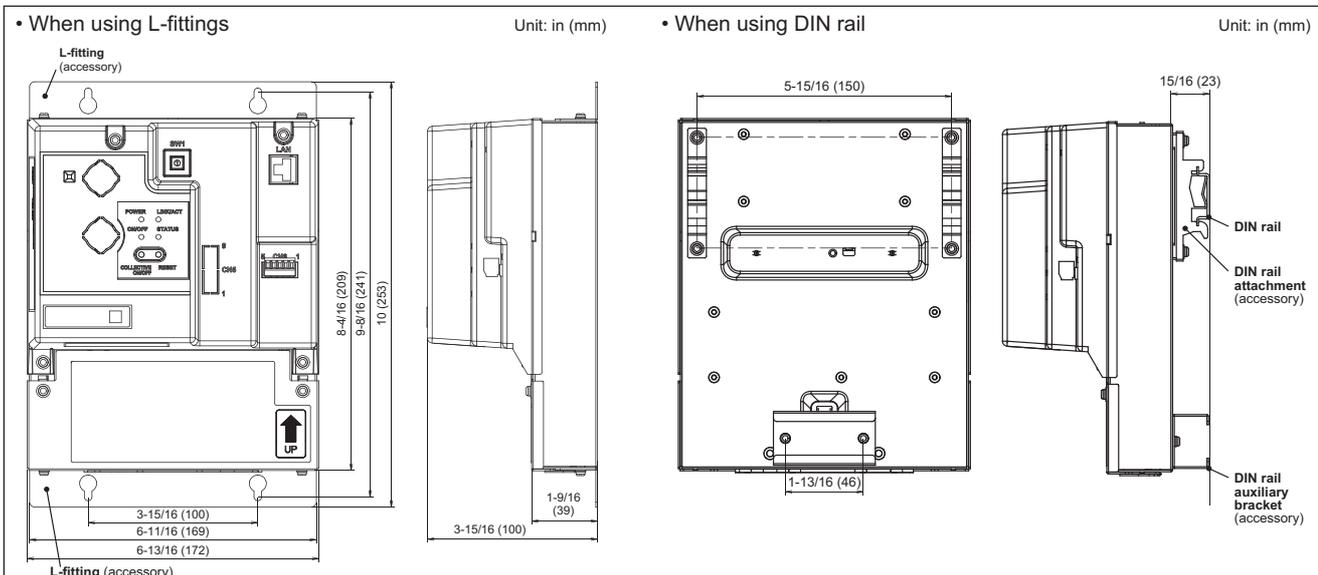

4-1. S/Y/H2i Y/R2/H2i R2-Series

CITY MULTI system can be monitored or controlled with signal to/from the outside as every control board of Indoor unit or Outdoor unit has input/output signal connectors. Independent control to the individual Indoor or Outdoor can be carried out by using these connectors. Yet, for large-scale control, MELANS would be much easier. When using input/output connectors, a dedicated adapter (optional part) and a relay circuit needed to be prepared by the site. Following are some typical example. Table 4-1-1. Control can be achieved by using Outdoor input/output connectors.

Function	Usage	Using connector		Signal	Option
		PUHY	PURY		
Demand	Prohibiting cooling/heating operation (thermo OFF) by an external input to the outdoor unit. * It can be used as the demand control for each refrigerant system.	CN3D	CN3D	Input (level-signal)	Adapter for external input (PAC-SC36NA-E)
Low noise mode	Performs a low noise operation of the outdoor unit by an external input to the outdoor unit. * It can be used as the low noise operation device for each refrigerant system.				
Snow sensor signal input	Forces the outdoor unit to perform a fan operation by receiving signals from the snow sensor. *4	CN3S	CN3S		
Auto-changeover	Cooling/heating operation can be changed by an external input to the outdoor unit.	CN3N	-		
Energy-saving mode	The operation mode of the unit can be changed from normal cooling operation (performance priority) to energy-saving cooling mode by an external signal input.	CN3K	CN3K		
Operation status of the compressor	How to extract signals from the outdoor unit. * It can be used as an operation status display device.	CN51	CN51	Output (level-signal)	Adapter for external output (PAC-SC37SA-E)
Error status	* It can be used for an interlock operation with external devices.				

- \*1 For details, refer to 1) through 4) shown below.
- \*2 Low noise mode is valid when Dip SW6-8 on the outdoor unit is set to OFF. When DIP SW6-8 is set to ON, 4 levels of on-DEMAND are possible, using different configurations of low noise mode input and DEMAND input settings. When 2 or more outdoor units exist in one refrigerant circuit system, 8 levels of on-DEMAND are possible. When 3 outdoor units exist in one refrigerant circuit system, 12 levels of on-DEMAND are possible.
- \*3 Low noise mode can be switched from ability main to low noise main with Dip SW6-7 on the outdoor unit. Dip SW6-7 OFF: ability main (ability main mode : The sound pressure level is reduced by limiting the maximum fan frequency under the following condition. Cooling mode : outdoor temp. (TH7) ≤ 30°C Heating mode : outdoor temp. (TH7) ≥ 3°C), ON: low noise main.
- \*4 When multiple outdoor units exist in one refrigerant circuit system, settings on every outdoor unit (signal input) are required.
- \*5 For detailed drawing, refer to "4-2. Outdoor unit input/output connector".

1) Table 4-1-2. SW6-8: OFF (Compressor ON/OFF, Low noise mode)

CN3D 1-3P	2-level of on-Demand *6	CN3D 1-2P	Low noise mode *7
Open	100%(No Demand)	Open	OFF
Short-circuit	0%	Short-circuit	ON

- \*6 When SW6-8 on the outdoor unit in one refrigerant circuit system is set to ON (4 levels or 8 levels or 12 levels of on- DEMAND), this function cannot be used.
- \*7 This function and the 4 levels or 8 levels on-DEMAND function can be used together. Input the order to CN3D 1-2P on the outdoor unit whose SW6-8 is set to OFF.

2) When SW6-8 on one outdoor unit in one refrigerant circuit system is set to ON (4 levels of on-DEMAND) (\*8)

CN3D 1-3P	CN3D 1-2P	
	Open	Short-circuit
Open	100% (No DEMAND)	75%
Short-circuit	0%	50%

Note the following steps to be taken when using STEP DEMAND.

Example: When switching from 100% to 50%

Steps in DEMAND level setting	<WRONG>	100%	→	10%	→	50%
	<CORRECT>	100%	→	75%	→	50%

If the demand settings are switched in the wrong order listed as the wrong example above, the unit may go into thermo OFF mode.

The percentage of the DEMAND listed in the table above is an approximate value based on the compressor volume and does not necessarily correspond with the capacity.

This function and the Low noise mode function cannot be used together.

3) When SW6-8 on the two outdoor units in one refrigerant circuit system is set to ON (8 levels of on-DEMAND) (\*8,\*9)

8 levels of on-DEMAND		No.2 CN3D					
		1-2P		Open		Short-circuit	
No.1 CN3D	1-2P	1-3P	Open	Short-circuit	Open	Short-circuit	
	Open	Open	100% (No DEMAND)	50%	88%	75%	
	Open	Short-circuit	50%	0%	38%	25%	
	Short-circuit	Open	88%	38%	75%	63%	
		Short-circuit	75%	25%	63%	50%	

4) When SW6-8 on the all outdoor units in one refrigerant circuit system is set to ON (12 levels of on-DEMAND) (\*9)

12 levels of on-DEMAND		No.2 CN3D								
		1-2P		Open				Short-circuit		
No.1 CN3D	1-2P	1-3P	Open	Short-circuit	Open	Short-circuit	Open	Short-circuit		
	Open	Open	100%	67%	92%	84%	67%	34%	59%	50%
	Open	Short-circuit	67%	34%	59%	50%	34%	0%	25%	17%
	Short-circuit	Open	92%	59%	84%	75%	59%	25%	50%	42%
		Short-circuit	84%	50%	75%	67%	50%	17%	42%	34%

12 levels of on-DEMAND		No.3 CN3D								
		1-2P		Open				Short-circuit		
No.1 CN3D	1-2P	1-3P	Open	Short-circuit	Open	Short-circuit	Open	Short-circuit		
	Open	Open	92%	59%	84%	75%	84%	50%	75%	67%
	Open	Short-circuit	59%	25%	50%	42%	50%	17%	42%	34%
	Short-circuit	Open	84%	50%	75%	67%	75%	42%	67%	59%
		Short-circuit	75%	42%	67%	59%	67%	34%	59%	50%

- \*8 Input the order to CN3D on the outdoor unit whose SW6-8 is set to ON.
- \*9 CN3D of No. 1, 2, 3 can be selected arbitrary with the outdoor unit whose SW6-8 is set to ON.
- \*10 Y/H2i Y/R2/H2i R2-Series → SW6-7, SW6-8  
S-Series → SW4-4, SW5-5

Table 4-1-3. Control can be achieved by using Indoor input/output connectors.

Function	Usage	Using connector	Signal
Remote/Local switching *1 ON/OFF *2*3	Indoor group can be controlled ON/OFF by an ON/OFF switching or contact input to the connector of the head Indoor in an Indoor group. It can be interlocked with timer, door, window, or other equipment to "Force stopping"	CN32	Input (level-signal)
ON/OFF *2*3	Indoor group can be controlled ON/OFF by an external pulse signal input to the connector of the head Indoor in an Indoor group.	CN51	Input (pulse-signal)
Demand	Indoor group can be controlled ON/OFF by an ON/OFF switching or contact input to the connector of every Indoor in an Indoor group.	CN52	Input (pulse-signal)
Monitoring ON/OFF state	Signal output from a head Indoor unit, presenting its Indoor group.	CN51	Output
Monitoring heating state	It can be used for monitoring or interlock with other equipment purpose and so on.	CN52	
Monitoring cooling/drying state		CN52	
Monitoring Error state	Signal output from every Indoor unit, for monitoring Error or Thermo-off (fan) state.	CN51	Output
Monitoring Thermo-OFF(fan) state	It can be used for monitoring or interlock with other equipment purpose and so on.	CN52	

\*1. When switching to Remote, control at Local remote controller will NOT be effective, but the "CENTRALLY CONTROLLED" is displayed.

\*2. MA or ME remote controller is needed for this function.

\*3. If using ON/OFF input function, Automatic-address-start-up can not be performed to start-up the system at commissioning.

\*4. If CITY MULTI use AE-C400A/EW-C50A and PLC software to control external input/output signal of the Indoor unit, Dip Switch 1-9 and Dip Switch 1-10 should be set to ON.

In this case, the input/output connectors act as normal connectors, functions mentioned at Table 4-1-3. are no more available.

Details are available at the PLC software Instruction Manual.

Table 4-1-4. ON/OFF control to each Indoor unit (group) by using Dip Switch 9 and 10 (SW1-9, SW1-10) of the Indoor unit.

Function	Operation on Indoor units	Setting Dip Switch *1*4	
		1-9	1-10
Auto ON	All indoor units will turn ON and automatically resume to its previous mode after 5 minutes from power recovery.	OFF	ON
Auto recovery	Indoor unit recovers to its previous state (ON/OFF, mode) after 5 minutes from power recovery.	ON	OFF
All OFF	Forced stopping regardless of Indoor units' state.	OFF	OFF

\*1. The Dip Switch setting should be carried out on every Indoor unit in the group.


\*2. Outdoor unit's power supply should NOT be cut. Otherwise, power supply to case heater of the compressor would be cut too, which may cause damage to the compressor.

\*3. Above method can not be applied to the power ON/OFF of the drain pump and humidifier equipment.

\*4. If CITY MULTI use AE-C400A/EW-C50A and PLC software to control external input/output signal of the Indoor unit, Dip Switch 1-9 and Dip Switch 1-10 should be set to ON.

In this case, the input/output connectors act as normal connectors, functions mentioned at Table 4-1-4. are no more available.

■ System example

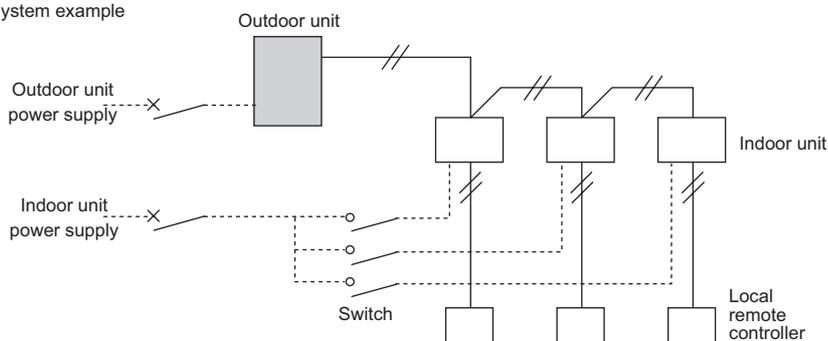

Restart of the CITY MULTI needs to be careful. When no power supply to the outdoor unit, no power supply to the compressor case heater too. The compressor needed to be warmed up before running. When using above functions, power supply to the outdoor unit should be ensured.

Table 4-1-5. How to use Remote/Local switching connector CN32

State	Local remote controller display and operation	CN32-SW-1 for Local/Remote control switching	CN32-SW-2 for Remote "ON/OFF" operation
Local remote controller control	Operation is permitted	OFF	OFF
Remote STOP	"CENTRALLY CONTROLLED" flashing, "ON/OFF" at local remote controller is not possible.	ON	OFF
Remote START	"CENTRALLY CONTROLLED" flashing, "ON/OFF" at local remote controller is not possible.	ON	ON

\* For details refer to CN32 in section "4-5. Indoor unit "-E/-A" type input/output connector".

Table 4-1-6. Limitations to combining system controls ○: Simultaneous use available X: Simultaneous use not available

	Description	Control combining distant/local	Pulse ON/OFF	Power ON/OFF	Automatic recover
1	Control combining distant/local	CN32	-	X*1	X*1
2	Pulse ON/OFF	CN51	-	○	○
3	HA ON/OFF(JEMA)	CN51		○	○
4	Power ON/OFF	-		-	X
5	Automatic recover	-			-


\*1. Pulse ON/OFF, power ON/OFF and automatic recover can only be used when the remote/local setting CN32 is set to local. Therefore, always avoid this function when combining control.

### 4-2. Outdoor unit input/output connector

<b>Caution:</b>	1. Wiring should be covered by insulation tube with supplementary insulation.
	2. Use relays or switches with IEC or equivalent standard.
	3. The electric strength between accessible parts and control circuit should have 2750V or more.

#### 4-2-1. Output


• State (CN51) \*2

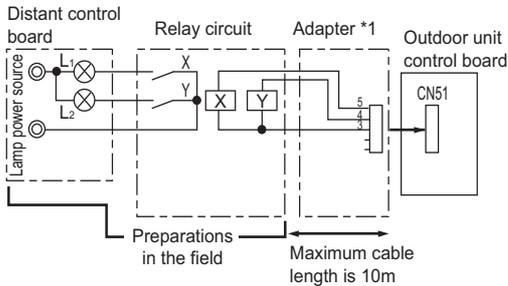

L1 : Heat source unit error display lamp  
 L2 : Compressor operation lamp (compressor running state)  
 X, Y : Relay (coil =<0.9W : 12VDC)

\*1. Optional part : PAC-SC37SA-E or field supply.

\*2. PURY-HP-TKMU-A-H

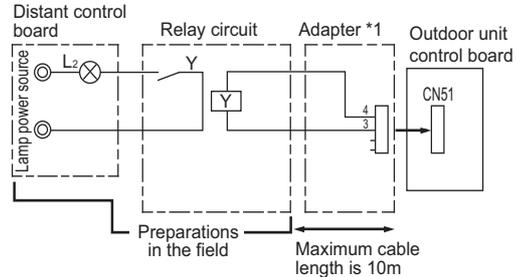


\*3. On the Hyper-heating R2 HP-TKMU-A-H models, the error signal output function is disabled at default settings. Change the DipSW4 (No. 974) setting to use the error signal output function. When the setting is changed, base heaters cannot be used.

#### 4-2-2. Input


##### Y/H2i Y/R2/H2i R2-Series

(1) Step demand and Low noise mode (CN3D)

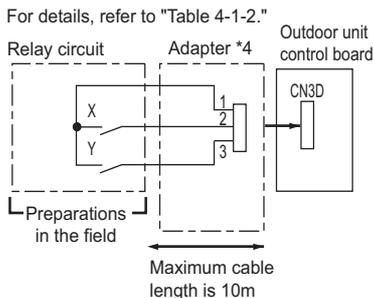

X : Low noise mode or demand  
 Y : Demand  
 X, Y : Relay Contact rating voltage  $\geq$  15VDC  
 Contact rating current  $\geq$  0.1A  
 Minimum applicable load  $\leq$  1mA at DC  
 \*4. Optional part : PAC-SC36NA-E or field supply.

(2) Low noise mode (CN3D + DipSW6-8 OFF)

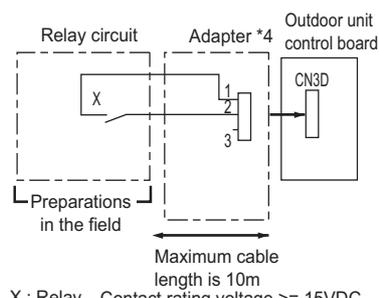


X : Relay Contact rating voltage  $\geq$  15VDC  
 Contact rating current  $\geq$  0.1A  
 Minimum applicable load  $\leq$  1mA at DC  
 \*4. Optional part : PAC-SC36NA-E or field supply.

Low noise mode : The sound pressure level is reduced by controlling the maximum fan frequency and compressor frequency.

-Note-  
 The sound pressure level can not be reduced, when neither the fan frequency nor the compressor frequency are maximum.


(3) Auto-changeover (CN3N) (R2 excluded)

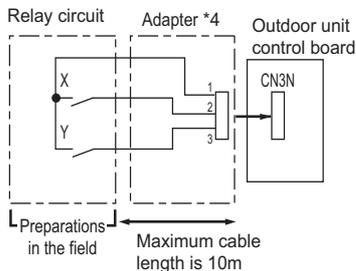

X : Cooling / Heating  
 Y : Validity / Invalidity of X  
 X, Y : Relay Contact rating voltage  $\geq$  15VDC  
 Contact rating current  $\geq$  0.1A  
 Minimum applicable load  $\leq$  1mA at DC  
 \*4. Optional part : PAC-SC36NA-E or field supply.


		X	
		OFF	ON
Y	OFF	Normal	
	ON	Cooling	Heating

(4) Snow sensor (CN3S)

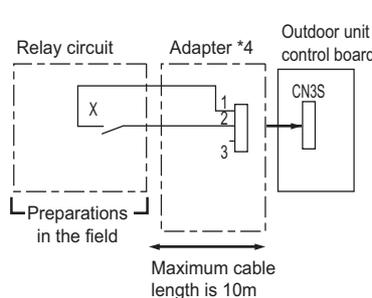

X : Relay Contact rating voltage  $\geq$  15VDC  
 Contact rating current  $\geq$  0.1A  
 Minimum applicable load  $\leq$  1mA at DC  
 \*4. Optional part : PAC-SC36NA-E or field supply.  
 Snow sensor : The outdoor fan runs when X is closed in stop mode or thermostat mode.


(5) Energy-saving mode (CN3K)

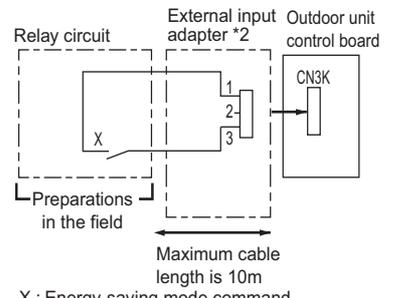

X : Energy-saving mode command  
 X : Relay Contact rating voltage  $\geq$  DC15V  
 Contact rating current  $\geq$  0.1A  
 Minimum applicable load  $\leq$  1mA at DC  
 \*2. Optional part : PAC-SC36NA-E or field supply.

S-Series

(1) Step demand and Low noise mode (CN3D)

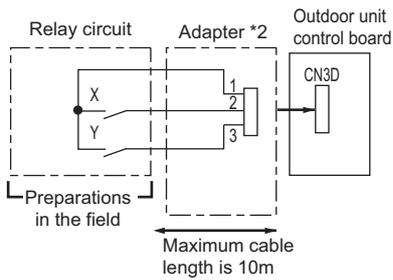

X, Y : Relay Contact rating voltage  $\geq 15\text{VDC}$   
 Contact rating current  $\geq 0.1\text{A}$   
 Minimum applicable load  $\leq 1\text{mA}$  at DC

\*2. Optional part : PAC-SC36NA-E or field supply.  
 DipSW8-1 ON (Step demand only)


		X	
		OFF	ON
Y	OFF	100%	75%
	ON	0%	50%

\*They are rough values.

DipSW8-1 OFF (Compressor ON/OFF and Low noise mode)

Y	Compressor ON/OFF	X	Low noise mode
OPEN	ON	OPEN	OFF
SHORT	OFF	SHORT	ON

(2) Low noise mode (CN3D + DipSW8-1 OFF)

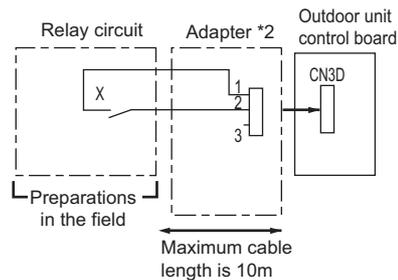

X : Relay Contact rating voltage  $\geq 15\text{VDC}$   
 Contact rating current  $\geq 0.1\text{A}$   
 Minimum applicable load  $\leq 1\text{mA}$  at DC


\*2. Optional part : PAC-SC36NA-E or field supply.

Low noise mode : The sound pressure level is reduced by controlling the maximum fan frequency and compressor frequency.

-Note-

The sound pressure level can not be reduced, when neither the fan frequency nor the compressor frequency are maximum.

(3) Auto-changeover (CN3N)

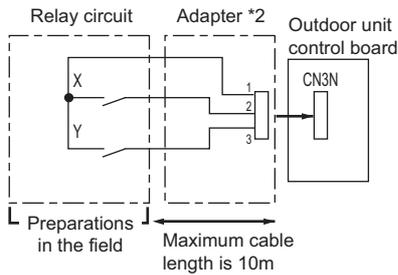

SW1 : Cooling / Heating  
 SW2 : Validity / Invalidity of X  
 X, Y : Relay Contact rating voltage  $\geq 15\text{VDC}$   
 Contact rating current  $\geq 0.1\text{A}$   
 Minimum applicable load  $\leq 1\text{mA}$  at DC

\*2. Optional part : PAC-SC36NA-E or field supply.

		X	
		OFF	ON
Y	OFF	Normal	
	ON	Cooling	Heating

4-3. WY/WR2-Series

CITY MULTI system can be monitored or controlled with signal to/from the outside as every control board of Indoor unit or heat source unit has input/output signal connectors. Independent control to the individual Indoor or heat source can be carried out by using these connectors. Yet, for large-scale control, MELANS would be much easier. When using input/output connectors, a dedicated adapter (optional part) and a relay circuit needed to be prepared by the site. Following are some typical example.

Table 4-3-1. Control can be achieved by using heat source input/output connectors.

Function	Usage	Using connector		Signal	Option
		PQHY	PQRY		
Demand	Prohibiting cooling/heating operation (thermo OFF) by an external input to the heat source unit. * It can be used as the demand control for each refrigerant system.	CN3D	CN3D	Input (level-signal)	Adapter for external input (PAC-SC36NA-E)
Low noise mode	Performs a low noise operation of the heat source unit by an external input to the heat source unit. * It can be used as the low noise operation device for each refrigerant system.				
Pump Interlock signal input	Forces the heat source unit to stop operation by receiving contact signals from the pump interlock circuit	TB8	TB8		
Auto-changeover	Cooling/heating operation can be changed by an external input to the heat source unit.	CN3N	-		Adapter for external output (PAC-SC37SA-E)
Operation status of the compressor	How to extract signals from the heat source unit. * It can be used as an operation status display device.	CN51	CN51	Output (level-signal)	
Error status	* It can be used for an interlock operation with external devices.				
Operation ON signal		TB8	TB8		

\*1 For details, refer to 1) through 3) shown below.

\*2 Low noise mode is valid when Dip SW6-8 on the heat source unit is set to OFF. When DIP SW6-8 is set to ON, 4 levels of on-DEMAND are possible, using different configurations of low noise mode input and DEMAND input settings.

When 2 or more heat source units exist in one refrigerant circuit system, 8 levels of on-DEMAND are possible.

\*3 For detailed drawing, refer to "4-4. Heat source unit input/output connector".

1) Table 4-3-2. SW6-8: OFF (Compressor ON/OFF, Low noise mode)

CN3D 1-3P	2-level of on-Demand *4
Open	100%(No Demand)
Short-circuit	0%
CN3D 1-2P	Low noise mode *5
Open	OFF
Short-circuit	ON

\*4 When SW6-8 on the heat source unit in one refrigerant circuit system is set to ON (4 levels or 8 levels of on- DEMAND), this function cannot be used.

\*5 This function and the 4 levels or 8 levels on-DEMAND function can be used together. Input the order to CN3D 1-2P on the heat source unit whose SW6-8 is set to OFF.

2) When SW6-8 on one heat source unit in one refrigerant circuit system is set to ON (4 levels of on-DEMAND) (\*6)

CN3D 1-3P	CN3D 1-2P	
	Open	Short-circuit
Open	100% (No DEMAND)	75%
Short-circuit	0%	50%

Note the following steps to be taken when using STEP DEMAND.

Example: When switching from 100% to 50%

Steps in DEMAND level setting	<WRONG>	100%	→	<del>10%</del>	→	50%
	<CORRECT>	100%	→	<del>75%</del>	→	50%

If the demand settings are switched in the wrong order listed as the wrong example above, the unit may go into thermo OFF mode.

The percentage of the DEMAND listed in the table above is an approximate value based on the compressor volume and does not necessarily correspond with the capacity.

This function and the Low noise mode function cannot be used together.

3) When SW6-8 on the two heat source units in one refrigerant circuit system is set to ON (8 levels of on-DEMAND) (\*6,\*7)

8 levels of on-DEMAND		No.2 CN3D					
		1-2P	Open		Short-circuit		
No.1 CN3D	1-2P	1-3P	Open	Short-circuit	Open	Short-circuit	
	Open	Open	100% (No DEMAND)	50%	88%	75%	
		Short-circuit	Short-circuit	50%	0%	38%	25%
	Short-circuit	Open	Open	88%	38%	75%	63%
		Short-circuit	Short-circuit	75%	25%	63%	50%

\*6 Input the order to CN3D on the heat source unit whose SW6-8 is set to ON.

\*7 CN3D of No. 1, 2 can be selected arbitrary with the heat source unit whose SW6-8 is set to ON.

Table 4-3-3. Control can be achieved by using Indoor input/output connectors.

Function	Usage	Using connector	Signal
Remote/Local switching *1 ON/OFF *2*3	Indoor group can be controlled ON/OFF by an ON/OFF switching or contact input to the connector of the head Indoor in an Indoor group. It can be interlocked with timer, door, window, or other equipment to "Force stopping"	CN32	Input (level-signal)
ON/OFF *2*3	Indoor group can be controlled ON/OFF by an external pulse signal input to the connector of the head Indoor in an Indoor group.	CN51	Input (pulse-signal)
Demand	Indoor group can be controlled ON/OFF by an ON/OFF switching or contact input to the connector of every Indoor in an Indoor group.	CN52	Input (pulse-signal)
Monitoring ON/OFF state	Signal output from a head Indoor unit, presenting its Indoor group.	CN51	Output
Monitoring heating state	It can be used for monitoring or interlock with other equipment purpose and so on.	CN52	
Monitoring cooling/drying state		CN52	
Monitoring Error state	Signal output from every Indoor unit, for monitoring Error or Thermo-off (fan) state.	CN51	Output
Monitoring Thermo-OFF (fan) state	It can be used for monitoring or interlock with other equipment purpose and so on.	CN52	

\*1. When switching to Remote, control at Local remote controller will NOT be effective, but the "CENTRALLY CONTROLLED" is displayed.

\*2. MA or ME remote controller is needed for this function.

\*3. If using ON/OFF input function, Automatic-address-start-up can not be performed to start-up the system at commissioning.

\*4. If CITY MULTI use AE-C400A/EW-C50A and PLC software to control external input/output signal of the Indoor unit, Dip Switch 1-9 and Dip Switch 1-10 should be set to ON.

In this case, the input/output connectors act as normal connectors, functions mentioned at Table 4-3-3. are no more available.

Details are available at the PLC software Instruction Manual.

Table 4-3-4. ON/OFF control to each Indoor unit (group) by using Dip Switch 9 and 10 (SW1-9, SW1-10) of the Indoor unit.

Function	Operation on Indoor units	Setting Dip Switch *1*4	
		1-9	1-10
Auto ON	All indoor units will turn ON and automatically resume to its previous mode after 5 minutes from power recovery.	OFF	ON
Auto recovery	Indoor unit recovers to its previous state (ON/OFF, mode) after 5 minutes from power recovery.	ON	OFF
All OFF	Forced stopping regardless of Indoor units' state.	OFF	OFF

\*1. The Dip Switch setting should be carried out on every Indoor unit in the group.


\*2. Heat source unit's power supply should NOT be cut. Otherwise, power supply to case heater of the compressor would be cut too, which may cause damage to the compressor.

\*3. Above method can not be applied to the power ON/OFF of the drain pump and humidifier equipment.

\*4. If CITY MULTI use AE-C400A/EW-C50A and PLC software to control external input/output signal of the Indoor unit, Dip Switch 1-9 and Dip Switch 1-10 should be set to ON.

In this case, the input/output connectors act as normal connectors, functions mentioned at Table 4-3-4. are no more available.

■ System example

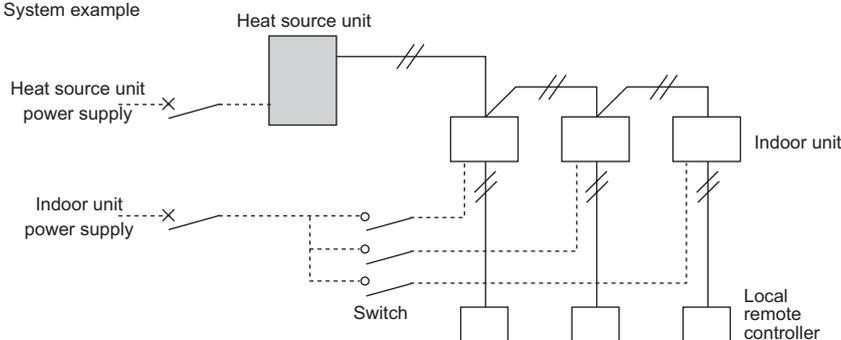

Restart of the CITY MULTI needs to be careful. When no power supply to the heat source unit, no power supply to the compressor case heater too. The compressor needed to be warmed up before running. When using above functions, power supply to the heat source unit should be ensured.

Table 4-3-5. How to use Remote/Local switching connector CN32

State	Local remote controller display and operation	CN32-SW-1 for Local/Remote control switching	CN32-SW-2 for Remote "ON/OFF" operation
Local remote controller control	Operation is permitted	OFF	OFF
Remote STOP	"CENTRALLY CONTROLLED" flashing, "ON/OFF" at local remote controller is not possible.	ON	OFF
Remote START	"CENTRALLY CONTROLLED" flashing, "ON/OFF" at local remote controller is not possible.	ON	ON

\* For details refer to CN32 in section "4-5. Indoor unit "-E/-A" type input/output connector".

Table 4-3-6. Limitations to combining system controls ○: Simultaneous use available X: Simultaneous use not available

	Description	Control combining distant/local	Pulse ON/OFF	Power ON/OFF	Automatic recover
1	Control combining distant/local	CN32	-	X*1	X*1
2	Pulse ON/OFF	CN51	X*1	-	O
3	HA ON/OFF(JEMA)	CN51	-	O	O
4	Power ON/OFF	-	-	X	-
5	Automatic recover	-	-	-	-

\*1. Pulse ON/OFF, power ON/OFF and automatic recover can only be used when the remote/local setting CN32 is set to local.


Therefore, always avoid this function when combining control.

4-4. Heat source unit input/output connector

<b>Caution:</b>	1. Wiring should be covered by insulation tube with supplementary insulation.
	2. Use relays or switches with IEC or equivalent standard.
	3. The electric strength between accessible parts and control circuit should have 2750V or more.

4-4-1. Output

- State (CN51)

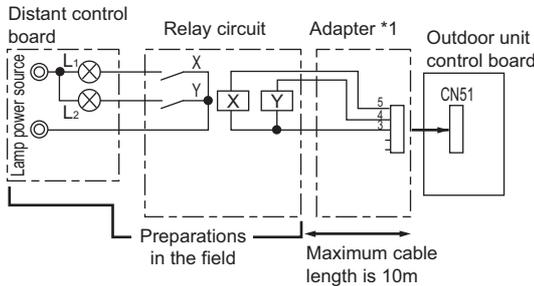


L1 : Heat source unit error display lamp  
 L2 : Compressor operation lamp (compressor running state)  
 X, Y : Relay (coil =<0.9W : 12VDC)


\*1. Optional part : PAC-SC37SA-E or field supply.

4-4-2. Input

- (1) Step demand and Low noise mode (CN3D)

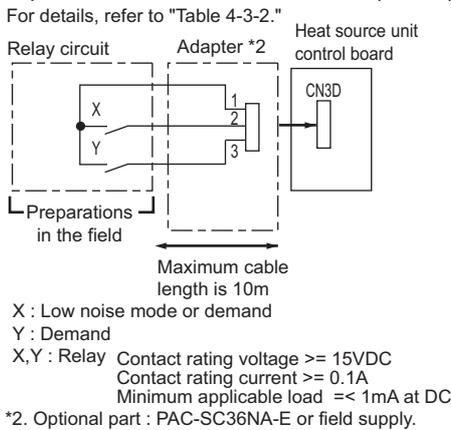

- (2) Low noise mode (CN3D + DipSW6-8 OFF)

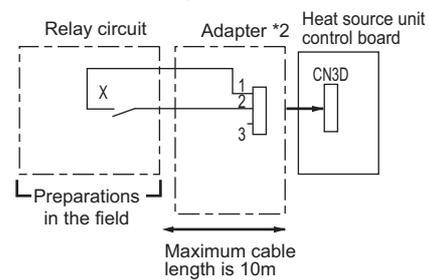


X : Relay Contact rating voltage  $\geq 15VDC$   
 Contact rating current  $\geq 0.1A$   
 Minimum applicable load  $\leq 1mA$  at DC

\*2. Optional part : PAC-SC36NA-E or field supply.

Low noise mode : The sound pressure level is reduced by controlling the maximum compressor frequency.


-Note-  
 The sound pressure level can not be reduced, when neither the fan frequency nor the compressor frequency are maximum.

- (3) Auto-changeover (CN3N) (WR2 excluded)

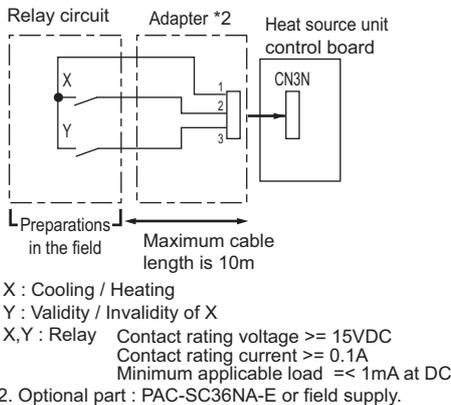


		X	
		OFF	ON
Y	OFF	Normal	
	ON	Cooling	Heating

- (4) Operation ON signal (TB8)

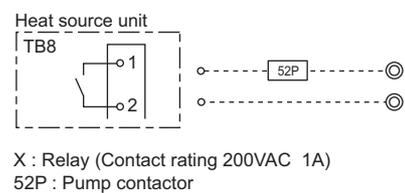

- (5) Pump Interlock signal input (TB8)

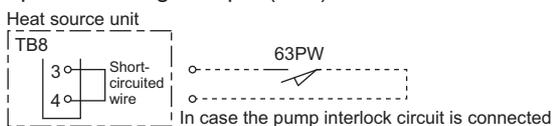

When connecting the pump interlock circuit to terminals 3 and 4 on TB8, remove the short-circuited wire.  
 63PW : Pressure switch (Contact: Minimum applied load 5mA)

4-5. Indoor unit "-E/-A" type input/output connector

<b>Caution:</b>	1. Wiring should be covered by insulation tube with supplementary insulation.
	2. Use relays or switches with IEC or equivalent standard.
	3. The electric strength between accessible parts and control circuit should have 2750V or more.

CONTROLLER


● ON/OFF (Pulse) input specification

Item	Description
Input signal	Pulse sign (a connect)
Standard of pulse	



● ON/OFF (Pulse) input specification

Item	Description
Input signal	Pulse sign (Normally open)
Standard of pulse	

● Input

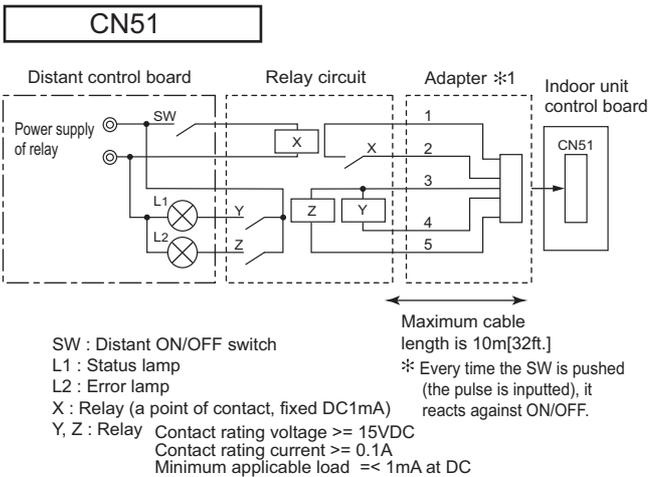


● Output

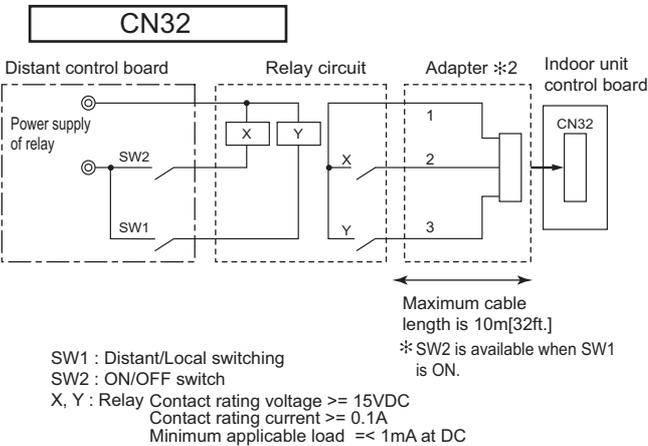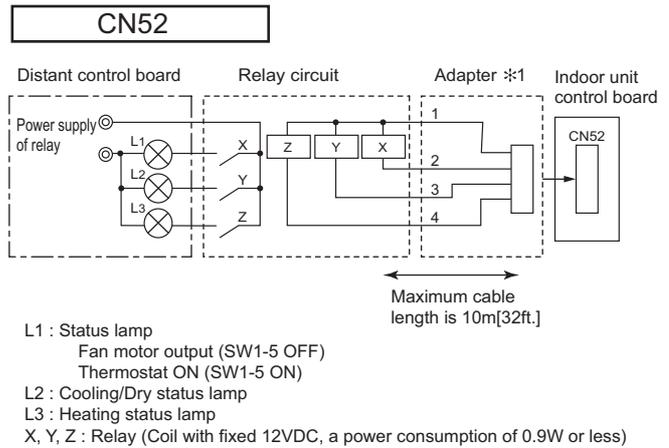

Polarity (output terminal)

No.	Color	CN51	CN52
1	Brown	/	+
2	Red	/	-
3	Orange	+	-
4	Yellow	-	-
5	Green	-	/

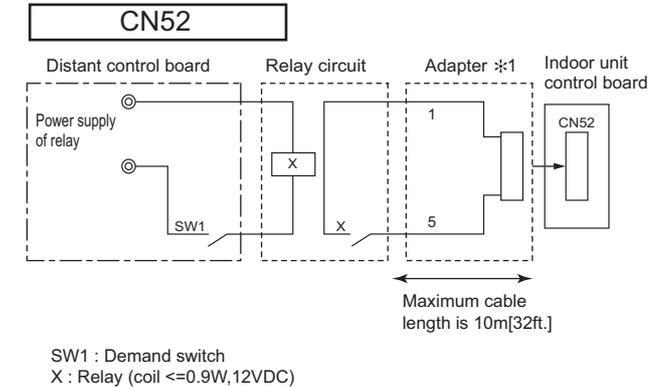

SW1	Indoor unit
ON	Forced thermo-OFF
OFF	Normal running

\* 1. Optional part : PAC-SA88HA-E or field supply  
 \* 2. Optional part : PAC-SE55RA-E or field supply

**⚠ Warning**

- Do not use refrigerant other than the type indicated in the manuals provided with the unit and on the nameplate.
  - Doing so may cause the unit or pipes to burst, or result in explosion or fire during use, repair, or at the time of disposal of the unit.
  - It may also be in violation of applicable laws.
  - MITSUBISHI ELECTRIC CORPORATION cannot be held responsible for malfunctions or accidents resulting from the use of the wrong type of refrigerant.
- Our air conditioning equipment and heat pumps contain a fluorinated greenhouse gas, R410A.

**MITSUBISHI ELECTRIC CORPORATION**

[www.MitsubishiElectric.com](http://www.MitsubishiElectric.com)